

	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

Content

Panel Clear Sensor Adjustment (Homing Position).....	3
Panel Clear Sensor adjustment (Loading Position).....	7

	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

Panel Clear Sensor Adjustment (Homing Position)

1. “Initialize “at Panel Handling Interface.
2. Once initialization completed, open front access door and check actual condition by refer to below table.
 - Condition A : Left PCL Sensor status during Homing Position (Table 1, Pg 4)
 - Condition B : Right PCL Sensor status during Homing Position (Table 2, Pg 5)
 - Condition C : Left PCL Sensor status during X axis re-allocation (Table 3, Pg 6)
3. If actual condition do not meet requirement of Condition A~C, adjustment will be required. May refer to below step:
 - A. Loosen 2 x Screws at Left PCL Sensor (Figure 1) and align accordingly by refer to Table 1 & Table 3.

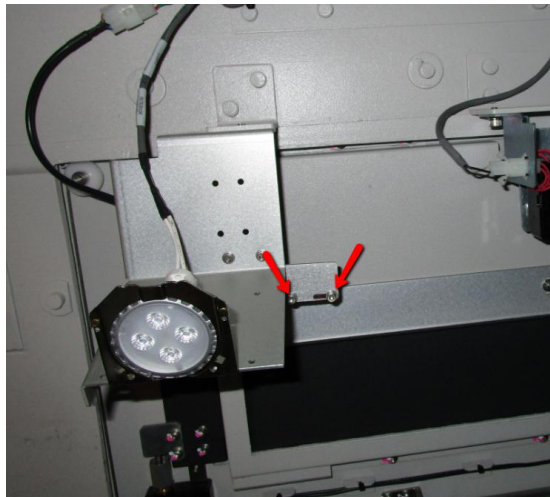


Figure 1 Left PCL Sensor

- B. Loosen 2 x Screws at Right PCL Sensor (Figure 2) and align accordingly by refer to Table 2



Figure 2 Right PCL Sensor

4. If actual condition is meet requirement of Condition A~ C, please proceed to Step 5.

	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

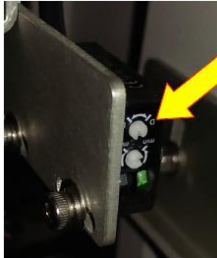
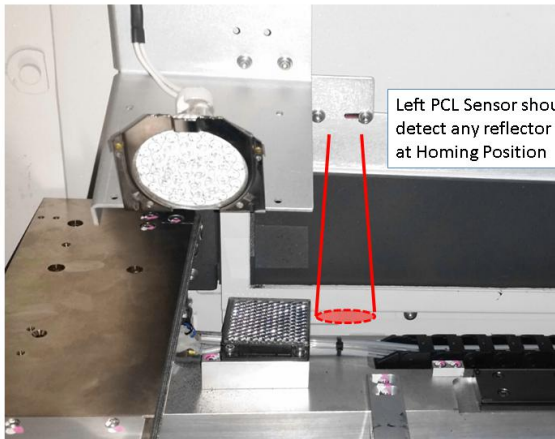
Condition A	Left PCL Sensor status during Homing Position		
Panel Clear Sensor Type	Keyence 	Omron 	
XY axis Position	Home Position (DO NOT MOVE ANY AXIS AFTER XY STAGE HOMING)		
Configuration	N/A		Adjust to "L" (Normally Light On Setting)
Physical Status	LEFT PCL Sensor MUST not detect reflector which position at X Plate.  Left PCL Sensor should not detect any reflector while at Homing Position Keyence  Both LED indicate with Green Omron  Single LED Indicated Green		
Digital IO Input Bit	Left Panel Clear Sensor Clear Left PCL Sensor indicated as Blocked		
Panel Handling Interface	Panel Clear Sensor State Right Clear Left Blocked		

Table 1 Condition A

	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

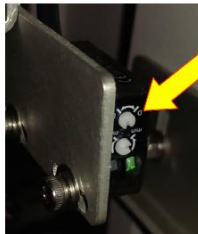
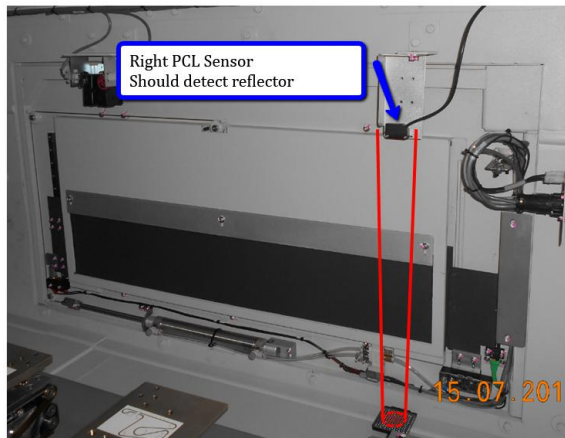
Condition B	Right PCL Sensor status during Homing Position		
Panel Clear Sensor Type	Keyence 	Omron 	
XY axis Position	Home Position (DO NOT MOVE ANY AXIS AFTER XY STAGE HOMING)		
Configuration	N/A		Adjust to "L" (Normally Light On Setting)
Physical Status	 Right PCL Sensor Should detect reflector 15.07.201 Keyence  Orange and Green LED indicate Omron  Orange & Green LED indicate		
Digital IO Input Bit	Right Panel Clear Sensor Clear Right PCL Sensor indicated as Clear		
Panel Handling Interface	Panel Clear Sensor State Right Clear Left Blocked		

Table 2 Condition B

	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

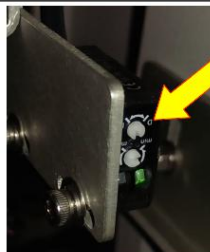
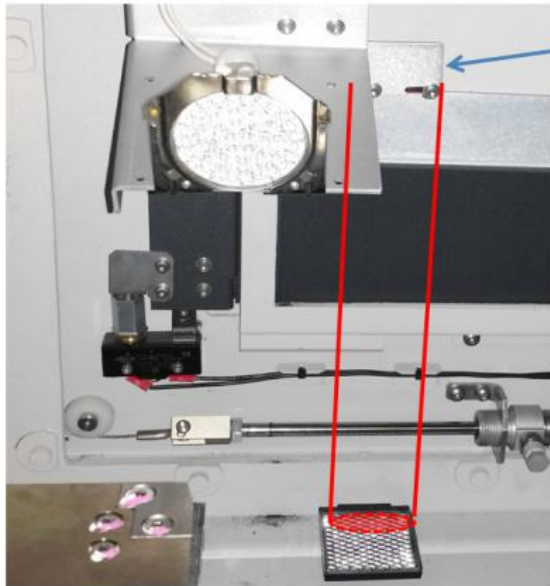
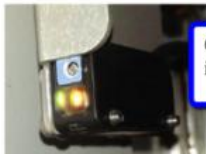
Condition C	Left PCL Sensor status during X axis re-allocation		
Panel Clear Sensor Type	Keyence	Omron	
			
XY axis Position	During Homing Position, move X axis away from home until Left PCL Sensor is detect bottom reflector (Granite area) Remarks: DO NOT MOVE Y AXIS. MOVE X AXIS ONLY		
Configuration	N/A		Adjust to " L" (Normally Light On Setting)
Physical Status	 When X axis move away from Home Position, Left PCL Sensor should detect reflector which locate at granite. Keyence  Orange and Green LED indicate Omron  Orange & Green LED indicate		
Digital IO Input Bit	 Left Panel Clear Sensor Clear Left PCL Sensor indicated as Clear		
Panel Handling Interface	Panel Clear Sensor State Right Clear Left Clear		

Table 3 Condition C

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

Panel Clear Sensor adjustment (Loading Position)

- Disable “SMEMA Communication at Production Option tab.

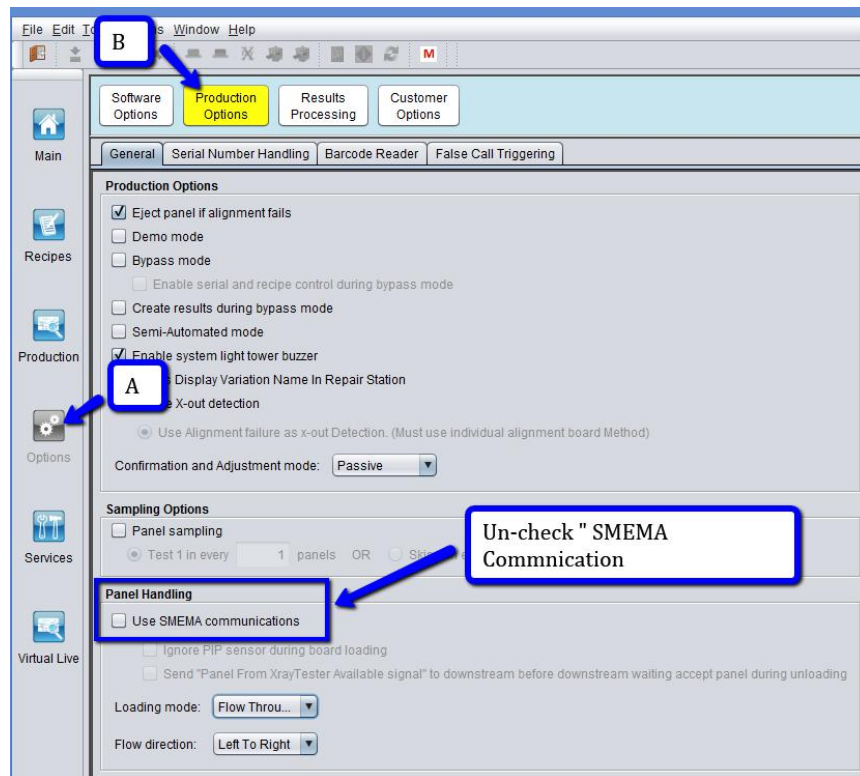


Figure 3 Production Option

- Choose “Left to Right “Option at “Flow Direction” (Production Option)

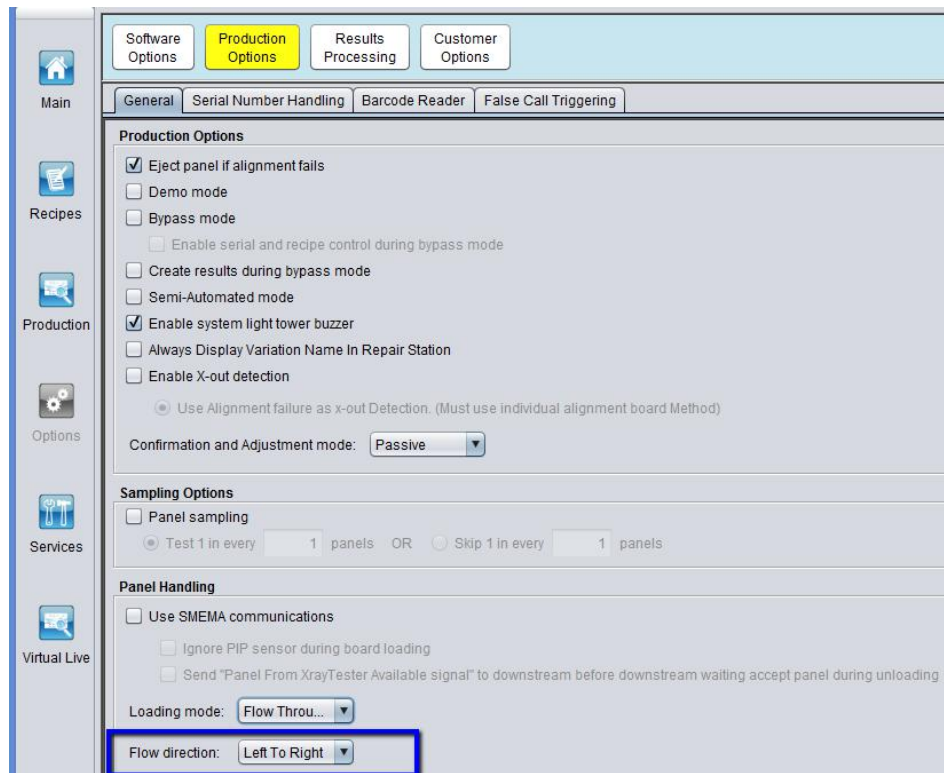


Figure 4 Left to Right (Flow Direction)

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

7. “Initialize “at Panel Handling Interface.
8. Choose Display Measurement in “Inches” at Panel Handling Interface.
9. Choose “Load Panel “. Enter 12 inch (Panel Width) & 10 inch (Panel Length) & Click “Load”.

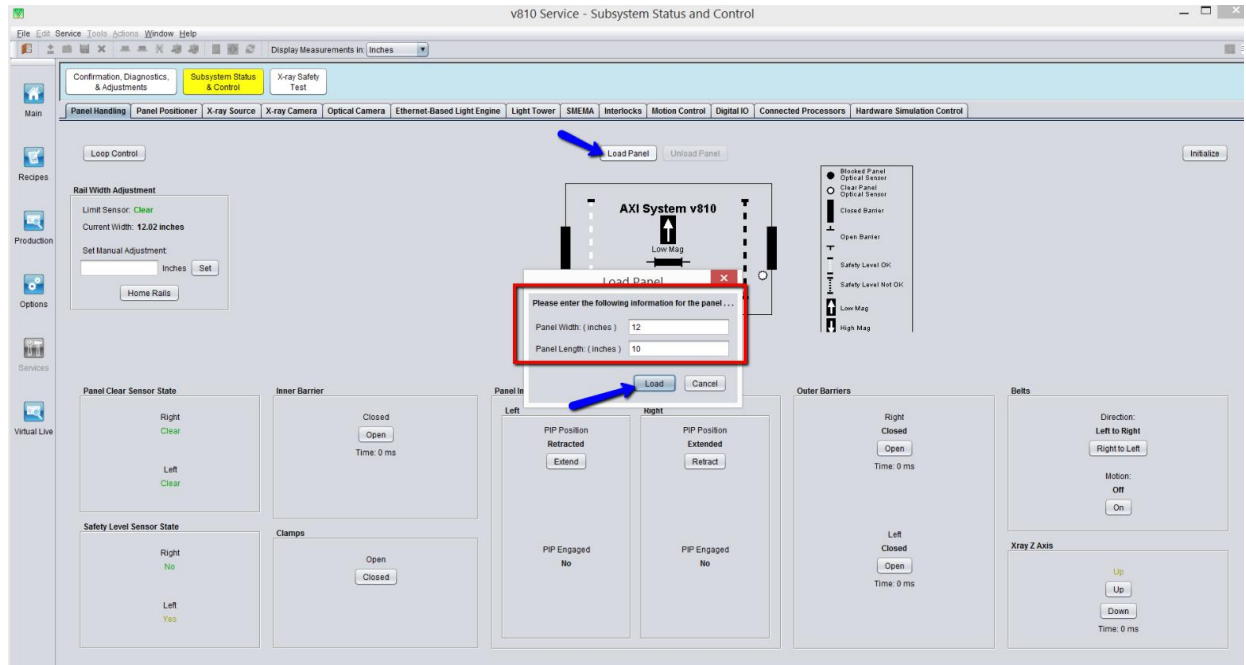


Figure 5 Panel Handling (Loading)

10. Loading Panel Dialog box will be prompt. Once left barrier is open, press cancel.

Remarks: DO NOT LOAD any board.

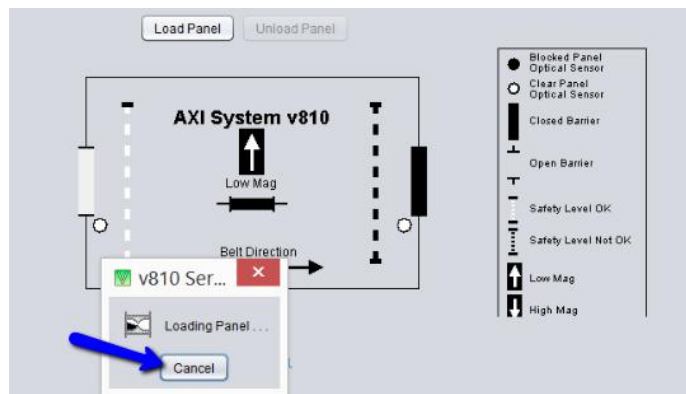
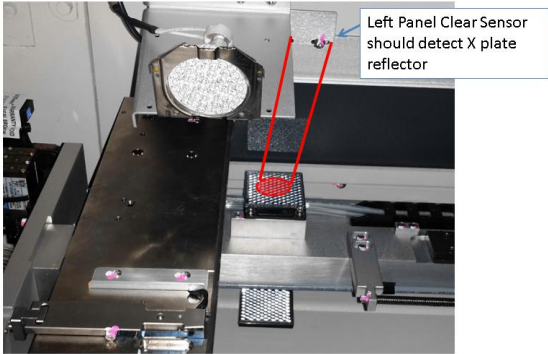

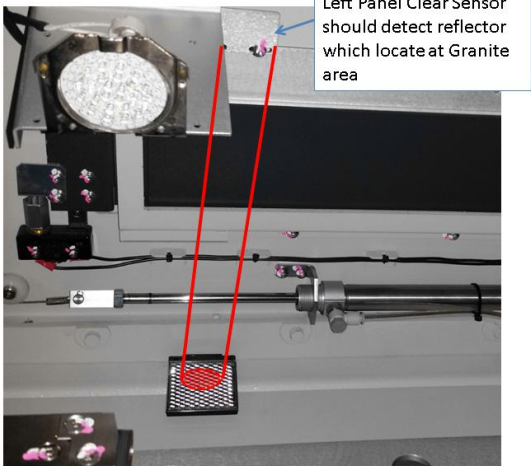



Figure 6 Loading panel simulation

	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

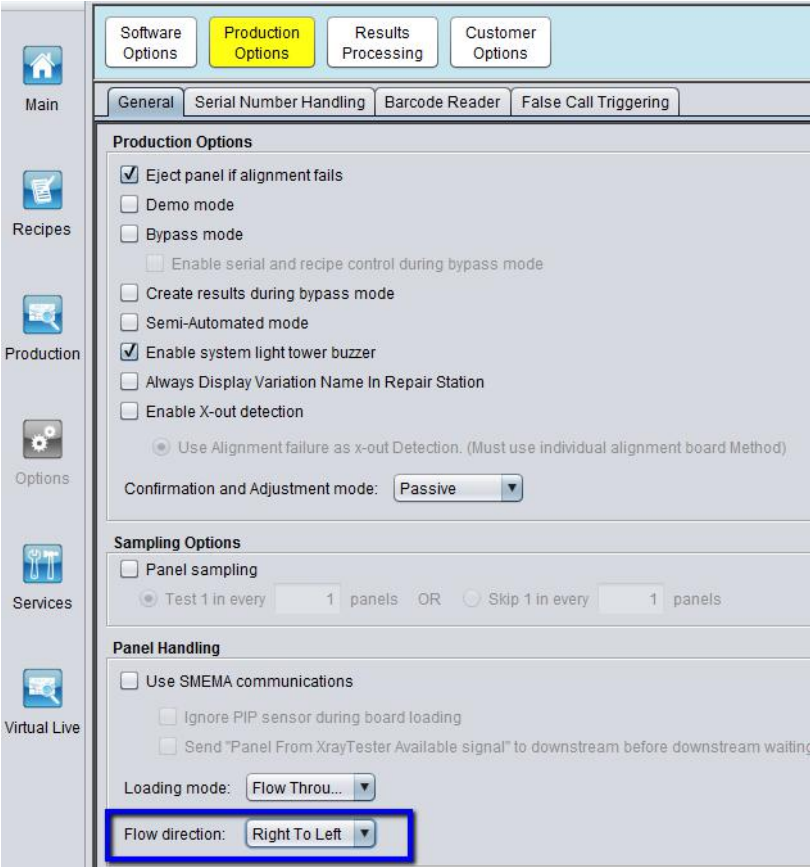
11. Open front access door and check as below table.

12. If Left PCL Sensor Status does not meet below requirement, adjustment will be required to be carried on where based on below table.

Task	Detection region	Status
Loading Position (Do no move any XY Axis)	Left PCL Sensor should detect X Plate reflector 	Digital IO Input Bit  Left PCL Sensor indicated as Clear Panel Handling Interface 
Loading Position Move X axis(ONLY) away from loading position until PCL Sensor detect reflector REMARKS : DO NOT MOVE Y AXIS	Left PCL Sensor should detect reflector which allocate at Granite area 	Digital IO Input Bit  Left PCL Sensor indicated as Clear Panel Handling Interface 

	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

13. Choose “Right to Left “Option at “Flow Direction” (Production Option)



The screenshot shows the ViTrox software interface with the 'Production Options' tab selected. The 'Flow direction' dropdown menu is highlighted with a red box, showing 'Right To Left' selected. The interface includes a sidebar with icons for Main, Recipes, Production, Options, Services, and Virtual Live. The main area contains sections for Production Options, Sampling Options, and Panel Handling.

Figure 7 Right to Left (Flow Direction)

14. Choose “Load Panel “. Enter 12 inch (Panel Width) & 10 inch (Panel Length) & Click “Load”.

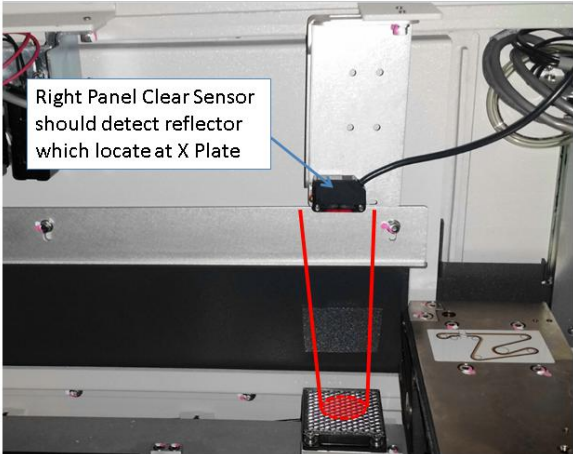
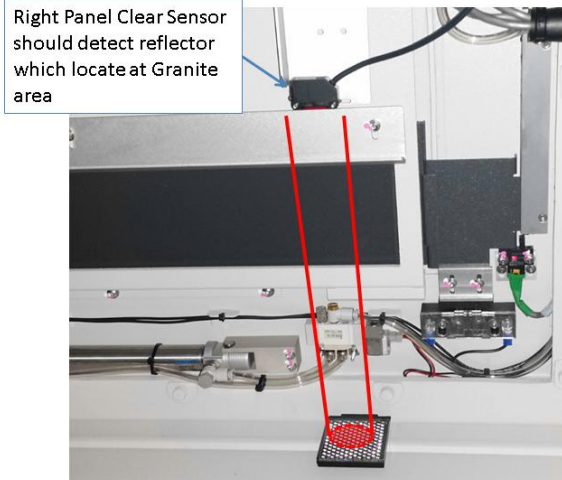
15. Loading Panel Dialog box will be prompt. Once Right barrier is open, press cancel.

Remarks: DO NOT LOAD any board.

	Work Instruction	Doc. Revision	00
	AXI V810 STD Panel Clear Sensor Adjustment Procedure	Effective Date	2 Oct 2016

16. Open front access door and check as below table.

17. If Right PCL Sensor Status does not meet below requirement, adjustment will be required to be carried on where based on below table.

Task	Detection region	Status
Loading Position (Do no move any XY Axis)	Right PCL Sensor should detect X Plate reflector 	Digital IO Input Bit  Left PCL Sensor indicated as Clear Panel Handling Interface 
Loading Position Move X axis(ONLY) away from loading position until PCL Sensor detect reflector REMARKS : DO NOT MOVE Y AXIS	Right PCL Sensor should detect reflector which allocate at Granite area 	Digital IO Input Bit  Left PCL Sensor indicated as Clear Panel Handling Interface 