

	Work Instruction	Doc. Revision	00
	AXI V810 STD X-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	25 Jan 2017	First Release	TAN LIANG KAI

	Work Instruction	Doc. Revision	00
	AXI V810 STD X-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

Content

A. X-Axis Glass Scale.....	3
I. X-Axis glass scale removal.....	3
II. Replacement of the X-Axis Glass Scale.....	5

	Work Instruction	Doc. Revision	00
	AXI V810 STD X-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

A. X-Axis Glass Scale

I. X-Axis glass scale removal

X-Axis glass scale Part ID: 4XASP-A121

1. Turn off x-ray source and open front access door.
2. Push X-Axis stage to right hand side and loosen 2 screws as shown in Figure 1. Remove X axis encoder.

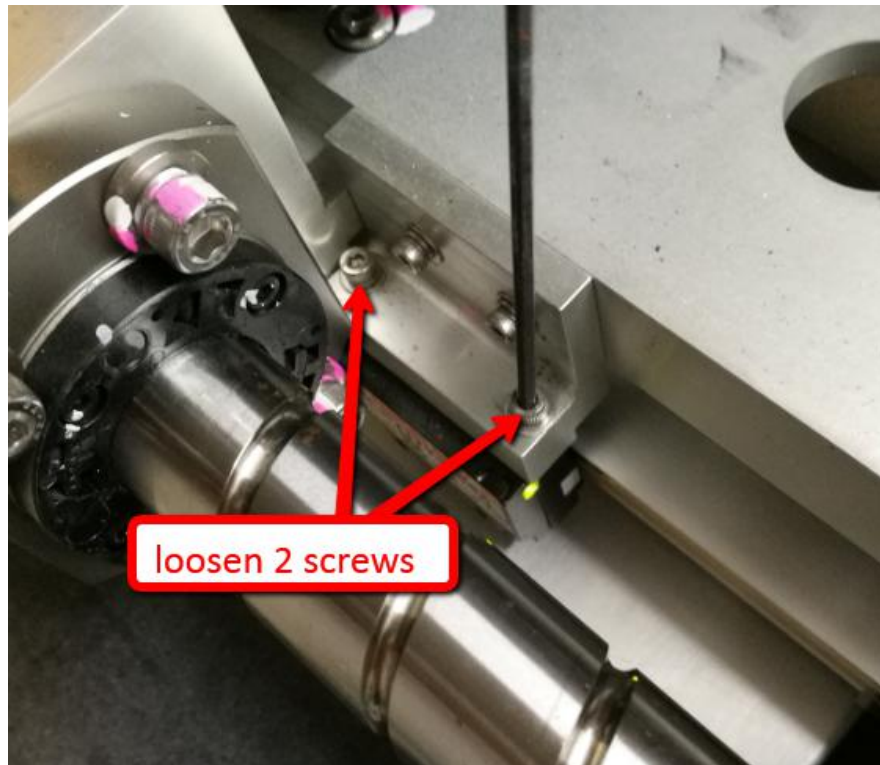


Figure 1 X axis encoder removal

3. Remove all spring clamps ,home sensor & limit sensor as shown in Figure 2.

Remark: Perform minor marking on current limit sensor & home sensor position for ease of adjustment



Figure 2 Glass scale

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 STD X-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

4. Cut the RTV glue which secure glass scale.

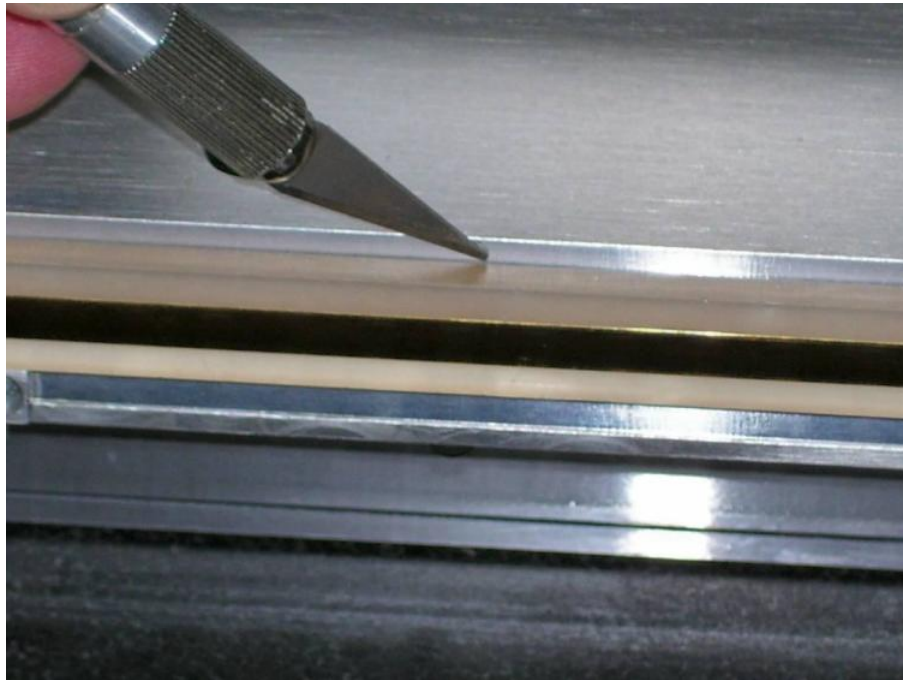


Figure 3 RTV glue removal

5. Gently slide out glass scale towards left direction.

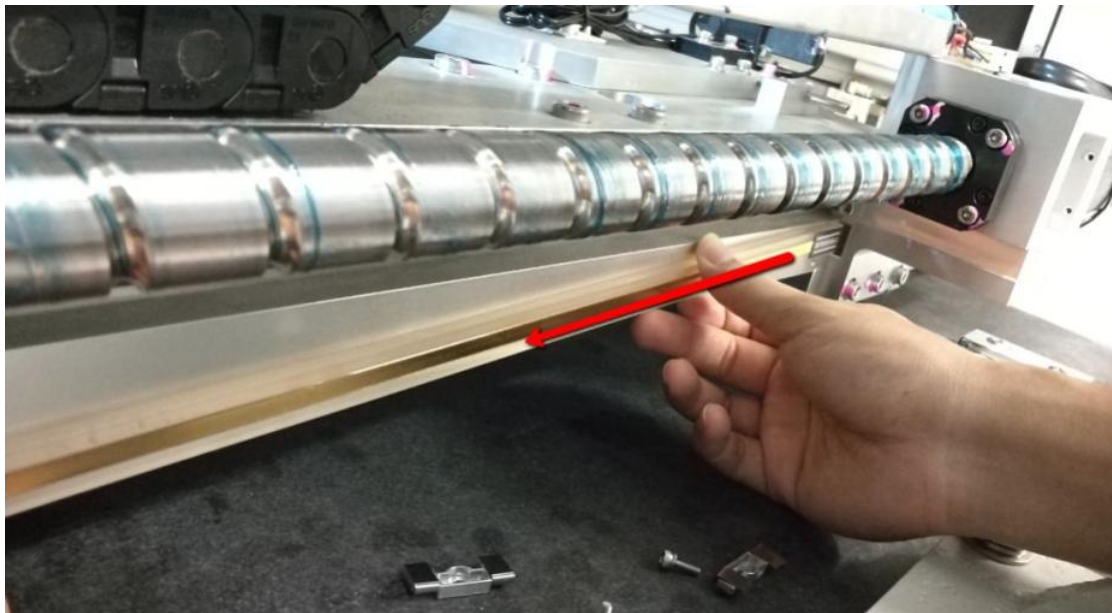


Figure 4 Glass scale removal

	Work Instruction	Doc. Revision	00
	AXI V810 STD X-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

II. Replacement of the X-Axis Glass Scale

1. Insert X-Axis glass scale into the slot as shown in Figure 5.

Remark: Caution on glass scale orientation

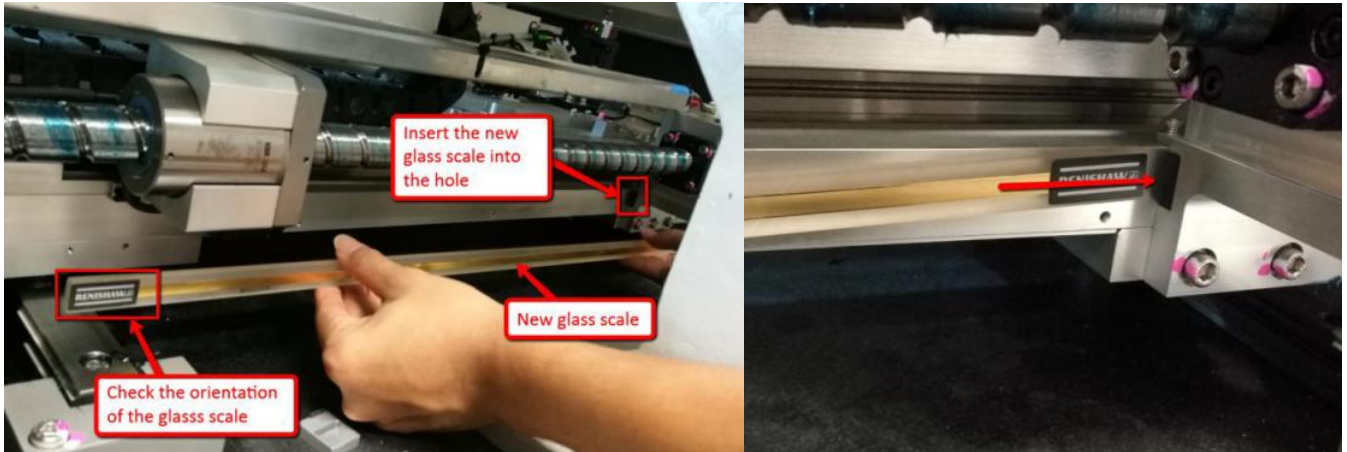


Figure 5 Glass scale assembly

2. Position the glass scale lining up the termination tag of the glass scale with the spring clamp.



Figure 6 Glass scale lining up (Reference Only)

	Work Instruction	Doc. Revision	00
	AXI V810 STD X-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

3. Assemble Home Sensor & Limit Sensor. Tighten all screws which secure spring clamps as shown in Figure 7.

Remark: Make sure spring clamps are well-positioned and do not contain any friction with encoder while moving the X-Axis stage.

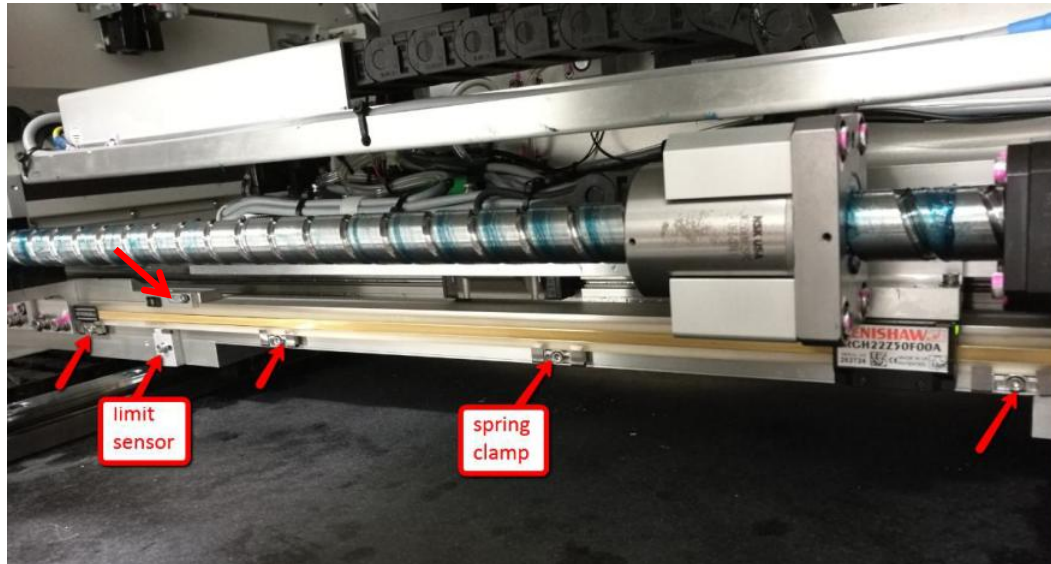


Figure 7 Glass Scale replacement

4. Assemble X axis encoder & tighten 2 screws as shown in Figure 8.

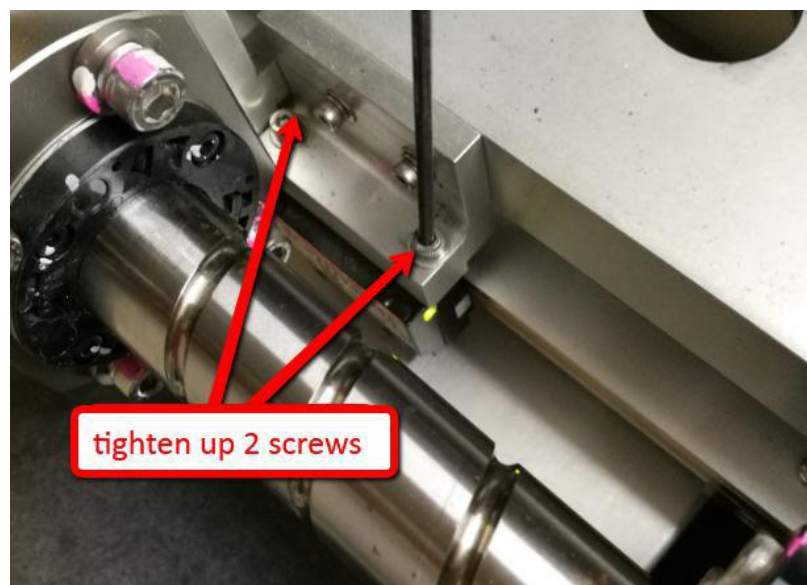


Figure 8 X axis encoder replacement

	Work Instruction	Doc. Revision	00
	AXI V810 STD X-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

- Move X-Axis stage to minimum hard stop (left side) and maximum hard stop (right side) . Visual check X-Axis encoder which require green light illuminated along the way as shown in Figure 9.
If adjustment require, may refer **“AXI V810 X-Axis Read Head Encoder Replacement Procedure”**

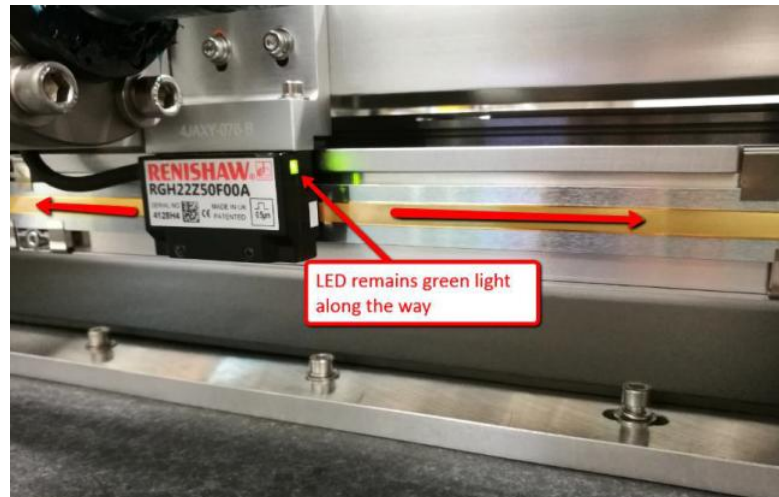


Figure 9 X axis Encoder checking

- Assemble limit sensor and home sensor by refer to origin location (By refer to Step 3).
- Open V810 > Services > Subsystem Status & Control > Panel Positioner > Initialize

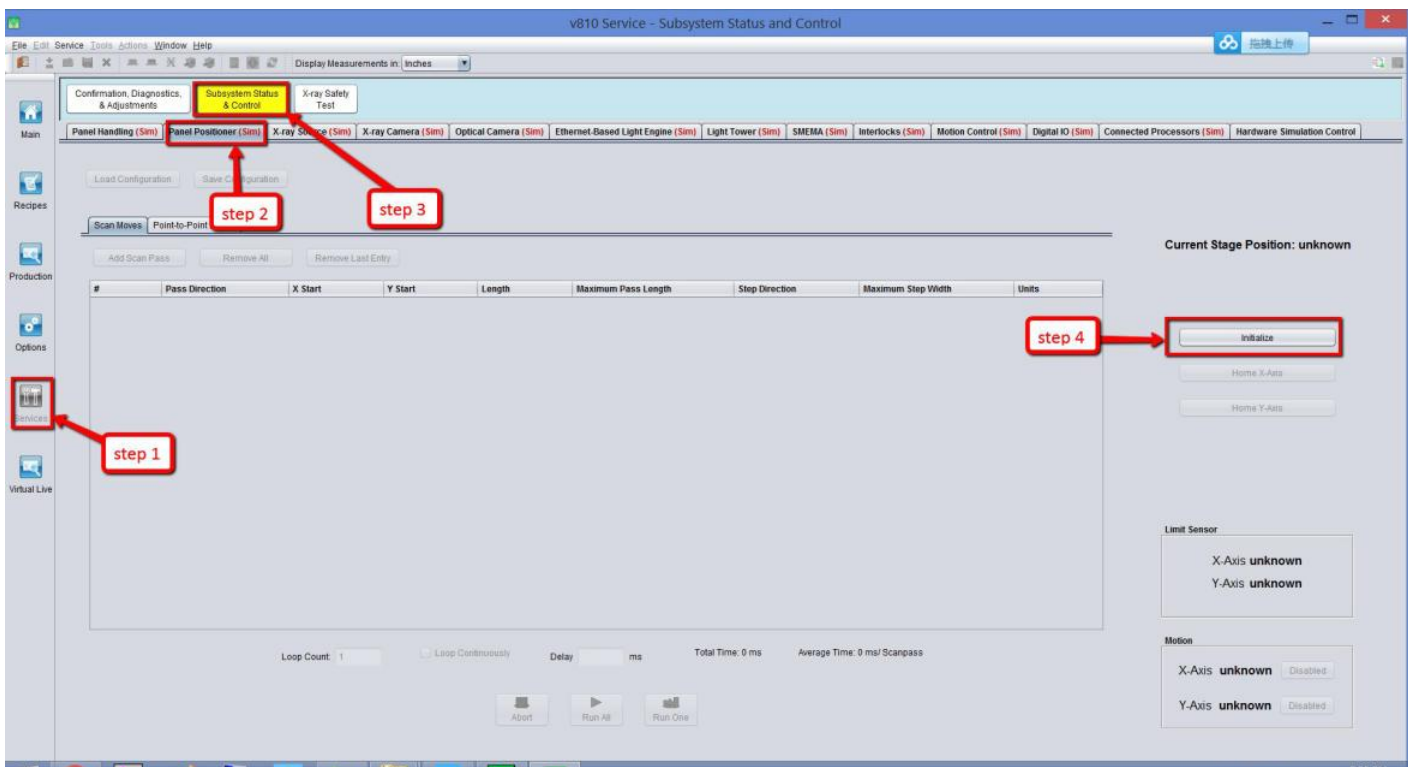


Figure 10 Panel Positioner

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD X-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

8. Open front access door.
9. Disable X-Axis motion at Panel Positioner & perform below checking.
 - a) DO not move XY Stage and may check Limit sensor status at Panel Positioner where must stated as “Clear” during home position

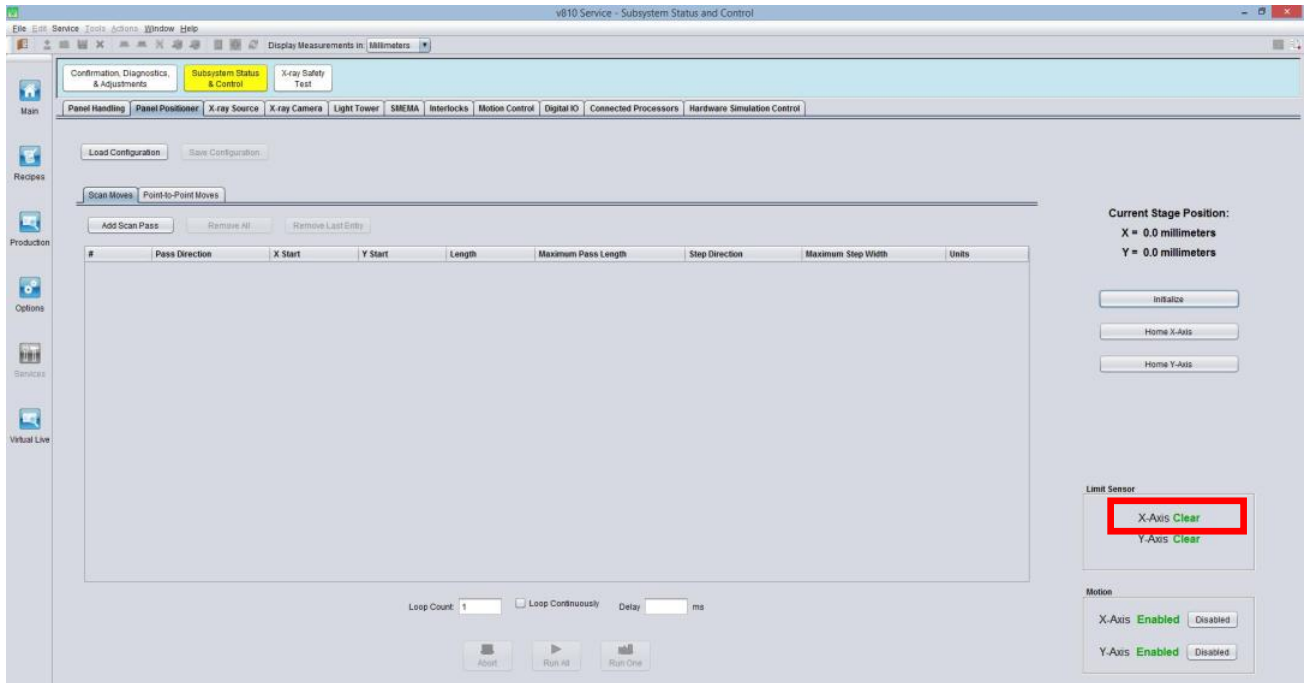


Figure 11 X axis Limit Sensor (CLEAR)

- b) Move X axis stage towards minimum hard stop (Left Side) & check Limit sensor where must stated as “Blocked”.

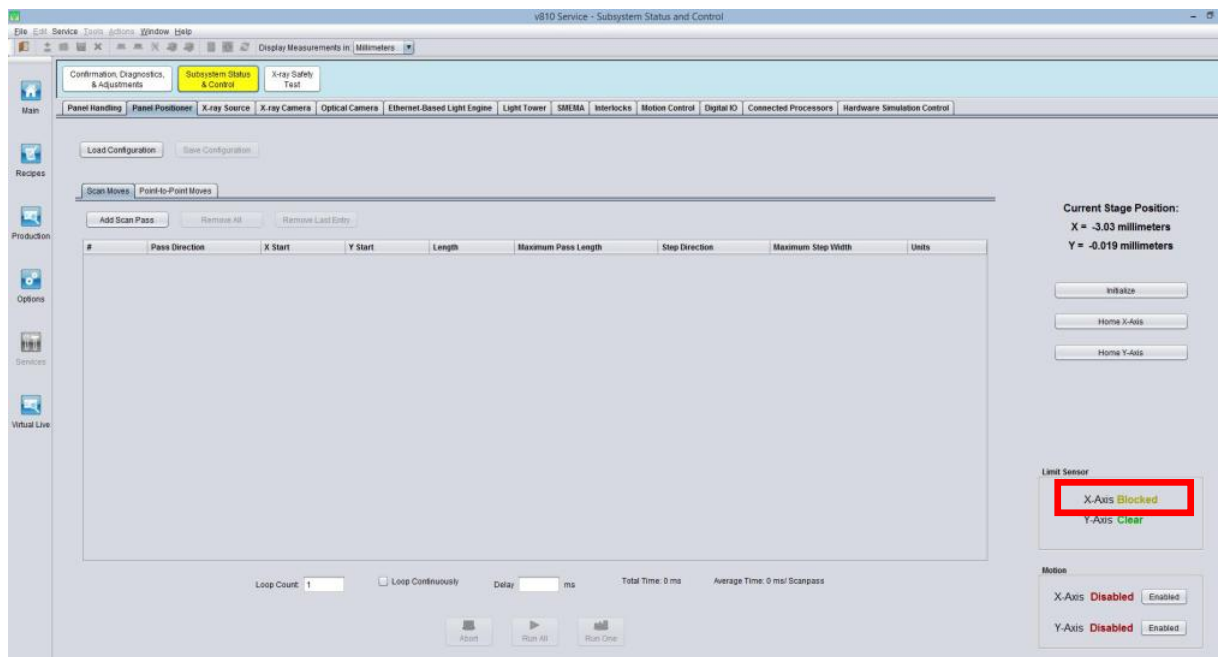


Figure 12 X axis Limit Sensor (BLOCKED)

Remark: If result is not meet to Step 9a ~9b requirement ,may refer to “AXI V810 X-Axis Limit Sensor Adjustment Procedure” for further adjustment.

	Work Instruction	Doc. Revision	00
	AXI V810 STD X-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

- c) Move X axis stage towards minimum hard stop(Left side).
- d) Check the value for the X-axis in current stage position must within 3.00 ~ 3.30 mm.



Figure 13 X axis (Curent Stage Position)

Remark: If result is not meet to Step 9c ~9d requirement ,may refer to “AXI V810 X-Axis Home Sensor Adjustment Procedure” for further adjustment.

10. Run 3 loops of long scan and 1 loop of CD &A.