

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	25 Jan 2017	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

Content

A. Y-Axis Glass Scale.....	3
I. Y-Axis glass scale removal.....	3
II. Replacement of the Y-Axis Glass Scale.....	5

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

A. Y-Axis Glass Scale

I. Y-Axis glass scale removal

S2EX machine Y-Axis glass scale assembly Part ID: 4XASP-A090

1. Turn off x-ray source and open front access door.
2. Unscrew screws and gentle remove y-axis encoder plate as shown in Figure 1.



Figure 1 cover plate removal

3. Remove spring clamps, home sensor and limit sensor as shown in Figure 2.

Remark: Perform minor marking on current limit sensor & home sensor for ease of adjustment

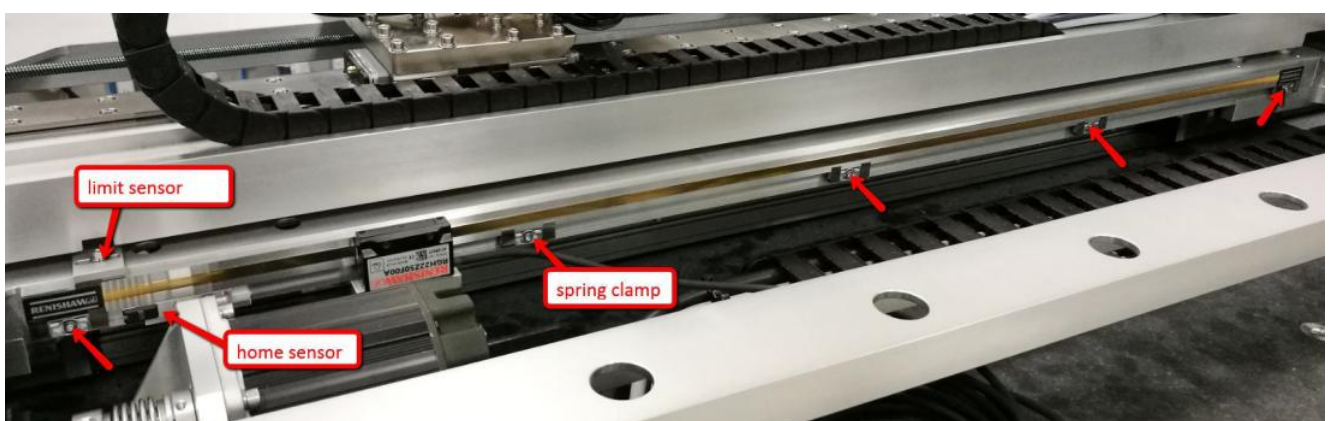


Figure 2 Glass scale

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

4. Gently remove Y-Axis encoder as shown in Figure 3 and allocate at visible position.

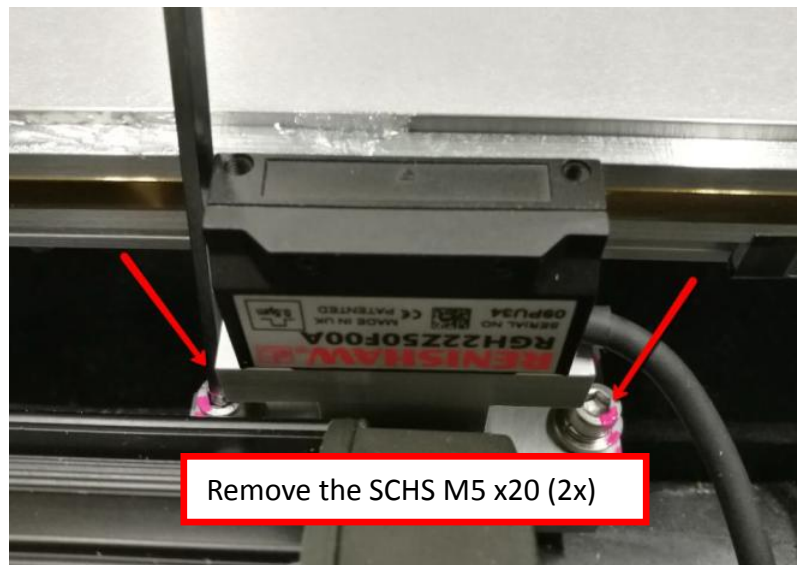


Figure 3 Y-Axis Encoder

5. Cut RTV glue which secure glass scale.

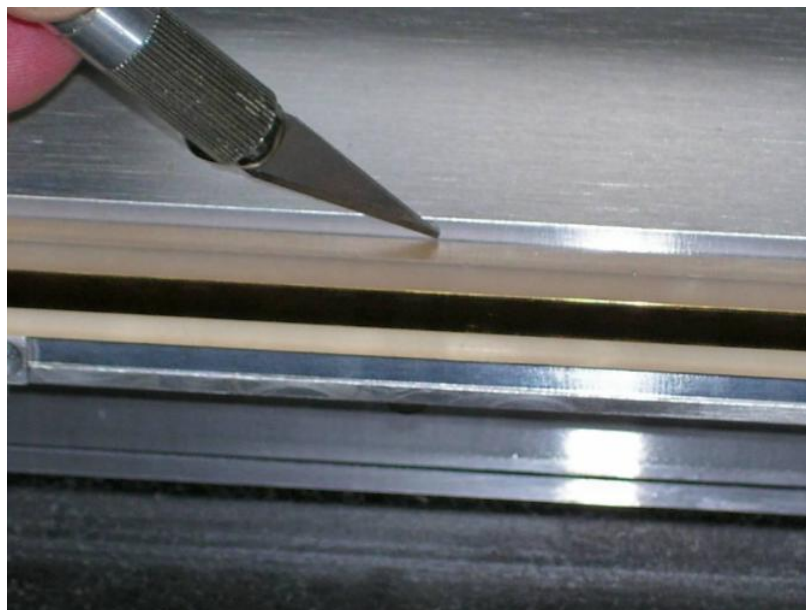


Figure 4 RTV glue removal

6. Gentle slide out Y-Axis glass scale toward up direction as shown in Figure 5.



Figure 5 Glass scale removal

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

II. Replacement of the Y-Axis Glass Scale

1. Gentle assemble new Y-Axis glass scale as shown in Figure 6.

Remark: Caution on glass scale orientation.

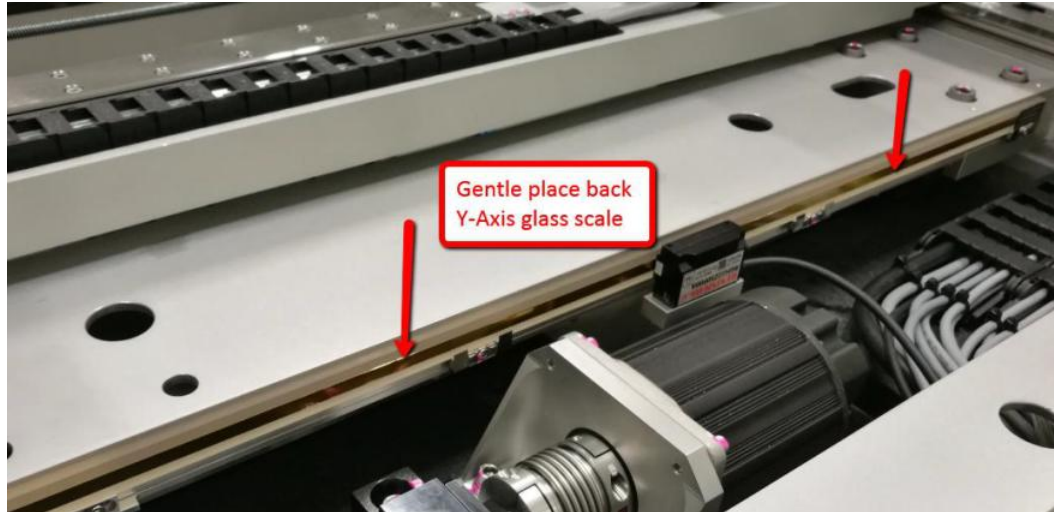


Figure 6 Glass scale replacement

2. Position glass scale lining up at termination tag of the glass scale with spring clamp.



Figure 7 Glass scale lining up (Reference only)

3. Assemble limit sensor and home sensor by refer to origin location (By refer to Step 3). Tighten all screws which secure spring clamp as shown in Figure 8.

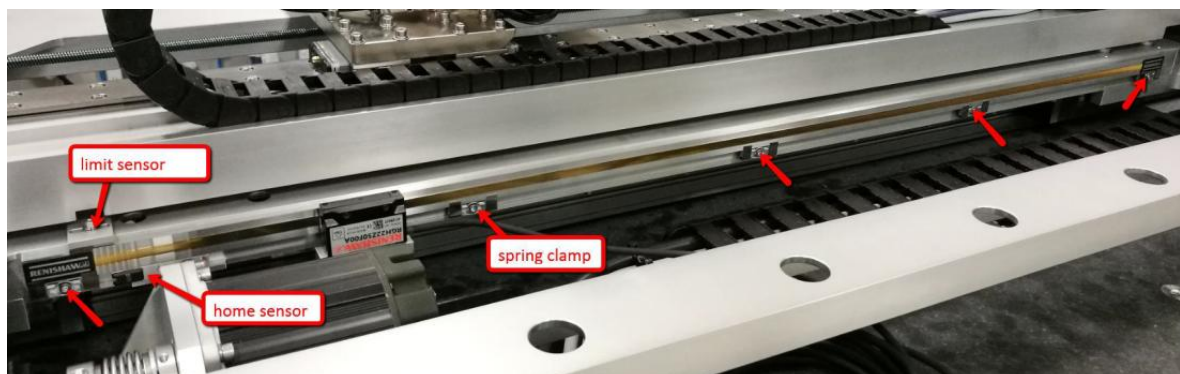


Figure 8 Glass scale replacement

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

4. Assemble Y-Axis encoder as shown in Figure 9.

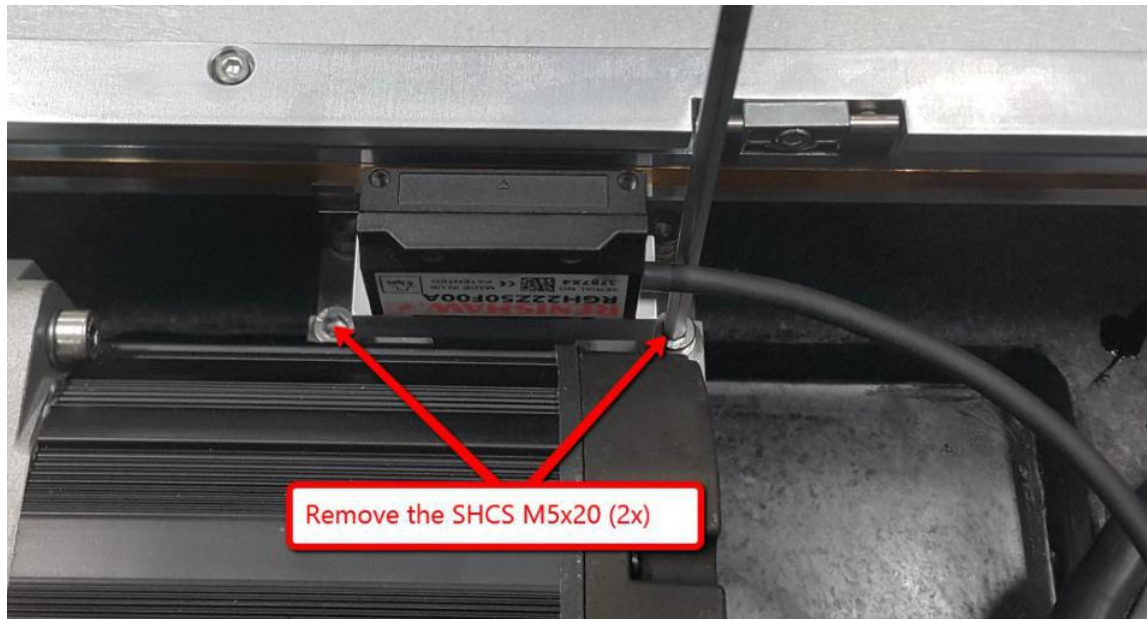


Figure 9 Y-Axis encoder

5. Assemble Y-Axis cover plate and encoder cover plate as shown in Figure 10.

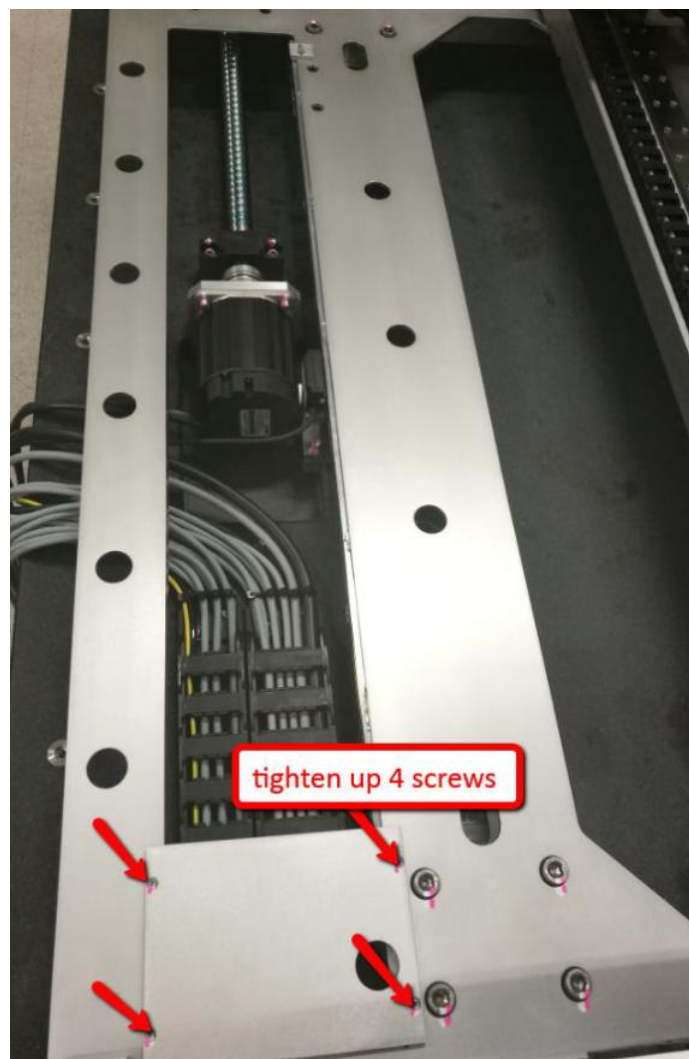


Figure 10 Cover plate assembly

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

- Move Y-Axis stage to minimum hard stop (front side) and maximum hard stop (rear side). Visual check Y-Axis encoder which require green light illuminated along the way as shown in Figure 11. If adjustment require, May refer to “AXI V810 Y-Axis Read Head Encoder Replacement Procedure”.

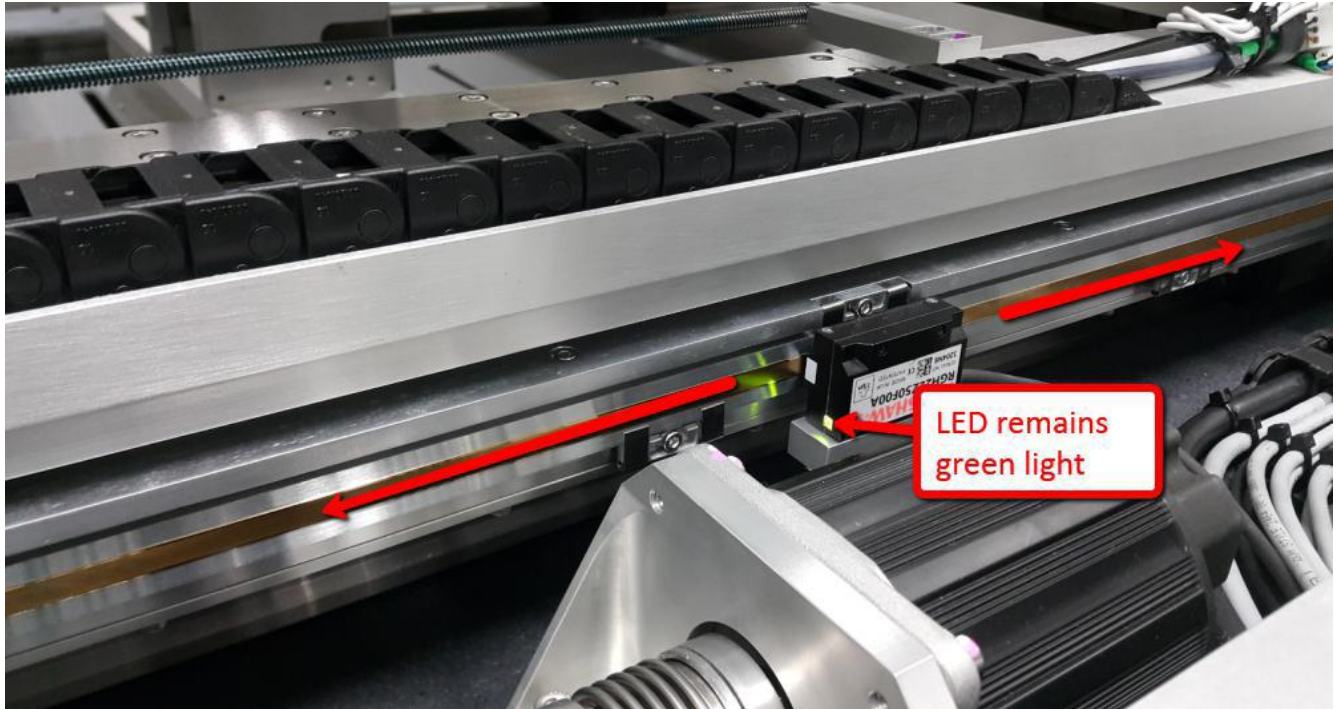


Figure 11 Y-Axis encoder checking

- Close front access door.
- Open V810 > Services > Subsystem Status & Control > Panel Positioner > Initialize

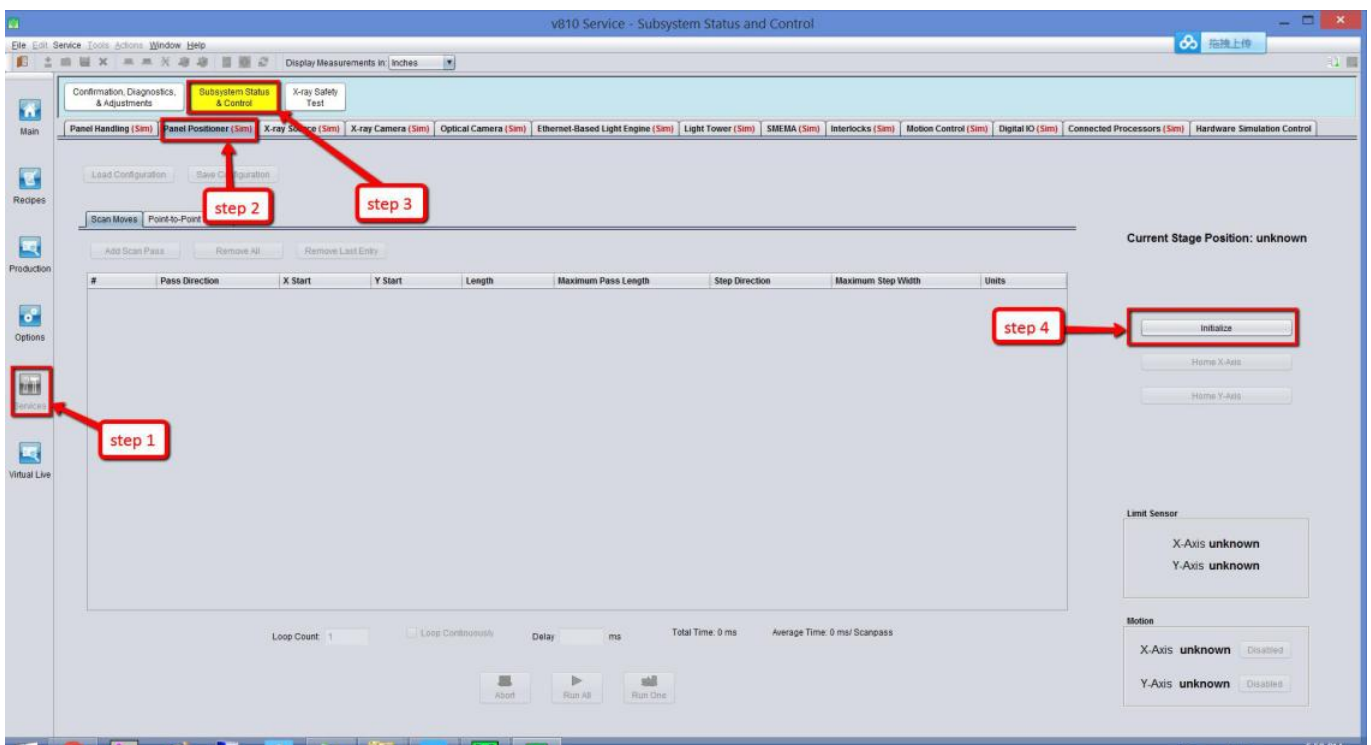


Figure 12 Initialize Panel Positioner

- Open front access door.

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

10. Disable Y-Axis motion and pull Y-Axis stage & perform below checking.

- a) DO not move XY Stage and may check Limit sensor status at Panel Positioner where must stated as “Clear” during home position as shown in Figure 13.

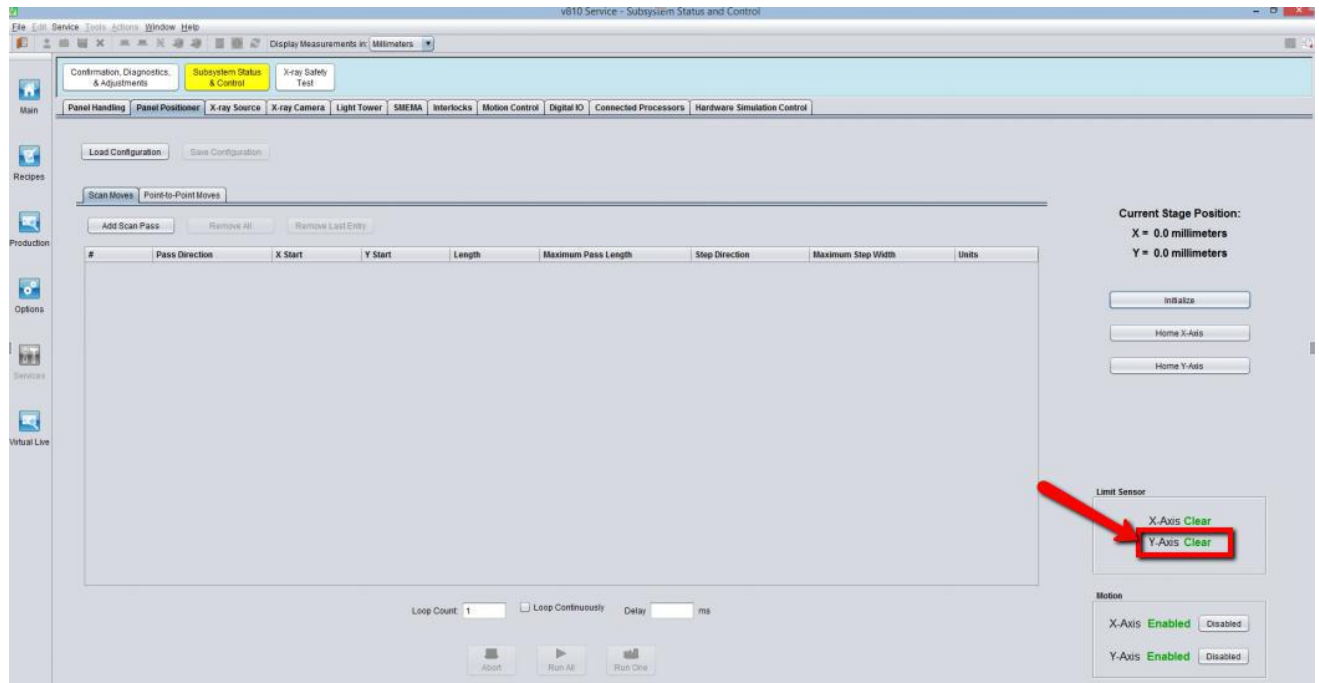


Figure 13 Y-axis limit sensor in “Clear” state

- b) Move Y axis stage towards minimum hard stop (Front side) & check Limit sensor where must stated as “Blocked” as shown in Figure 14.

Remarks: If result is not meet Step 11a ~ 11b requirement, may refer to “AXI V810 Y-Axis Limit Sensor Adjustment Procedure” for further adjustment.

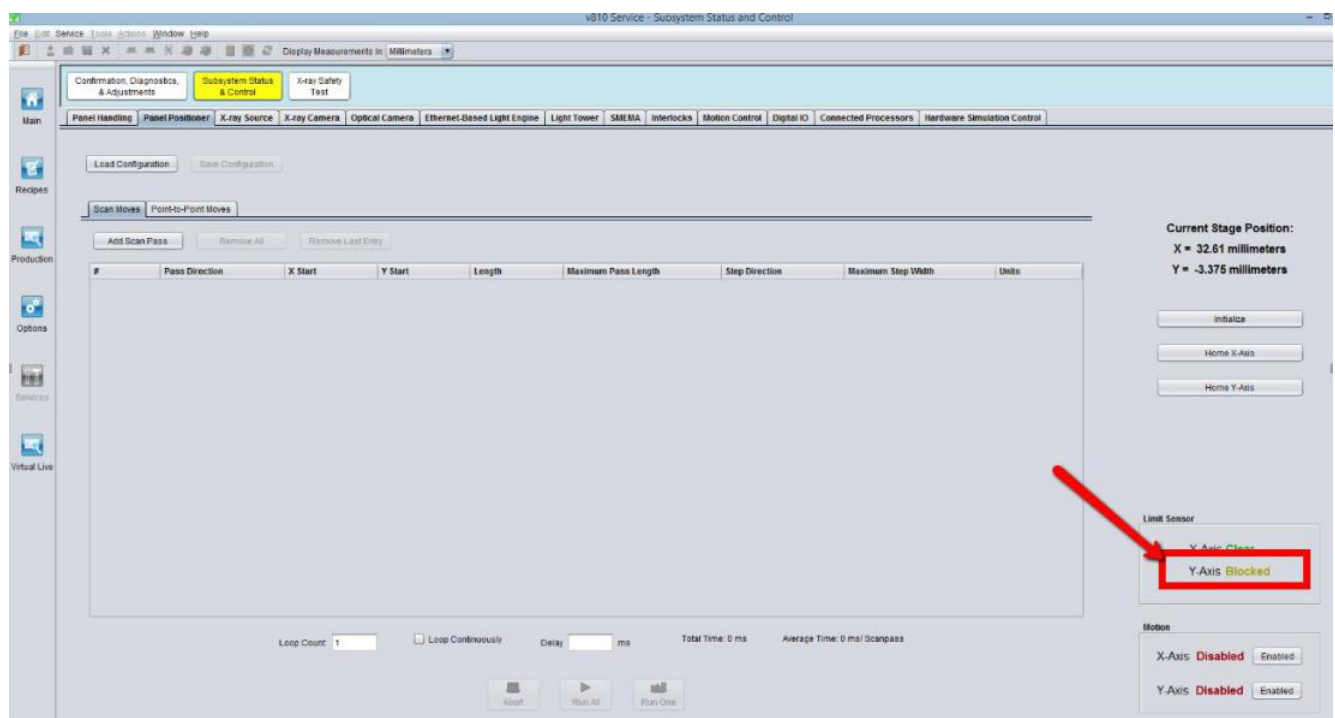


Figure 14 Y axis Limit Sensor in “Blocked” state

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

- c) Move Y axis stage towards minimum hard stop(Front side).
- d) Check the value for the Y-axis in current stage position must within 3.00mm ~ 3.30 mm.

Remark: If result is not meet to Step 11c ~ 11d requirement, may refer to “AXI V810 Y-Axis Home Sensor Adjustment Procedure” for further adjustment.



Figure 15 Y axis (Current Stage Position)

11. Run 3 loops of long scan and 1 loop of CD &A.