

	Work Instruction	Doc. Revision	03
	AXI V810 Y-Axis Home Sensor Adjustment Procedure	Effective Date	20 Oct 2016

This procedure is applicable to below models:


V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	19 Aug 2013	First Release	ONG KEAN SHENG
01	04 Jun 2015	Second Release	MUHAMMED SHAMEEM
02	01 July 2015	Picture revise	ONG KEAN SHENG
03	20 Oct 2016	Template Changes & Content Update	ONG KEAN SHENG

	Work Instruction					Doc. Revision	03
	AXI	V810	Y-Axis	Home	Sensor	Adjustment Procedure	Effective Date

Special Remark :

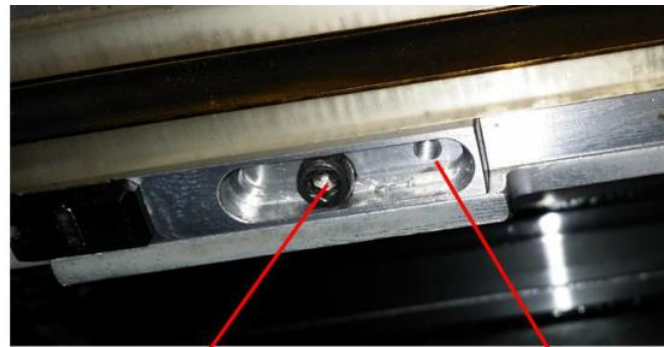

Correct slot of home sensor bracket
(Which near to the rear side of
system)

Wrong slot of home sensor bracket
(Which near to the front side of system)

Figure 1 Y axis Home Sensor Slot

1. Gently move the Y axis stage until Y axis Home Sensor bracket is reveal.
2. Loosen the M3 screw as shown below in the Figure 2.

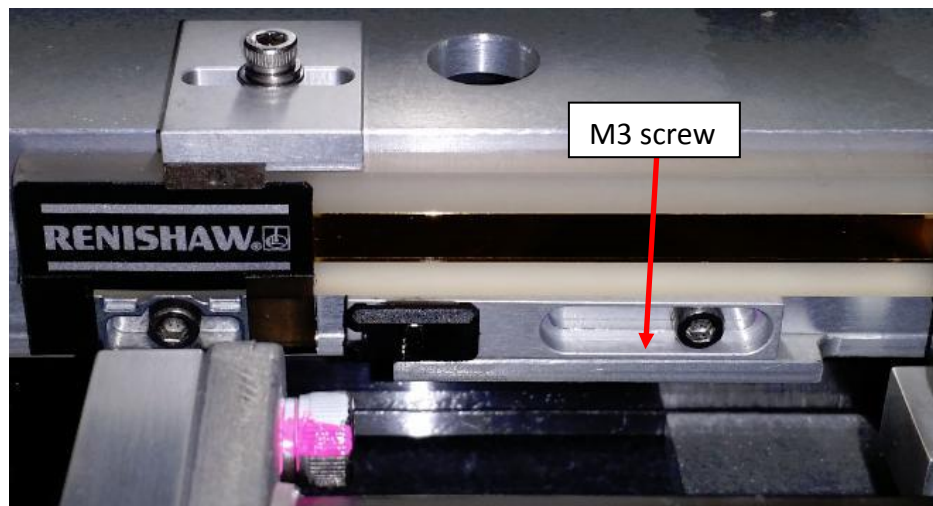


Figure 2 Y-axis Home Sensor M3 Screw

3. Adjust the Y-axis as below table

Current stage position after initialize the Panel Positioner	Direction of the home sensor need to be adjusted
Less than -3.00mm	Towards the front access door
More than -3.30mm	Towards the rear access door

ViTrox	Work Instruction					Doc. Revision	03
	AXI V810 Y-Axis Home Sensor Adjustment Procedure					Effective Date	20 Oct 2016

4. Once home sensor adjustment complete, tighten M3 screw as shown in Figure 2.
5. Push the X axis & Y axis stage to the middle of the machine and close front access door.
6. Initialize at Panel Positioner Tab.
7. Open up front access door.
8. Move Y axis stage towards Front Side until the Y axis stage is collide with Y axis Minimum hard stop as Figure 3.

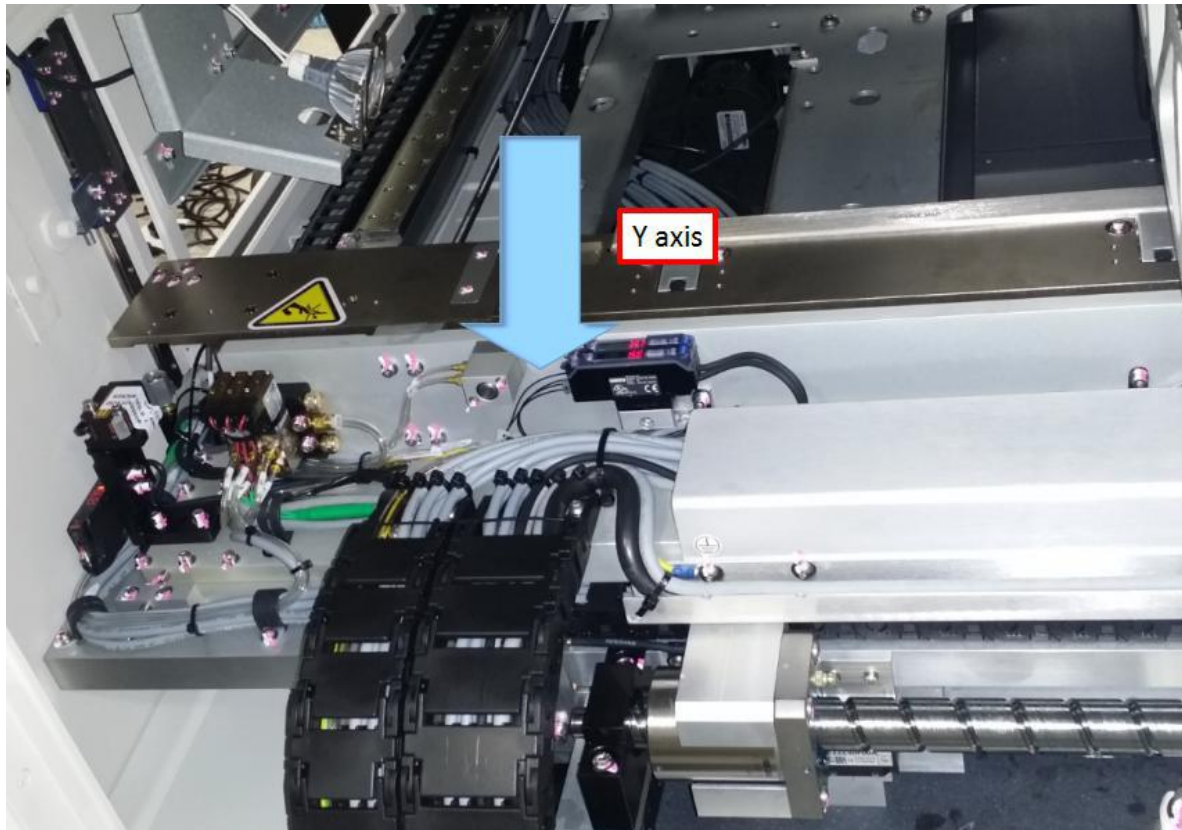


Figure 3 Y axis Minimum Hard Stop (V810 Std)

	Work Instruction					Doc. Revision	03
	AXI	V810	Y-Axis	Home	Sensor	Adjustment Procedure	Effective Date

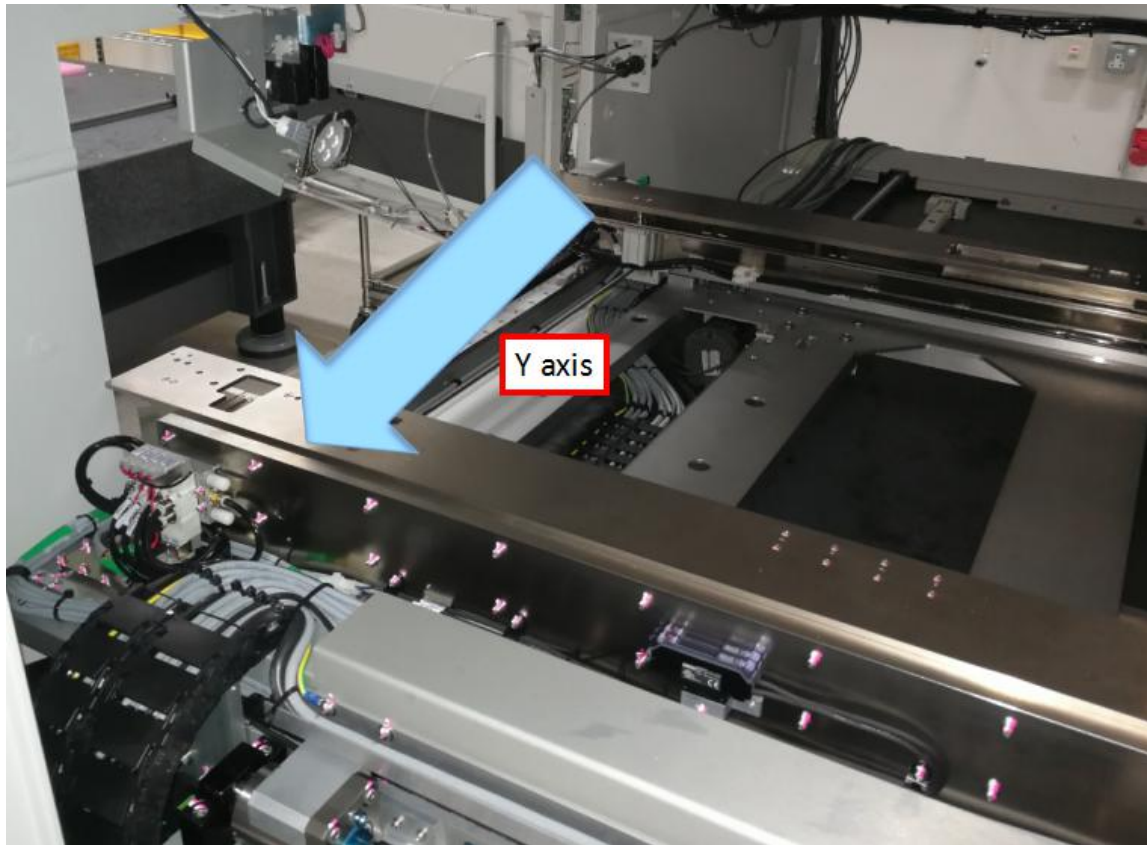


Figure 4 Y axis Minimum Hard Stop (V810 XXL)

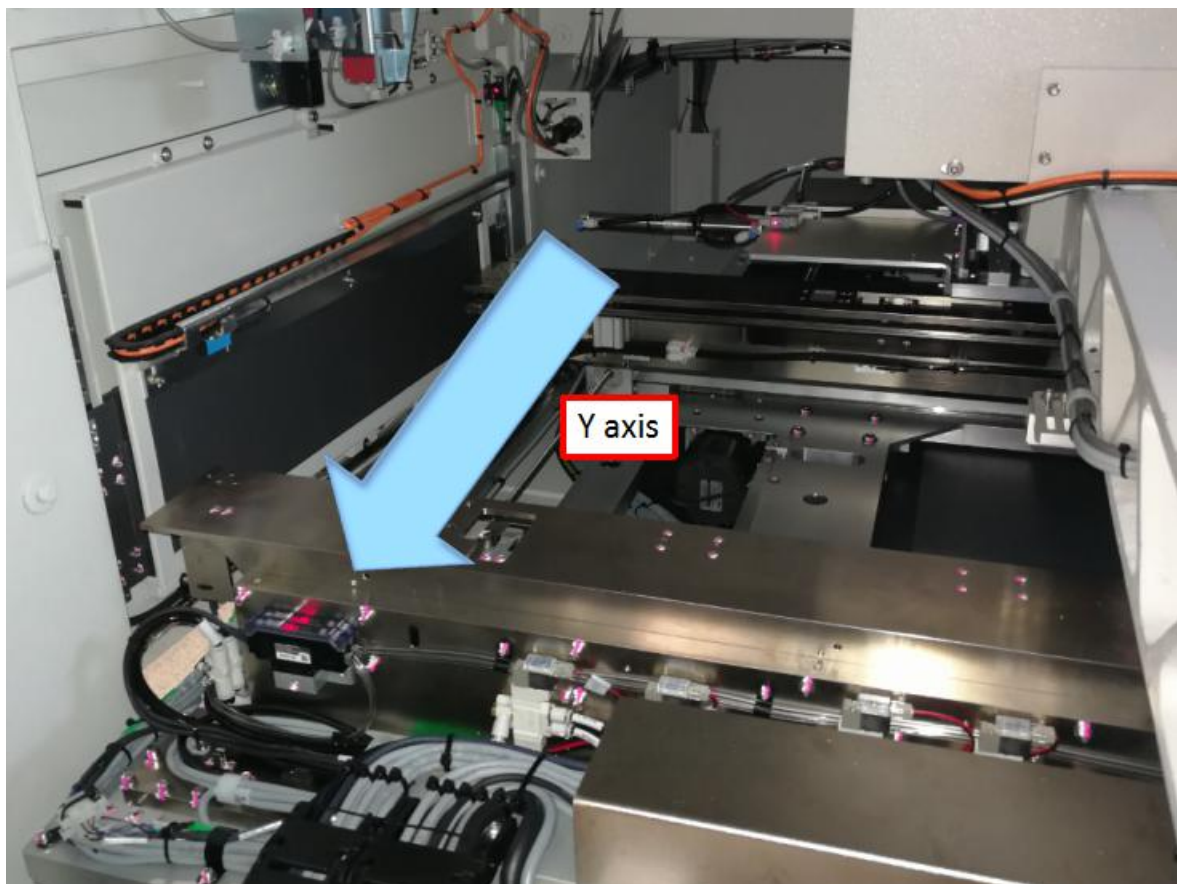


Figure 5 Y axis Minimum Hard Stop (V810 S2EX)

	Work Instruction					Doc. Revision	03
	AXI	V810	Y-Axis	Home	Sensor	Adjustment Procedure	Effective Date

9. Check on the update value at Current Stage Position (Panel Handling tab).

Spec must within -3.00 mm ~ -3.30 mm.

10. Repeat Step 1-9 until Y axis home sensor is within the range from -3.00mm to -3.30mm.

11. In the Panel Positioner tab, change the **Display Measurement** to **Nanometres** and click Initialize.

After the initialization complete, disable the motion for the X-axis and Y-axis.

12. Open the front access door and push the Y axis towards rear direction until it reach Y axis Maximum Hard Stop as Figure 6.

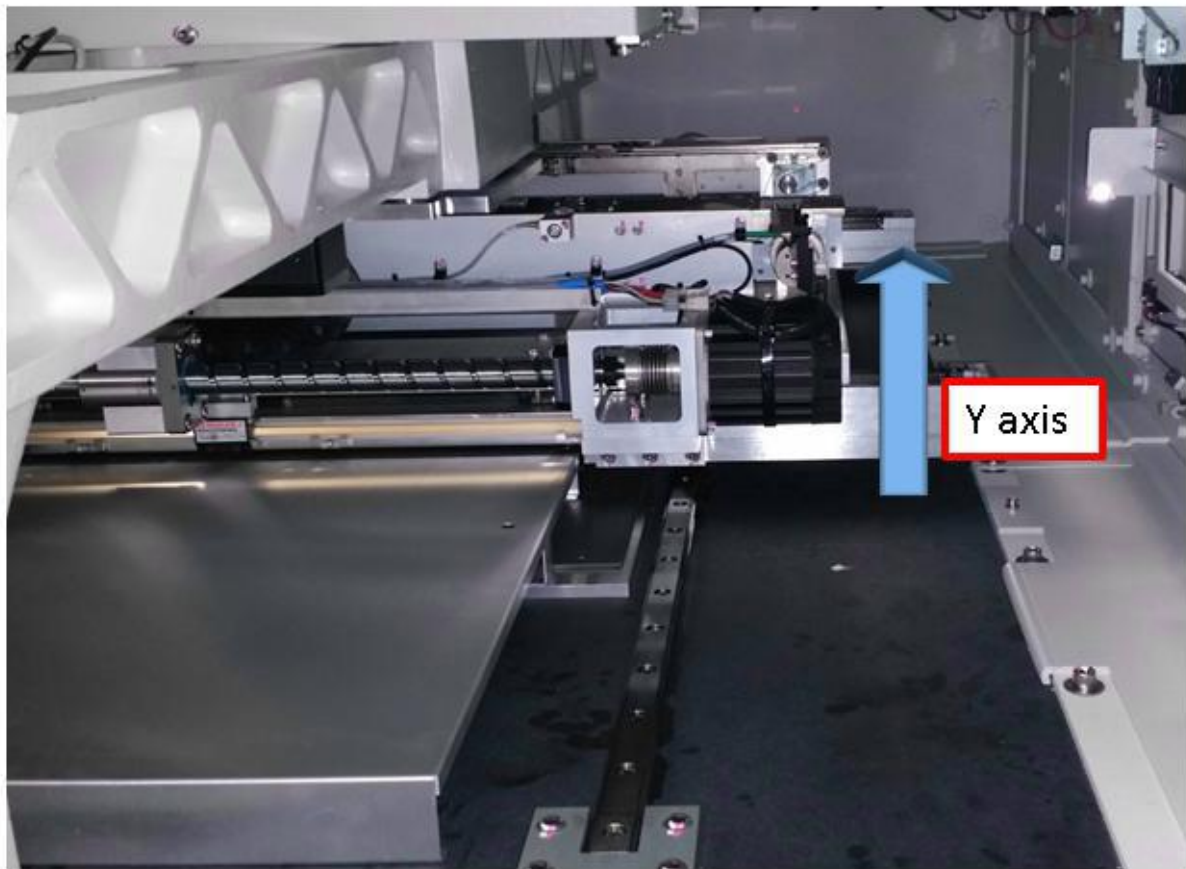


Figure 6 Y axis Maximum Hard Stop (V810 Std)

	Work Instruction					Doc. Revision	03
	AXI	V810	Y-Axis	Home	Sensor	Adjustment Procedure	Effective Date

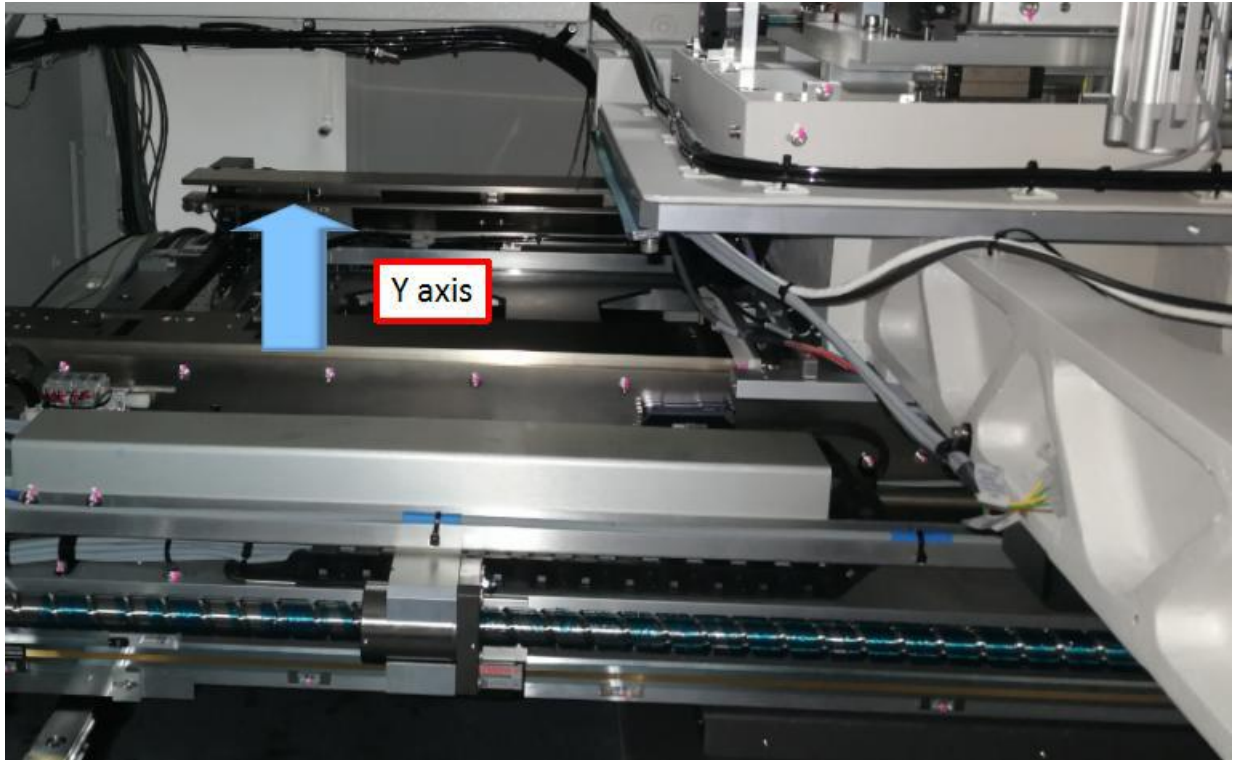


Figure 7 Y axis Maximum Hard Stop (V810 XXL)

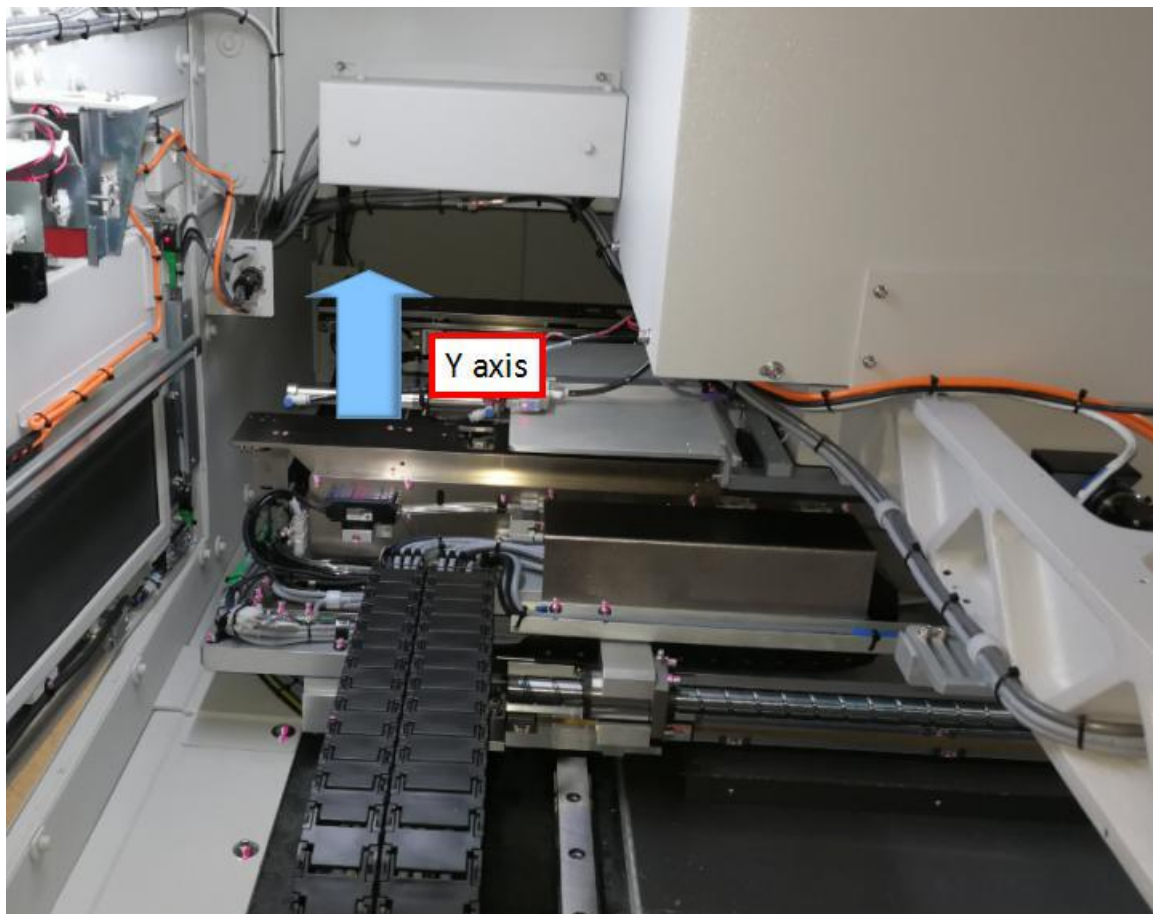


Figure 8 Y axis Maximum Hard Stop (V810 S2EX)

	Work Instruction	Doc. Revision	03
	AXI V810 Y-Axis Home Sensor Adjustment Procedure	Effective Date	20 Oct 2016

13. Verify Y axis Actual max travel stroke (Display at Panel Positioner `s Current Position) where MUST more than Command Distance by refer to below Machine Model.

Machine Model	Command Distance (NM)	Y axis Actual Max Travel Stroke (NM)
V810 S2	593090000	Required to be more than Command Distance Value
V810 XXL S2	829635920	Required to be more than Command Distance Value
V810 S2EX	660000000	Required to be more than Command Distance Value