


Revision 01.30.19



Controls

- Volume
- Sustain
- Treble
- Bass

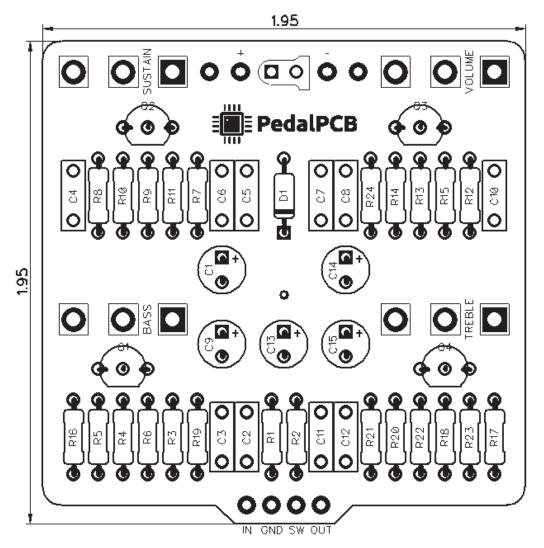

Acid Rain Fuzz

Parts List

RESISTORS (1/4W)				
R1	1M			
R2	4K7			
R3	100K			
R4	470K			
R5	12K			
R6	390R			
R7	220R			
R8	100K			
R9	470K			
R10	12K			
R11	390R			
R12	100K			
R13	470K			
R14	12K			
R15	390R			
R16	10K			
R17	10K			
R18	33K			
R19	10K			
R20	2M2			
R21	4K7			
R22	150R			

330R

150R


R23

R24

CAPACITORS				
C1	47u			
C2	100n			
C3	470p			
C4	100n			
C5	100n			
C6	470p			
C7	10n			
C8	470p			
C9	4u7			
C10	2n2			
C11	22n			
C12	2n2			
C13	4u7			
C14	47u			
C15	1u			

TRANSISTORS					
	Q1	BC5490			
	Q2	BC5490			
	Q3	BC5490			
	Q4	BC5490			
DIODES					
	D1	1N5817	,		
POTENTIOMETERS					
	VOLUME		A100K		
	SUSTAIN		A100K		
	BASS		B100K		
	TREBLE		B100K		




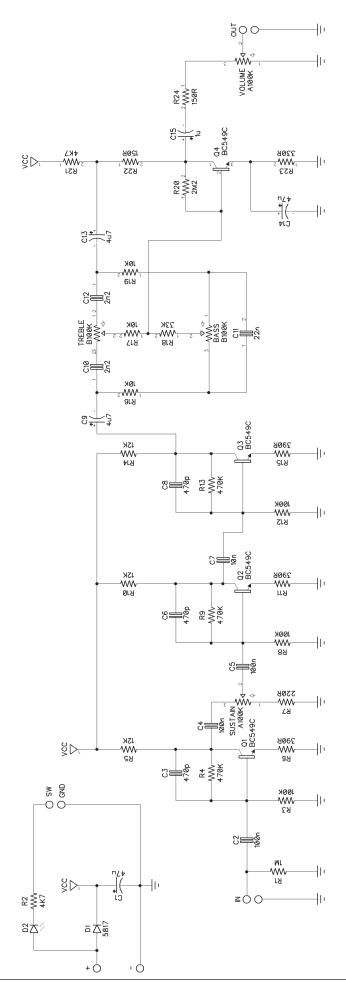



Acid Rain Fuzz

Wiring Diagram

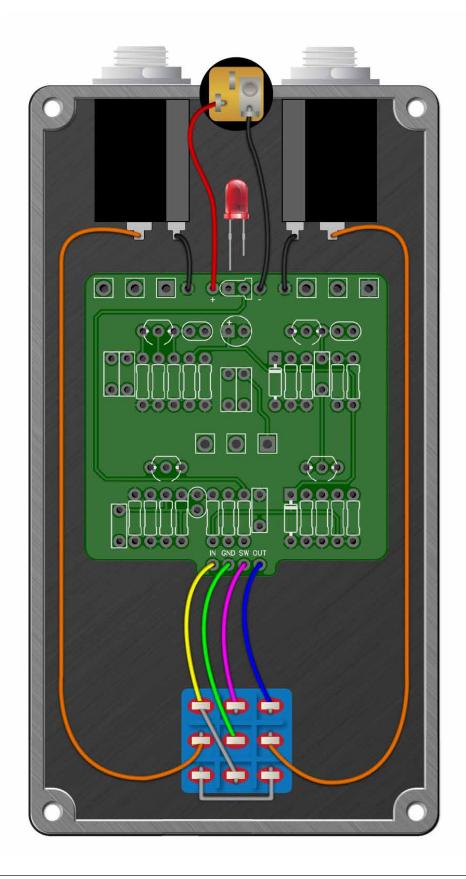



Acid Rain Fuzz

Drill Template 125B enclosure with top mounted jacks

