


Revision 06.24.18

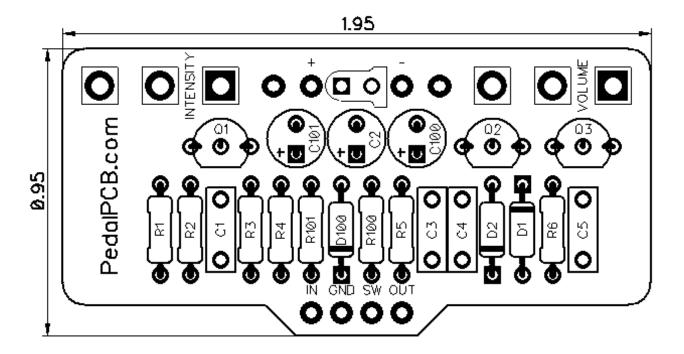

Controls

- **Volume** Controls the overall output volume
- **Intensity** Controls the intensity of fuzz

All trademarks and registered trademarks are the property of their respective owners. The company, product, and service names used in this web site are for identification purposes only. Use of these names, logos, and brands does not imply endorsement.



Kalle


Parts List

POTENTIOMETERSVOLUME B500K

B5K


INTENSITY

RESISTORS		CAPACITORS		TRANS	SISTORS
R1	1M	C1	47n	Q1	2N5089
R2	1K	C2	22u	Q2	2N3906
R3	3M3	C3	220n	Q3	2N3904
R4	3K3	C4	390p		
R5	10K	C5	220n	DIODE	ES
R6	10K	C100	47u	D1	1N914
R100	4K7	C101	100u	D2	BAT46
R101	330			D100	1N5817
R3 R4 R5 R6 R100	3M3 3K3 10K 10K 4K7	C3 C4 C5 C100	220n 390p 220n 47u	Q3 DIODE D1 D2	2N3904 ES 1N914 BAT46

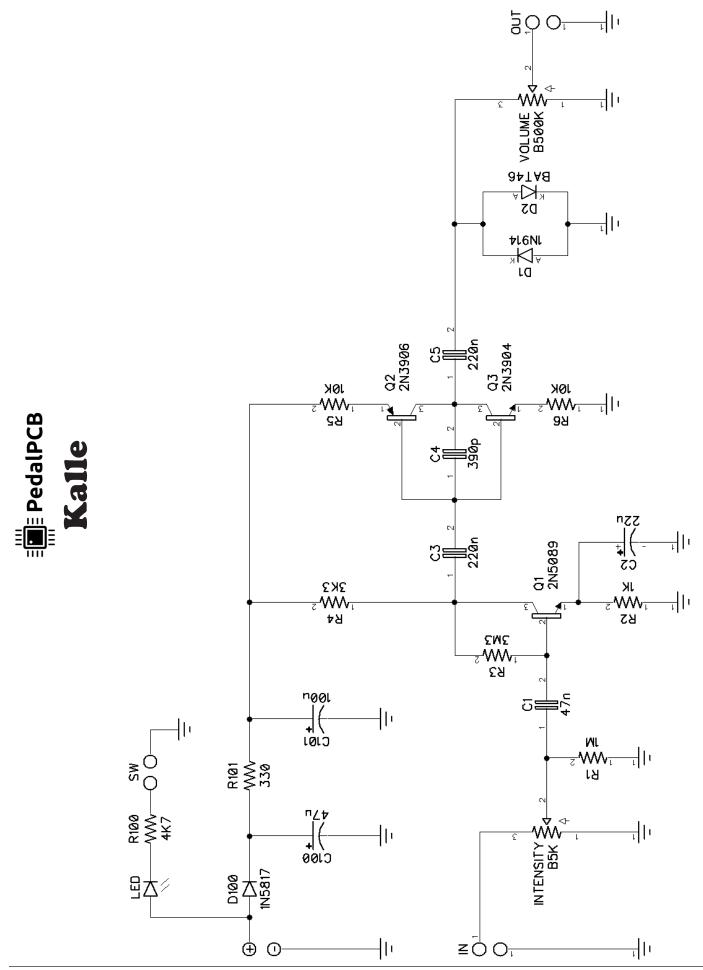



KalleWiring Diagram

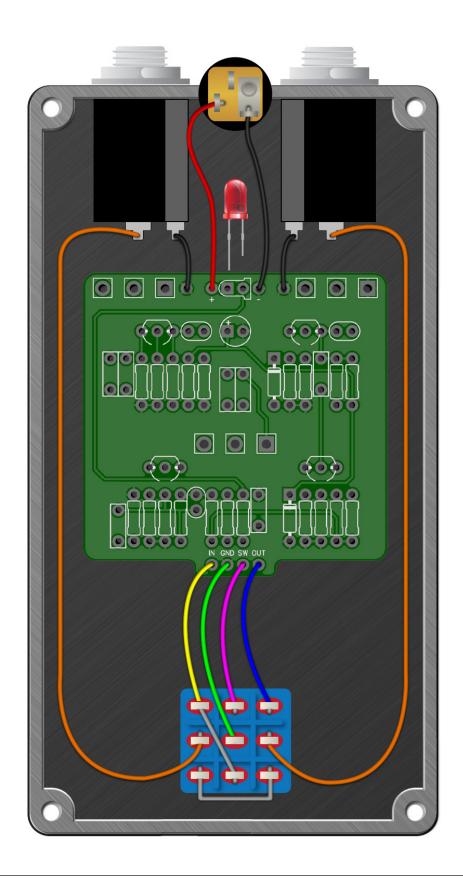



Kalle

Drill Template 125B enclosure with top mounted jacks

