


Revision 09.07.19

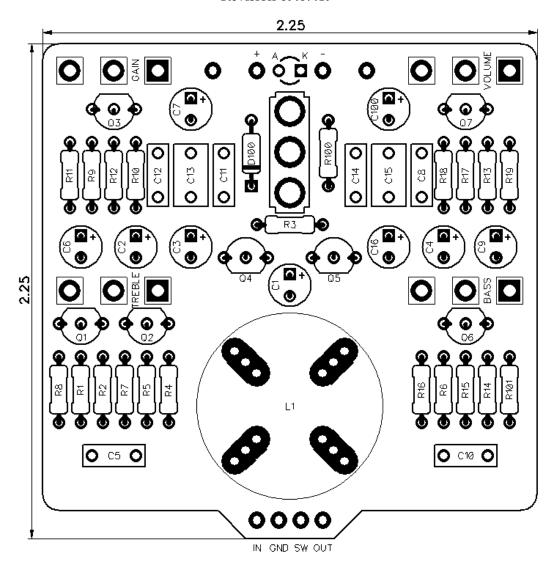

Controls


- Volume
- Gain
- Treble
- Bass
- Voice (Toggle switch)


All trademarks and registered trademarks are the property of their respective owners. The company, product, and service names used in this web site are for identification purposes only. Use of these names, logos, and brands does not imply endorsement.



Conqueror Fuzz Parts List

RESISTORS (1/4W)		CAPACITORS		TRANSISTORS	
R1	100K	C1	10u	Q1	BC548
R2	220K	C2	10u	Q2	BC548
R3	18K	C3	47u	Q3	BC548
R4	22K	C4	10u	Q4	2N4125
R5	20K	C5	68n	Q5	2N4125
R6	470R	C6	47u	Q6	2N4125
R7	330R	C7	47u	Q7	BC548
R8	1K	C8	100n		
R9	10K	C9	10u	INDUCTORS	
R10	10K	C10	100n	L1	500mH (Fasel)
R11	18K	C11	47n		
R12	15K	C12	47n	DIODES	
R13	1K5	C13	150n	D100	1N5817
R14	220R	C14	10n		
R15	220R	C15	220n	POTENTIOMETERS	
R16	10K	C16	220u	VOLUME	A25K
R17	47K	C100	470u	GAIN	C5K
R18	4K7			TREBLE	B1K
R19	2K2			BASS	A10K
R100	220R				
R101	4K7			TOGGLE SWITCHES	
				VOICE	SPDT (On/Off/On)

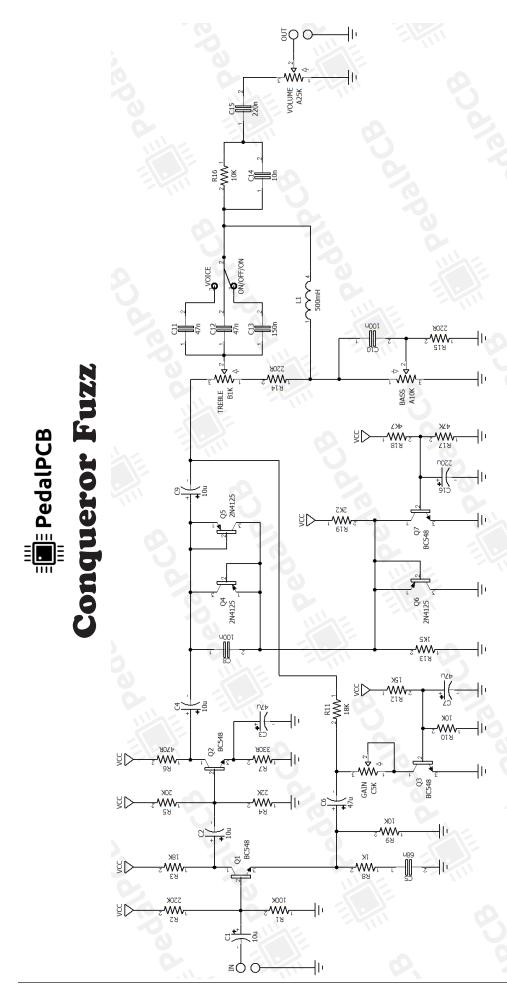

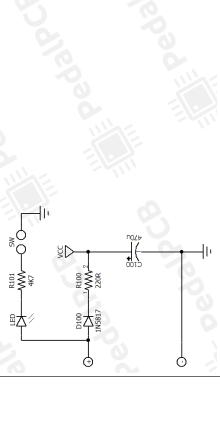



Conqueror Fuzz Wiring Diagram





Conqueror Fuzz
Drill Template
125B enclosure with top mounted jacks

