Page 2

LPC3154 Powering and Unused parts

Page 3


LPC3154 Digital I/O

Page 4

JTAG Interface


Page 5


LPC1343 with Expansion connector

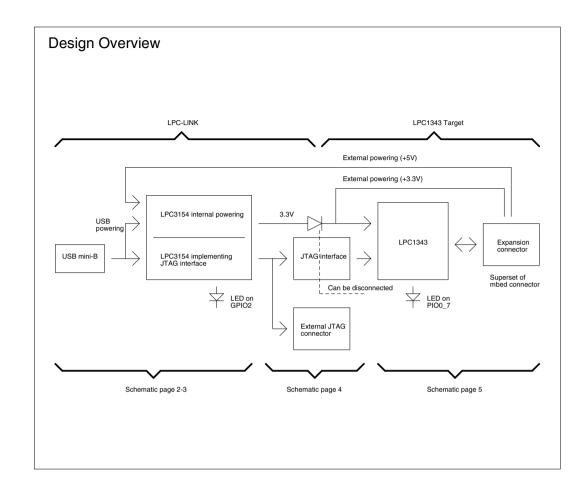


UL = UnLoaded = normally not mounted component.


Default jumper settings are indicated in the schematic. However, always check jumper positions on actual boards since there is no guarantee that all jumpers are in default place.

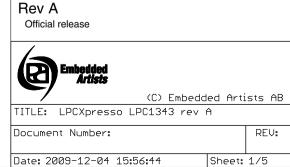


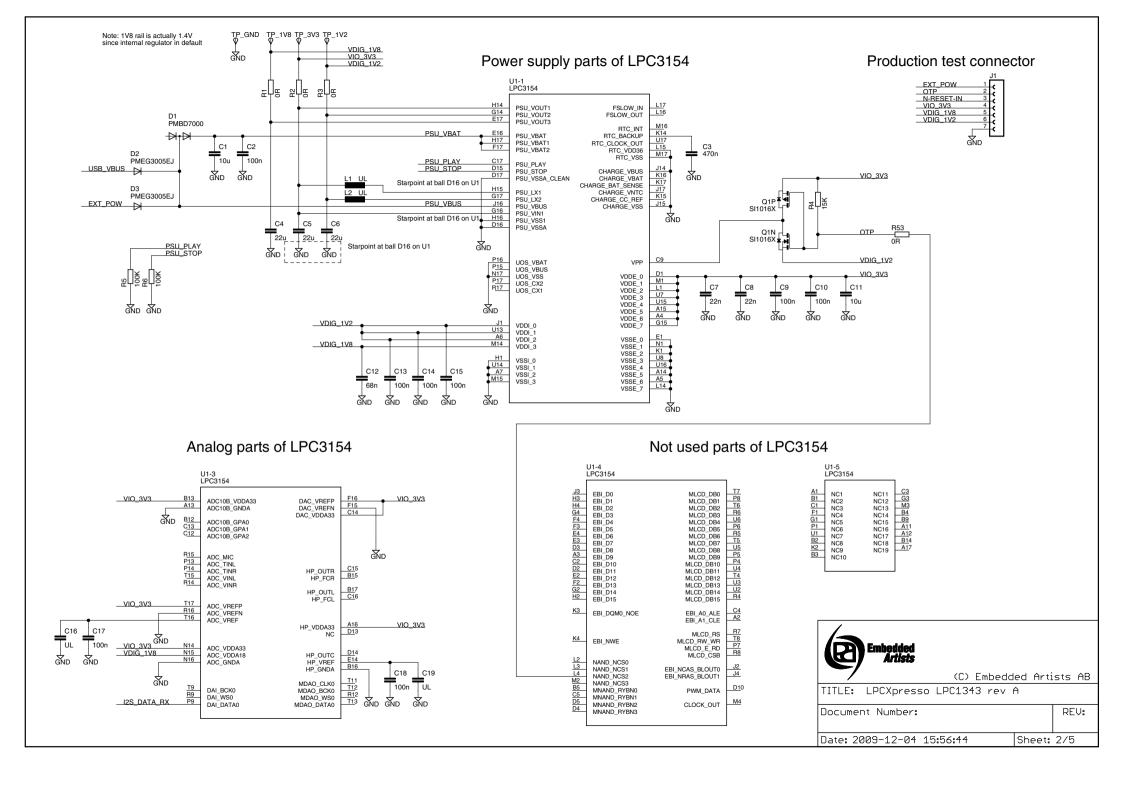

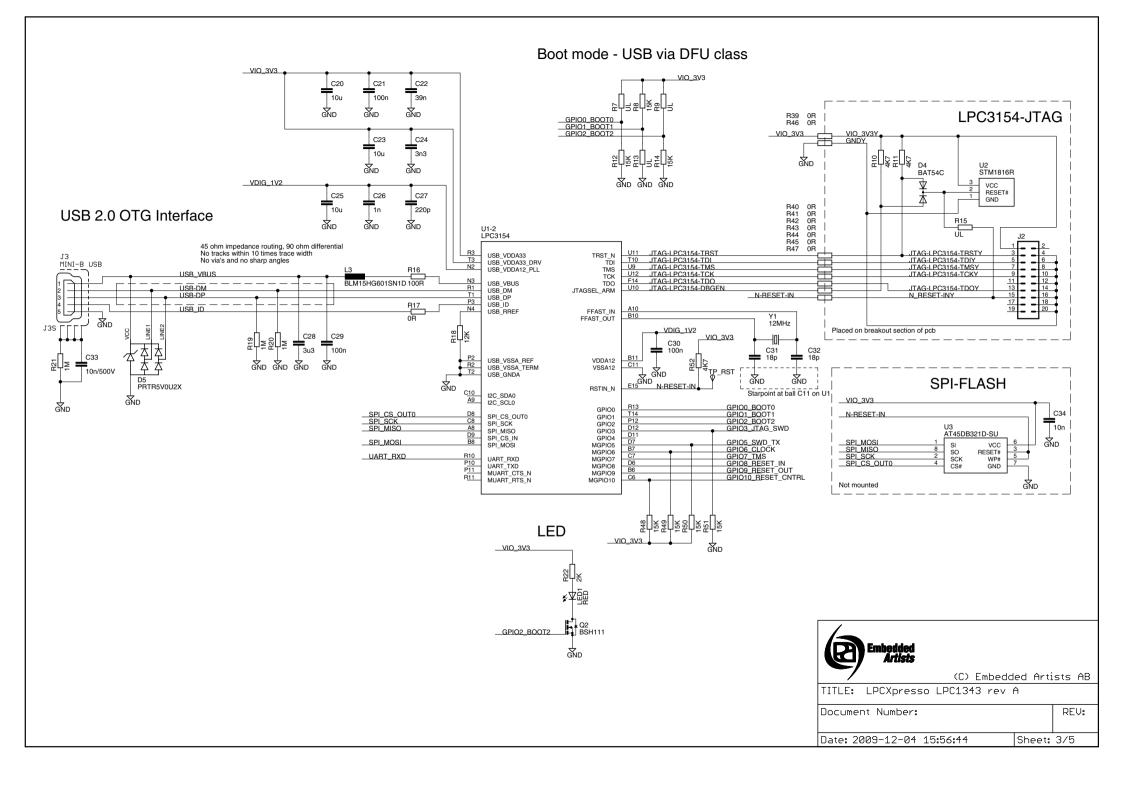

JTAG Interface

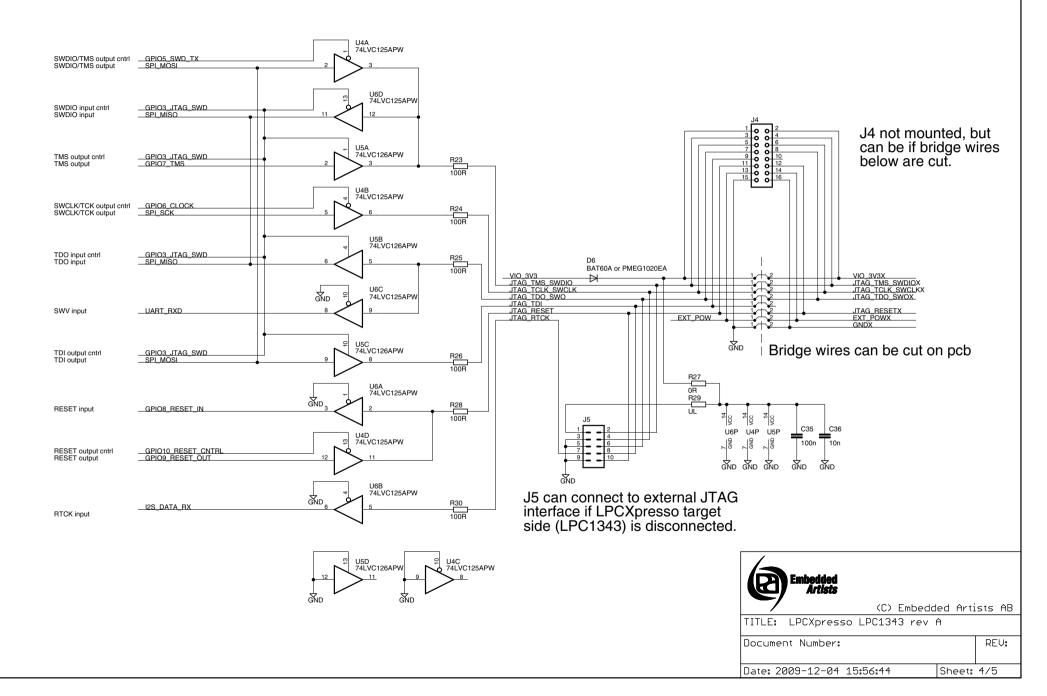

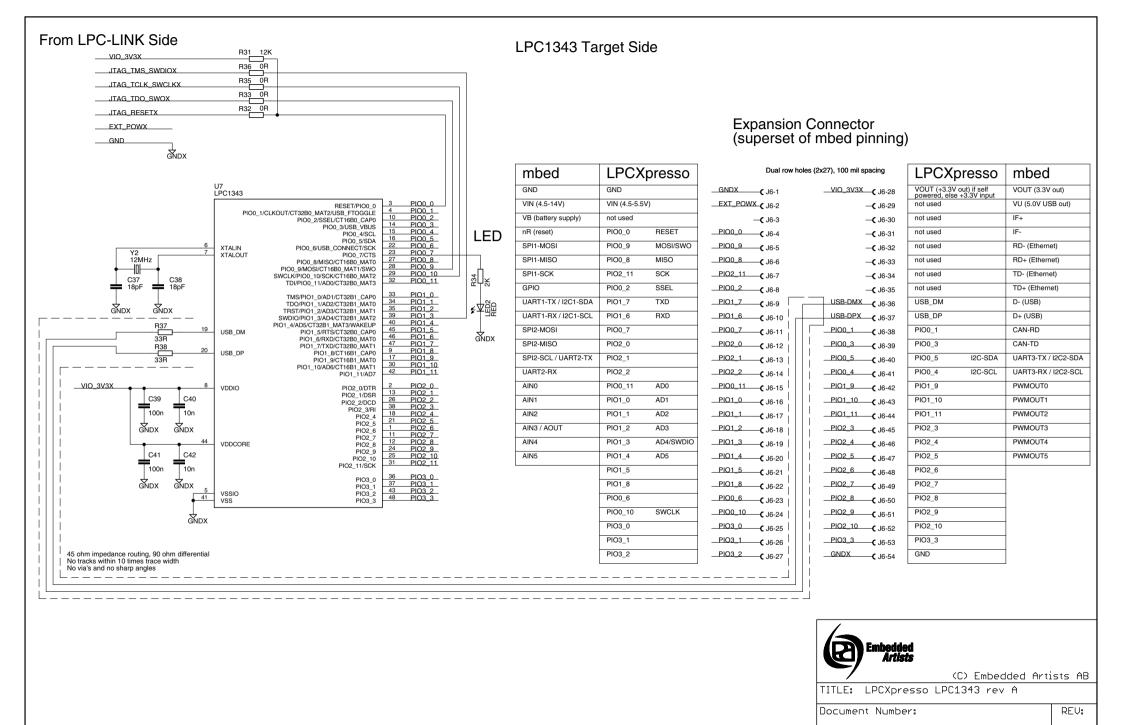

Date: 2009-12-04 15:56:44

Sheet: 5/5