


MXBAOHENG Din Rail Cutter


User Manual

Please read and keep this manual carefully!

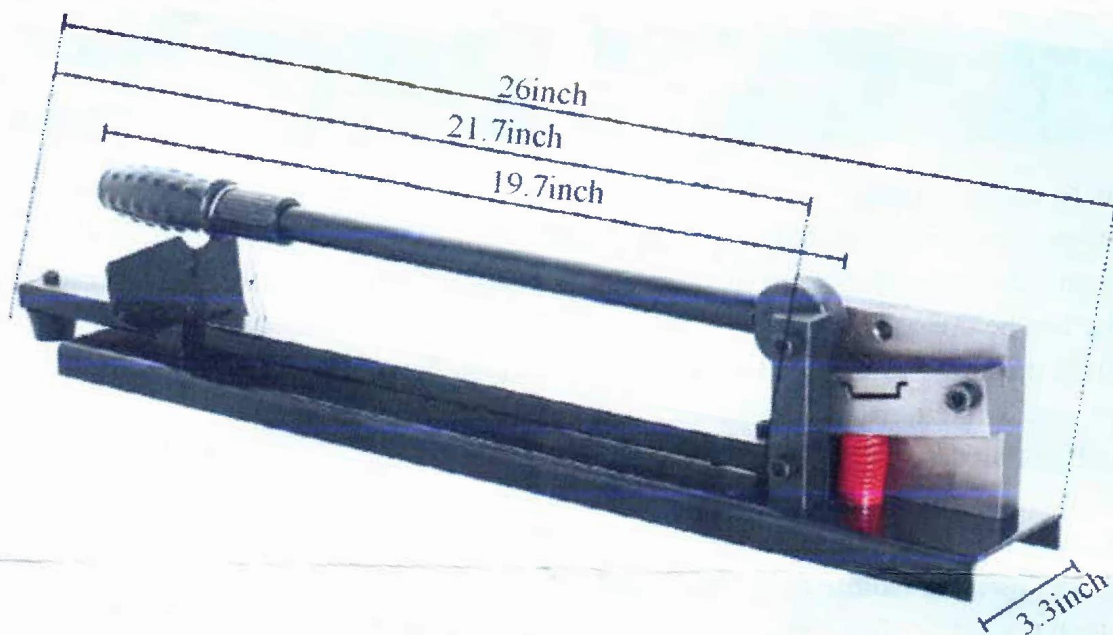


Only suitable for cutting steel rails

METHOD OF OPERATION

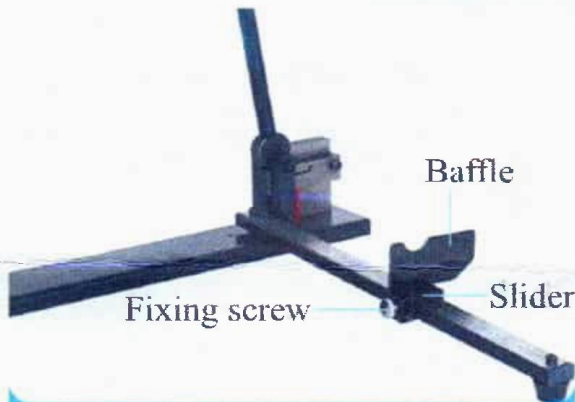

1. Rotate the ruler and fix it at 90°, move the slider to the length to be cut and turn the screw to fix it.

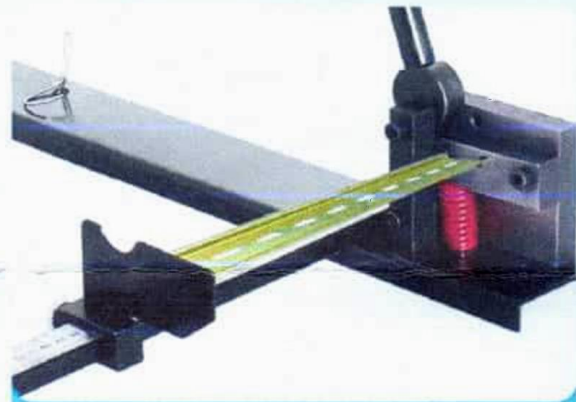

2. Insert the guide rail from the left and push it to the fixed position of the slider.



3. Hold the handle and press down to cut off the guide rail.



4. After the guide rail is cut, open the handle lightly and use a ruler to measure and check the length.

How to use the ruler:

- ① Open the ruler horizontally and snap it into the fixed position of the bottom plate.
- ② Install the slider baffle on the slider, as shown in the picture (screw tightness: the baffle can be opened and closed freely).
- ③ Slide the slider to the scale position that needs to be cut (the scale ruler has a fixed error, and a fixed error must be added for each cut. The fixed error is subject to the actual cutting data).
- ④ Tighten the fixing screws of the slider.
- ⑤ Insert the guide rail until it reaches the baffle.
- ⑥ Press down the handle to cut the guide rail.
- ⑦ Open the baffle after cutting and take out the guide rail.
- ⑧ When the cutting length does not change, there is no need to slide the slider and please continue cutting; if the cutting length changes, continue the above steps.
- ⑨ After cutting, snap the ruler into a fixed position on the bottom plate, put away the handle and place the cutter securely.