

CRAFTSMAN®

INSTRUCTION MANUAL | GUIDE D'UTILISATION | MANUAL DE INSTRUCCIONES

6.0 Amp Corded Hand Planer

CMEW300



IF YOU HAVE QUESTIONS OR COMMENTS, CONTACT US.
POUR TOUTE QUESTION OU TOUT COMMENTAIRE, NOUS CONTACTER.
SI TIENE DUDAS O COMENTARIOS, CONTÁCTENOS.

1-888-331-4569 WWW.CRAFTSMAN.COM

English (original instructions)	1
Français (<i>traduction de la notice d'instructions originale</i>)	10
Español (<i>traducido de las instrucciones originales</i>)	20

Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.



DANGER: Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.



WARNING: Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.




CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.



(Used without word) Indicates a safety related message.

NOTICE: Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.

Fig. A

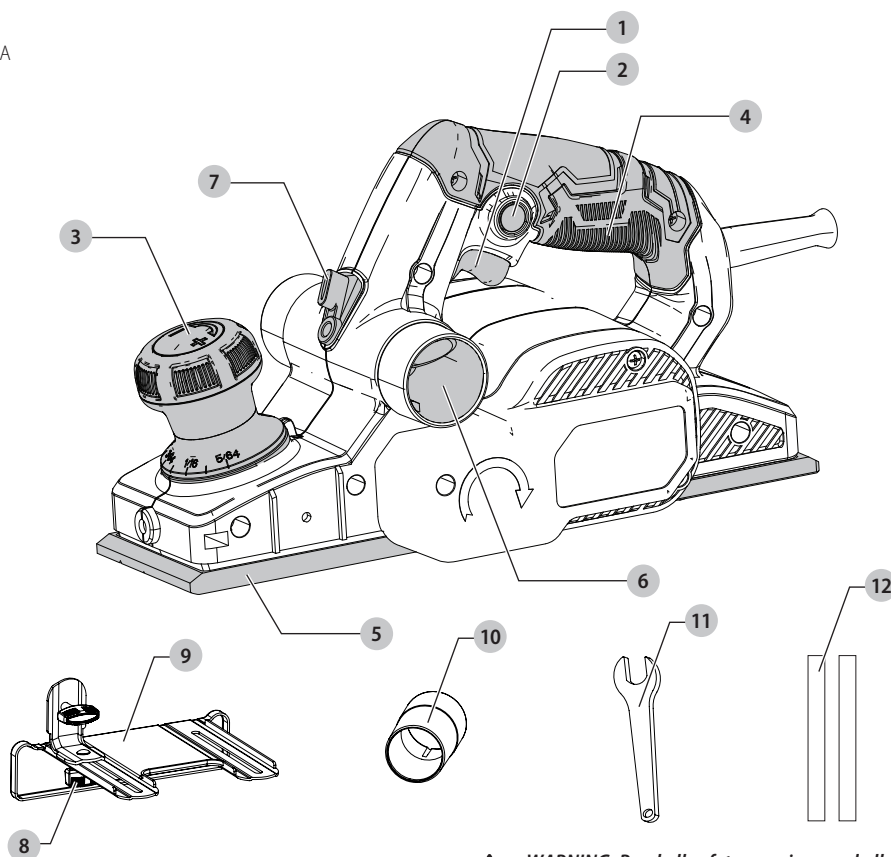

COMPONENTS

- | | |
|--|--------------------------------|
| 1 Trigger switch | 7 Chip deflector lever |
| 2 Lock-on button | 8 Rabbet fence adjustment knob |
| 3 Depth adjustment knob/
front handle | 9 Rabbet fence |
| 4 Switch handle | 10 Vac adaptor |
| 5 Shoe | 11 Wrench |
| 6 Chip discharge chute | 12 Blades (installed on unit) |



WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.



WARNING: Never modify the power tool or any part of it. Damage or personal injury could result.



WARNING: To reduce the risk of injury, read the instruction manual.

If you have any questions or comments about this or any product, call CRAFTSMAN toll free at: **1-888-331-4569**.

6.0 Amp Corded Hand Planer CMEW300

GENERAL POWER TOOL SAFETY WARNINGS



WARNING: Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work Area Safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical Safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** Use of a GFCI reduces the risk of electric shock.

3) Personal Safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A

moment of inattention while operating power tools may result in serious personal injury.

- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

4) Power Tool Use and Care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or remove the battery, pack if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If**

damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits, etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

Additional Safety Warnings

- **Wait for the cutter to stop before setting the tool down.** An exposed rotating cutter may engage the surface leading to possible loss of control and serious injury.
- **Hold power tool by insulated gripping surfaces only, because the cutter may contact its own cord.** Cutting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against the body leaves it unstable and may lead to loss of control.
- **To reduce the risk of injury, user must read and understand instruction manual before operating planer.**
- **Be sure the voltage agrees with specific data on the nameplate.**
- **Make certain that the switch is in the OFF position before connecting plug to a power source.**
- **Be sure to switch OFF immediately if tool is jammed in work.**
- **Be sure tool is set for correct depth before turning switch to ON.**
- **Be sure to use specified replacement parts only.**
- **Be sure tool is disconnected from power source when cleaning or making adjustments to the tool.**
- **Be sure to maintain tool with care. Follow instructions for lubricating and changing accessories.**
- **Stay alert – never operate the unit when tired or under the influence of drugs, alcohol, or medication.**
- **Be sure to store tool in a clean dry place after disconnecting from power source.**

- **Do not use in dangerous environments. Do not use near flammable substances, in damp or wet locations, or expose to rain.**
- **Be sure that the blades are mounted as described in the instruction manual and check that all screws are firmly tightened before connecting unit to power source.**
- **Keep air vents unobstructed for proper motor cooling.**
- **DO NOT lay tool down on shoe when the blades are exposed.** This can chip the blades.
- **Keep side discharge chute unobstructed at all times.**
- **Never reach under the tool for any reason unless it is turned OFF and UNPLUGGED. BLADES ARE EXPOSED AND EXTREMELY SHARP.**
- **Use this tool for working with wood and wood products only.**
- **Never operate without securely holding the front handle.**
- **Always operate planer with two hands.**
- **Planer blades are extremely sharp.** Handle with great care.
- **Clean out your tool often, especially after heavy use.**
- **Always make sure the work surface is free from nails and other foreign objects.**
- **Air vents often cover moving parts and should be avoided.** Loose clothes, jewelry or long hair can be caught in moving parts.

Additional Safety Information



WARNING: ALWAYS use safety glasses. Everyday eyeglasses are NOT safety glasses. Also use face or dust mask if operation is dusty. ALWAYS WEAR CERTIFIED SAFETY EQUIPMENT:

- ANSI Z87.1 eye protection (CAN/CSA Z94.3),
- ANSI S12.6 (S3.19) hearing protection,
- NIOSH/OSHA/MSHA respiratory protection.



WARNING: Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

- **Avoid prolonged contact with dust from power sanding, sawing, grinding, drilling, and other construction activities. Wear protective clothing and**

ENGLISH

wash exposed areas with soap and water. Allowing dust to get into your mouth, eyes, or lay on the skin may promote absorption of harmful chemicals.

WARNING: Use of this tool can generate and/or disperse dust, which may cause serious and permanent respiratory or other injury. Always use NIOSH/OSHA approved respiratory protection appropriate for the dust exposure. Direct particles away from face and body.

WARNING: Always wear proper personal hearing protection that conforms to ANSI S12.6 (S3.19) during use. Under some conditions and duration of use, noise from this product may contribute to hearing loss.

CAUTION: When not in use, place tool on its side on a stable surface where it will not cause a tripping or falling hazard. Some tools will stand upright but may be easily knocked over.

- **An extension cord must have adequate wire size (AWG or American Wire Gauge) for safety.** The smaller the gauge number of the wire, the greater the capacity of the cable, that is, 16 gauge has more capacity than 18 gauge. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. When using more than one extension to make up the total length, be sure each individual extension contains at least the minimum wire size. The following table shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The lower the gauge number, the heavier the cord.

Minimum Gauge for Cord Sets

Volts		Total Length of Cord in Feet (meters)			
120 V		25 (7.6)	50 (15.2)	100 (30.5)	150 (45.7)
240 V		50 (15.2)	100 (30.5)	200 (61.0)	300 (91.4)
Ampere Rating		American Wire Gauge			
More Than	Not More Than				
0	6	18	16	16	14
6	10	18	16	14	12
10	12	16	16	14	12
12	16	14	12	Not Recommended	

The label on your tool may include the following symbols. The symbols and their definitions are as follows:

V.....volts	RPM.....revolutions per minute
Hz.....hertz	
min.....minutes	sfpm.....surface feet per minute
— or DC.....direct current	
⚡.....Class I Construction (grounded)	SPM.....strokes per minute
.../min.....per minute	OPM.....oscillations per minute
BPM.....beats per minute	A.....amperes
IPM.....impacts per minute	W.....watts

~ or AC.....alternating current	⚠.....avoid staring at light
⎓ or AC/DC.....alternating or direct current	☑.....wear respiratory protection
□.....Class II Construction (double insulated)	👁.....wear eye protection
n ₀no load speed	👂.....wear hearing protection
n.....rated speed	📖.....read all documentation
⚡.....earthing terminal	IPXX.....IP symbol
⚠.....safety alert symbol	
⚠.....visible radiation	

SAVE THESE INSTRUCTIONS FOR FUTURE USE

COMPONENTS (FIG. A)

Motor

Be sure your power supply agrees with the nameplate marking. Voltage decrease of more than 10% will cause loss of power and overheating. These tools are factory tested; if this tool does not operate, check power supply.

Your machine is wired for 120 Volts, 60 HZ alternating current. Before connecting the machine to the power source, make sure the switch is in the OFF position.

Intended Use

This hand planer is designed for residential use for planing applications of wood and wood products.

DO NOT use under wet conditions or in presence of flammable liquids or gases.

DO NOT let children come into contact with the tool.

Supervision is required when inexperienced operators use this tool.

ASSEMBLY AND ADJUSTMENTS

WARNING: To reduce the risk of serious personal injury, turn unit off and disconnect it from power source before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

Switch and Lock-On Button (Fig. B)

CAUTION: Check that the tool is not locked on before connecting it to a power supply. If the trigger switch is locked on when the tool is connected to the power supply, it will start immediately. Damage to your tool or personal injury may result.


CAUTION: Allow the tool to reach full speed before touching tool to the work surface. Lift the tool from the work surface before turning the tool off.

1. To start the planer, depress the trigger switch ➊ in Figure B. To turn the planer off, release the trigger switch.
2. The tool can be locked on for continuous use. To lock the tool ON depress the trigger switch ➋ and push in the lock-on button ➌. Hold the lock-on button in as you

gently release the trigger switch. The tool will continue to run.

3. To turn the tool off from a locked-on position, squeeze and release the trigger once.

Fig. B

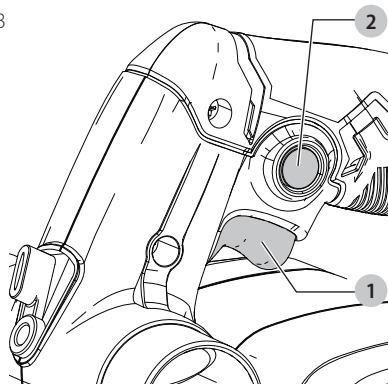


Blade Guard (Fig. C)

1. Ensure that the spring loaded blade guard **13** is in proper working order before using the planer.

WARNING: Cut Hazard. Do not remove guard.

Fig. C

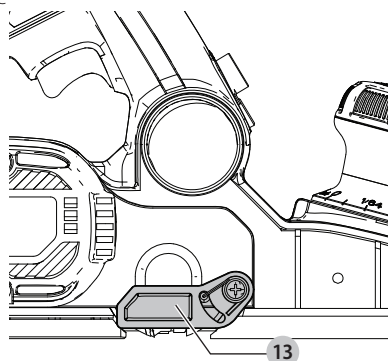


Parking Foot (Fig. D)

1. Your planer is equipped with a parking foot **18** that automatically lowers into place when the tool is lifted from the work surface. When planing, the parking foot raises as the tool is pushed forward. When the parking foot is lowered, the planer can set on the work surface without the blade touching.

CAUTION: Do not lock the trigger switch on and engage the parking foot. The vibration of the running motor will cause the planer to move, possibly falling from the workpiece.

CAUTION: Be sure that the parking foot is correctly extended when setting the planer on a work surface.


Fig. D

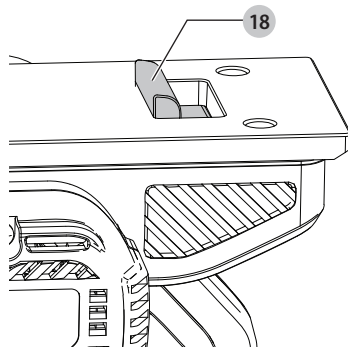

Adjusting Planing Depth (Fig. E)

1. Planing depth is infinitely variable from 0 to 5/64" (2 mm). To adjust the cutting depth, rotate the depth adjustment knob/front handle **3** clockwise from the "P" position. The cutting depth will increase from 0 to as much as .079" (2 mm).
2. It is recommended that test cuts be made in scrap wood after each re-adjustment to make sure that the desired amount of wood is being removed by the planer. Several shallow passes (rather than one deep one) will produce a smoother finish.


Fig. E

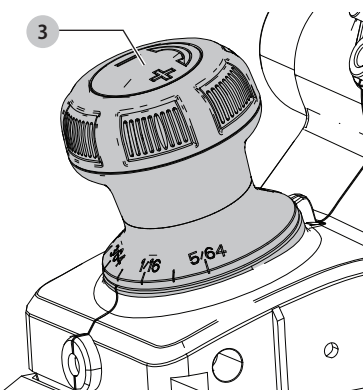

Vacuum Adaptor (Fig. F)

1. Slide the vacuum adaptor **10** over the chip discharge chute **6**.
2. Connect a vacuum cleaner hose (not included) to the adaptor.
3. To prevent chips from coming out opposite side of chip discharge chute, move chip deflector lever **7** to the opposite side of the adaptor.

Fig. F

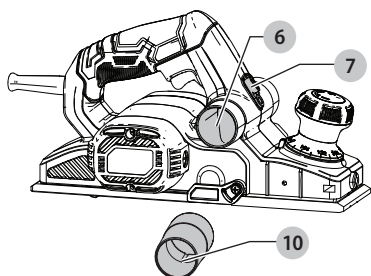

OPERATION

WARNING: To reduce the risk of serious personal injury, turn unit off and disconnect it from power source before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.


Proper Hand Position (Fig. G)

WARNING: To reduce the risk of serious personal injury, **ALWAYS** use proper hand position as shown.

WARNING: To reduce the risk of serious personal injury, **ALWAYS** hold securely in anticipation of a sudden reaction.

Hold the planer in the correct position with one hand on the front handle **3** and the other hand on the switch handle **4**.

Fig. G

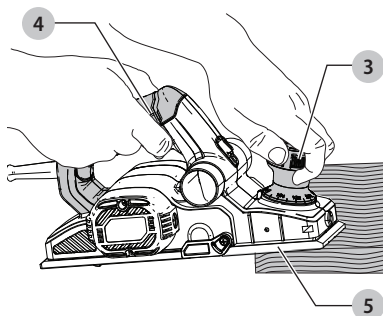

Planing (Fig. A, H, I)

WARNING: Wait for the cutter to stop before setting the tool down. An exposed cutter may engage the surface leading to possible loss of control and serious injury.

CAUTION: Allow the tool to reach full speed before touching tool to the work surface. Lift the tool from the work surface before turning the tool off.

1. Place the front of the shoe **5** on the surface to be planed, making certain that the cutting blades are not touching the surface. Push down firmly on the front handle of the planer so that the front shoe is

ABSOLUTELY FLAT on the work surface. Squeeze the trigger switch and allow the motor to reach full speed before touching the planer blades to the work surface.

2. Move the tool slowly into the work and maintain downward pressure to keep the planer flat. Be particularly careful to keep the tool flat at the beginning and the end of the work surface.
3. Planing Tip: For a smoother appearance, fasten a piece of scrap wood to the end of the piece you are planing. Don't stop planing until the cutting blades of the planer are past your work piece and into the scrap material.

Fig. H


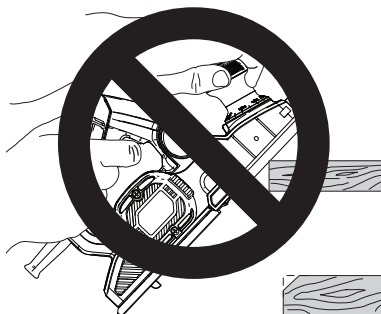


Fig. I

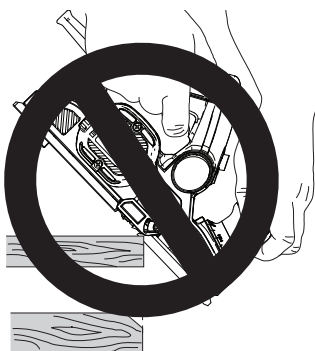

Rabbit Fence (Fig. J, K)

CAUTION: Allow the tool to reach full speed before touching tool to the work surface. Lift the tool from the work surface before turning the tool off.

1. The rabbit fence **9** can be installed on either side of your planer. The planer can make rabbit cuts up to 0.5" (12 mm).

To Install Rabbit Fence

- a. Thread the knob **14** into the hole on the side of the planer shown with arrow in Figure J.
- b. Loosen the rabbit fence adjustment knob **8** and adjust fence to desired distance.
- c. Securely tighten rabbit fence adjustment knob.

- d. The rabbet fence should be below the planer when installed correctly as shown in Figure K.

To Make a Rabbet Cut

- Turn the rabbet fence adjustment knob **8** to adjust the desired width of cut.
- Make several cuts until the desired depth is reached.

NOTE: It will be necessary to make quite a few cuts for most rabbet applications.

Fig. J


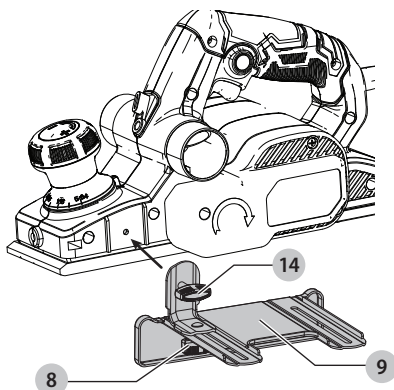


Fig. K

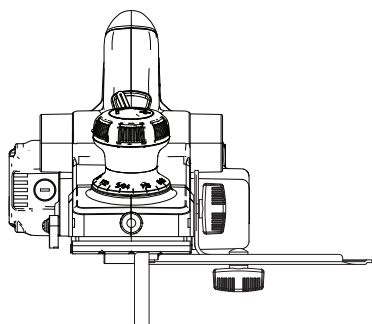


Edge Chamfering (Fig. L)

- Your planer has three precision machined chamfering grooves 1.5 mm, 2.0 mm and 2.5 mm **15**. They are located in the front shoe and are used for planing along a corner of the material.
 - Adjust to desired depth of cut.
 - Place groove over edge of material.
 - Apply weight to front of shoe so groove is flat on material edge.
 - Hold tool with both hands keeping pressure on front handle.

NOTE: It's a good idea to try a piece of scrap wood before doing finish work.

Fig. L

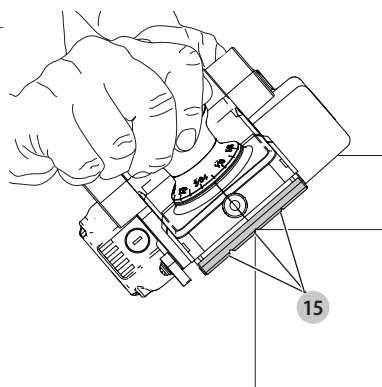

MAINTENANCE



WARNING: To reduce the risk of serious personal injury, turn unit off and disconnect it from power source before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

To Change Blades (Fig. M)




WARNING: Cut Hazard. Do not remove guard. Planer blades are sharp and must be handled with care.

NOTE: The CMEW300 has two blades, one on each side of the blade drum. Any operation or adjustment should be made to both blades. The cutting blades provided with this tool are reversible.

To Remove Blade from Planer

- Place planer upside down as shown in Figure M.
- Loosen the three nuts **16** using the wrench **11** supplied.
- Rotate the blade guard **18** downward. Carefully remove the blade **17** by sliding it out of the holder. A piece of wood may be used for this purpose.
- Reverse the blade so that the unused side comes in position. If both sides are worn, the blade must be replaced.

Fig. M

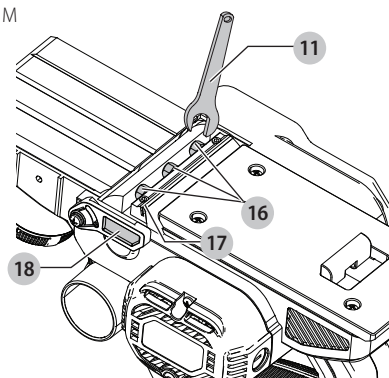

To Reinstall Blade


1. Slide the blade sideways into the holder until it is against the end stop. Blade groove must be toward back of unit.
2. Securely tighten the three nuts using the wrench supplied. Rotate the blade drum 180° and repeat for other blade.
3. Always replace both blades.

Drive Belt (Fig. N)

To Replace Belt

1. Loosen the three screws shown in Figure N and remove the belt cover.
2. Remove old belt.
3. Place new belt over front pulley then rotate belt clockwise while pushing belt onto back pulley.
4. Attach belt cover and securely tighten screws.

Fig. N

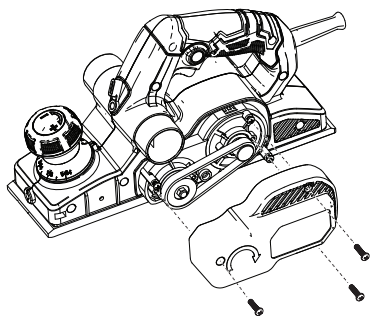

Cleaning

WARNING: Blow dirt and dust out of all air vents with clean, dry air at least once a week. To minimize the risk of eye injury, always wear ANSI Z87.1 approved eye protection when performing this procedure.

WARNING: Never use solvents or other harsh chemicals for cleaning the non-metallic parts of the tool. These chemicals may weaken the plastic materials used in these parts. Use a cloth dampened only with water and mild soap. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.

WARNING: Turn off and unplug unit before cleaning chip discharge chute. Clean the chip discharge chute 6 regularly. Blow dust and chips from the dust port with clean dry air. ALWAYS WEAR SAFETY GLASSES.

Accessories

WARNING: Since accessories, other than those offered by CRAFTSMAN, have not been tested with this product, use of such accessories with this tool could be hazardous. To reduce the risk of injury, only CRAFTSMAN recommended accessories should be used with this product.

Recommended accessories for use with your tool are available at extra cost from your local dealer or authorized service center. If you need assistance in locating any accessory, please contact CRAFTSMAN, call **1-888-331-4569**.

Repairs

WARNING: To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment (including power cord repairs, and brush inspection and replacement, when applicable) should be performed by a CRAFTSMAN factory service center or a CRAFTSMAN authorized service center. Always use identical replacement parts.

Register Online

Thank you for your purchase. Register your product now for:

- **WARRANTY SERVICE:** Registering your product will help you obtain more efficient warranty service in case there is a problem with your product.
- **CONFIRMATION OF OWNERSHIP:** In case of an insurance loss, such as fire, flood or theft, your registration of ownership will serve as your proof of purchase.
- **FOR YOUR SAFETY:** Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.

Register online at www.craftsman.com/

Three Year Limited Warranty

CRAFTSMAN will repair or replace, without charge, any defects due to faulty materials or workmanship for three years from the date of purchase. This warranty does not cover part failure due to normal wear or tool abuse. For further detail of warranty coverage and warranty repair information, visit www.craftsman.com or call **1-888-331-4569**. This warranty does not apply to accessories or damage caused where repairs have been made or attempted by others. THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

90 DAY MONEY BACK GUARANTEE

If you are not completely satisfied with the performance of your CRAFTSMAN Power Tool or Nailer for any reason, you can return it within 90 days from the date of purchase with a receipt for a full refund – no questions asked.

LATIN AMERICA: This warranty does not apply to products sold in Latin America. For products sold in Latin America, see country specific warranty information contained in the packaging, call the local company or see website for warranty information.

FREE WARNING LABEL REPLACEMENT: If your warning labels become illegible or are missing, call **1-888-331-4569** for a free replacement.

TROUBLESHOOTING GUIDE

BE SURE TO FOLLOW SAFETY RULES AND INSTRUCTIONS

For assistance with your product, visit our website at **www.craftsman.com** for a list of service centers, or call CRAFTSMAN at 1-888-331-4569.

PROBLEM	CAUSE	CORRECTION
Unit will not start.	Cord not plugged in.	Plug tool into a working outlet.
	Circuit fuse is blown.	Replace circuit fuse. (If the product repeatedly causes the circuit fuse to blow, discontinue use immediately and have it serviced at an authorized service center.)
	Circuit breaker is tripped.	Reset circuit breaker. (If the product repeatedly causes the circuit fuse to blow, discontinue use immediately and have it serviced at an authorized service center.)
	Cord or switch is damaged.	Have cord or switch replaced at an authorized service center.

