


ARROW™

HOW IT ALL COMES TOGETHER

PNEUMATIC STAPLER

AGRAFEUSE PNEUMATIQUE
ENGRAPADORA NEUMÁTICA

GENUINE
T50®
STAPLES

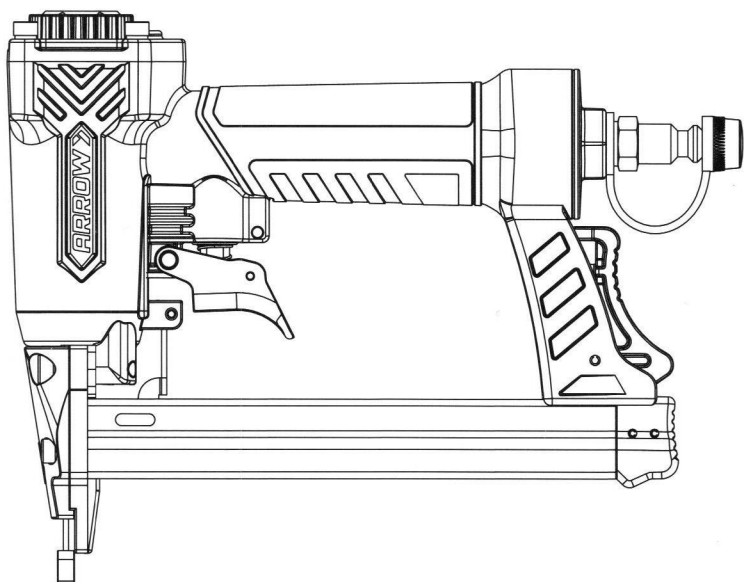

Caution: Please read the manual carefully.
Misuse of this product could cause property or
equipment damage and/ or personal injury.

company contact:

Arrow Fastener Company, LLC
271 Mayhill Street
Saddle Brook, New Jersey 07663 USA

Made in China
Fabriqué en Chine
Hecho en China

English

GENERAL PNEUMATIC TOOL SAFETY WARNINGS	3
3 YEAR LIMITED WARRANTY	4
GENERAL SAFETY RULES	5
PREPARATION	6-8
PT50 SCHEMATIC & PARTS LIST	9
SPECIFICATIONS	10

French

AVERTISSEMENTS GÉNÉRAUX DE SÉCURITÉ POUR LES OUTILS PNEUMATIQUES	3
GARANTIE LIMITÉE DE 3 ANS	12
RÈGLES GÉNÉRALES DE SÉCURITÉ	13
PRÉPARATION	14-16
PT50 SCHÉMA ET LISTE DES PIÈCES	17
SPÉCIFICATIONS	18

Spanish

ADVERTENCIAS GENERALES DE SEGURIDAD PARA HERRAMIENTAS NEUMÁTICAS	3
GARANTÍA LIMITADA DE 3 AÑOS	20
REGLAS GENERALES DE SEGURIDAD	21
PREPARACIÓN	22-24
PT50 DIAGRAMA Y LISTA DE PIEZAS	25
ESPECIFICACIONES	26



To avoid injury and misuse, please read the instruction manual before operation.

Pour éviter tout risque de blessures et une mauvaise utilisation, prière de lire le manuel d'utilisation avant l'utilisation.

A fin de evitar lesiones y mal uso, lea el manual de instrucciones antes de usar la herramienta.



Obey all safety messages that follow this symbol to avoid possible injury or death.

Respecter tous les messages de sécurité suivant ce symbole pour éviter tout risque de blessures ou de décès.

Observe todos los mensajes de seguridad que aparecen junto a este símbolo para evitar posibles lesiones o la muerte.



To avoid loss of hearing, always wear ear protection when operating the tool.

Pour éviter tout risque de perte auditive, toujours porter des protecteurs d'oreilles en utilisant l'outil.

A fin de evitar pérdida de la audición, siempre use protección para los oídos cuando utilice esta herramienta.



To avoid eye injury always wear safety glasses when operating the tool.

Pour éviter des blessures aux yeux toujours porter des lunettes de sécurité en utilisant l'outil.

Para evitar lesiones en los ojos siempre use anteojos de seguridad cuando utilice esta herramienta.



3 YEAR LIMITED WARRANTY

Arrow Fastener Company warrants to the original consumer purchaser ("you") that this product will be free from original defects in materials and workmanship for 3 years after you purchase it. If the product does not comply with this warranty, Arrow will, at its option, repair or replace the product with an equivalent product at no charge to you. This warranty is not transferable. For best performance, use genuine Arrow staples. Arrow staples are made to exact tolerances to ensure trouble-free performance. This warranty does not cover defect or damage to the extent caused by the use of non Arrow branded staples. This warranty also does not cover damage relating to normal wear and tear, misuse, abuse, neglect, accident, natural disaster, or alteration of the product without Arrow's consent.

TO THE EXTENT PERMITTED BY LAW, ANY IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE SAME DURATION AS THIS EXPRESS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

NO OTHER EXPRESS WARRANTY HAS BEEN MADE OR WILL BE MADE BY ARROW WITH RESPECT TO THIS PRODUCT. ARROW SHALL NOT BE RESPONSIBLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, TORT, OR OTHERWISE.

Some states do not allow the exclusion of incidental or consequential damages so the above exclusion and limitation may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from state to state. This guarantee does not affect your statutory rights. In Canada, the above provisions are not intended to operate where prohibited by law and do not preclude the operation of any applicable provincial consumer protection statute which may in certain circumstances extend the express warranty herein. To obtain the benefits of this warranty, you must send

Please contact Arrow Fastener by calling
1-800-776-2228 or by writing:

Arrow Fastener Company, LLC
271 Mayhill Street
Saddle Brook, NJ 07663
Attn: Product Warranty Department.

GENERAL SAFETY RULES

WORK AREA

Keep the work area clean and well lighted. Cluttered benches and dark areas increase the risks of accidents.

Do not operate the tool in presence of flammable liquids, gases or dust. The tool potentially creates sparks which could ignite.

Keep bystanders, children, and others away while operating the tool. Distractions could result in improper use and cause injury.

Avoid unintentional misfires. Always use caution to avoid accidentally firing. Do not point towards yourself or anyone whether it contains fasteners or not.

PERSONAL SAFETY

Always wear eye protection. Operator and others in the work area should always wear ANSI-approved safety goggles with side shields. Eye protection is used to guard against flying fasteners and debris, which may cause severe eye injury.

Always wear hearing protection when using the tool. Prolonged exposure to high intensity noise may cause hearing loss.

Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.

Safety alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating the tool may cause serious injury.

Avoid unintentional firing. Keep fingers away from trigger when not driving fasteners, especially when connecting the tool to the air supply.


Keep proper footing and balance at all times. Proper footing and balance enables better control of the tool in unexpected situations.

Do not use on a ladder or unstable supports. Stable footing on a solid surface enables better control of the tool in unexpected situations.

Make sure the hose is free of obstructions or snags. Entangled or snarled hoses can cause loss of balance or footing and may become damaged, resulting in possible injury.

If stapler has been stored in a cold environment, bring it to a warm area and allow it to warm up before using.

STAPLE LOADING

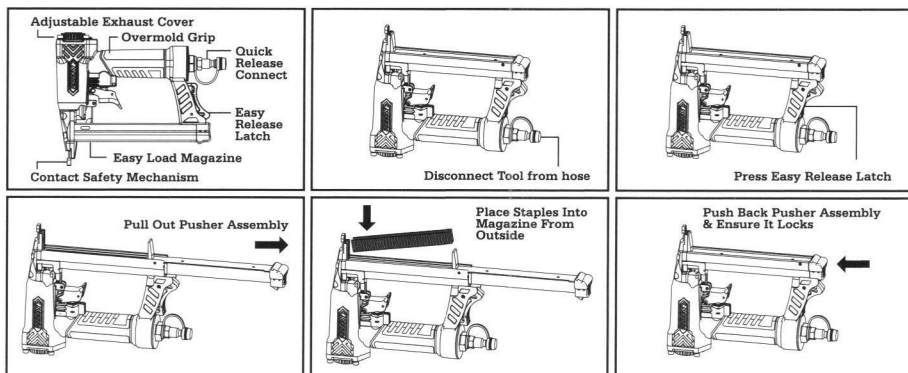

STAPLER USE

PT50 features contact safety; as a result trigger needs to be firmly depressed against surface for effective use. Once contact safety is effectively depressed against surface, pull trigger to drive staple. PT50 does offer "bump fire" capability, for quick firing. To utilize effectively, keep trigger pressed down and firmly depress contact safety. Repeat if necessary.

MAINTENANCE



WARNING!

Disconnect the tool from the air compressor before adjusting, clearing jams, servicing, relocating and during non-operation.

- Disconnect the air hose from the stapler.
- Remove all staples from the staple magazine of the stapler.
- Shut off air compressor and drain any moisture from the compressor tank.
- Drain the air line filter; clean the filter element, then blow air in opposite direction to remove any dirt/debris.

CLEARING STAPLE JAMS

- Disconnect the air hose from the stapler.
- Carefully remove staple strip from staple magazine.
- Remove any remaining loose staples from inside the staple magazine, using pliers to grasp the staples, if necessary.
- Once jammed staples have been removed, reload stapler.


OPERATION

APPLICATIONS

Including, but not limited to: insulation, roofing felt, house wrap, auto and marine vinyl trim, cabinet felt, cabinet backs, screen door repair, small furniture, light trim, molding and picture frames, and general staple use.

Bump Fire Action

Bump fire action is intended for rapid firing of nails on flat stationary surfaces and usually is most effective with shorter brad nails. Typical applications for this include attaching baseboard, trim work, wood working, and general purpose applications. Bump fire actuation can be used for multiple actuations or easier single actuations.

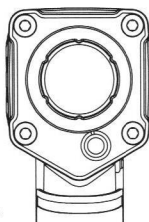

Multiple Actuations:

1. Grip the handle securely.
2. Depress the trigger.
3. Push the contact safety tip against the workpiece to fire.
4. Continue to hold the trigger and repeat contacts with the workpiece to fire.

Single Actuation:


1. Grip the handle securely.
2. Depress the trigger.
3. Push the contact safety tip against the workpiece to fire.
4. Remove your finger from the trigger and remove the tool from the workpiece.

ADJUSTING THE EXHAUST

The adjustable exhaust on the cap of the tool allows users to direct the exhaust according to operator preference. To adjust the direction, turn the exhaust cap in the desired direction.

STAPLES

The Arrow PT50 Pneumatic Stapler is designed to use T50 heavy duty staples in size 1/4", 5/16", 3/8", 1/2", 17/32" and 9/16". For best results use genuine Arrow T50 staples.

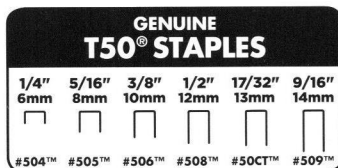

AIR SUPPLY

This stapler is designed to operate on clean, dry, regulated compressed air, between


60 and 100 psi. It is preferable to include an air filter, pressure regulator.

An air filter is needed to remove contaminants and moisture that are contained in compressed air; filtering will significantly prolong the life of the tool.


The stapler comes factory-equipped with a male quick connector. The stapler must always be connected to the air supply with a coupling that removes all pressure when it is disconnected.

NOTE: all components used with this stapler (air hose, connectors, regulators, filters, etc.) must be rated at 150 psi, OR 150% of the maximum compressor potential, whichever is higher. Do not connect this stapler to a system with maximum potential air pressure greater than 200 psi.

AIR CONNECTION SETUP

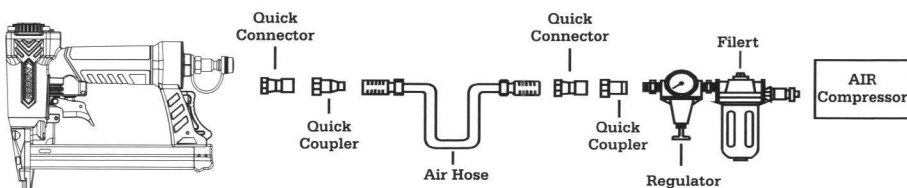


PT50 SCHEMATIC & PARTS LIST

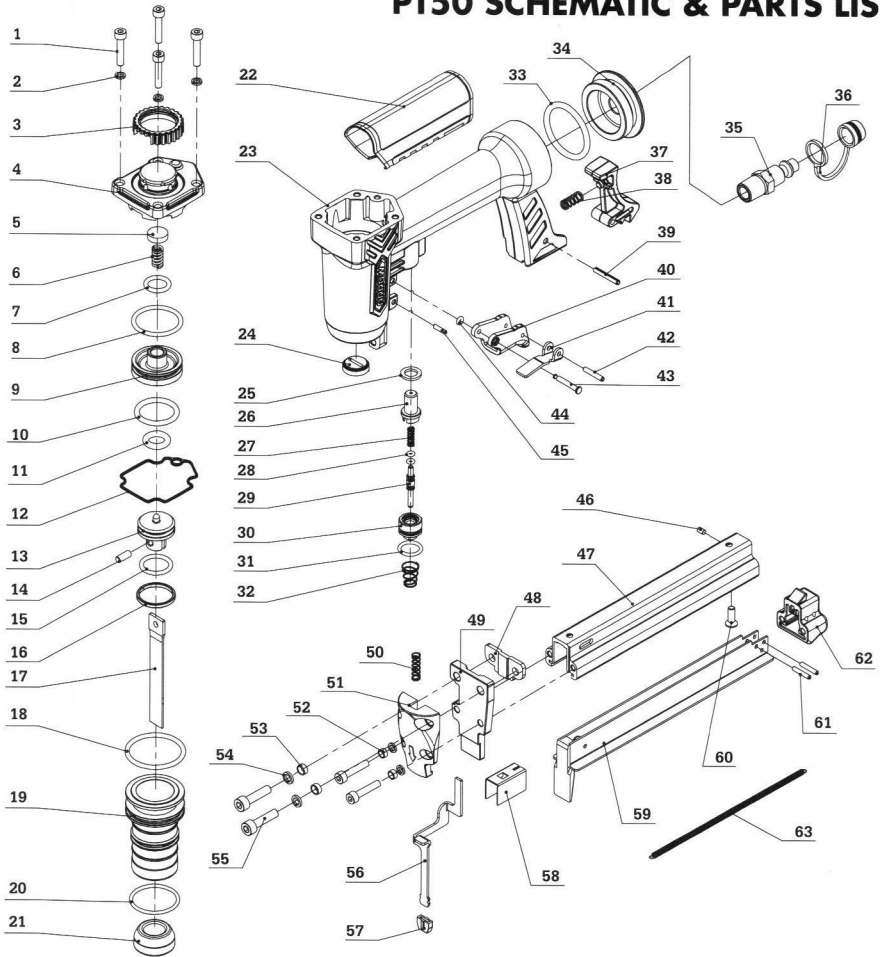

PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY
01	Hex Bolt M4X20	6	15	O-ring 15.5X2.4	1	29	Trigger Valve Stem	1	43	Position Pin	1	57	No-mar Pad	1
02	Washer 4	6	16	Retaining Ring	1	30	Trigger Valve Seat	1	44	O-ring 1.2X1.9	1	58	Nail Pusher	1
03	Exhaust Deflector	1	17	Firing Pin	1	31	O-ring 11.2X1.9	1	45	Spring Pin 2.5X10	1	59	Mobil Magazine	1
04	Cylinder Cover	1	18	O-ring 31.5X2.65	1	32	Spring	1	46	Hex Bolt M3X6	1	60	Hex Bolt M4X12	1
05	Shim	1	19	Cylinder	1	33	O-ring 31.3X3.5	1	47	Fixed Magazine	1	61	Spring Pin 2.5X16	2
06	Compression Spring	1	20	O-ring 24.5X2	1	34	End Cap	1	48	Plate	1	62	Magazine End Stopper	1
07	O-ring 11.7X2.5	1	21	Bumper	1	35	Air Inlet Plug	1	49	Driver Guide	1	63	Spring	1
08	O-ring 26.2X2.5	1	22	Rubber Grip	1	36	Plug Cap	1	50	Spring	1			
09	Head Valve	1	23	Body	1	37	Click Fixer	1	51	Driver Guide Cover	1			
10	O-ring 21.2X3	1	24	Nozzle	1	38	Compression Spring	1	52	Bushing 2	2			
11	O-ring 10X3.5	1	25	Gasket	1	39	Spring Pin 3X20	1	53	Bushing 1	2			
12	Gasket	1	26	Valve Sleeve	1	40	Trigger	1	54	Washer 5	2			
13	Piston	1	27	Trigger Valve Stem Spring	1	41	Trigger Plate	1	55	Hex Bolt M5X20	2			
14	Pin 4X10	1	28	O-ring 2.24X1.5	2	42	Spring Pin 2.5X16	1	56	Safety	1			

SPECIFICATIONS

Staple Type/Size:	Fires 6 sizes of Arrow T50 Staples 1/4" (6mm), 5/16" (8mm), 3/8" (10mm), 1/2" (12mm), 17/32" (13mm), 9/16" (14mm)
Gun Body Housing:	Die Cast with Powder coating finish
Handle Grip:	Rubber Overmold on grip area
Trigger Type:	Plastic Injection Molded Trigger for more ergonomic
Operation Pressure:	feel Compressed air between 60 psi and 100 psi
Maximum Pressure:	120 PSI
Air Inlet Size (in.):	3/8" with 1/4" Male Quick Release Connector factory-installed
Tool Dimensions:	Overall Dimensions: Length: 8.3" Width: 1.81" Height: 6.61"
Tool Weight (lbs.):	1.57 lbs.
Safety Features:	Contact Safety Mechanism to prevent accidental firing
Magazine Type:	Quick Track release lever
Fastener Capacity:	Magazine capacity 100 staples
Adjustable Air Exhaust:	Directs the air away from yourself and delicate work surfaces.

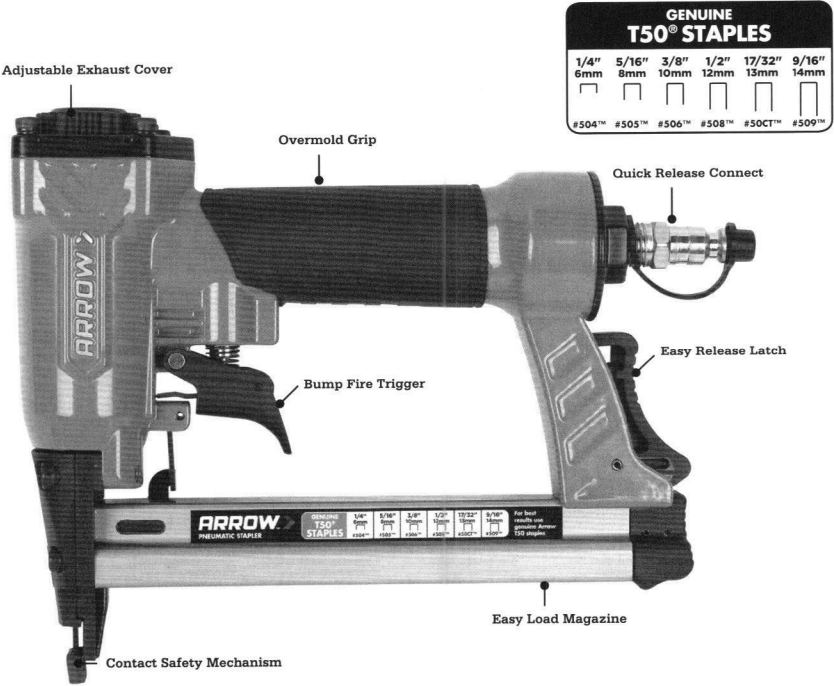

1 Year Limited Warranty

Arrow Fastener Company warrants to the original consumer purchaser ("you") that this product will be free from original defects in materials and workmanship for 1 year after you purchase it. If the product does not comply with this warranty, Arrow will, at its option, repair or replace the product with an equivalent product at no charge to you. This warranty is not transferable. For best performance, use genuine Arrow staples. Arrow staples are made to exact tolerances to insure trouble-free stapling performance. This warranty does not cover defect or damage to the extent caused by the use of non Arrow branded staples. This warranty also does not cover damage relating to normal wear and tear, misuse, abuse, neglect, accident, natural disaster, or alteration of the product without Arrow's consent. TO THE EXTENT PERMITTED BY LAW, ANY IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE SAME DURATION AS THIS EXPRESS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. NO OTHER EXPRESS WARRANTY HAS BEEN MADE OR WILL BE MADE BY ARROW WITH RESPECT TO THIS PRODUCT. ARROW SHALL NOT BE RESPONSIBLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, TORT, OR OTHERWISE. Some states do not allow the exclusion of incidental or consequential damages so the above exclusion and limitation may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from state to state. This guarantee does not affect your statutory rights. In Canada, the above provisions are not intended to operate where prohibited by law and do not preclude the operation of any applicable provincial consumer protection statute which may in certain circumstances extend the express warranty herein. To obtain the benefits of this warranty, you must send the product securely packaged with proof of purchase and postage prepaid to:

Arrow Fastener Co., LLC
271 Mayhill Street, Saddle Brook, N.J. 07663 U.S.A.

PT50™

PNEUMATIC STAPLE GUN



INSTRUCTION MANUAL

Important Information. Please read carefully before use.



www.arrowfastener.com

General Safety Rules

WORK AREA

Keep the work area clean and well lighted. Cluttered benches and dark areas increase the risks of accidents.

Do not operate the tool in presence of flammable liquids, gases or dust. The tool potentially creates sparks which could ignite.

Keep bystanders, children, and others away while operating the tool. Distractions could result in improper use and cause injury.

Avoid unintentional misfires. Always use caution to avoid accidentally firing. Do not point towards yourself or anyone whether it contains fasteners or not.

General Safety Rules

PERSONAL SAFETY

Always wear eye protection. Operator and others in the work area should always wear ANSI-approved safety goggles with side shields. Eye protection is used to guard against flying fasteners and debris, which may cause severe eye injury.

Always wear hearing protection when using the tool. Prolonged exposure to high intensity noise may cause hearing loss.

Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.

Safety alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating the tool may cause serious injury.

Avoid unintentional firing. Keep fingers away from trigger when not driving fasteners, especially when connecting the tool to the air supply.

Keep proper footing and balance at all times. Proper footing and balance enables better control of the tool in unexpected situations.

Do not use on a ladder or unstable supports. Stable footing on a solid surface enables better control of the tool in unexpected situations.

Make sure the hose is free of obstructions or snags. Entangled or snarled hoses can cause loss of balance or footing and may become damaged, resulting in possible injury.

Preparation

If stapler has been stored in a cold environment, bring it to a warm area and allow it to warm up before using.

STAPLE LOADING

- Make sure Stapler is disconnected from Air Supply.
- Only use the proper size and type of staple with this stapler, as specified under "Staples".
- Depress the Track Release Lever to release the spring-loaded Staple Magazine; slide the magazine out (back) as far as it will go.
- Turn the stapler upside down. Place a full strip of staples into the staple magazine, with the staple points facing upward (away from the tool). Slide the Staple Magazine closed until the Track Release Lever snaps back into place with a click. (Closing the staple magazine while staples are loaded engages the spring-load mechanism, so it will take slightly more pressure to slide the magazine closed.)

STAPLER USE

PT50 features contact safety; as a result trigger needs to be firmly depressed against surface for effective use. Once contact safety is effectively depressed against surface, pull trigger to drive staple. PT50 does offer "bump fire" capability, for quick firing. To utilize effectively, keep trigger pressed down and firmly depress contact safety. Repeat if necessary.

MAINTENANCE

- Disconnect the air hose from the stapler.
- Remove all staples from the staple magazine of the stapler.
- Place several drops of oil (included in case) into the air inlet.
- Shut off air compressor and drain any moisture from the compressor tank.
- Drain the air line filter; clean the filter element, then blow air in opposite direction to remove any dirt/debris.
- Keep lubricator filled with oil (included in case).

CLEARING STAPLE JAMS

- Disconnect the air hose from the stapler.
- Carefully remove staple strip from staple magazine.
- Remove any remaining loose staples from inside the staple magazine, using pliers to grasp the staples, if necessary.
- Once jammed staples have been removed, reload stapler.


Operation

APPLICATIONS

Including, but not limited to: insulation, roofing felt, house wrap, auto and marine vinyl trim, cabinet felt, cabinet backs, screen door repair, small furniture, light trim, molding and picture frames, and general staple use.

ADJUSTING THE EXHAUST

The adjustable exhaust on the cap of the tool allows users to direct the exhaust according to operator preference. To adjust the direction, turn the exhaust cap in the desired direction.

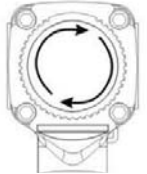

STAPLES

The Arrow PT50 Pneumatic Stapler is designed to use T50 heavy duty staples in size 1/4", 5/16", 3/8", 1/2", 17/32" and 9/16". For best results use genuine Arrow T50 staples.

AIR SUPPLY


This stapler is designed to operate on clean, dry, regulated compressed air, between 60 and 100 psi. It is preferable to include an air filter, pressure regulator, and automatic oiler within 15 feet of the tool, if possible.

An air filter is needed to remove contaminants and moisture that are contained in compressed air; filtering will significantly prolong the life of the tool. If an automatic oiler is not installed, place 5 to 6 drops of oil into the tool's air inlet at the beginning of each work day.


The staple gun comes factory-equipped with a male quick connector. The staple gun must always be connected to the air supply with a coupling that removes all pressure when it is disconnected.

NOTE: all components used with this staple gun (air hose, connectors, regulators, filters, etc.) must be rated at 150 psi, OR 150% of the maximum compressor potential, whichever is higher. Do not connect this staple gun to a system with maximum potential air pressure greater than 200 psi.

AIR CONNECTION SETUP

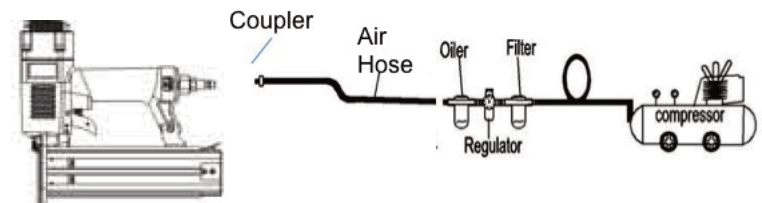

PT50™ Schematic & Parts List

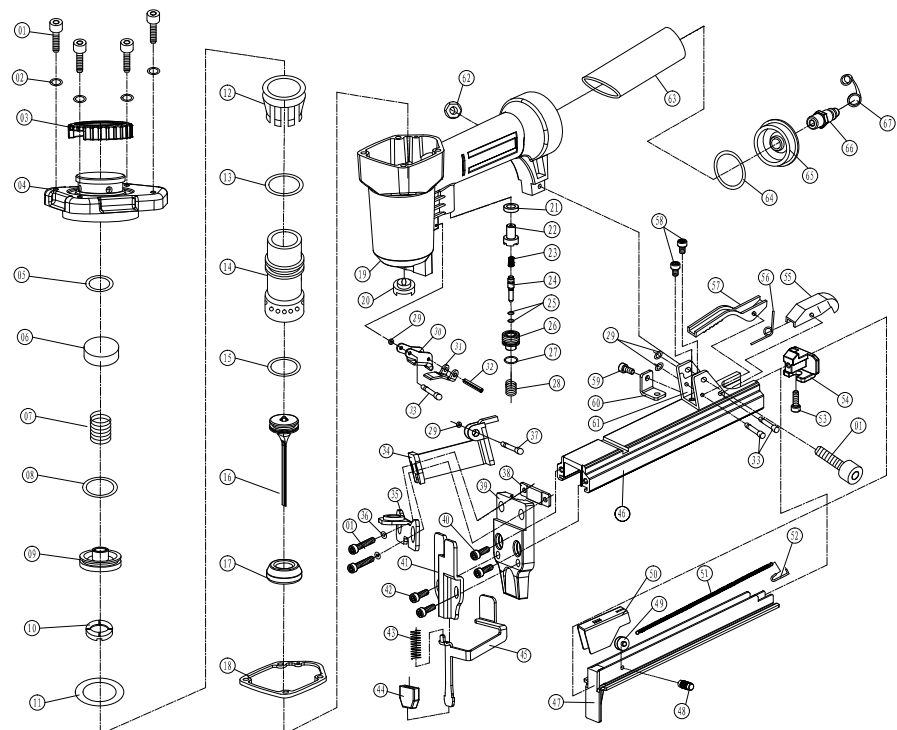

Part	Description	Qty	Part	Description	Qty	Part	Description	Qty	Part	Description	Qty
01	Hex Bolt	7	19	Housing	1	37	Pin	1	55	Clip	1
02	Washer	4	20	Nozzle	1	38	Plate	1	56	Torsion Spring	1
03	Exhaust Deflector	1	21	Gasket	1	39	Nose	1	57	Magazine Release	1
04	Cylinder Cover	1	22	Valve Sleeve	1	40	Hex Bolt	2	58	Bolt	2
05	O-Ring	1	23	Trigger Valve Stem Spring	1	41	Cover Plate	1	59	Hex Bolt	1
06	Sealing Gasket	1	24	Trigger Valve Stem	1	42	Hex Bolt	2	60	Position Piece	1
07	Compression Spring	1	25	O-Ring	2	43	Switch spring	1	61	Position Seat	1
08	O-Ring	1	26	Trigger Valve Seat	1	44	Safety cover	1	62	Self Lock Nut	1
09	Head Valve	1	27	O-Ring	1	45	Safety	1	63	Rubber Grip	1
10	Gasket	1	28	Spring	1	46	Upper Magazine	1	64	O-Ring	1
11	O-Ring	1	29	Trigger Pin	4	47	Magazine Bar	1	65	End Cap	1
12	Collar	1	30	Trigger	1	48	Spindle Sleeve	1	66	Air Inlet Plug	1
13	O-Ring	1	31	Hook stop lever	1	49	Wheel	1	67	Plug Cap	1
14	Cylinder	1	32	Pin	1	50	Push Rod	1			
15	O-Ring	1	33	Position Pin	3	51	Push Rod Spring	1			
16	Piston Assembly	1	34	Safety holder(cust)	1	52	Spring Hook	1			
17	Bumper	1	35	Spring holder	1	53	Hex Bolt	1			
18	Sealing Gasket	1	36	Spring washer	2	54	Fixed Piece	1			

Specifications

- Staple Type/Size:
- Fires 6 sizes of Arrow T50 Staples 1/4" (6mm), 5/16" (8mm), 3/8" (10mm), 1/2" (12mm), 17/32" (13mm), 9/16" (14mm)
- Gun Body Housing:
- Die Cast with Powder coating finish
- Handle Grip:
- Rubber Overmold on grip area
- Trigger Type:
- Plastic Injection Molded Trigger for more ergonomic feel
- Operation Pressure:
- Compressed air between 60 psi and 100 psi
- Maximum Pressure:
- 120 PSI
- Air Inlet Size (in.):
- 3/8" with 1/4" Male Quick Release Connector factory-installed
- Tool Dimensions:
- Overall Dimensions: Length: 8.9" Width: 2.2" Height: 8.1"
- Tool Weight (lbs.):
- 2.9 lbs.
- Safety Features:
- Contact Safety Mechanism to prevent accidental firing
- Magazine Type:
- Quick Track release lever
- Fastener Capacity:
- Magazine capacity 100 staples
- Adjustable Air Exhaust:
- Directs the air away from yourself and delicate work surfaces.

