


GAS SPRING INSTALLATION

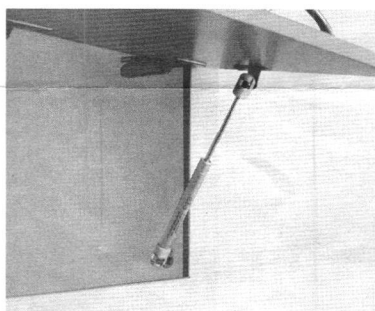


GAS SPRING:

Loading: 60/80/100/120/140N
(others on request)



Simple installation of GAS SPRING - suitable
for wood door and aluminium-frame

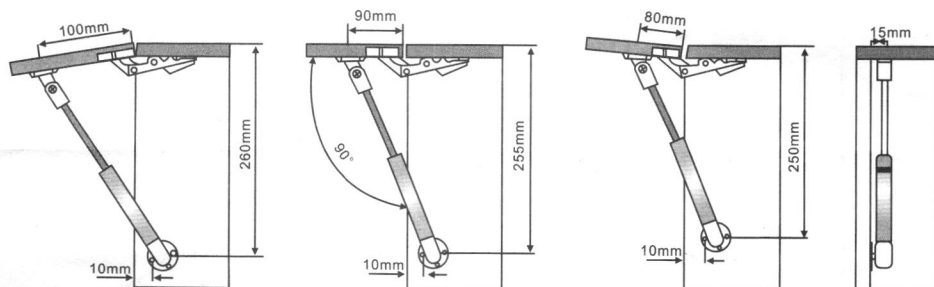

WARNING!

a: Please do not use lubricating oil or similar
It could affect the function of the gas spring
please screw on the fixing-plates well aligned
onto the side - panel/door

b: In normal pressure, gas spring should be used within
the following temperature:

1. Maximum temperature can not exceed 45°C
2. Minimum temperature can not exceed minus 25°C