

WOOD/BUILDING MATERIAL MOISTUREMETER (MT270)

If any question or problem, please feel free to contact us via email: service@tavool.com. We offer 1 year warranty and will provide you the best solution according to your exact issue.

Product Introduction:

Application:


This Moisture Meter is an essential instrument used in many industries to detect moisture content in materials. The measuring result will indicate moisture content in percent (%MC).

-- Home and building inspectors rely on moisture meters to identify potential problems and damage to structures from moisture buildup.

-- Woodworking industries, such as furniture makers, use wood moisture meters to insure a quality product.

-- Flooring contractors use moisture meters to determine ideal conditions when installing a floor over a concrete slab or subfloor.

Product Display:

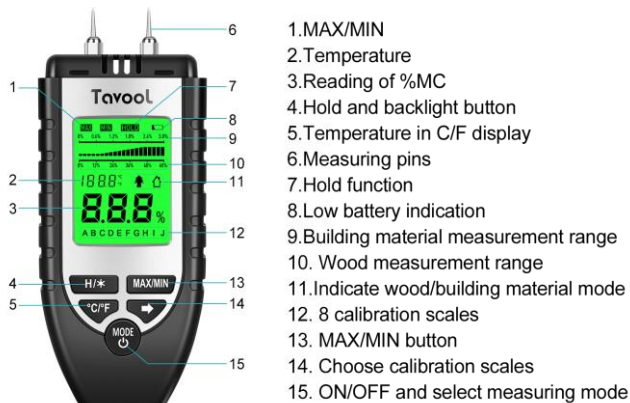

Product Features:

1. Display: LCD and green backlight

2. Measurement Range:

Wood: the scale A woods: 6%-60%

Building Material: 1.5%-33% (0%-40% on the screen is the reading range) Reding: >20% -- high

Temperature: 0 ~ 40°C or 32 ~ 104°F

3. Accuracy: **Wood:** $\pm 2\%$, **Temperature:** $\pm 2^{\circ}\text{C}$ / $\pm 4^{\circ}\text{F}$

5. Max/Min moisture measurement

6. HOLD function to freeze the measurement

7. Automatic Power-off in 10 minutes without operation, Automatic

Backlight-Off in 5 seconds without operation

8. Memory function: If you have held the value and then turn off the instruction, you will see the same value when you turn on the device again.

9. Low Battery Indication: Symbol "  "shown on the display

10. Eight(8) calibration scales(A, B, C, D, E, F, G, H), based on different types of wood materials

11. Temperature in C/F display

12. Operating Environment: **Temperature:** 0 ~ 40°C , **Relative Humidity** < 75%

Two Measuring Modes

1. **Wood Measuring Mode:** the moisture contents of wood products such as hardwood flooring, cabinets, furniture, lumber, slats, beams, plywood, paneling, conglomerates, window frames, forestry wood, rolled products, building materials and more can be measured.

2. **Building Measuring Mode:** quickly know the moisture level in your walls, wood, and masonry can give you an estimate of the potential for mold growth throughout your home and finding moisture is the first step in early mold prevention.

Battery Installation:

Requires 2*AAA battery .

Battery compartment is located on the back of the moisture meter.

1. Use the screwdriver to open battery door on back case.
2. Connect 2 new AAA batteries.
3. Replace the cover, and the moisture meter is now ready for use.

Front Cover Operation:

Illustration:



Operation Instruction:

1. **Turn On the Unit** : Press the “” button once to turn on the instrument, press the “” button for a while to turn off the instrument.

2. **Selecting desired Measurement Mode** :

① After turn on the instrument, press the “” button to select desired measurement mode.

The two measurement modes are as follows:

- Wood moisture measurement mode** (“”display)
- Building material moisture measurement mode**
(“”display) .

Wood moisture measurement mode has 8 calibration scales(A, B, C, D, E, F, G, H), based on different types of wood materials. Check the Calibration Tables first, and then short press the “” button switch to the calibration scale matched.

② After the desired measurement mode is selected, you can start measurement.If exceed the max,the moisture value will display: _____,below the min,the moisture value will display:_____

3. **Performing Measurement**

To perform moisture measurement, drive the probes into the wood or building material to be measured, read the value on the display.

4. **Max/Min moisture measurement**

Press MAX/MIN button to switch MAX-MIN. MAX will display the max moisture value, MIN will display the min moisture value.

5. **Environment temperature measurement:**

Press the “” button to switch C/F.If the temperature too low,it will display LO, if the temperature too high,it will display HI.

6. **Freeze the measurement**

① After turn on the instrument, press the “” button to saved measured value, the “HOLD” icon will show on the screen. By pressing the “” button shortly, the measuring mode will get reactivated.

7. **Automatic Power-Off Feature**

If you don't operate the instrument (or the reading does not change) for about 10 minutes, the instrument will be turn off automatically.

8. **Backlight**

The screen will have backlight automatically after power on.

Press the “” button to turn on/off the backlight.

The backlight will be off automatically in 5 seconds without operation.

When the moisture meter switches on, the backlight will be power on by press any button

If there is a measurement fluctuation in wood/building moisture meter mode, the screen will display green backlight automatically.

How To Use:

Step 1: Set the device to read whatever material you’ re using, choose the mode (wood or building material) or choose the right calibration scales of the wood.

Step 2: Place both pins onto surface of the material for several seconds (ensure it is stable).

Step 3: Read the LCD display indicating moisture content of the surface and hold the reading.

Common Questions and Answers:

1. **Why I get a different results on the same spot at few times?**

Answer: Please ensure you select a correct measuring mode and the correct calibration scales. And please also make sure the pins are penetrated into the test surface.

2. **Just how accurate are moisture meters readings?**

Answer: The answer is that moisture meter accuracy can vary depending on a few different factors, such as:

- (1) What material you're testing;
- (2) The type of moisture meter you're using, pin-type is the best way to get a accurate%MC.
- (3) Whether or not the moisture meter has the appropriate scale for the material being tested;
- (4) The procedures used for testing moisture

3. **What can I do if the pins of the moisture meter are broken/rusted?**

Answer: The pins of our moisture meter is made of stainless steel, it is not easy to get broken or rusted. And if you lost the pins, please just contact us.

4. **Suddenly stop working or can not turn on; readings can not change.**

Answer: Please check the battery and try to replace new battery. Install the battery and then connect it again. If the problem still exists, please contact us.

NOTE:

1. Keep the instrument dry.
2. Keep the probe clean.
3. Keep the instrument and battery out of reach of infants and children.
4. When measuring, it should be measured in the environment where the product is placed. If the air humidity is too high or too low, the measurement error will be relatively large. If you move to other environments (the difference between ambient temperature and humidity is large), please put the product in place for at least 10 minutes before measuring. At the same time, the measuring position should be far away from the strong electric field.
5. When the symbol “” appears, it indicates the battery is in low-power mode and should be replaced.

Calibration

Tables of Wood

Abies alba (B)
 Abies grandis (A)
 Abies procera (J)
 Acacia Wood (A)
 Acanthopanax ricinifolius (A)
 Acer macrophyllum (A)
 Acer pseudoplatanus (F)
 Acer saccharum (A)
 Aetoxicon punctatum (G)
 Afara (A)
 Aformosa (G)
 Aformosa elata (G)
 Afzelia (E)
 Afzelia spp (E)
 Agathis australis (E)
 Agathis palmerstoni (J)
 Agathis robusta (J)
 Agba (J)
 Amblygonocarpus andogensis (A)
 Amblygonocarpus obtusungulis (A)
 Amboyana (G)
 Araucaria angustifolia (B)
 Araucaria bidwilli (B)
 Araucaria cunninghamii (C)
 Ash, American (B)
 Ash, European (A)
 Ash, Japanese (A)
 Ayan (C)
 Baguacu, Bracilian (F)
 Balsa (A)
 Bamboo (A)
 Banga Wanga (A)
 Basswood (G)
 Beech, European (C)
 Berlina (B)
 Berlinia grandiflora (B)
 Berlinia spp (B)
 Betula alba (J)
 Betula alleghaniensis (J)
 Betula pendula (J)
 Betula spp (J)
 Binvang (E)
 Birch, European (J)
 Birch, Yellow (A)
 Bisselon (E)
 Bitterwood (F)
 Blackbutt (C)
 Bosquiea (A)

Bosquiera phoberos (A)
 Boxwood, Maracaibo (A)
 Brachylaena hutchinsii (J)
 Brachystegia spp (B)
 Calophyllum brasiliense (H)
 Camphorwood, E African (C)
 Canarium schweinfurthii (B)
 Canarium, African (B)
 Cardwellia sublimis (C)
 Carya glabra (F)
 Cassipourea elliotii (F)
 Cassipourea melanosana (F)
 Castanea sutiva (C)
 Cedar, West Indian (J)
 Cedar, Western Red (C)
 Cedar, Japanese (B)
 Cedrela odorata (J)
 Ceratopetalum apetalum (G)
 Chamaecyparis spp (18-28%mc) (C)
 Chamaecyparis spp (8-18%mc) (J)
 Cherry and Apple Wood (A)
 cherry and apple wood (H)
 Cherry, European (J)
 Chestnut (C)
 Chlorophora excelsa (F)
 Coachwood (G)
 Cordia alliodora (F)
 Cordia, American Light (F)
 Croton megalocarpus (J)
 Cryptomelia japonica (B)
 Cupressus spp (A)
 Cypress, E African (A)
 Cypress, Japanese (18-28%mc) (C)
 Cypress, Japanese (8-18%mc) (J)
 Dacrydium franklinii (B)
 Dahoma (A)
 Dalbergia latifolia (A)
 Danta (C)
 Diospyros virginiana (G)
 Dipterocarpus (Keruing) (F)
 Dipterocarpus zeylanicus (A)
 Distemonanthus benthamianus (C)
 Douglas Fir (B)
 Dracontomelum mangiferum (B)
 Dryobalanops spp (A)
 Dyera costulata (C)
 Elm (D)
 Elm (D)
 Elm, English (E)
 Elm, Japanese Grey Bark (B)
 Elm, Rock (E)
 Elm, White (E)

Empress Tree (J)
 Endiandra palmerstoni (C)
 Entandrophragma angolense (H)
 Entandrophragma cylindricum (C)
 Entandrophragma utile (J)
 Erimado (F)
 Erythrophleum spp (C)
 Eucalyptus acmnicides (C)
 Eucalyptus crebra (B)
 Eucalyptus diversicolor (A)
 Eucalyptus globulus (B)
 Eucalyptus maculate (A)
 Eucalyptus marginata (C)
 Eucalyptus microcorys (A)
 Eucalyptus obliqua (C)
 Eucalyptus pilularis (C)
 Eucalyptus saligna (B)
 Eucalyptus wandoo (J)
 Fagus sylvatica (C)
 Ficea abies (C)
 Fir, Douglas (B)
 Fir, Grand (A)
 Fir, Noble (J)
 Flindersia brayleyana (B)
 Fraxinus Americana (B)
 Fraxinus excelsior (A)
 Fraxinus japonicus (A)
 Fraxinus mardshurica (A)
 Gequ, Nohor (H)
 Gonystylus macrophyllum (G)
 Gossweilodendron balsamiferum (J)
 Gossypiospermum proerox (A)
 Greenheart (C)
 Grevillea robusta (C)
 Guarea cedrata (H)
 Guarea thomsonii (J)
 Guarea, Black (J)
 Guarea, White (H)
 Guibortia ehie (B)
 Gum, American Red (A)
 Gum, Saligna (B)
 Gum, Southern (B)
 Gum, Spotted (A)
 Gurjun (A)
 Hemlock, Western (C)
 Hevea brasiliensis (H)
 Hiba (J)
 Hickory (F)
 Hyedunani (B)
 Intsia bijuga (B)
 Jarrah (C)
 Jelutong (C)
 Juglans nigra (A)
 Juglans regia (C)

Kapur (A)
 Karri A
 Kauri, New Zealand (E)
 Kauri, Queensland (J)
 Keruing (F)
 Khaya ivorensis (J)
 Khaya senegalensis (E)
 Kuroka (A)
 Larch, European (C)
 Larch, Japanese (C)
 Larch, Western (F)
 Larix decidua (C)
 Larix kaempferi (C)
 Larix leptolepis (C)
 Larix occidentalis (F)
 Lime (E)
 Liquidambar styraciflua (A)
 Locust/Robinia pseudoacacia (A)
 Locust/Robinia pseudoacacia (A)
 Loliondo (C)
 Lovoa klaineanaL (J)
 Lovoa trichiloides (J)
 Iroko (F)
 Lronbank (B)
 Maesopsis eminii (J)
 Mahogany, African (J)
 Mahogany, West Indian (B)
 Makore (B)
 Mansonia (B)
 Mansonia altissima (B)
 Maple, Pacific (A)
 Maple, Queensland (B)
 Maple, Rock (A)
 Maple, Sugar (A)
 Matai (E)
 Meranti, Red (dark/light) (B)
 Meranti, White (B)
 Merbau (B)
 Millettia stuhimannii (A)
 Mimusops heckelii (B)
 Missanda (C)
 Mitragyna ciliata (E)
 Muhuhi (J)
 Muninga (G)
 Musine (J)
 Musizi (J)
 Myrtle, Tasmanian (A)
 Nauclea diderrichii (H)
 Nesogordonia papaverifera (C)
 Nothofagus cunninghamii (A)
 Oak (White/Red) (A)
 Oak (White/Red) (A)
 Ochroma lagopus (A)
 Ochroma pyramidalis (A)

Ocotea rodiaei	(C)	Redwood, Baltic (European)	(A)	Walnut, American	(A)
Ocotea usambarensis	(C)	Redwood, Californian	(B)	Walnut, European	(C)
Octomeles sumatrana	(E)	Ricinodendron heudelotti	(F)	Walnut, New Guinea	(B)
Olea hochstetteri	(B)	Rosewood, Indian	(A)	Walnut, Queensland	(C)
Olea welwitschii	(C)	Rubberwood	(H)	Wandoo	(J)
Palaquium spp	(A)	Santa Maria	(H)	Wawa	(G)
Paulownia tomentosa	(J)	Sapele	(C)	White Pine	(A)
Pecan	(E)	Sarcocephalus diderrichii	(H)	white pine	(A)
pecan	(E)	Scottellia coriacea	(E)	Whitewood	(C)
Pericopsis elata	(G)	Sen	(A)	Xylia dolabriformis	(E)
Picaenia excelsa	(C)	Sequoia sempervirens	(B)	Yew	(C)
Picea jezoensis (18-28%mc)	(C)	Seraya, Red	(C)	Zelkova Serrata	(B)
Picea jezoensis (8-18%mc)	(J)	Shorea smithiana	(C)		
Picea sitchensis	(C)	Shorea spp	(B)		
Pine, Scots	(A)	Silky Oak, African	(C)		
Pine, Sugar	(C)	Silky Oak, Australian	(C)	➤ NOTE:	
Pine, Yellow	(A)	Southern Cypress	(A)	① If the wood type is not listed	
Pinus caribaea	(C)	southern cypress	(A)	on the table ,which can be divided	
Pinus contorta	(A)	Split California Black Oak	(A)	into hardwood and soft wood.	
Pinus lampertiana	(C)	Spruce, Japanese (18-28%mc)	(C)	Hardwood choose "A" mode,	
Pinus nigra	(C)	Spruce, Japanese (8-18%mc)	(J)	Softwood choose "H" mode.	
Pinus palustris	(C)	Spruce, Norway (European)	(C)		
Pinus pinaster	(B)	Spruce, Sitka	(C)	② Protimeter Mini, Surveymaster	
Pinus ponderosa	(C)	Sterculia rhinopetala	(A)	and MMS instruments display Standard	
Pinus radiata	(C)	Sterculia, Brown	(A)	Scale A. Protimeter Timbermaster	
Pinus spp	(B)	Stringybark, Messmate	(C)	displays all scales.	
Pinus strobus	(A)	Stringybark, Yellow	(C)		
Pinus sylvestris	(A)	Swietania candollei	(A)		
Pinus thunbergii	(B)	Swietania mahogani	(B)		
Pipadeniastrum africanum	(A)	Sycamore	(F)		
Piptadenia africana	(A)	Syncarpia glomulifera	(C)		
Podocarpus dactyloides	(B)	Syncarpia laurifolia	(C)		
Podocarpus spicatus	(C)	Tallowwood	(A)		
Podocarpus totara	(E)	Tarrietia utilis	(C)		
Poplar, Black	(A)	Taxus baccata	(C)		
Populus spp	(A)	Teak	(F)		
Prunus avium	(J)	Tectona grandis	(F)		
Pseudotsuga menziesii	(B)	Terminalia superba	(A)		
Pterocarpus angolensis	(G)	Thuja plicata	(C)		
Pterocarpus indicus	(G)	Thujopsis dolabrata	(J)		
Pterocarpus soyausii	(F)	Tieghamella heckelii	(B)		
Pterygota bequaertii	(A)	Tilia americana	(G)		
Pterygota, African	(A)	Tilia vulgaris	(E)		
Pyinkado	(E)	Totara	(E)		
Queensland Walnut	(C)	Triploehiton scleroxylon	(G)		
Queensland Kauri	(J)	Tsuga heterophylla	(C)		
Quercas Alba	(A)	Turpentine	(C)		
Quercas Alba	(A)	Ulmus americana	(E)		
Quercus robur	(A)	Ulmus procera	(E)		
Quercus spp	(A)	Ulmus thomasi	(E)		
Quercus cerris	(E)	Utile	(J)		
Quercus delegatensis	(C)	Walnut	(C)		
Quercus gigantea	(C)	walnut	(C)		
Ramin	(G)	Walnut, African	(J)		

WOOD/BUILDING MATERIAL MOISTUREMETER (MT270)

If any question or problem, please feel free to contact us via email: service@tavool.com. We offer 1 year warranty and will provide you the best solution according to your exact issue.

Product Introduction:

Application:

This Moisture Meter is an essential device used in many industries to detect moisture content in materials. The measuring result will indicate moisture content in percent (%MC).

-- Home and building inspectors rely on moisture meters to identify potential problems and damage to structures from moisture buildup.

-- Woodworking industries, such as furniture makers, use wood moisture meters to insure a quality product.

-- Flooring contractors use moisture meters to determine ideal conditions when installing a floor over a concrete slab or subfloor.

Product Display:



1. MAX/MIN
2. Temperature
3. Reading of %MC
4. Hold and backlight button
5. Temperature in C/F display
6. Measuring pins
7. Hold function
8. Low battery indication
9. Building material measurement range
10. Wood measurement range
11. Indicate wood/building material mode
12. 8 calibration scales
13. MAX/MIN button
14. Choose calibration scales
15. ON/OFF and select measuring mode

Product Features:

1. Display: LCD and green backlight

2. Measurement Range:

Wood: the scale A woods: 6%-60%

Building Material: 1.5%-33% (0%-40% on the screen is the reading range) Reding: >20% ~ high

Temperature: 0 ~ 40°C or 32 ~ 104°F

3. Accuracy: **Wood:** ±2% , **Temperature:** ±2°C / ±4°F

Max/Min moisture measurement

HOLD function to freeze the measurement

4. Automatic Power-off in 10 minutes without operation, Automatic Backlight-Off in 5 seconds without operation

5. Memory function: If you have held the value and then turn off the instruction, you will see the same value when you turn on the device again.

6. Low Battery Indication: Symbol " " shown on the display

7. Eight(8) calibration scales(A, B, C, D, E, F, G, H), based on different types of wood materials

8. Temperature in C/F display

9. Operating Environment : **Temperature:** 0 ~ 40°C , **Relative Humidity** < 75%

Two Measuring Modes

Wood Measuring Mode: the moisture contents of wood products such as hardwood flooring, cabinets, furniture, lumber, slats, beams, plywood, paneling, conglomerates, window frames, forestry wood, rolled products, building materials and more can be measured.

Building Measuring Mode: quickly know the moisture level in your walls, wood, and masonry can give you an estimate of the potential for mold growth throughout your home and finding moisture is the first step in early mold prevention.

Battery Installation:

Requires 2*AAA battery .

Battery compartment is located on the back of the moisture meter.



Use the screwdriver to open battery door on back case.

Connect 2 new AAA batteries.

Replace the cover, and the moisture meter is now ready for use.

Front Cover Operation:

Illustration:

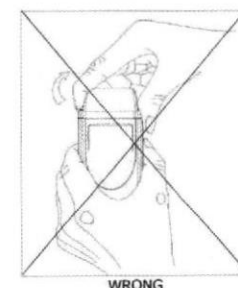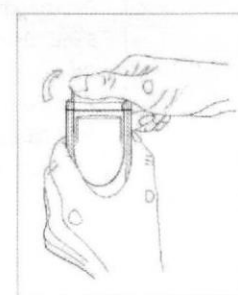

Operation Instruction:

1. **Turn On the Unit :** Press the "  " button once to turn on the device, press the "  " button for a while to turn off the device.

2. **Selecting desired Measurement Mode :**

① After turn on the device, press the "  " button to select desired measurement mode.

The two measurement modes are as follows:

- Wood moisture measurement mode** ("  "display)
- Building material moisture measurement mode**
("  "display) .

Wood moisture measurement mode has 8 calibration scales(A, B, C, D, E, F, G, H), based on different types of wood materials. Check the Calibration Tables first, and then short press the "  " button switch to the calibration scale matched.

② After the desired measurement mode is selected, you can start measurement.If exceed the max,the moisture value will display: _____,below the min,the moisture value will display: _____

3. Performing Measurement

To perform moisture measurement, drive the probes into the wood or building material to be measured, read the value on the display.

4. Max/Min moisture measurement

Press MAX/MIN button to switch MAX-MIN. MAX will display the max moisture value, MIN will display the min moisture value.

5. Environment temperature measurement:

Press the "C/F" button to switch C/F.If the temperature too low,it will display LO, if the temperature too high,it will display HI.

6. Freeze the measurement

① After turn on the device, press the "  " button to saved measured value, the "HOLD" icon will show on the screen. By pressing the "  " button shortly, the measuring mode will get reactivated.

7. Automatic Power-Off Feature

If you don't operate the device (or the reading does not change) for about 10 minutes, the device will be turn off automatically.

8. Backlight

The screen will have backlight automatically after power on.

Press the "  " button to turn on/off the backlight.

The backlight will be off automatically in 5 seconds without operation.

When the moisture meter switches on, the backlight will be power on by press any button

If there is a measurement fluctuation in wood/building moisture meter mode, the screen will display green backlight automatically.

How To Use:

Step 1: Set the device to read whatever material you're using, choose the mode (wood or building material) or choose the right calibration scales of the wood.

Step 2: Place both pins onto surface of the material for several seconds (ensure it is stable).

Step 3: Read the LCD display indicating moisture content of the surface and hold the reading.

Common Questions and Answers:

1. Why I get a different results on the same spot at few times?

Answer: Please ensure you select a correct measuring mode and the correct calibration scales. And please also make sure the pins are penetrated into the test surface.

2. Just how accurate are moisture meters readings?

Answer: The accuracy of the moisture meter may vary depending on a few different factors, such as:

- (1) What material you're testing;
- (2) The type of moisture meter you're using, pin-type is the best way to get a accurate%MC.
- (3) Whether or not the moisture meter has the appropriate scale for the material being tested;
- (4) The procedures used for testing moisture

3. What can I do if the pins of the moisture meter are broken/rusted?

Answer: The pins of our moisture meter is made of stainless steel, it is not easy to get broken or rusted. And if you lost the pins, please just contact us.

4. Suddenly stop working or can not turn on; readings can not change.

Answer: Please check the battery and try to replace new battery. Install the battery and then connect it again. If the problem still exists, please contact us.

NOTE:

1. Keep the device dry.
2. Keep the probe clean.
3. Keep the device and battery out of reach of infants and children.
4. When measuring, it should be measured in the environment where the product is placed. If the air humidity is too high or too low, the measurement error will be relatively large. If you move to other environments (the difference between ambient temperature and humidity is large), please put the product in place for at least 10 minutes before measuring. At the same time, the measuring position should be far away from the strong electric field.
5. When the symbol "  " appears, it indicates the battery is in low-power mode and should be replaced.

Calibration

Tables of Wood

Abies alba (B)
 Abies grandis (A)
 Acacia Wood (A)
 Acanthopanax ricinifolius (A)
 Acer macrophyllum (A)
 Acer pseudoplatanus (F)
 Acer saccharum (A)
 Aetoxicon punctatum (G)
 Afara (A)
 Aformosa (G)
 Aformosa elata (G)
 Afzelia (E)
 Afzelia spp (E)
 Agathis australis (E)
 Amblygonocarpus andogensis (A)
 Amblygonocarpus obtusungulis (A)
 Amboyna (G)
 Araucaria angustifolia (B)
 Araucaria bidwillii (B)
 Araucaria cunninghamii (C)
 Ash, American (B)
 Ash, European (A)
 Ash, Japanese (A)
 Ayan (C)
 Baguacu, Bracilian (F)
 Balsa (A)
 Bamboo (A)
 Banga Wanga (A)
 Basswood (G)
 Beech, European (C)
 Berlina (B)
 Berlinia grandiflora (B)
 Berlinia spp (B)
 Binvang (E)
 Birch, Yellow (A)
 Bisselon (E)
 Bitterwood (F)
 Blackbutt (C)

Bosquiea (A)
 Bosquiera phoberos (A)
 Boxwood, Maracaibo (A)
 Brachystegia spp (B)
 Calophyllum brasiliense (H)
 Camphorwood, E African (C)
 Canarium schweinfurthii (B)
 Canarium, African (B)
 Cardwellia sublimis (C)
 Carya glabra (F)
 Cassipourea elliotii (F)
 Cassipourea melanosana (F)
 Castanea sutiva (C)
 Cedar, Western Red (C)
 Cedar, Japanese (B)
 Ceratopetalum apetala (G)
 Chamaecyparis spp (18-28%mc) (C)
 Cherry and Apple Wood (H)
 Chestnut (C)
 Chlorophora excelsa (F)
 Coachwood (G)
 Cordia alliodora (F)
 Cordia, American Light (F)
 Cryptomelia japonica (B)
 Cupressus spp (A)
 Cypress, E African (A)
 Cypress, Japanese (18-28%mc) (C)
 Dacrydium franklinii (B)
 Dahoma (A)
 Dalbergia latifolia (A)
 Danta (C)
 Diospyros virginiana (G)
 Dipterocarpus (Keruing) (F)
 Dipterocarpus zeylanicus (A)
 Distemonanthus benthamianus (C)
 Douglas Fir (B)
 Dracontomelum mangiferum (B)
 Dryobalanops spp (A)
 Dyera costulata (C)
 Elm (D)
 Elm, English (E)
 Elm, Japanese Grey Bark (B)
 Elm, Rock (E)

Elm, White (E)
 Endiandra palmerstoni (C)
 Entandrophragma angolense (H)
 Entandrophragma cylindricum (C)
 Erimado (F)
 Erythrophleum spp (C)
 Eucalyptus acmnicides (C)
 Eucalyptus crebra (B)
 Eucalyptus diversicolor (A)
 Eucalyptus globulus (B)
 Eucalyptus maculate (A)
 Eucalyptus marginata (C)
 Eucalyptus microcorys (A)
 Eucalyptus obliqua (C)
 Eucalyptus pilularis (C)
 Eucalyptus saligna (B)
 Fagus sylvatica (C)
 Ficea abies (C)
 Fir, Douglas (B)
 Fir, Grand (A)
 Flindersia brayleyana (B)
 Fraxinus Americana (B)
 Fraxinus excelsior (A)
 Fraxinus japonicus (A)
 Fraxinus mardshurica (A)
 Gequ, Nohor (H)
 Gonystylus macrophyllum (G)
 Gossypiospermum proerox (A)
 Greenheart (C)
 Grevillea robusta (C)
 Guarea cedrata (H)
 Guarea, White (H)
 Guibortia ehie (B)
 Gum, American Red (A)
 Gum, Saligna (B)
 Gum, Southern (B)
 Gum, Spotted (A)
 Gurjun (A)
 Hemlock, Western (C)
 Hevea brasiliensis (H)
 Hickory (F)
 Hyedunani (B)
 Intsia bijuga (B)
 Jarrah (C)
 Jelutong (C)
 Juglans nigra (A)

Juglans regia (C)
 Kapur (A)
 Karri (A)
 Kauri, New Zealand (E)
 Keruing (F)
 Khaya senegalensis (E)
 Kuroka (A)
 Larch, European (C)
 Larch, Japanese (C)
 Larch, Western (F)
 Larix decidua (C)
 Larix kaempferi (C)
 Larix leptolepis (C)
 Larix occidentalis (F)
 Lime (E)
 Liquidambar styraciflua (A)
 Locust/Robinia pseudoacacia (A)
 Loliondo (C)
 Iroko (F)
 Lronbank (B)
 Mahogany, West Indian (B)
 Makore (B)
 Mansonia (B)
 Mansonia altissima (B)
 Maple, Pacific (A)
 Maple, Queensland (B)
 Maple, Rock (A)
 Maple, Sugar (A)
 Matai (E)
 Meranti, Red (dark/light) (B)
 Meranti, White (B)
 Merbau (B)
 Milleltia stuhimannii (A)
 Mimusops heckelii (B)
 Missanda (C)
 Mitragyna ciliata (E)
 Muninga (G)
 Myrtle, Tasmanian (A)
 Nauclea diderrichii (H)
 Nesogordonia papaverifera (C)
 Nothofagus cunninghamii (A)
 Oak (White/Red) (A)
 Ochroma lagopus (A)

Ochroma pyramidalis (A)
Ocotea rodiaei (C)
Ocotea usambarensis (C)
Octomeles sumatrana (E)
Olea hochstetteri (B)
Olea welwitschii (C)
Palaquium spp (A)

 pecan (E)
Pericopsis elata (G)
Picaenia excelsa (C)

Picea jezoensis (18-28%mc) (C)
Picea sitchensis (C)
 Pine, Scots (A)
 Pine, Sugar (C)
 Pine, Yellow (A)

Pinus caribaea (C)
Pinus contorta (A)
Pinus lampertiana (C)
Pinus nigra (C)
Pinus palustris (C)
Pinus pinaster (B)
Pinus ponderosa (C)
Pinus radiata (C)
Pinus spp (B)
Pinus strobus (A)
Pinus sylvestris (A)
Pinus thunbergii (B)
Pipadeniastrum africanum (A)
Piptadenia africana (A)
Podocarpus dactyloides (B)
Podocarpus spicatus (C)
Podocarpus totara (E)
 Poplar, Black (A)
Populus spp (A)
Pseudotsuga menziesii (B)
Pterocarpus angolensis (G)
Pterocarpus indicus (G)
Pterocarpus soyausii (G)
Pterygota bequaertii (F)
Pterygota, African (A) (A)
 Pyinkado (E)
 Queensland Walnut (C)

 Quercas Alba (A)
Quercus robur (A)

Quercus spp (A)
Quercus cerris (E)
Quercus delegatensis (C)
Quercus gigantean (C)

Ramin (G)
 Redwood, Balt (European) (A)
 Redwood, Californian (B)
Ricinodendromeudelotti (F)
 Rosewood, Incan (A)
 Rubberwood (H)
 Santa Maria (I)
 Sapele (C)
Sarcocephalusdiderichii (H)
Scottellia coriacea (E)
 Sen (A)
Sequoia sempervirens (B)
 Seraya, Red (Q)
Shorea smithiana (C)
Shorea spp (B)
 Silky Oak, African (C)
 Silky Oak, Australian (C)
 Southern Cypress (A)
 Split California Black Oak (A)

 Spruce, Japanese (18-28%mc) (C)
 Spruce, Norway (European) (C)
 Spruce, Sitka (C)

Sterculia rhinofetala (A)
Sterculia, Brown (A)
 Stringybark, Messmate (C)
 Stringybark, Yellow (C)
Swietenia caldollei (A)
Swietenia mahogani (B)
 Sycamore (F)
Syncarpia glomulifera (C)
Syncarpia laurifolia (C)
 Tallowwood (A)
Tarrietia utilis (C)
Taxus baccata (C)
 Teak (F)
Tectona grandis (F)
Terminalia superba (A)
Thuja plicata (C)
Tieghamella heckellii (B)

Tilia americana (G)
Tilia vulgaris (E)
 Totara (E)
Triploehiton scleroxylon (G)
Tsuga heterophylla (C)
 Turpentine (C)
Ulmus americana (E)
Ulmus procera (E)
Ulmus thomasi (E)
 Walnut (C)

Walnut, American (A)
 Walnut, European (C)
 Walnut, New Guinea (B)
 Walnut, Queensland (C)

 Wawa (G)
 White Pine (A)
 Whitewood (C)
Xylia dolabiformis (E)
 Yew (C)
 Zelkova Serrata (B)

➤ NOTE:

① If the wood type is not listed on the table, which can be divided into hardwood and soft wood. Hardwood choose "A" mode, Softwood choose "H" mode.

2 Protimeter Mini, Surveymaster and MMS instruments display Standard Scale A. Protimeter Timbermaster displays all scales.

The calibration data in this table are based on standard tests by oven-drying of commercial samples of the various wood species, between 7% and fibre saturation. Above fibre saturation point (25% -30%) readings are approximate only and generally apply to wood that has dried and been re-wetted. The device is calibrated for wood at 20°C (68°F). If the temperature of the wood varies by more than 5°C, the meter reading can be corrected approximately by adding ½% for every 5°C below 20°C or subtracting ½% for every 5°C above 20°C. Readings higher by 1%-2% may be obtained where wood has been impregnated with a water-borne preservative. High readings obtained with some ply-woods of peculiar composition must be treated with caution.