


Guide for Type-C Tester

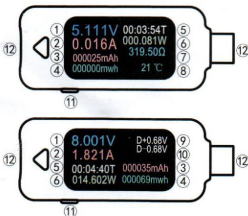

Instruction for display panel:

1. Voltage: 4.2-30V
2. Current: 0-5A
3. Capacity range: 0-999999mAh
4. Energy range: 0-999999mWh
5. Timer: 0-99H
6. Power: 0-150W
7. Charging resistance: 0-999.9Ω
8. Inner temperature: 0-80°C (The red icon will flash when the temperature is higher than 45°C, it is recommended to stop using)
9. D Positive voltage: 0-3.3V
10. D Negative voltage: 0-3.3V
11. Function key
12. Input/Output

Instruction:

1. Press the function key to switch interface and save the data.
2. Press the function key twice to flip the screen.
3. Long press the function key 3 seconds to delete the saving data.
4. Long press the function key and link the tester with exact 5V power for voltage calibration.