


ATIVA®

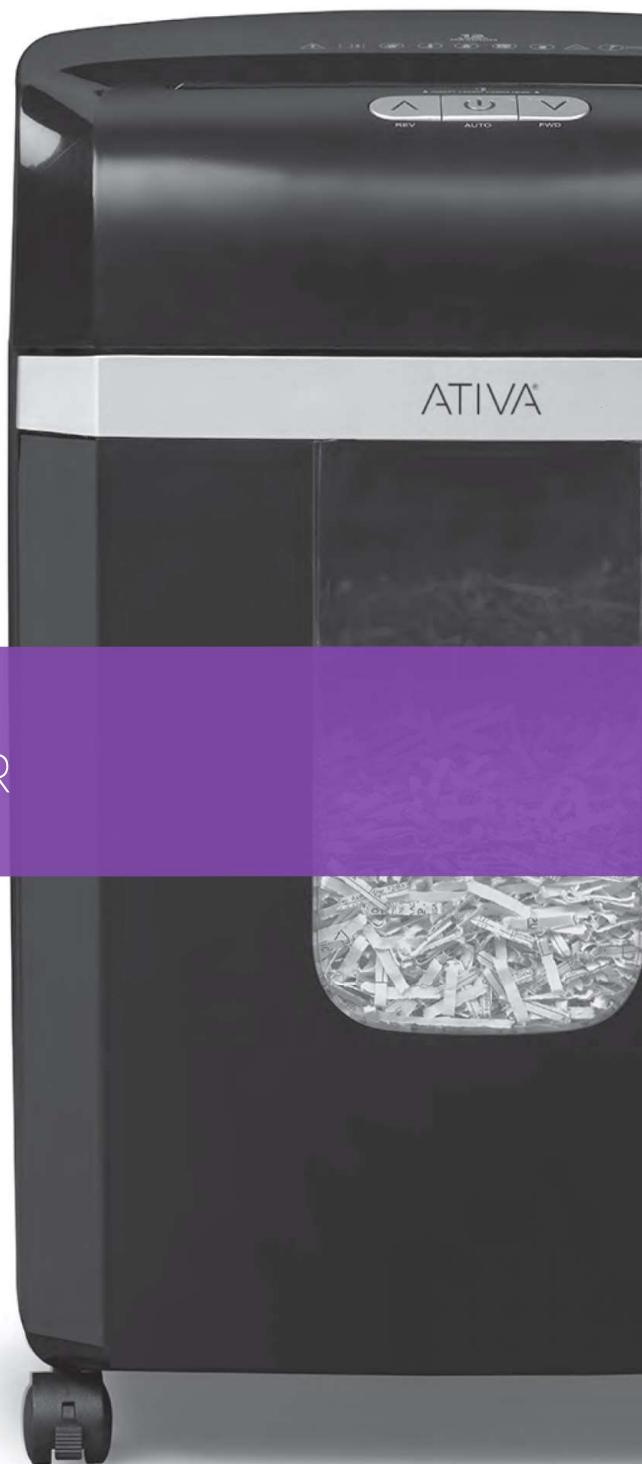

12-SHEET CROSS-CUT SHREDDER

Trituradora de cortes cruzados, 12 hojas

USER MANUAL

Manual de usuario

**Call for technical support
Monday – Friday
8am to 8pm EST**

**Llame para asistencia técnica
lunes a viernes de 8am a 8pm EST**

1-877-419-2616

**Before operating this unit,
please read all instructions.**

**Lea atentamente las instrucciones
antes de usar este producto.**

version 0719

Item 9320620

Model A12CC19

Distributed by: Office Depot, Inc., 6600 N. Military Trail, Boca Raton, FL 33496 USA

Ativa is a registered trademark of The Office Club, Inc. © 2019 Office Depot, Inc. All Rights Reserved. Made in Vietnam

Table of Contents / Índice de materias

English

Warning	1
Know your Ativa shredder	2
Operation	3
Maintenance	5
Troubleshooting	7
FAQ	9
Limited Warranty	11

Español

Advertencia	1
Conozca su trituradora Ativa	2
Funcionamiento	3
Mantenimiento	5
Resolución de problemas.....	7
Preguntas frecuentes	9
Garantía limitada	11

What's in the box / Qué hay en la caja



1.
**Shredder/
Trituradora**



2.
**Quick start guide/
Guía de inicio rápido**



3.
**User manual/
Manual del usuario**



4.
**lubricant sheet/
hoja de lubricante**

WARNING: Read all instructions prior to operation.



Read instructions before use.



Do not spray or keep any aerosol products in or around shredder.



Avoid touching the document feed opening with hands.



Avoid loose clothing or jewelry touching the document feed opening.



Product is not intended for use by children (product is not a toy).



Avoid getting hair near the document feed opening.



Shredder oil only.



Sharp edges, Do not touch



This equipment is not intended for use by children. Avoid touching the media feed opening with the hands, clothing or hair. Unplug this equipment when not in use for an extended period of time.



Warning!
Before switching the machine on, make sure that you observe all safety instructions.

DO NOT SHRED:



Large paper clips, binder clips & CDs



Window or insulated envelopes



Checkbook or notepad



Newspaper



Continuous computer paper



Cardboard



Adhesive materials



Laminated document and magazines

- **Always turn the shredder off and unplug the power cord when: not in use, before cleaning it, moving it, or emptying the waste basket.**
- **RISK OF FIRE. Never use any petroleum based or flammable oils or lubricants** in or around the machine and do not dispose of flammable chemicals or materials in the shredder basket.
- A socket-outlet should be near the equipment and be easily accessible.
- Do not place the shredder near water or any heat source. Do not use the shredder if the power cord is damaged in any way.
- Do not attempt to service this product yourself as doing so may expose you to sharp cutting blades and/or electricity and will void the manufacturer's warranty.
- Never try to clean or clear the shredder blade.
- **WARNING: Hazardous Moving Parts. Keep Fingers and Other Body Parts Away.**

KNOW YOUR ATIVA SHREDDER


Product Specifications:



Sheet Capacity*
12 Sheets of 20 lb.
bond paper



Paper Shred Size
0.17in. x 1.38in. pieces
4.2mm x 35 mm pieces
Security level: P-3

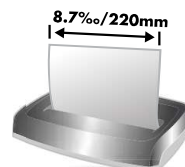

Paper Entry Width
8.7 in / 220 mm



Credit Card Capacity
1 at a time



Duty Cycle
Shred time: 20 min.
Cool down time: 40 min.




Voltage**
120V~60Hz / 3.0 A

■ NOTE:

ONE FOLDED SHEET OF PAPER EQUATES TO 2 SHEETS OF PAPER


Heavier paper (above 20 lb.), humidity may reduce shredding capacity below 12 sheets per pass.

**** Voltage:** Use in other country outside of the USA, is not recommended.

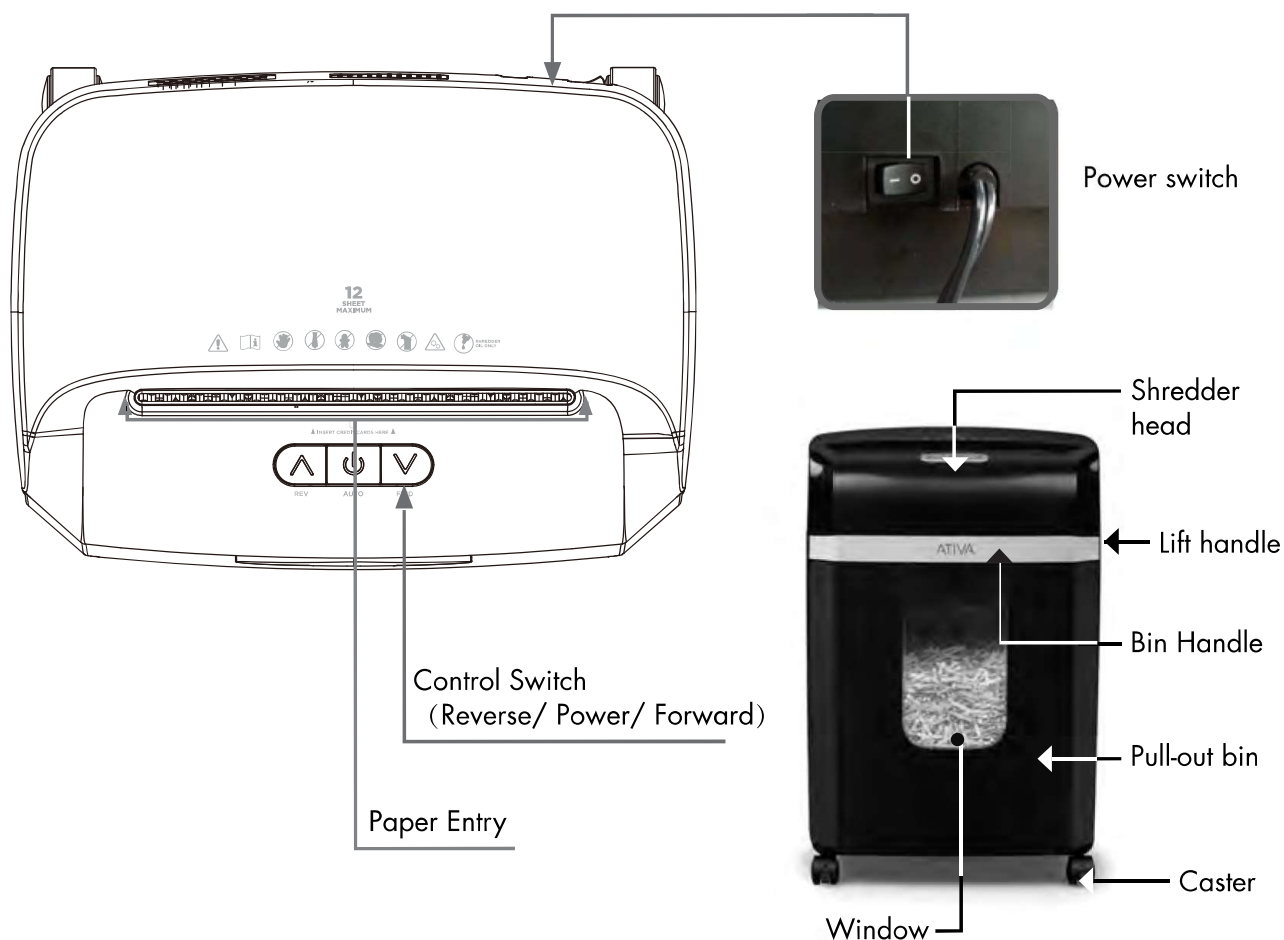

OPERATION


Shredding operation:

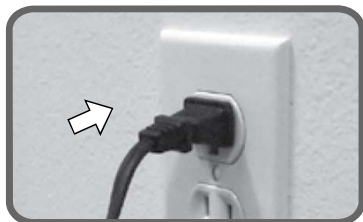

- ❶ Plug into grounded standard US household power outlet (120 Volt).



- ❷ Turn on the power switch on the back of the machine.

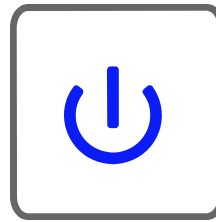

- ❸ Power ON shredder



- ❹ Make sure you do not exceed sheet count per pass (12 sheets max). **Insert paper as straight as possible into feed slot and release.**



- ❺ Insert one credit card at a time into the **middle** of the feed slot.


Special Feature:



Overload feature

The motor will immediately stop and start to auto-reverse for paper release. Press the Reverse button to reverse mode if needed and remove paper at a 45 degree angle.


Control Switch:

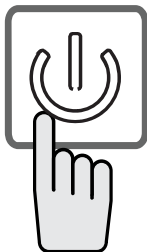

Power:

Press this button to control power ON/OFF.

Not lit – No power.
Blue light – Ready to shred

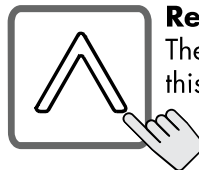

Reverse:

The shredder runs in reverse when this button is pressed.



Forward:

The shredder runs in forward when this button is pressed.

CONTINUED NEXT PAGE

LED Status Indicators:




Power On:

Blue light – Power light will activate when switched to Auto mode.



Overheat:

Red light – Shredder has reached maximum running time and is overheating. If this happens, switch the shredder off for 50 minutes or longer before resuming normal operation.

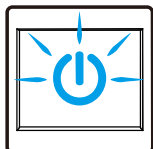

Bin Full:

Blue light flashing – Shredder bin is full and should be emptied. Shredder will not operate until bin is emptied.



Overload:

Red light flashing – The motor will immediately stop and start to auto-reverse for paper release. Press the Reverse button to reverse mode if needed and remove paper at a 45 degree angle.

MAINTENANCE


⚠ Warning: Failure to properly maintain your shredder will void the warranty.

Keep your shredder running with ultimate reliability by lubricating the shredder blades every month with Ativa brand lubricant sheets or Office Depot brand oil.

■ **To maintain with shredder oil:** Simply apply a bead of lubricant across a sheet of paper and feed into the shredder, or apply lubricant directly into the paper feed entrance.

■ **To maintain with a shredder sheet:** Simply insert the shredder sheet into the feed slot the same way you would a piece of paper.


Lubricant Procedure:

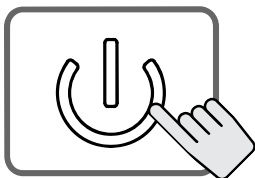

❶ Turn off shredder.



❷ Apply shredder oil across paper entry. Or insert a shredder sheet into the feed slot.

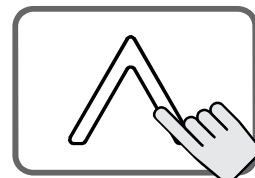

❸ Turn on shredder and run in reverse mode for 3-5 seconds.




Don't/Caution:

- Do not spray or keep any aerosol products in or around shredder.
- DO NOT USE CANNED AIR ON SHREDDER.



**DO NOT USE
AEROSOL PRODUCTS!**

■ **To dust/clean the shredder:**

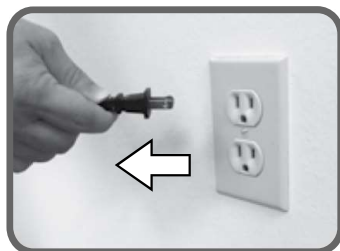

❶ Always **UNPLUG** the shredder first.



❷ Take a soft dry cloth and wipe the shredder body.



❸ Do not clean the shredder with spray or liquid cleaners or water. Do not immerse the shredder in water.

CONTINUED NEXT PAGE

MAINTENANCE

- **Shredder bags:** Recommended shredder bag.

Installation:



Step 1:
Slide waste bin from shredder. Position the bag around the hooks.



Step 2:
Draping end of Shredder Bag over the lip of the waste bin.

Step 3:
Close the door back and begin shredding.




TROUBLESHOOTING

⚠ WARNING: DO NOT ATTEMPT TO REPAIR BY OPENING THE SHREDDER HEAD. THIS WILL VOID THE PRODUCT WARRANTY. If you continue to have problems, please contact customer support at our Service Center at **1-877-419-2616**.

No-power to the shredder

❶ Check power outlet

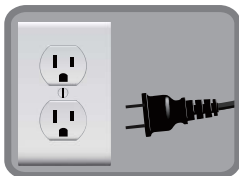

❷ Check if the power switch is turned on



❸ Check power light

1) Make sure power cord is plugged into a functioning 120V standard household power outlet.


Or, try using a different working outlet.

2) Check if the power switch is turned on.

3) If the blue Power On icon is not lit, check if the bin is closed.

Shredder is Jammed

❶ Reverse to remove paper

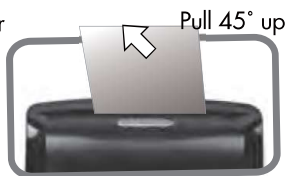


❷ Turn off shredder




↑ Apply shredder oil and wait for 30min.

❸ Turn on shredder

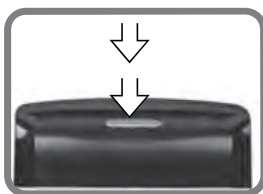

↑ Use thick paper to push jam through

❹ Reduce sheets to resume shredding

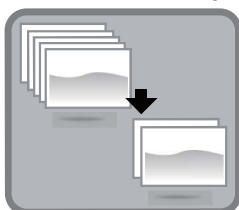

⚠ Warning: DO NOT USE ANY SPRAY CANS OR AEROSOLS.

When the shredder detects over-capacity shredding, the motor will immediately stop and start auto-reverse for paper release.

- 1) • Press and hold the REV button to release paper if needed.
• Pull the paper at a 45 degree angle to remove jammed paper (as much as possible).

- 2) • Turn off shredder.
• Apply **shredder oil** to the feed slot.
• Let oil soak in to paper and machine for 30 minutes.

Note: Repeat 1 & 2 steps if needed

- 3) • Press the control button to Auto/On.
• Use thick paper stock or a greeting card to push the jam through.
- 4) • Reduce the number of sheets being fed (count pages to be sure not to exceed the maximum sheet count)
• Refeed the paper.

CONTINUED NEXT PAGE


TROUBLESHOOTING

Shredder does not feed or shred paper

1 Overheat



Cool down

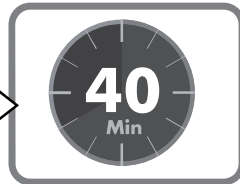

2 Bin Full



Empty Bin



3 Power light not on



Close door



4 Over load



Remove paper Pull 45° up



1) If Overheat icon is lit in red ,turn shredder off and let it cool down for 40 minutes.

Turn shredder on, check icon light again, and restart shredding only when icon light is not lit.

2) If Bin Full icon is lit in Blue flash ,empty Bin.


3) If the Power On blue light is not on:

- Make sure power cord is plugged into a working outlet.
- If confused, see Troubleshooting "No-power to the shredder" on page 7.
- Make sure bin is closed properly.

4) If overload icon is lit in red flash:

- When the shredder detects over-capacity shredding, the motor will immediately stop press REV button to reverse for release paper. Pull the paper at a 45° angle to remove the jammed paper.
- Shred the paper not exceed the maximum sheet count.
- See Trouble shooting "shredder is Jammed" on page 7.

Shredder does not feed or shred credit card or small piece of paper

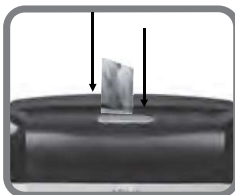


Feed in the center

- Position credit card or small piece of paper over the credit card section of the Feeder (center position).
- Try again.

Shredder runs continuously

1 Unplug power

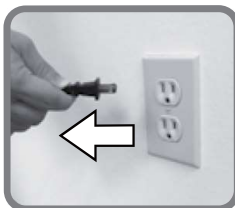

2 Clean sensor



⚠ Warning: DO NOT USE CANNED AIR.

1) Unplug the machine from the wall socket.

2) • Find the activation sensor in the center of the feed slot.

- Use a cotton swab to gently wipe away any dust or debris that has collected on the sensor.

TROUBLESHOOTING

Other: When parts are missing, damaged or you have any questions.



Please Call:

1-877-419-2616 Mon-Fri 8am to 8pm EST
for warranty service or product support.

FAQ

Q: How to register my product?

There is no need to register your product. The product warranty requires that you keep your proof-of-purchase (invoice, order confirmation) or receipt during the warranty period.

Q: What should I do to maintain my shredder?

Once a month, use shredder oil or a shredder sheet. Please see page 5. Proper maintenance helps to prevent paper jams and prolong your shredder's life.

Q: Can my shredder handle paper clips and staples?

Yes it can. This machine can accept #1 or regular-sized paper clips. No jumbo paper clips or vinyl coated (typically colored) paper clips. It can also accept standard size staples. It does not accept heavy duty staples.

Q: Can I use aerosol lubricants or cooking/vegetable oil to lubricate my shredder?

Never use spray/aerosol lubricant or cooking/vegetable oil to lubricate shredder. Both of these options cause shredded particles to stick together and they will remain stuck in the shredder blades. Please only use shredder oil or shredder sheets. See the Maintenance section in this manual on page 5 for more information. Spray/aerosol products may also cause a fire hazard when sprayed in or around shredder.

Q: Can I use a plastic bag or bin liner in my shredder?

Yes. Please follow the directions listed in the Maintenance section, on page 6.

Q: Who should I contact if I need a product support or warranty question/issue?



Please call 1-877-419-2616. Please have your sales receipt and your user manual handy when you call.

FCC statement

FCC statement

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

LIMITED PRODUCT WARRANTY

Office Depot, Inc. Limited One Year Product Warranty

This limited warranty covers the original purchase of new product used for normal commercial, personal or household use. Office Depot, Inc. (ODI) warrants its products will be free from defects in materials and workmanship (normal wear and tear excepted), for one (1) year from the date of purchase, except as provided below. ODI, at its option, will replace with a comparable product, free of charge, any product purchased from it that fails under normal use as a result of such defect. This warranty does not apply to damage caused by fire, accident, negligence, misuse, use other than as stated in product instructions, improper cleaning or other circumstances not directly attributable to defects in materials and workmanship.

Proof of purchase is required in the form of a receipt (copy or original) to validate warranty. Warranty claims without the receipt may be rejected.

If Office Depot, Inc. chooses to provide a refund for such product, it will be fulfilled in the form of an Office Depot Merchandise card. Claims fulfilled in this manner take approximately 30 days to process.

ODI PROVIDES THIS LIMITED WARRANTY IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESSED OR IMPLIED. EXPRESSLY EXCLUDED ARE ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY. OFFICE DEPOT'S SOLE OBLIGATION AND THE USER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY SHALL BE LIMITED TO THE REPAIR, REFUND (IN THE FORM OF AN OFFICE DEPOT MERCHANDISE CARD) OR REPLACEMENT AT ODI'S SOLE DISCRETION AND COST, OF PRODUCT OR COMPONENTS.

IN NO EVENT SHALL ODI, ITS AFFILIATES, SUBSIDIARIES OR PARENT COMPANIES BE RESPONSIBLE FOR CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES ARISING OUT OF A CLAIM OF DEFECTIVE PRODUCT EVEN IF ODI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY BY STATE OR PROVINCE.

THIS WARRANTY APPLIES ONLY TO THE U.S. AND CANADA.

Service Instructions

Please call: 1-877-419-2616 (Monday to Friday 8am to 8pm EST) for warranty service.

