


Item #1004612909(804989), 1004612998(804979)
1004618683(805009), 1004612997(804999)
Model #EC750BK, EC750WH
EC751BK, EC751WH

HAMPTON BAY.

USE AND CARE GUIDE

TRACK SECTION

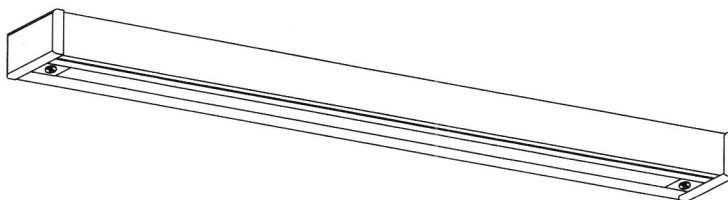

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this interior light accessory. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Warranty

1-YEAR LIMITED WARRANTY

The manufacturer warrants this lighting fixture against defects in materials and workmanship for a period of one year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the bill of sale as proof of purchase, to the original place of purchase. The manufacturer will, at its option, repair, replace, or refund the purchase price to the original purchaser or consumer. This warranty does not cover light bulbs or the fixture becoming damaged due to misuse, accidental damage, improper handling and/or installation, and specifically excludes liability for direct, incidental, or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, so the above exclusions and limitations may not apply. This warranty gives you specific rights and you may also have other rights that vary from state to state.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.hamptonbay.com.

HAMPTON BAY.

Questions, problems, missing parts? Before returning to store,
call Hampton Bay Customer Service
7 a.m. - 6 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.

Safety Information

IMPORTANT SAFETY INSTRUCTIONS (Save These Instructions)

WHEN INSTALLING OR USING THIS TRACK SYSTEM, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING:

- Read all installation. Save these instructions and refer to them when additions to or changes in the track configuration are made.
- All electrical connections must be in accordance with local codes and the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
- Before energizing make sure that the lighting system is clear of all material which could cause a direct short and check all electrical connections to make sure they are tight.
- Disconnect electrical power before adding to or changing the configuration of the track.
- Do not install any part of this system less than 7 ft. above the floor.
- Do not install any lamps closer than 6 in. from any curtain or similar combustible material.
- Do not attempt to energize anything other than track lighting fixtures on the track. To reduce the risk of fire and electrical shock, do not attempt to connect power tools, extension cords, appliances, and the like to the track.
- This track system is to be supplied by a single branch 120-volt, 60-hertz circuit.
- This track is not intended to be suspended by a stem or cable.
- The mounting screws are to be mounted along the track in the keyhole slots provided.



WARNING: Do not install this lighting system in a damp or wet location.




CAUTION: Keep the lamp away from materials that may burn.



IMPORTANT: For use with Hampton Bay EC series line voltage track systems only.

Pre-Installation

PACKAGE CONTENTS

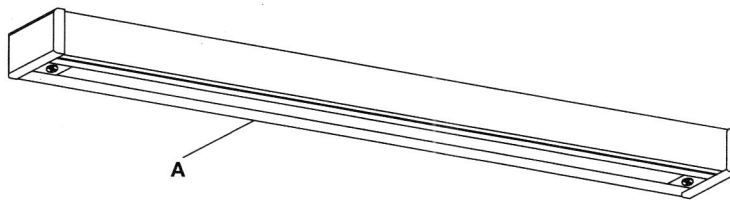


Part	Description	Quantity
A	Track section	1

Installation


1a Toggle bolt installation

- Drill a 5/8 in. hole at each mark on the ceiling.
- Insert toggle bolts (AA) through the track section (A), and thread the 1/2 in. toggle onto the bolts.
- Place the track section (A) against the ceiling, and insert the toggle bolts (AA) into the holes until the springs open.
- Tighten the bolts (AA).

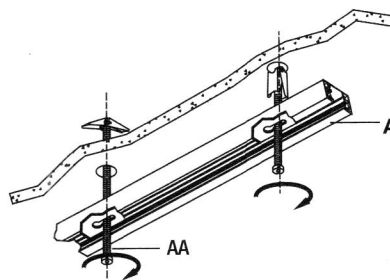

1b Anchor installation

- Drill a 7/32 in. hole at each mark on the ceiling, and insert the anchors (CC) into the mounting surface.
- Insert the Phillips screws (BB) through the track section (A), and tighten to the anchors (CC).

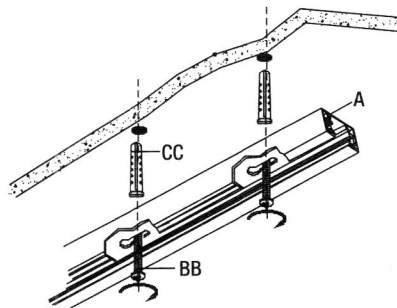

Care and Cleaning



CAUTION: Do not use chemical solvents or harsh abrasives to clean the fixture or components, as damage may occur.


- To clean the fixture, first disconnect the power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box.
- Use a dry or slightly dampened, clean cloth (use clean water, never use a solvent) to wipe the interior and exterior surfaces of the fixture.
- Allow the fixture to dry completely before power is restored.

Troubleshooting

Problem	Possible Cause	Solution
The light bulb will not illuminate.	The light bulb is burned out.	Replace the light bulb.
	The power is off.	Make sure the power supply is on.
	There is a faulty wire connection.	Check the wiring. Contact a qualified and licensed electrician if you are not comfortable troubleshooting wiring problems.
	There is a faulty switch.	Test or replace the switch.
The fuse blows or the circuit breaker trips when the light bulb is illuminated.	There are crossed wires, or the power wire is not properly grounded.	Check the wire connections.


Pre-Installation

TOOLS REQUIRED

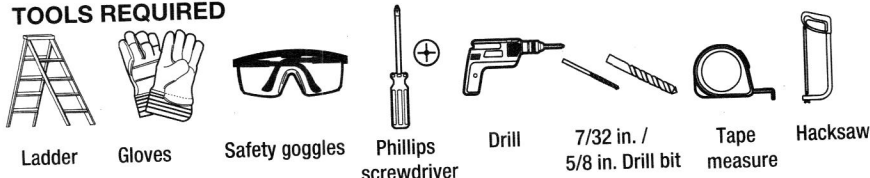

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.

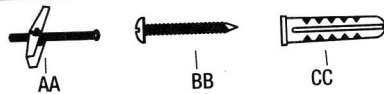

Part	Description	Quantity
AA	Toggle bolts	2 (EC750) 3 (EC751)
BB	Phillips screw	2 (EC750) 3 (EC751)
CC	Anchor	2 (EC750) 3 (EC751)

Installation

1 Installing the track to the ceiling

- Before installing the track section (A), determine which connector (sold separately) will be used to energize the tracksection (A) and attach according to the connector's instructions.
- Mark the location of the track section (A) on the ceiling with a pencil (not included) through the mounting holes in the bottom of the track section (A).
- Attach the track section (A) to the desired location on the ceiling in one of the following ways:

NOTE: Toggle bolts (AA) should be used for standard installation into drywall, drop ceiling, or suspended ceiling applications. Anchors (CC) are used for masonry installations ONLY.

Operation

Field cutting the track to special lengths (Optional)

- Prior to cutting the track sections, make sure to understand the placement of the mounting openings already on the track section. For track sections 48 in. and smaller, the mounting opening needs to be spaced a maximum of 6 in. from each of the track ends. For track sections longer than 48 in., the mounting opening needs to be spaced a maximum of 12 in. from each of the track ends with additional openings a minimum of every 48 in. along the track section may be added as needed. This will ensure the track is mounted properly and securely.
- Align the track so the open side is facing upward (the side where the copper bus bars are exposed).
- Using a Philips head screwdriver, loosen the tension screw and remove the dead end fitting from the end of the track (A).
- Slide the copper bus bars and insulators flush or even with the end of the track (A).
- With a fine tooth hacksaw, cut off the desired length of track (cut straight down through the track).
- Remove all burrs from the track, insulators, and copper bus bars so the end is smooth to the touch.
- Slide the copper bus bars and insulators back into the track leaving approx. 1/4 in space between the end of the track and the insulator, copper bus bar assembly.
- Make appropriate, slight modifications necessary to securely reinstall the dead end fitting back into the track (A).
- Reinstall the dead end fitting and secure with the Philips head tension screw.
- If additional mounting holes are needed (optional): Locate desired mounting points on the center inside the tracksection (A). Using a 3/16 in. drill bit (not included), drill a hole through the track section (A).

