


CARE AND MAINTENANCE

Unplug the appliance before cleaning. Don't use any water for cleaning metal surfaces. Slightly moisten a cloth and then wipe off the surfaces of the fan. In order to remove the dust from the grill, use a vacuum cleaner or remove the front grill by removing the securing screws on the edge of the grill with a screwdriver. After cleaning, remount the grill. After doing this, fasten the securing screw on the edge of the grill.

PARTS LIST

ITEM	DESCRIPTION	QUANTITY	PART NO.
1	Blade Assembly	1	8TFB-01
2	Motor	1	8TF-02
3	Capacitor	1	8TF-03
4	Switch	1	8TF-04

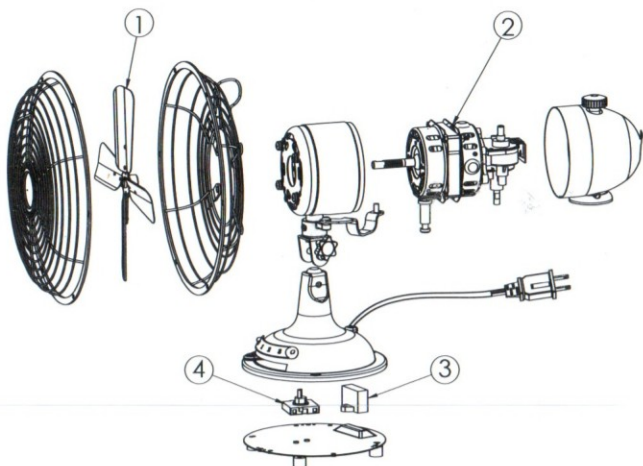


From Walmart >2020, mostly steel, rotating mount

USER MANUAL

8" Retro Table Fan with Fabric Cord

Item: BHS036163273003

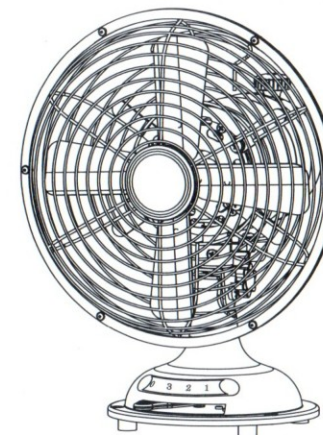

120V 60Hz 0.24A

READ & SAVE THESE INSTRUCTIONS

ONE (1) YEAR LIMITED WARRANTY

Every fan is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects in workmanship and materials for a period of ONE YEAR from the date of purchase.

This warranty does not cover:

- Alterations have been made to the product.
- Repairs are required because of normal wear and tear.
- Repairs have been made or attempted by anyone other than the manufacturer.
- The product has been mistreated, misused or improperly maintained and operated.

This warranty covers only new products purchased from our authorized dealers or retailers. It does not cover used, salvaged, or refurbished products.

As some states do not allow the limitation or exclusion of incidental or consequential damages, or do not allow the limitation on implied warranties, the above limitation and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

In the unlikely event that you have a problem or question about your unit, please contact our Customer Care Center. We are always happy to help!
Call Toll Free: 1-855-540-2883
Monday - Friday 8 am - 5pm CST

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING


1. Unplug the fan before moving it or performing maintenance. Do not touch the fan when your hands are wet.
2. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
3. Unplug the fan when it is not in use.
4. DO NOT unplug the fan by holding the cable cord. Unplug by holding the plug.
5. DO NOT use the fan when there is damage to the cable cord or plug.
6. DO NOT use the fan with extension cord.
7. DO NOT use the fan close to the fires.
8. DO NOT insert your hand or other objects into the guard or the movable parts.
9. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
10. If the supply cord is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
11. DO NOT use this fan outdoor.

CAUTION

1. Unplug the fan from the socket and clean it with a soft cloth.
2. DO NOT immerse the fan.
3. Fit the guard onto fan before starting up the fan.
4. This fan is not intended for use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervise or instruction concerning use of the fan by a person responsible for their safety. Supervise children to ensure they do not play with the fan.
5. DO NOT operate any fan with a damage cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
6. DO NOT run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
7. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
8. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

USER SERVICES INSTRUCTIONS

1. Grasp plug and remove from the receptacle or other outlet device.
Do not unplug by pulling on cord.
2. Open fuse cover. (See Fig. 2)
3. Remove fuse carefully. (See Fig. 3)
4. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse. (See Fig. 4)
5. Close fuse cover. (See Fig. 5)

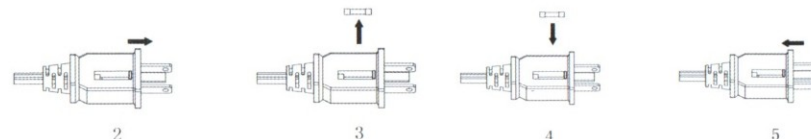

OPERATION INSTRUCTIONS

This fan is completely assembled upon delivery. The fan comes with different speeds. Adjust the desired speed by rotating the speed controller. (See fig. B1)

0 - Stop 3 - High 2 - Medium 1 - Low

The fan comes with an additional oscillation function.

Turn the oscillation function on by pushing the oscillation button down. (See fig. B2)

To change the angle of the fan, loosen the angle adjuster, and then tilt the protective screen up or down and finally retighten the angle adjuster. (See fig. B3)

