



Wireless Keyboard

IC-DK03

User Manual

Thank you for choosing iClever! Please read this user manual carefully and save it for future reference.

Package Contents

- 1x Wireless Keyboard
- 1x 2.4G USB Receiver-----
- 1x Keyboard Cover
- 1x Micro USB Charging Cable
- 1x User Manual




Specifications

Connection	2.4G Wireless and Bluetooth
Operating distance	< 8m / 26ft
Dimensions	428*125*16mm / 16.85 *4.92 *0.63in
Net weight	428g
Lithium battery capacity	280mAh
Charge time	< 2 hours
Uninterrupted working time	90 hours
Stand-by time	90 days
Compatibility	Windows, Mac, iOS, Android

*Frequency band: 2402MHz~2480MHz

*Maximum transmission power: 0 dBm

Product Overview

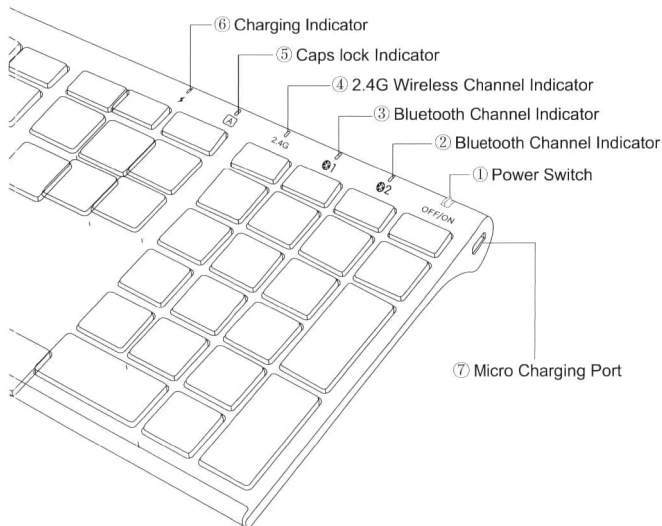

① **Power Switch:** slide ON/OFF to turn on/off the keyboard.

②③ **Bluetooth Channel Indicator:**

after the Bluetooth pairing is completed, the indicator light flashes every 3 seconds.

④ **2.4G Wireless Channel Indicator:**

after the 2.4G pairing is completed, the indicator light flashes every 3 seconds.

⑤ **Caps lock Indicator:**

- press "caps lock" key to switch between uppercase and lowercase.
- press "F6" key to check the power reminding, each flash represents 25% power reminding, 4 flashes in total.

⑥ **Charging Indicator:**

- stay in red when charging.
- turn green after fully charged (about 2 hours fully charged).

⑦ **Micro Charging Port:** for charging.

A. 2.4G Wireless Connection

Step 1. Charge the keyboard for 2 hours.

Step 2. Plug the 2.4G USB receiver into the USB port of the computer.

*If your device is USB-C port, please connect it by a hub.

Step 3. Slide power switch right to power on the keyboard.

Step 4. Press the key of  to 2.4G wireless mode.

Step 5. Press “fn” + “Q” / “W” keys to choose the system.

(fn+Q is for iOS and Mac OS, and fn+W is for Windows and Android)

B. Bluetooth Wireless Connection

Pair with 1st device

Step 1. Charge the keyboard for 2 hours.

Step 2. Slide power switch to “ON” to turn on the keyboard.

Step 3. Hold and press the key of  for 5 seconds to pairing mode in channel 1, and the Bluetooth channel 1 indicator will quickly flash blue and start to search for the available Bluetooth device.

Step 4. On your Bluetooth device, find the Bluetooth name “iClever IC-DK03 KB” and click to connect it.

For example, for iPad, click “Settings” > “Bluetooth” >

Under “MY DEVICES” find the pairing name and click to connect it.

Step 5. When the pairing is successful, the indicator will flash every 3s.

Step 6. Press “fn” + “Q” / “W” keys to choose the system.

(fn+Q is for iOS and Mac OS, and fn+W is for Windows and Android)

Notes:

---Auto re-connect function: the keyboard will connect with the last-used device automatically.

---Do not connect it via a Bluetooth adapter.

---If fail to connect, please read FAQ.

Pair with 2nd device

Step 1. Slide power switch to “ON” to turn on the keyboard.

Step 2. Hold and press the key of  for 5 seconds to pairing mode in channel 2, and the Bluetooth channel 2 indicator will quickly flash blue and start to search for the available Bluetooth device.

Step 3. On your Bluetooth device, find the Bluetooth name “iClever IC-DK03 KB” and click to connect it.

Step 4. When the pairing is successful, the indicator will flash every 3s.

Step 5. Press “fn” + “Q”/“W” keys to choose the system.

(fn+Q is for iOS and Mac OS, and fn+W is for Windows and Android)

Connect with iClever Bluetooth Keyboard in different system:

- For Windows 10 PC/laptop:

Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > click “iClever IC-DK03 KB” to connect.

- For MacBook/iMac:

Click System Preferences > Bluetooth > click “iClever IC-DK03 KB” to connect.

- For iPad & iPhone:

Click Setting > Bluetooth > click “iClever IC-DK03 KB” to connect.

C. Switch among the connected devices.

Press the key of  /  /  to switch among connected devices.

D. Re-pair the channel that has already connected.

Hold and press the key of  /  for 5 seconds again to re-pair.

Keys and Functions

Please press fn+Q or fn+W to choose Mac&iOS or Windows&Android.

- For Mac and iOS users, your keyboard has by default access to the Media and Hotkeys such as Volume Up, Mute, Volume down, and so on. If you prefer to have direct access to F-keys simply press  to swap them.
- For Windows users, you could press F-keys to work as F1~F12.

Key Icon	iOS	Android	Windows	Mac OS	Windows & Mac OS
Way to use	Press F-keys Directly	Press F-keys Directly	Press F-keys Directly	Press F-keys Directly	Press fn + F1~F12
 F1	Brightness -	Brightness -	Brightness - (Windows 10)	Brightness -	F1
 F2	Brightness +	Brightness +	Brightness + (Windows 10)	Brightness +	F2
 F3	Home	Home or N/A	Web browser	Mission control	F3
 F4	Switch apps (not work for iPhone)	Switch apps or N/A	Switch apps	Switch apps	F4
 F5	Search	Search or N/A	Search	Search	F5
 F6	Battery checking	Battery checking	Battery checking	Battery checking	F6
 F7	Previous track	Previous track	Previous track	Previous track	F7
 F8	Play/pause	Play/pause	Play/pause	Play/pause	F8
 F9	Next track	Next track	Next track	Next track	F9
 F10	Mute	Mute	Mute	Mute	F10
 F11	Volume -	Volume -	Volume -	Volume -	F11
 F12	Volume +	Volume +	Volume +	Volume +	F12

Pair with 2nd device

Step 1. Slide power switch to "ON" to turn on the keyboard.

Step 2. Hold and press the key of  for 5 seconds to pairing mode in channel 2, and the Bluetooth channel 2 indicator will quickly flash blue and start to search for the available Bluetooth device.

Step 3. On your Bluetooth device, find the Bluetooth name "iClever IC-DK03 KB" and click to connect it.

Step 4. When the pairing is successful, the indicator will flash every 3s.

Step 5. Press "fn" + "Q"/"W" keys to choose the system.

(fn+Q is for iOS and Mac OS, and fn+W is for Windows and Android)

Connect with iClever Bluetooth Keyboard in different system:

- For Windows 10 PC/laptop:

Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > click "iClever IC-DK03 KB" to connect.

- For MacBook/iMac:

Click System Preferences > Bluetooth > click "iClever IC-DK03 KB" to connect.

- For iPad & iPhone:

Click Setting > Bluetooth > click "iClever IC-DK03 KB" to connect.

C. Switch among the connected devices.

Press the key of  /  /  to switch among connected devices.

D. Re-pair the channel that has already connected.

Hold and press the key of  /  for 5 seconds again to re-pair.

Power Saving Mode

The keyboard will enter power saving mode if idle for 30 minutes.
Press any key to exit it and wait for 3 seconds.

Charge the Keyboard

Charge the device with the included USB cable.

---- Output: DC 5V/200mA; **USB charger is not included.**

---- In the charging, the indicator will stay in red and turn green after fully charged. Generally, it takes about 2 hours to get fully charged.

Compatibility

- For Bluetooth Compatibility:

Windows 8 or late, macOS 10.12 or late, Android 6.0 or late, iOS 13.0 or late

Note: not compatible with Bluetooth adapter, Mac mini, Samsung smart TV, Nokia Phones, and XBOX.

- For 2.4G Wireless Compatibility:

Windows 8 or late, macOS 10.12 or late with USB-A port.

FAQ

Q: Is this keyboard fully compatible with Macbook/iMac?

A: No, it is not fully compatible. The keys of    are not working for Macbook and iMac.

Q: Is this keyboard fully compatible with iPhone/iPad?

A: No, it is not fully compatible. The keys of



  are not working for iPhone and iPad.

Q: My keyboard fails to connect by 2.4G mode.

1. Ensure you already plug the USB Receiver into the USB port.
2. Ensure you already press the key of 2.4G.
3. Verify the product or receiver is connected directly to the computer and not to a hub, extender, switch, or something similar.
4. Charge the keyboard for 2 hours.
5. Move the receiver to a different USB port on your computer.
6. Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal. Try moving away from:
 - Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
 - Computer power supplies
 - Metal or metal wiring in the wall
7. Try on a different computer or email us.

Q: My keyboard fails to connect by Bluetooth mode.

1. Charge the keyboard for 2 hours.
2. Make sure that your iClever device and computer are within close proximity of each other.
3. Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
4. Delete all the Bluetooth connection records.
(For example, for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)
5. On your device, turn off the Bluetooth and turn it on again to Refresh.
(For example, for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it)
6. Connect it again or email us.

Q: Delay when typing or frequently get disconnected.

1. Restart your Bluetooth device.
2. Charge the keyboard for 2 hours.
3. Keep the keyboard and computer are within close proximity of each other.
4. Try moving away at least 8 inches from:
 - Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
 - Computer power supplies, Metal or metal wiring in the wall
5. Do not use your wireless keyboard on metal surfaces.
6. Check if there are any updates running in the background that may cause the delay.
7. Check your computer memory, insufficient memory may cause the delay.
8. Try on a different APP/device to connect.

If the problem still persists, you will need to follow specific steps based on your device OS. Please email us to get advanced troubleshooting.

Q: How to fix keyboard typing multiple letters on Windows 10?

Turn on the Filter Keys:

Click win key > Settings > Ease of Access > Keyboard > find "Use Filter Keys", turn it on.

Q: How to fix keyboard typing multiple letters on Mac?

1. On a Mac, choose the Apple menu > "System Preferences", click "Keyboard", and choose the Keyboard tab.
2. Locate the "Key Repeat" slider setting and adjust it to the "Off" position.

Q: Keyboard stop working.

1. Charge the keyboard for 2 hours.
2. Keep the keyboard and computer are within close proximity of each other.
3. Try moving away at least 8 inches from:
 - Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
 - Computer power supplies, Metal or metal wiring in the wall
4. Do not use your wireless keyboard on metal surfaces.
5. Try on a different device to connect.
6. Contact us.

Tips

Keep away from oil, chemical, liquid, and snacks.

Keep away from sharp objects.

Keep away from metal and other sources of wireless signal.

Contact

Email: support@iclever.com

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.