

200393

2025.07 Amazon \$14

Drok store

Amazon Product Link
<https://amzn.to/4lQTbyH>



Module Parameters:

Working Voltage: 3.3 ~ 30V

Range of Frequency: 1Hz ~ 150KHz (Normal Mode);
 1Hz ~ 15KHz (Accurate Mode)

Frequency Accuracy: 2% or so

Signal Carrying Capacity: 5 ~ 30mA or so (output current)

Output Amplitude: equal to power supply voltage

Environment Temperature: -20 ~ +70?

Features:


- LCD panel displays frequency and duty cycle clearly; it's very convenient by adopting coded potentiometer to adjust; PWM output can individually set frequency and duty cycle.
- Our PWM module is provided with locked function which can avoid incorrect operation.
- This module can set upper-lower limit of duty ratio.
- The signal generator has wide frequency range and high accuracy, besides, it has serial communication.

Long pressing potentiometer for 2 seconds enter into upper-lower limit setting, and short pressing it can switch between upper limit and lower limit, and then long pressing it for 2 seconds drop out of the setting.

Set lower limit
 "dn" of duty ratio



Set upper limit "up" of duty ratio

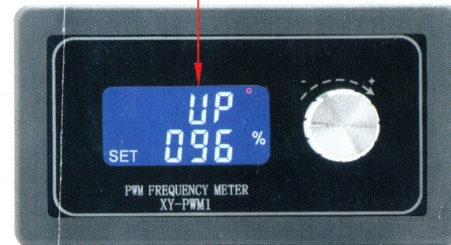

Module Information:

PWM output: can individually set frequency and duty ratio.

• Normal Mode:

Frequency Range: 1Hz ~ 150KHz, Duty Cycle: 000 ~ 100%,
 Duty Cycle: Step by 1%;

• Accurate Mode:

Frequency Range: 1Hz ~ 15KHz, Duty Cycle: 00.0 ~ 1.00%,
 Duty Cycle: Step by 0.1%;

• Frequency is divided into 4 ranges which can be switched automatically:

XXX (no decimal point): The minimum unit is 1Hz and the range is 1Hz ~ 999Hz;

X.XX (decimal in hundreds place): The min unit is 0.01KHz and the range is 1.00KHz ~ 9.99KHz;

XX.X (decimal in tens place): The min unit is 0.1KHz and the range is 10.0KHz ~ 99.9KHz;

X.X.X (decimal in tens and hundreds place): The min unit is 1KHz and the range is 1KHz ~ 150KHz.

- e.g. Frequency Display:
100 mean that PWM outputs 100Hz pulse;
1.01 means that PWM outputs 1.01K pulse;
54.1 means that PWM outputs 54.1KHz pulse
1.2.4 means that PWM outputs 124KHz pulse;
The range of duty cycle is 0 ~ 100%;
All data will be saved when power off.

Coded Potentiometer

Default to adjust duty ratio; short press to switch to adjust frequency; Long press it for two seconds to set upper-lower limit of duty ratio; Long press it for 5 seconds to lock; Long press it for 10 seconds to switch modes (normal Mode/accurate Mode).

Frequency 1HZ~150KHZ Adjustable



Duty Ratio 0~100% Adjustable

Parameter Setting:

Our signal generator module adjusts frequency and duty ratio by rotating potentiometer and can quick adjust them by rotating speed. The default setting value is duty ratio, to change into adjusting frequency by long pressing button, to lock it by long pressing it for 2 seconds, to switch modes (normal mode / accurate mode) by long pressing it for 5 seconds; It's very easy to use and all setting values will be automatically saved even though power fails.

Range of Application:

- Be used as signal generator of square wave and generate square wave for experimental development to use;
- Be used to generate square wave signal of control motor drive;
- Generate adjustable pulse for MCU to use;
- Generate adjustable pulse to control relative circuit (Application such as PWM dimming and speed regulation and so on.)

Serial Control (SCM TTL Level Communication)

Communication Standard: 9600 bps

Data Bit: 8

Stop Bit: 1

Check Bit: none

Flow Control Bit: none

Serial Port Directive	Instruction
READ	Read parameter setting
DNxxx	Set lower limit of duty ratio DNxxx: Set normal mode DNxx.x: Set accurate mode
UPxxx	Set upper limit of duty ratio UPxxx: Set normal mode UPxx.x: Set accurate mode
MODEx	MODE0: Normal mode MODE1: Accurate mode
Fxxx	"F101": Set frequency to 101Hz (001 ~ 999) "F1.05": Set frequency to 1.05KHz (1.00 ~ 9.99) "F10.5": Set frequency to 10.5KHz (10.0 ~ 99.9) "F1.0.5": Set frequency to 105KHz (1.0.0 ~ 1.5.0)
Dxxx	Normal mode: "DXXX": XXX (001 ~ 100) e.g. D050: Set PWM duty ratio to 50% Accurate Mode: "DXX.X": XX.X (00.1 ~ 100) e.g. D20.8: Set PWM duty ratio to 20.8%

Setting successful shows DOWN
Fail to set shows FALL

