



14.5 Oz(400cc)

PISTOL GRIP GREASE GUN

User's Manual

Model:
GGP-1AP-BX

FOR CUSTOMER SERVICE PLEASE CALL:
(800)315-9607

2026.03 Amazon.com

\$27.77


Seems Good!

- cust service contact
- extra grip

DM Notes:


- high quality Quick Release
- large rubber seal
- compact storage config

5. Disengage the plunger rod from the plunger by rotating the t-handle. Push the plunger rod into the container.

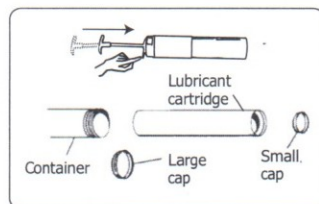

To fill grease gun from bulk lubricant container

1. Remove head and plunger assembly from container tube.
2. Pack lubricant into cavity of the head and plunger assembly.
3. Insert the open end of the container tube into lubricant. Slowly pull the t-handle back while pushing the container tube deeper into the lubricant to prevent air pockets from being pulled into the con-tainer tube.
4. When the plunger rod is fully extended pull it sideways to latch the rod groove into the keyhole slot in the container cap.
5. Loosely assemble the head and plunger assembly to the filled container tube. Release the plunger rod from the con-tainer cap and disengage the plunger rod from the plunger by rotating the t-handle. Push the plunger rod into the container. Slowly unscrew the container tube from the head and plunger assembly until lubricant oozes from the interface. Tight-en container tube into the head and plunger assembly.

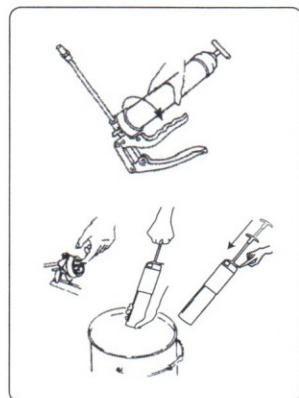

To fill lever gun with a filler pump

Engage the plunger rod with the plunger by rotating the t-handle. Insert the lever gun filler nipple into the filler pump socket and extend the t-handle away from the contain-er tube. Operate the filler pump to fill the lever gun container. When the plunger rod groove is exposed the container is filled (plunger rod will be extended approximately 8 inches). Disengage the plunger rod from the plunger by rotating the t-handle. Push the plunger rod into the container.

To expel air pockets

Normally there is no need to bleed air through the Filler/ Bleeder Valve. The gun will self prime by pumping the handle 5 to 10 times.



Bulk Capacity - 14.5Oz.
Cartridge spec. --- 14Oz(400cc.)

⚠ DANGER

Read manua prior to installation or useof this product. Keep manual nearby forfuture reference. Failure to follow instructions and safety precautions may result in death or serious injury.

⚠ WARNING

Extreme pressure may cause nozzle extension or whip hose to burst. Use only Bravex aproved hoses and follow whip hose instructions and warnings.

⚠ WARNING

Grease gun can develop high pressure up to 6,000 psi (413Bar). Use safety glasses and gloves for protection during operation. Keep hands clear of the extension during operation of the grease gun.

Installation and maintenance guide
Pistol Grip Grease Gun
GGP-1AP-BX

Description

The Bravex pistol grip type grease gun complete with high pressure flexible grease hose for easy access to those hard to reach grease points It is designed for use with cartridges or bulk grease thefiller/ bleeder valve in the head alsoallows clean filling from greasepails using a Bravex grease gun filler pumpThe"variable stroke" feature of this grease gun allows you to achieve higher greasing pressures using short piston strokes or high volume with a full stroke.

Toinstall a lubricant cartridge

1. Remove head and plunger assembly from container tube.
2. To remove an empty cartridge pull back on the t-handle until the plunger rod is fully extended. Then carefully release the t-handle to eject the empty cartridge from the container tube. Pull back on the t-handle. When the plunger rod is fully extended pull it sideways to latch the rod groove into the keyhole slot in the con-tainer cap.
3. Remove the caps from both ends of the cartridge and insert the large open end of the cartridge into the container tube. Loosely assemble the head and plunger assembly tothe container tube. Extend the t-handle away from the con-tainer tube and disengage the plunger rod from the container cap. Engage the plunger rod with the plunger by rotating the t-handle. Exert force on the t-handle until lubricant oozes from the tube and head interface. Tighten container tube into the head and plunger assembly.

After each reload of grease:

1. Release the plunger rod from the container cap.
2. Gently push and turn the rod until it goes fully into the container tube. Pump the handle until grease appears at the coupler (usually 5 to 10 times is sufficient).

If the grease is thick, cold or "tacky", or an air-lock is caused by the plunger sticking in the cartridge;

Force air out through the Filler/Bleeder valve:

! Notice
Plunger must be "locked" to rod.

1. Release plunger rod from slot in end cap.
2. Unscrew the filler/bleeder valve two full turns.

⚠ WARNING


Air pockets in the cartridge lubricant will cause the lever gun to lose its prime.


To remove the coupler from Zerk fitting after grease work

After the grease work, it's not easy for the users to remove the coupler from the zerk fitting till the pressure inside the hose/tube is released.

There are normally 2 ways to release the pressure and remove the coupler easily----

1. Unscrew the flex hose's fitting a little to release the pressure, then remove coupler from the zerk fitting.
2. Use the quick release grease coupler (Recommended).

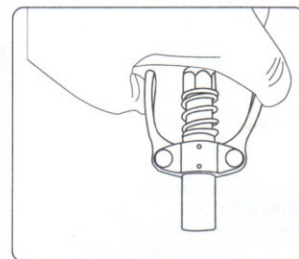

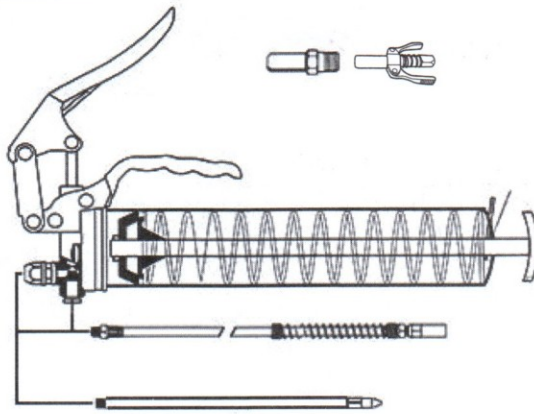

Troubleshooting

Problem	Cause	Remedy
Gun pumps little or no grease.	Air lock--plunger stuck in cartridge.	(1) Check condition of cartridge Replace if damaged. (2) "Lock" plunger to rod and push plunger into cartridge.
	Air lock--Grease too thick or cold.	(1) Consult grease supplier. (2) Store grease gun and grease away from extreme cold.
	Check valve ball seat damaged or dirty.	(1) Remove check valve. (2) Clean and inspect all components Replace as required. (3) Important- use Loctite (or similar) thread sealant on check valve threads.
	Body outlet ball seat dirty or damaged.	(1) Remove ball and spring. (2) Disassemble, clean, and inspect all components. Replace as required.
	Worn or damaged Piston O-ring.	(1) Remove handle. (2) Pull out plunger. (3) Replace O-P-ring.
Grease leaks past plunger.	Plunger damaged.	Replace plunger.
	Over filling gun when using filler pump.	Stop pumping filler pump when groove on piston rod visible at the back of barrel Refer to filling instructions.
Coupler stuck on Zerk fitting	The pressure inside the hose/tube is not released to hold the jaws.	(1) Unscrew the flex hose's fitting a little to release the pressure, then remove coupler from the zerk fitting. (2) Use the quick release grease coupler (Recommended).

4

Bravex industrial standard warranty

Standard limited warranty

Bravex warrants the equipment manufactured and supplied by Bravex to be free from defects in material and workmanship for a period of one year following the date of purchase, excluding therefrom any special, extended, or limited warranty published by Bravex. If equipment is determined to be defective during this warranty period, it will be repaired or replaced, with in Bravex's sole discretion, without charge. This warranty is conditioned upon the determination of a Bravex authorized representative that the equipment is defective. To obtain repair or replacement, you must ship the equipment, transportation charges prepaid, with proof of purchase to a Bravex Authorized Warranty and Service Center within the warranty period.

This warranty is exclusive and is in lieu of any other warranties, express or implied, including, but not limited to, the warranty of merchantability or warranty of fitness for a particular purpose. Warranty on items sold by Bravex, but not manufactured by Bravex are subject to the warranty consideration, if any, of their manufacturer (such as hoses, hydraulic and electric motors, electrical controllers, etc.) Assistance in making such warranty claims can be offered as required.

In no event shall Bravex be liable for incidental or consequential damages. Bravex's liability for any claim for loss or damages arising out of the sale, resale or use of any Bravex equipment shall in no event exceed the purchase price. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, therefore the above limitation or exclusion may not apply to you.

This warranty is exclusive and is in lieu of any other warranties, express or implied, including, but not limited to, the warranty of merchantability or warranty of fitness for a particular purpose. Warranty on items sold by Bravex, but not manufactured by Bravex are subject to the warranty consideration, if any, of their manufacturer (such as hoses, hydraulic and electric motors, electrical controllers, etc.) Assistance in making such warranty claims can be offered as required.

In no event shall Bravex be liable for incidental or consequential damages. Bravex's liability for any claim for loss or damages arising out of the sale, resale or use of any Bravex equipment shall in no event exceed the purchase price. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, therefore the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights that vary by jurisdiction.

ONLINE CUSTOMER SERVICE

Facebook: [csservice168@163.com](https://www.facebook.com/csservice168@163.com)

Skype: [customerservice@products](https://www.skype.com/people/customerservice@products)

Email: customerservice@bravexpersonal.com

Tel: (800) 315-9607

Customer service center address:
5448 Apex Peakway, 197 Apex, NC 27502



Grease Gun, full size (14oz) from Amazon, Purch 2026 March 16, for 14oz grease tubes.

photos below from Amazon product page.



scanned support card shipped with product (2026)



2026.03
model GGP-1AP-BX

customer service@products
csservice168@163.com
customer service@bravexperformance.com
Eastern: 25752 W. 143rd, St,
Plainfield, IL, US, 60544

Customer Service and Quality Policy Information

All of our products come with a 2 year warranty starting on the date of purchase.

Return Policy

1. If you want to return or replace our products for any reason, please contact us directly. This will enable us to pay for the return shipping costs and avoid losses to our customers.
2. What if my product's warranty has expired, or the return window has passed? In most cases, we will return or replace your product even if the return window has passed or the warranty has expired. We will always provide customer support. Please feel free to contact us directly in this case as well.
3. For technical support or quality questions, contact us directly at the addresses located at the top of this card. Our team of dedicated professionals are trained to help you resolve any issues you might run into.


We strive to answer all questions within 1 business day.




Best Regards.
Bravex Performance



For customer service please call
(1) 800 315 9607

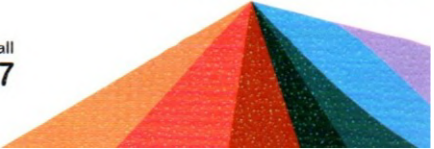

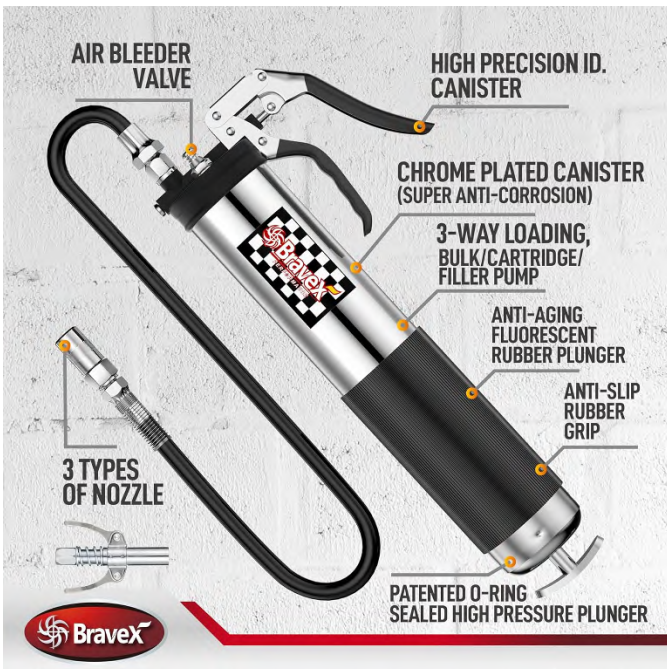



**WITH 3 YEARS
FACTORY
WARRANTY**



90 DAYS
Money Back Guarantee

EASY SERVICE
Give Us A Call Or Message, You Will See How Easy For Customers To Get Their Problem Solved.