

treewell


Model THRS13C1
2026.01 Amazon
~ 20 USD

Works nice! DM 2026.02

Remote Control Outlet

User Manual

Please read these operating instructions carefully and note the information given. Keep it properly.

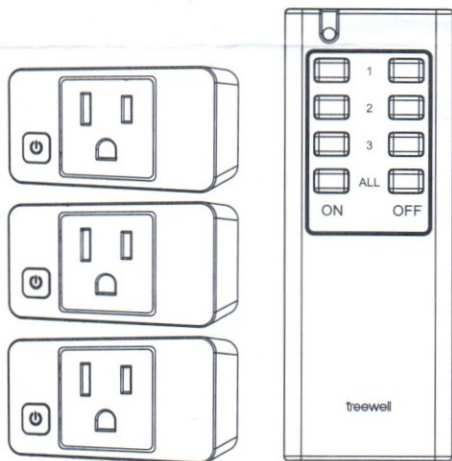

Safety and precautions



To ensure safe use and avoid injury or property damage to you or others, please make sure to follow the following safety precautions.

1. This product is suitable for indoor dry areas, please do not use it in damp indoor or outdoor areas.
2. Please make sure to cut off the power before installing the receiver.
3. Do not allow children to operate the receiver alone, ensuring that the product is not used as a toy. The product should be placed out of reach of infants.
4. Do not plug/unplug the receiver with wet hands to avoid electric shock.
5. Please do not place this product close to high temperatures, high humidity, strong magnetism, or flammable and explosive gases to prevent device damage or fire.
6. Do not connect the receiver to any devices that may exceed performance limits.
7. The transmitter of this product uses a button battery. Please keep them carefully when replacing or using them to prevent children from accidentally eating them.
8. Please keep the packaging materials away from children to prevent suffocation hazards.
9. It is prohibited to disassemble the product at will. If there is any malfunction, please contact our professional customer service team to provide you with better service.


Product Specification

- Input Voltage: 125VAC 60Hz
- Max Power Rating: 15A 1800W(Resistive)
- Frequency: 433.92MHz
- RF Range: 200ft(open area)
- Battery: 12V 23A

Product Structure

Receiver

Program Button
On and OFF Button
Indicator Light

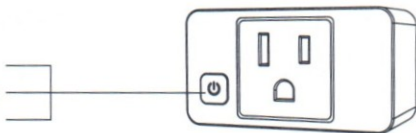

Button Description

The button can be used to program "Remote Pairing" and "Clear Remote Control Pairing".

The button can also be used to directly control the receiver on and off.

Indicator Light Description


When the indicator light is on, it means the socket is powered on;

When the indicator light is off, it indicates that the socket is powered off;

The slow flashing indicator light indicates that the socket is in paired remote control status;

The indicator light flashes quickly to indicate that the socket is in "clear remote control pairing" status;

Transmitter

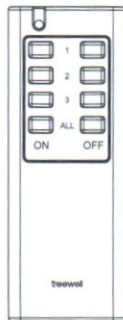

Transmitter battery removal and installation methods:

1. Insert a screwdriver or fingernail into the gap between the buckle and gently pry open the battery cover. (See figure a).

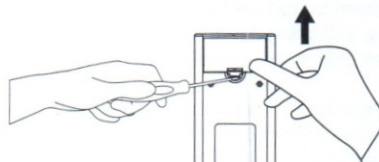


Figure a

2. Install the 12V23A battery correctly into the battery compartment.
3. Close the battery cover.

First Use Method

1. Insert the receiver into the power outlet.
2. Remove the transmitter isolation sheet and tighten the battery cover.
3. Connect the device to the receiver.
4. Press the on or off button on the transmitter to control the receiver to turn on or off.

Note: Ensure that the power of the load connected to the receiver is within the allowable range.

The receiver must be located within 200 feet of the remote transmitter.

The actual remote control range may be affected by the following factors: weather, radio frequency interference, low battery level of the remote control, and obstacles between the transmitter and receiver.

The transmitter and receiver of this product are pre-paired for immediate use, and you can also perform "Remote Control Pairing" and "Clear Remote Control Pairing" as needed.

Remote Control Pairing

1. Plug the receiver (plug) into a three-hole AC power outlet.
2. Hold down the program button on the receiver until the indicator light starts flashing slowly, indicating that the receiver is in pairing mode.
3. Release the program button, then press the on or off button on the transmitter.
4. When the indicator light on the receiver stops flashing, it indicates that the program pairing is successful;
5. You can now use the buttons on the remote control to turn the receiver on/off.
6. Repeat the same steps above to pair other receivers with the desired transmitter.

Clear Remote Control Pairing

1. Plug the receiver (plug) into a three-hole AC power outlet.
2. Press and hold the program button on the receiver until the indicator light starts flashing rapidly, indicating that the receiver is in clearing mode;
(Note: the indicator light will switch from slow flashing to rapid flashing)
3. Release the program button, then briefly press the program button again, and the indicator light will turn off, indicating that the remote control has been cleared successfully.

No Interference

Remote control outlets adopt variable learning codes technology. The codes will be changed each time after re-programming. If this remote control outlet happens to be in the same channels with other RF remote devices, just re-program it and the interference will be eliminated.

Replacing the battery

If you find the receiver works abnormally or the indicator on the remote control becomes dim, please replace the battery.

- Open the battery compartment cover on the back of the remote.
- Remove the old battery and insert the new 12V23A battery into battery compartment.
- Make sure the battery is installed correctly.
- Close the battery cover.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws.
- For detailed information, contact your local solid waste authority.

Caution:

Failure to properly align the battery polarity can cause personal injury and/or property damage.

Troubleshooting

If the receiver does not respond to the transmitter, please follow these steps to resolve the issue:

1. Check if the receiver is correctly powered on.
2. Check if the receiver can be used normally.
3. Check if the transmitter indicator light is lit up normally.
4. Replace the old battery in the transmitter with a new 12V23A battery.
5. Ensure that the transmitter is not too far away from the receiver.
6. Ensure that the load connected to the receiver does not exceed the maximum power.
7. Please refer to the "Remote Control Pairing" and "Clear Remote Control Pairing" sections in the manual to reprogram the receiver.

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful

interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the device and receiver.
 - Connect the device into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

After-sales Service

We provide a One-Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please let us know if you have any additional questions, concerns, or comments, or if we may be of assistance at any point in the future, we will be reaching out ASAP, and we would be more than happy to help.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.

