




**OPERATOR'S MANUAL**  
**18 V JIGSAW**  
**R8832**

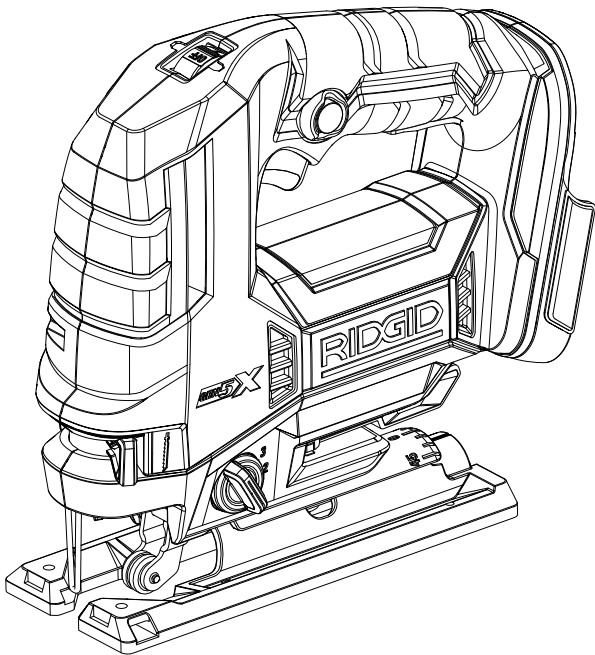

To register your RIDGID product, please visit:  
<http://register.RIDGID.com>

Pour enregistrer votre produit de RIDGID, s'il vous plaît la visite :  
<http://register.RIDGID.com>

Para registrar su producto de RIDGID, por favor visita:  
<http://register.RIDGID.com>

**TABLE OF CONTENTS**

\*\*\*\*\*

- General Power Tool  
Safety Warnings.....2-3
- Jigsaw Safety Warnings ..... 3
- Symbols..... 4
- Features..... 4
- Assembly ..... 5
- Operation.....5-8
- Maintenance..... 9
- Illustrations ..... 10-12
- Parts Ordering / Service ..... Back Page

**WARNING:**

To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

**SAVE THIS MANUAL FOR  
FUTURE REFERENCE**

# GENERAL POWER TOOL SAFETY WARNINGS

## WARNING

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

**Save all warnings and instructions for future reference.** The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

## WORK AREA SAFETY

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

## ELECTRICAL SAFETY

- **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** Use of a GFCI reduces the risk of electric shock.
- **Use this product only with batteries and chargers listed in tool/appliance/battery pack/charger correlation supplement 988000-302.**

## PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-

skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.
- **Do not wear loose clothing or jewelry.** Contain long hair. Loose clothes, jewelry, or long hair can be drawn into air vents.
- **Do not use on a ladder or unstable support.** Stable footing on a solid surface enables better control of the power tool in unexpected situations.

## POWER TOOL USE AND CARE

- **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

# GENERAL POWER TOOL SAFETY WARNINGS

---

- **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

## BATTERY TOOL USE AND CARE

- **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

- **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 265°F may cause explosion.
- **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

## SERVICE

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service provider.

# JIGSAW SAFETY WARNINGS

---

- **Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring.** Cutting accessory contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.
- **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body leaves it unstable and may lead to loss of control.
- **Know your power tool. Read operator’s manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this power tool.** Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Always wear eye protection with side shields marked to comply with ANSI Z87.1 when assembling parts, operating the tool, or performing maintenance.** Following this rule will reduce the risk of serious personal injury.
- **Protect your lungs. Wear a face or dust mask if the operation is dusty.** Following this rule will reduce the risk of serious personal injury.
- **Protect your hearing. Wear hearing protection during extended periods of operation.** Following this rule will reduce the risk of serious personal injury.
- **Battery tools do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery tool or when changing accessories.** Following this rule will reduce the risk of electric shock, fire, or serious personal injury.

- **Do not place battery tools or their batteries near fire or heat.** This will reduce the risk of explosion and possibly injury.
- **Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow.** A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- **Batteries can explode in the presence of a source of ignition, such as a pilot light.** To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- **Do not charge battery tool in a damp or wet location. Do not use, store, or charge battery packs or products in locations where the temperature is less than 50°F or more than 100°F.** Do not store outside or in vehicles.
- **Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.** Following this rule will reduce the risk of serious personal injury.
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also.

# SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

| SYMBOL                                                                            | SIGNAL          | MEANING                                                                                                                                                      |
|-----------------------------------------------------------------------------------|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>DANGER:</b>  | Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.                                                              |
|  | <b>WARNING:</b> | Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.                                                             |
|  | <b>CAUTION:</b> | Indicates a hazardous situation, that, if not avoided, may result in minor or moderate injury.                                                               |
|                                                                                   | <b>NOTICE:</b>  | (Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g. messages relating to property damage). |

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

| SYMBOL                                                                              | NAME                   | DESIGNATION/EXPLANATION                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Safety Alert           | Indicates a potential personal injury hazard.                                                                                                                                                                                                   |
|   | Read Operator's Manual | To reduce the risk of injury, user must read and understand operator's manual before using this product.                                                                                                                                        |
|  | Eye Protection         | Always wear eye protection with side shields marked to comply with ANSI Z87.1.                                                                                                                                                                  |
|  | Wet Conditions Alert   | Do not expose to rain or use in damp locations.                                                                                                                                                                                                 |
|  | No Hands Symbol        | Failure to keep your hands away from the blade will result in serious personal injury.                                                                                                                                                          |
|  | Recycle Symbol         | This product uses lithium-ion (Li-ion) batteries. Local, state, or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options. |
| V                                                                                   | Volts                  | Voltage                                                                                                                                                                                                                                         |
| min                                                                                 | Minutes                | Time                                                                                                                                                                                                                                            |
| ==                                                                                  | Direct Current         | Type or a characteristic of current                                                                                                                                                                                                             |
| $n_0$                                                                               | No Load Speed          | Rotational speed, at no load                                                                                                                                                                                                                    |
| .../min                                                                             | Per Minute             | Revolutions, strokes, surface speed, orbits etc., per minute                                                                                                                                                                                    |

# FEATURES

## PRODUCT SPECIFICATIONS

Strokes per minute ..... 0-3,500 s/min (SPM)      Cutting Angle.....0° to 45° (Left and Right)  
 Stroke Length..... 1 in.      Orbital Motion ..... 4 Settings

# ASSEMBLY

---



## WARNING:

Do not use this product if it is not completely assembled or if any parts appear to be missing or damaged. Use of a product that is not properly and completely assembled or with damaged or missing parts could result in serious personal injury.

---



## WARNING:

Do not attempt to modify this product or create attachments or accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

---

If any parts are damaged or missing, please call 1-866-539-1710 for assistance.

# OPERATION

---



## WARNING:

Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

---



## WARNING:

Always remove battery pack from the tool when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack will prevent accidental starting that could cause serious personal injury.

---



## WARNING:

Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.

---



## WARNING:

Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

---

## APPLICATIONS

You may use this tool for the purposes listed below:

- Cutting all types of wood and wood products, thin sheet metal, plastics, and laminates

## OVERLOAD PROTECTION

When the tool is forced or overloaded, the Li-ion battery pack will automatically shut off the tool. To reset the tool, release the trigger and resume operation. If the tool still does not resume operation, remove and reinsert the battery. Do not force the tool.

## HIGH TEMPERATURE PROTECTION

Li-ion battery packs are equipped with a high temperature protection feature that automatically deactivates the tool when it is overheated. To resume operation, allow the battery to cool and then squeeze the trigger.

## RECOMMENDED BATTERY PACKS

OCTANE™ tools are compatible with all RIDGID® 18 Volt battery packs, but tool performance is maximized with HYPER OCTANE™ battery packs.

If you experience frequent shutoffs due to overload protection, try using a HYPER OCTANE™ battery pack.

## INSTALLING/REMOVING BATTERY PACK

See Figure 1, page 10.

### To install:

- Align raised ribs on battery pack with the grooves inside the saw.
- Make sure the latches on each side of the battery pack snap in place and battery pack is secured before beginning operation.

### To remove:

- Depress the latches on each side of the battery pack.

## VARIABLE SPEED SWITCH TRIGGER

See Figure 2, page 10.

The variable speed switch trigger delivers higher speed with increased trigger pressure and lower speed with decreased trigger pressure.

To turn the tool ON, depress the switch trigger. To turn it OFF, release the switch trigger and allow the blade to come to a complete stop.

# OPERATION

## LOCK-ON BUTTON

See Figure 2, page 10.

The saw is equipped with a lock-on feature which is convenient when continuous cutting for extended periods of time is required.

### To lock-on:

- Squeeze the switch trigger fully and hold in place.
- Push in and hold the lock-on button located on the side of the handle.
- Release switch trigger.
- Release lock-on button.

### To release:

- Squeeze and release the switch trigger.

If the battery pack is removed while the motor is running and the lock-on feature is engaged, the saw will not resume operation until the battery pack is replaced and the lock-on feature is disengaged.

## VARIABLE SPEED DIAL

See Figure 3, page 10.

The variable speed dial, located on the top of the tool, allows the saw to operate at different maximum speeds. The maximum speed can be adjusted before or during operation. To change the maximum speed during operation, hold the saw in a normal operating position, fully depress the switch trigger, and rotate the dial forward or backwards. To change the maximum speed prior to operation, rotate the dial forward or backwards, and then depress the switch trigger to operate the saw between 0 SPM and the preset maximum.

### SETTING OPERATION

|            |                                                                                                                                                                                                                   |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Line-Start | <b>Switch trigger must be fully depressed to activate Line-Start Mode.</b> Saw runs at reduced speeds until blade engages workpiece. The saw speed will increase automatically to provide the most efficient cut. |
| 1-2        | Slow speeds are ideal when minimum speed and power is required, for example, starting cuts.                                                                                                                       |
| 3-4        | Medium speeds are suitable for cutting hard metals, plastics, and laminates.                                                                                                                                      |
| 5          | Maximum speeds produce best results when maximum power is required, for example, cutting wood. Soft metals such as aluminum, brass, and copper may also require high speeds.                                      |
| OFF        | Setting the variable speed dial in the OFF position will make the saw inoperable to help reduce the possibility of accidental starting when not in use.                                                           |

**NOTE:** The LED grip light switch can still be used to turn the LED on. LED will turn off automatically after 10 seconds.

Avoid running the saw at low speeds for extended periods of time. Running at low speeds under constant usage may cause your saw to become overheated. If this occurs, cool your saw by running it without a load and at full speed.

## INSTALLING/REMOVING BLADES

See Figure 4, page 11.

The tool-free blade clamp does not require the use of a blade wrench when installing or removing the blade.

**NOTE:** The jigsaw is designed to use T-shank and U-shank blades only.

### To install blades:

- Remove the battery pack.
- Rotate the blade clamp lever away from the orbital adjustment knob and hold in place.
- Insert the saw blade as far as possible into the slot in the saw bar. Some resistance may be felt in doing this.
- Check to make sure the back of the saw blade is centered in the groove of the blade-support roller.
- Release the blade clamp lever. Make sure the blade is securely in place.
- Reinstall the battery pack.

**NOTE:** Check that the blade is inserted fully and completely secured. Blade will lock into position when correctly installed.

**Do not use the tool if the blade is not installed correctly.**

### To remove blades:

- Remove the battery pack.
- Allow blade to cool.
- Rotate the blade clamp lever away from the orbital adjustment knob and hold in place.
- Remove the saw blade.
- Reinstall the battery pack.

## LED GRIP LIGHT

See Figures 5 - 6, page 11.

The LED light switch is located on the handle of the tool.

The LED light illuminates when the switch trigger or grip light switch is depressed to give you a clear view of the cut line on your work surface.

If the tool is not in use, the time-out feature will cause the light to start fading and then shut off.

The LED light illuminates only when there is a charged battery pack in the tool.

## BLOWER PORT

See Figure 7, page 11.

The blower port directs debris away from the cut line to improve line of sight.

# OPERATION

## GENERAL CUTTING

See Figure 7, page 11.

Rest the front of the saw base on the workpiece and align cutting edge of the blade with the line on the workpiece. Start the saw and move it forward on the work surface. Apply downward pressure to keep the saw steady and only enough forward pressure to keep the blade cutting.

### NOTICE:

Do not force the saw. Forcing the saw may overheat the motor and break saw blades. Use clamps or another practical way to secure and support the workpiece to a stable platform.

## ORBITAL MOTION

See Figure 8, page 11.

The blade of the saw cuts in an orbital motion. This feature is adjustable and provides faster, more efficient cutting. With orbital motion the blade cuts through the work on the upstroke but does not drag across the work on the downstroke. To adjust the orbital motion, rotate the orbital adjustment knob to the desired setting. Refer to the chart below to find the right setting for your application.

**NOTE:** Setting the orbital position to a lower setting will result in a smoother finish but slower cut. A higher setting will result in a rougher finish but faster cut.

## STRAIGHT CUTTING

See Figure 9, page 11.

A straight cut can be made by clamping a piece of wood or straightedge to the workpiece and guiding the edge of the saw base against it. Make the cut from one direction only. Don't cut halfway and complete the cut from the opposite end.

## SCROLL CUTTING

See Figure 10, page 11.

Scroll cuts can be made with the jigsaw by guiding the direction of the cut with applied pressure on the handle.

**NOTE:** Tighter tolerance scroll cutting may require the use of a scroll cutting blade (not included).



### WARNING:

Excessive side pressure to the blade could result in broken blades or damage to the material being cut.

## ANGLE CUTTING (BEVEL CUTTING)

See Figures 11 - 12, page 12.

With the tool-free base adjustment, you can make quick changes to the bevel setting. The base can be angled 45° left or right for bevel cutting, with positive stops at 0° and 45° (left or right). A protractor is recommended when accurate cuts are required.

- Remove the battery pack.
- Rotate the base adjustment lever forward to loosen the base.
- Slide the base forward. Rotate base left or right until the bevel scale indicator is positioned at the desired bevel angle. If the selected angle is 0° or 45°, interface the tab on the base support with the appropriate notch on the base.

**NOTE:** When making a setup for accurate cuts with a protractor, or for angles other than 0° or 45° (left or right), the positive stop notches on the rear of the base are not used.

- Slide the base back (toward the rear of the tool) until the tab of the base support contacts the base or fits within a notch on the base.
- Push the base adjustment lever firmly back into place. Make sure that the base is properly set before starting the jigsaw.
- Reinstall the battery pack.

| Orbital Setting | Material Type                     | Suggested Blade Type | TPI (Teeth per inch)      | Speed Setting               | Orbital Action |
|-----------------|-----------------------------------|----------------------|---------------------------|-----------------------------|----------------|
| 0               | Counter Top, Laminate Board       | Wood Cutting Blade   | 10-12 (Down Stroke Blade) | Position 5 or Line-Start    | No Orbit       |
|                 | Thin Sheet Metal                  | Metal Cutting Blade  | 14-24                     | Positions 1-4 or Line-Start | No Orbit       |
| 1               | Plastics and PVC                  | Wood Cutting Blade   | 10-12                     | Positions 3-4 or Line-Start | Minimal Orbit  |
|                 | Scrolling or Curving Cuts in Wood | Scrolling Wood Blade | 10-12                     | Position 5 or Line-Start    | Minimal Orbit  |
| 2               | Plywood, Decking and Hardwood     | Wood Cutting Blade   | 6-12                      | Positions 3-5 or Line-Start | Medium Orbit   |
| 3               | General Lumber and Soft Wood      | Wood Cutting Blade   | 6-10                      | Positions 3-5 or Line-Start | Maximum Orbit  |

# OPERATION

## PLUNGE CUTTING

See Figures 13 - 15, page 12.

Depending on the thickness of the material being cut, you may need to drill a pilot hole before making plunge cuts.

### **WARNING:**

To avoid loss of control, broken blades, or damage to the material being cut, always use extreme caution when making plunge cuts. We do not recommend plunge cutting on materials other than wood.

#### **To make plunge cuts using pilot holes:**

- Mark the line of cut clearly on the workpiece.
- Drill a pilot hole inside the area marked by the line of cut. The pilot hole should be large enough to slide the blade through the material.
- Slowly lower the blade through the pilot hole in the workpiece until the base contacts the workpiece. Fully squeeze the switch trigger to start the saw.
- Do not move the base forward until the blade is entirely through the workpiece and the base is in complete contact with the workpiece.
- Move the saw forward to complete the opening.

#### **To make plunge cuts without using pilot holes:**

- Mark the line of cut clearly on the workpiece.
- Tilt the jigsaw forward so that it rests on the front edge of the base and blade will not come in contact with the workpiece when the tool is turned on.
- Make sure the blade is aligned with the area to be cut.
- Fully squeeze the switch trigger and slowly lower the blade into the workpiece until the blade cuts through the workpiece.

- Continue lowering the blade into the workpiece until the base rests flat on the work surface, then move the jigsaw forward to complete the opening.
- Use only the 7 teeth per inch blade for this type of cut.

## METAL CUTTING

See Figure 16, page 12.

**NOTE:** The jigsaw must be in the no-orbit mode to cut metals and conduit. Set the orbital adjustment knob to “0.” Refer to the **Orbital Motion** section earlier in this manual for more details.

Many kinds of metals can be cut with the saw using a metal cutting blade. Be careful not to twist or bend the blades. **Do not force.** If the blade chatters or vibrates excessively, use a finer-tooth metal-cutting blade. If blade heats excessively, use lower speed. If blade teeth become filled or clogged when cutting soft metals, such as aluminum, use a coarser-tooth blade or lower speed. We recommend use of lubricant when cutting metals to keep blades cool, increase cutting action, and prolong blade life. Clamp the work firmly and saw close to the clamping point to eliminate any vibration of the work being cut.

When cutting conduit, pipe, or angle iron, clamp work in a vise if possible and saw close to the vise. To cut thin sheet materials, “sandwich” the material between hardboard or plywood and clamp the layers to eliminate vibration and material tearing. By doing this, the material will be cut smoothly. Lay out your pattern or line of cut on top of the “sandwich.”

**NOTE:** When cutting metal, keep exposed portion of saw bar clean and free of metal chips by wiping frequently with an oily cloth. Use extreme caution in disposing of oily cloth after completion of job to prevent potential fire hazard.

**NOTE: Maintenance information begins on page 9 after French and Spanish language sections. Illustrations start on page 10.**

**This product has a 90-Day Satisfaction Guarantee Policy, as well as a Three-year Limited Warranty. For Warranty and Policy details, please go to [www.RIDGID.com](http://www.RIDGID.com) or call (toll free) 1-866-539-1710.**

# MAINTENANCE

---



---


**WARNING:**

When servicing, use only identical replacement parts. Use of any other parts could create a hazard or cause product damage.

---


**GENERAL MAINTENANCE**

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

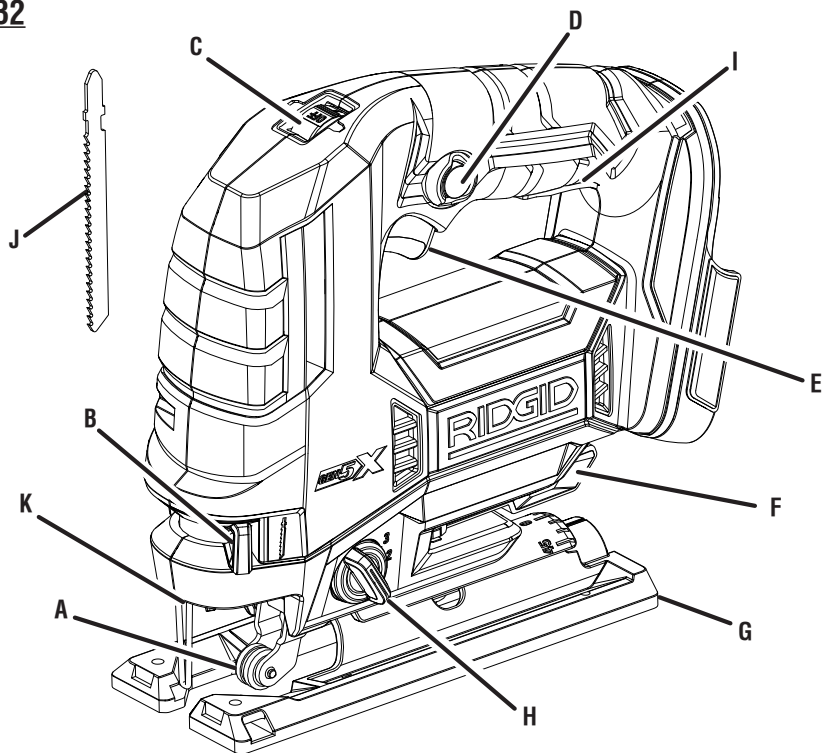


- A - Blade-support roller
- B - Blade clamp lever
- C - Variable speed dial
- D - Lock-on button
- E - Variable speed switch trigger
- F - Base adjustment lever
- H - Orbital adjustment knob
- I - LED grip light switch
- J - T-shank saw blade
- K - LED light

**Fig. 1**

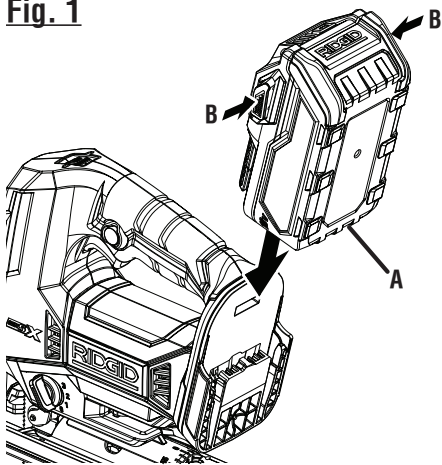


- A - Battery pack
- B - Depress latches to release battery pack

**Fig. 2**

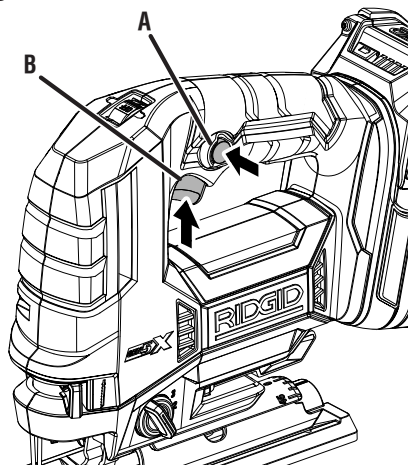


- A - Lock-on button
- B - Variable speed switch trigger

**Fig. 3**

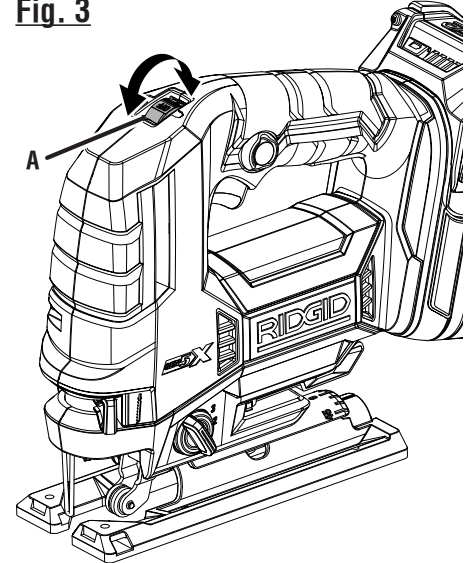


- A - Variable speed dial

**Fig. 4**

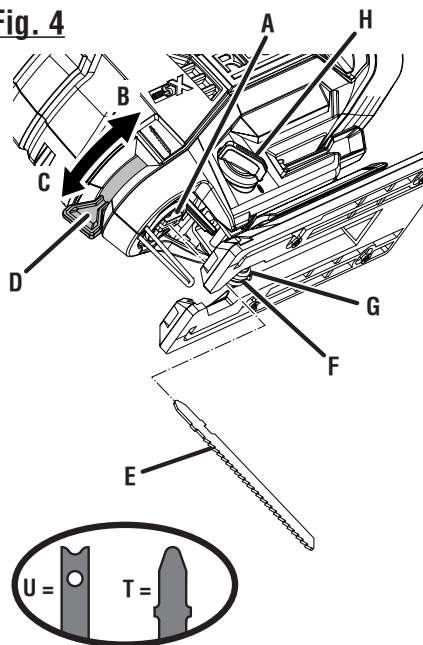


- A - Saw bar
- B - To lock
- C - To release
- D - Blade clamp lever
- E - Saw blade
- F - Groove
- G - Blade support roller
- H - Orbital adjustment knob

**Fig. 5**

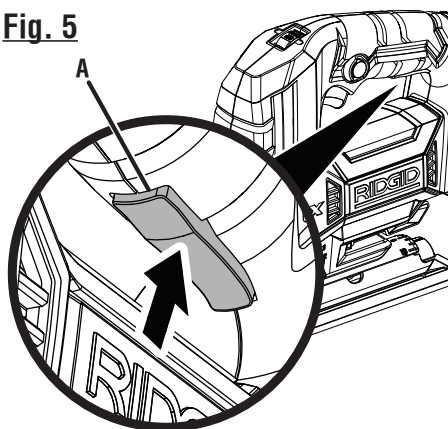


- A - LED grip light switch

**Fig. 6**

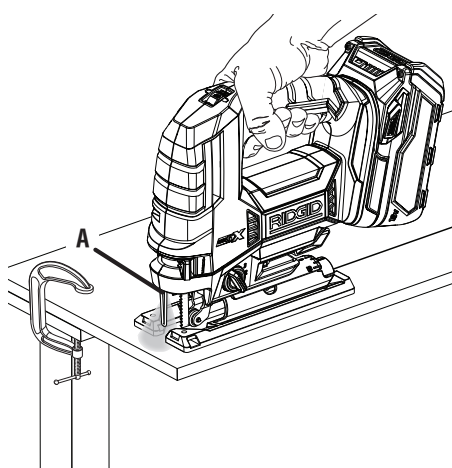


- A - LED light (lampe à DEL, diodo luminiscente)

**Fig. 7**

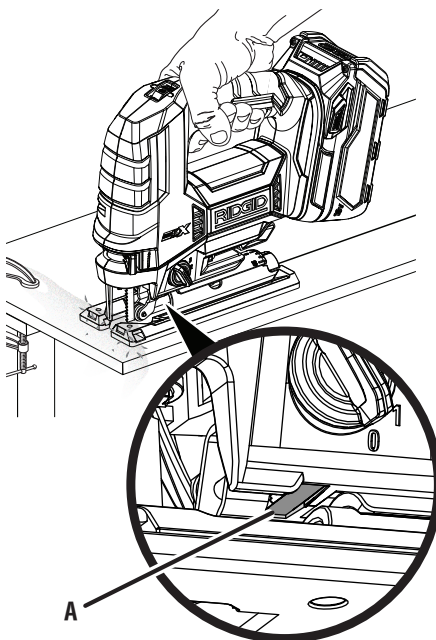


- A - Blower port

**Fig. 8**

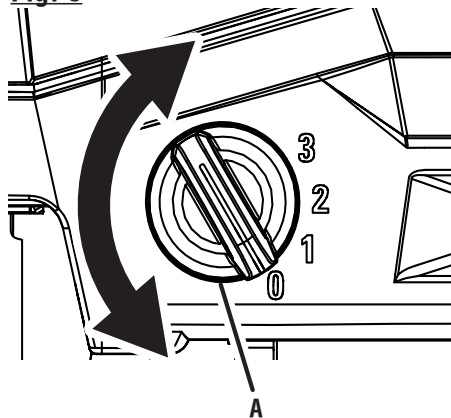


- A - Orbital adjustment knob


**Fig. 9**

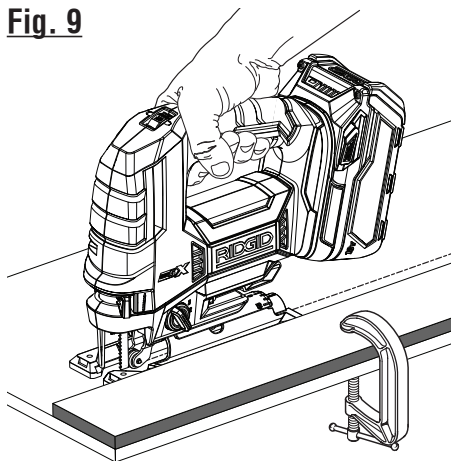

**Fig. 10**

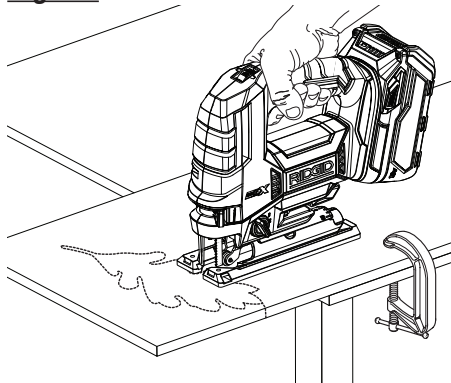


**Fig. 11**

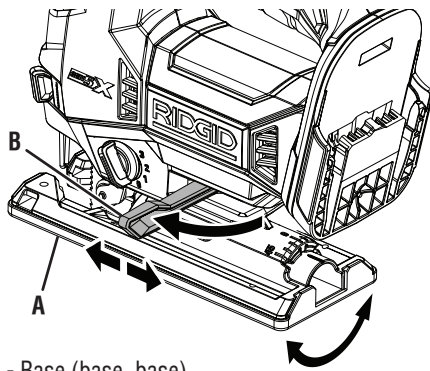


A - Base (base, base)  
B - Base adjustment lever

**Fig. 12**

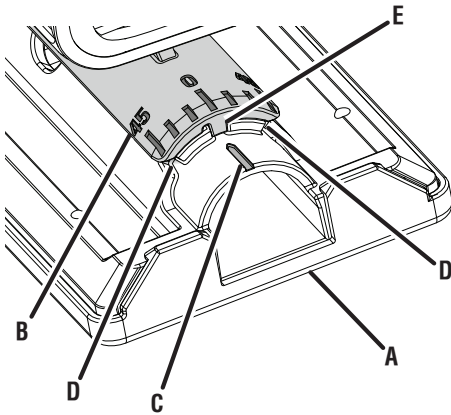


A - Base  
B - Scale  
C - Bevel scale indicator  
D - 45° positive stop  
E - Tab (inside 0° positive stop)

**Fig. 13**

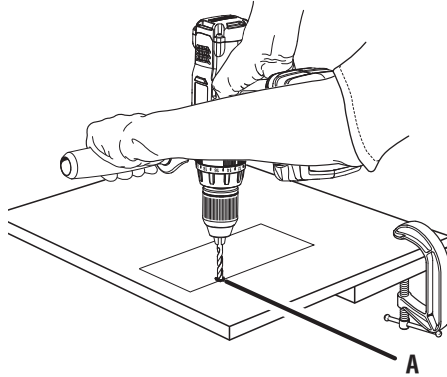


A - Pilot hole

**Fig. 14**

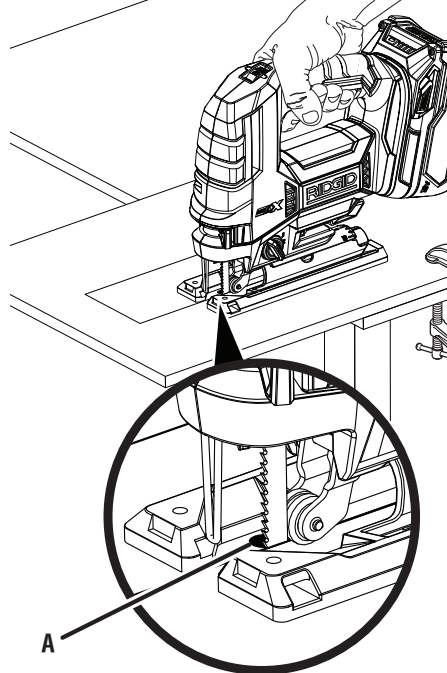


A - Pilot hole

**Fig. 15**

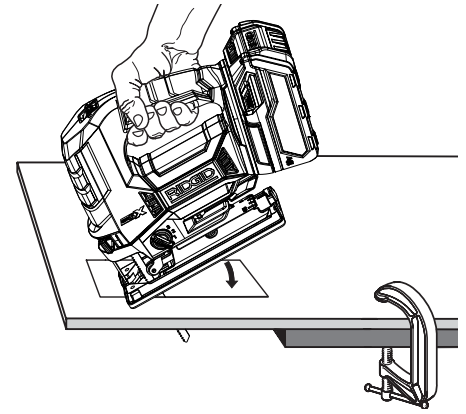


**Fig. 16**

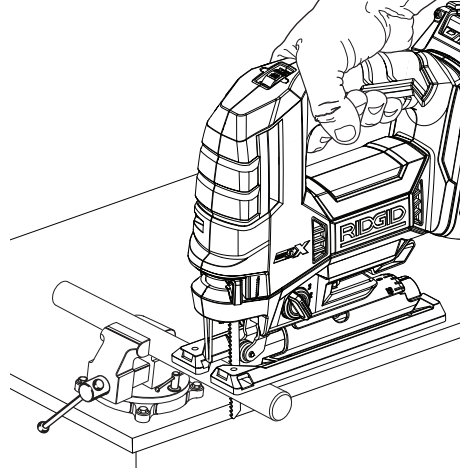

# OPERATOR'S MANUAL

## 18 V JIGSAW

### R8832

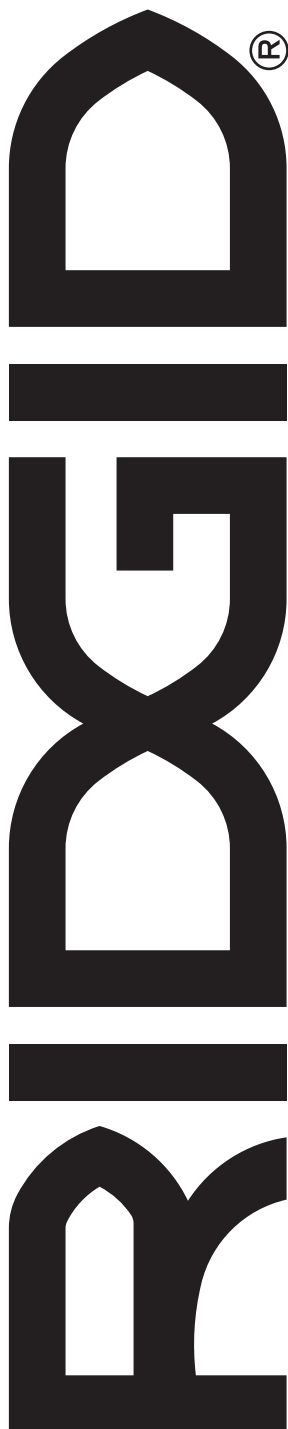

#### Customer Service Information:

For parts or service, do not return this product to the store. Contact your nearest RIDGID® authorized service center. Be sure to provide all relevant information when you call or visit. For the location of the authorized service center nearest you, please call 1-866-539-1710 or visit us online at [www.RIDGID.com](http://www.RIDGID.com).

MODEL NO. \_\_\_\_\_ SERIAL NO. \_\_\_\_\_

\_\_\_\_\_

#### ONE WORLD TECHNOLOGIES, INC.

P.O. Box 1427  
Anderson, SC 29622  
1-866-539-1710 ■ [www.RIDGID.com](http://www.RIDGID.com)

*RIDGID is a registered trademark of RIDGID, Inc., used under license.*