4.3 APPENDIX B: ATC DATA ARCHIVING ON EXTERNAL USB DEVICE PROCEDURE

<table>
<tr><td colspan="2">/Equipment: TOPSKY ATC SYSTEM</td><td colspan="2">ADM 7.30</td></tr>
<tr><td colspan="2"></td><td>Rev C</td><td>Page 20/38</td></tr>
<tr><td colspan="4">Subject: ARCHIVE/SCRATCHPAD ATC DATA ON EXTERNAL USB DEVICE</td></tr>
<tr><td colspan="4">Associated maintenance procedure: NA</td></tr>
<tr><td colspan="2">TOOLS REQUIRED:
1 – Standard
USB key with EXT2 format

2 – Spécifique
NA</td><td colspan="2">TEST EQUIPMENT REQUIRED:
1 – Standard
NA

2 – Spécifique
NA</td></tr>
<tr><td colspan="4">SPARE / CONSOMMABLE:
NA</td></tr>
<tr><td colspan="4">DOCUMENTATION:
NA</td></tr>
<tr><td colspan="4">ESTIMATED TIME: 30 MIN</td></tr>
<tr><td colspan="4">PRELIMINARY STEP:</td></tr>
</table>

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

PART A: USB MEDIA PREPARATION

1. On DBM position, log in as “system”:

2. Insert USB key and identify the name of the disk:

```
maerdbm01li:run> dmesg
usb 1-3: new high speed USB device using address 2
Initializing USB Mass Storage driver...
scsi3 : SCSI emulation for USB Mass Storage devices
  Vendor: Generic   Model: Flash Disk        Rev: 8.07
  Type:   Direct-Access                      ANSI SCSI revision: 02
SCSI device sdb: 7884800 512-byte hdwr sectors (4037 MB)
sdb: Write Protect is off
sdb: Mode Sense: 23 00 00 00
sdb: assuming drive cache: write through
SCSI device sdb: 7884800 512-byte hdwr sectors (4037 MB)
sdb: Write Protect is off
sdb: Mode Sense: 23 00 00 00
sdb: assuming drive cache: write through
 sdb: sdb1
```

3. Create a partition on the disk using following command:

```
maerdbm01li:run> fdisk   /dev/sd<x>
```

4. Delete old partition if any :

```
command (m for help) :  d
```

5. Check the disk :

```
command (m for help) :  p
```

6. Create new primary partition:

```
command (m for help) :  n
  e extended
  p primary
           p
partition number (1-4) :  1
first cylinder (default 1) : [ENTER]
Last cylinder :      [ENTER]
```

7. Save and exit :

```
command (m for help) :  w
```

8. Format the USB key :

```
maerdbm01li:run> mkfs.ext2   /dev/sdb1
```

9. The disk is ready for recording.

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

PART B: ARCHIVE ATC DATA ON EXTERNAL USB DEVICE

1. Check from technical supervision, the node REC "**MASTER**".
2. Connect remotely on the REC node

```
3. maerdbm01lis: system > rsh maerrec1a(b)li
```


4. from REC node, display "**ECM**" window of Enroute partition.

```
maerrec1a(b)li:root> start_ecm
```

5. Click on "***Recording tool***".
6. The window "REC Utilities" is diplayed.
   - Click on "**Select the REC node**" and choose the REC '**MASTER'**.



7. The window "**TOOLS**" is displayed,

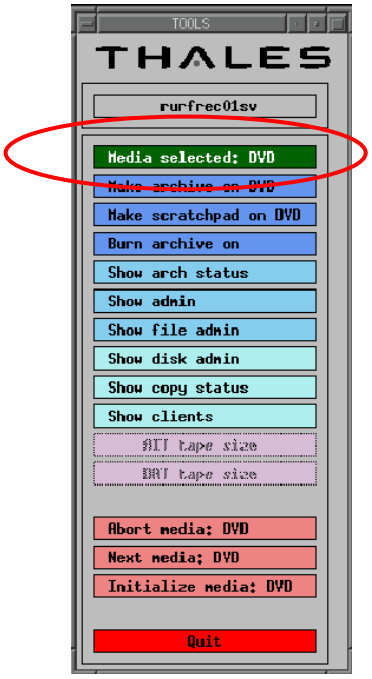


   - Left click on "**Media selected: DVD**" and maintain to change "**Media selected: DVD**" by "**Media selected: DISK**".

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.


8. The information “**Make archive on DISK**” and “**Make scratchpad on DISK**” are displayed

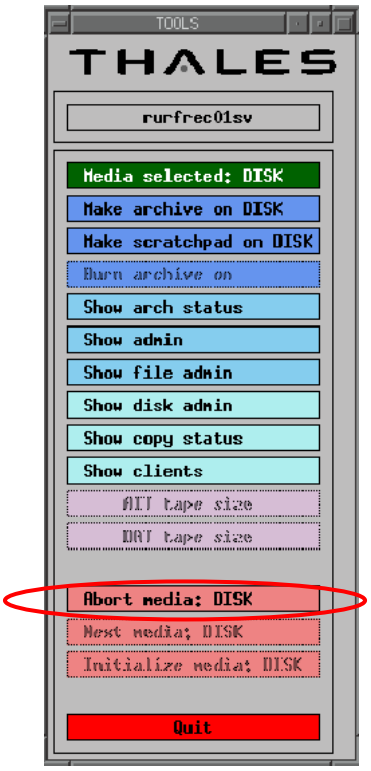

- Left click on “**Abort media : DISK**” and select “**ARCHIVE**”. Then, left click again on “**Abort media : DISK**” and select “**SCRATCHPAD**”.

9. Left click on “**Make archive on DISK**”,

10. The following window is displayed:

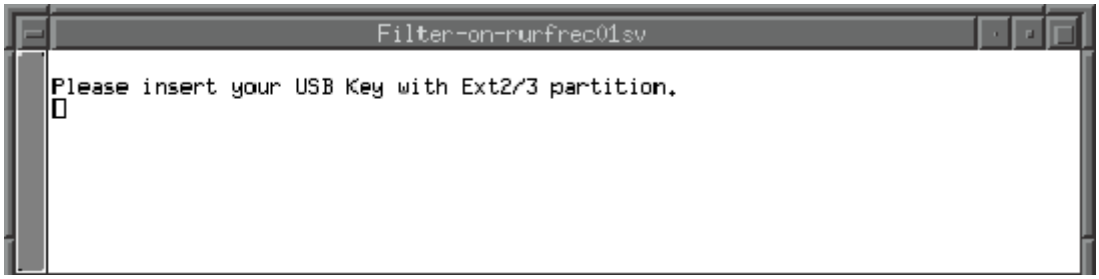


- Insert the USB disk on the REC “**MASTER**” node to start archiving.


NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

11. Left click on "**Show admin**" to monitor archiving status

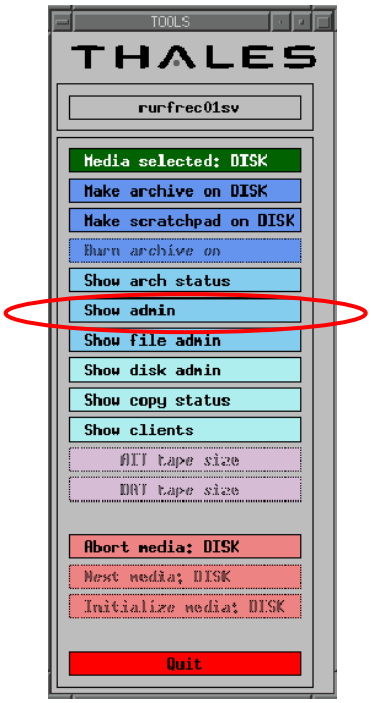


12. The following window is displayed :

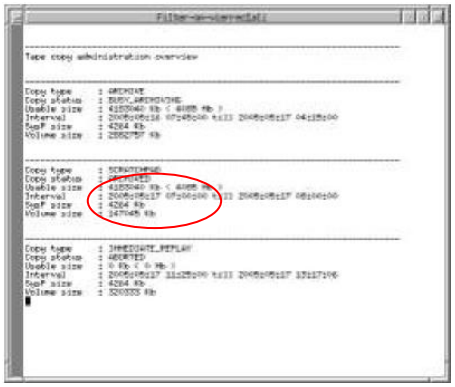

'**copy status'** is '**busy archiving'**.

13. At the end of archiving, the status '**copy status'** is "***archived***"

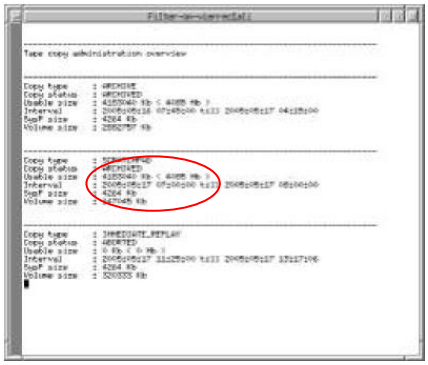

- At the end of archiving, remove USB disk from the REC node.

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

PART C: SCRATCHPAD ATC DATA ON USB EXTERNAL DEVICE

1. Check from technical supervision, the node REC "**MASTER**".
2. Connect remotely on the REC node

```
3. maerdbm01lis: system > rsh maerrec1a(b)li
```


4. from REC node, display "**ECM**" window of Enroute partition.

```
maerrec1a(b)li:root> start_ecm
```

5. Click on "***Recording tool***".
6. The window "REC Utilities" is displayed.
   - Click on "**Select the REC node**" and choose the REC '**MASTER'**.



7. The window "**TOOLS**" is displayed,

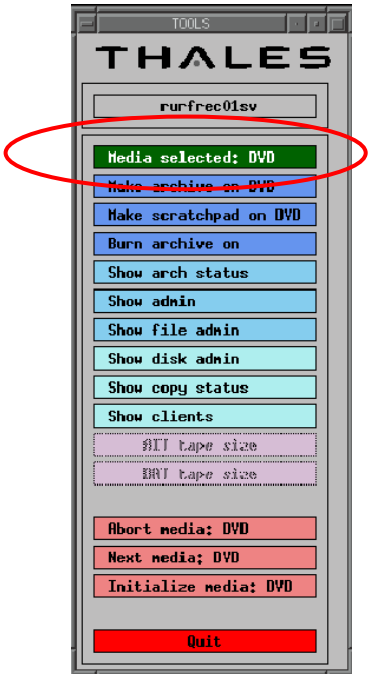


   - Left click on "**Media selected: DVD**" and maintain to change "**Media selected: DVD**" by "**Media selected: DISK**".

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.


8. The information “**Make archive on DISK**” and “**Make scratchpad on DISK**” are displayed

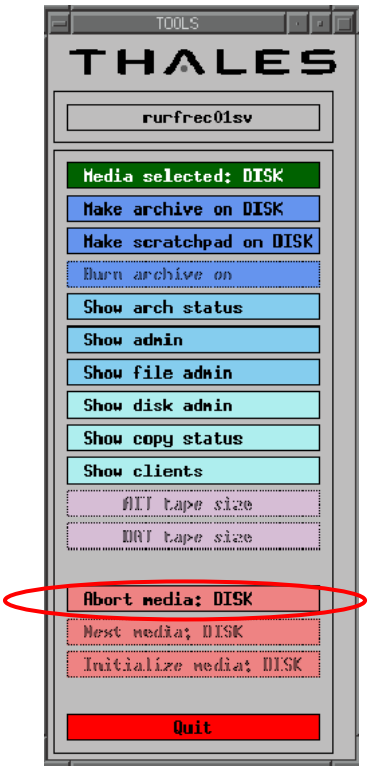

- Left click on “**Abort media : DISK**” and select “**ARCHIVE**”. Then, letf click again on “**Abort media : DISK**” and select “**SCRATCHPAD**”.

9. Left click on “**Make scratchpad on DISK**”,

10. The window “**Select Date/time**” is displayed.

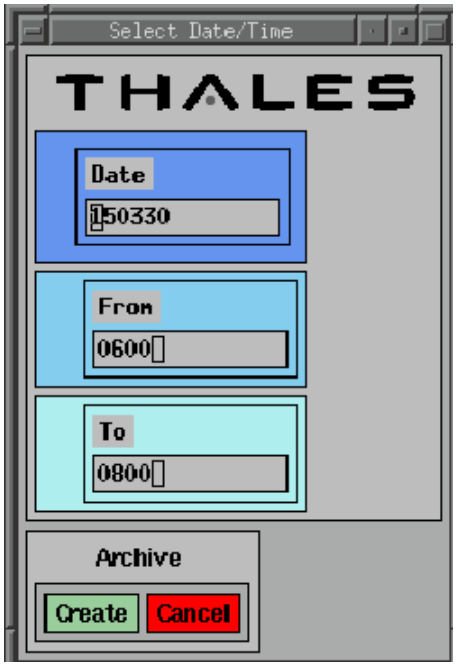


- Enter date (**YYMMDD**) and time (**HHMM**).
- Left click on “**Create**” to start archiving.

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

14. The following window is displayed:

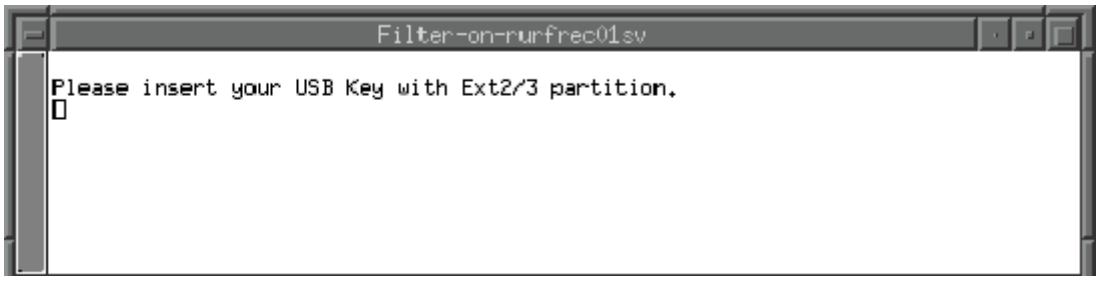


- Insert the USB disk on the REC “**MASTER**” node to start archiving.


NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

15. Letf click on “**Show admin**” to monitor archiving status

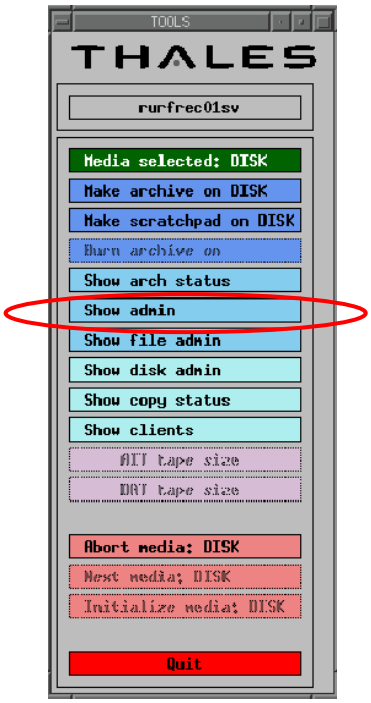


16. The following window is displayed :

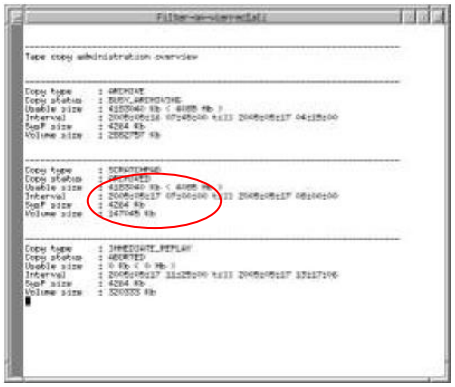

‘**copy status’** is ‘**busy archiving’**.

17. At the end of archiving, the status ‘**copy status’** is “***archived***”

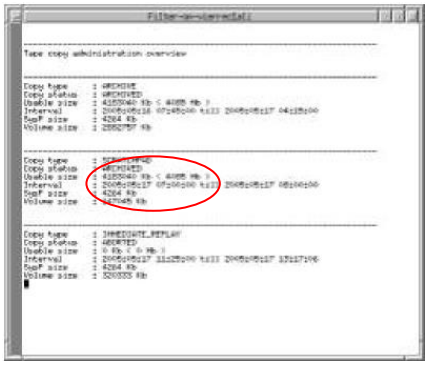

- At the end of archiving, remove USB disk from the REC node.

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

4.4 APPENDIX C: START A NODE IN REPLAY MODE PROCEDURE

<table>
<tr><td colspan="2" rowspan="2">/Equipment: TOPSKY ATC SYSTEM</td><td colspan="2">ADM 7.59</td></tr>
<tr><td>Rev D</td><td>Page 29/38</td></tr>
<tr><td colspan="4">Sujet: START A NODE IN REPLAY MODE</td></tr>
<tr><td colspan="4">Associated maintenance procedure: NA</td></tr>
<tr><td colspan="2">TOOLS REQUIRED:
1 – Standard
USB key with ATC data

2 – Specific
NA</td><td colspan="2">TEST EQUIPMENT REQUIRED:
1 – Standard
NA

2 – Specific
NA</td></tr>
<tr><td colspan="4">SPARE / CONSOMMABLE:
NA</td></tr>
<tr><td colspan="4">DOCUMENTATION:
NA</td></tr>
<tr><td colspan="4">ESTIMATED TIME: 30 MIN</td></tr>
<tr><td colspan="4">PRELIMINARY STEP:
The operational supersor shall free a position for replay.</td></tr>
</table>

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

PART A: REPLAY PREPARATION

Warning!

Is not possible to replay when REC nodes are synchronising.

1. From DBM position, connect remotely on OPS position

```
maerdbm01lis:run> rsh maerops01li
```


2. From OPS position, start "**ECM**" tools.

```
maerops01lis:run> ecm
```

3. Left click on "***Recording tool***".
4. The "REC Utilities" window is displayed.
   - Left click on REC '**MASTER'** node.




5. The "**TOOLS**" window is displayed,
6. Left click on "**Show admin**"

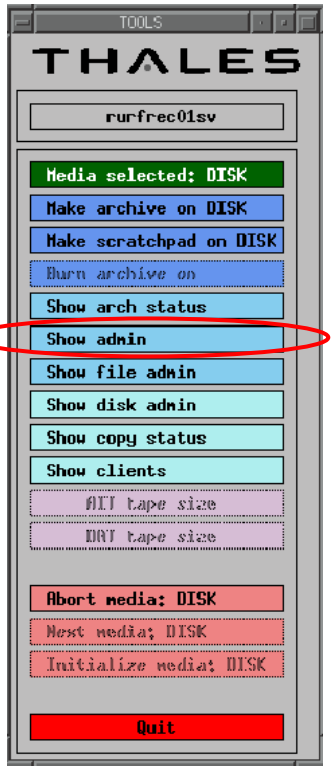

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.


7. The following window is displayed:

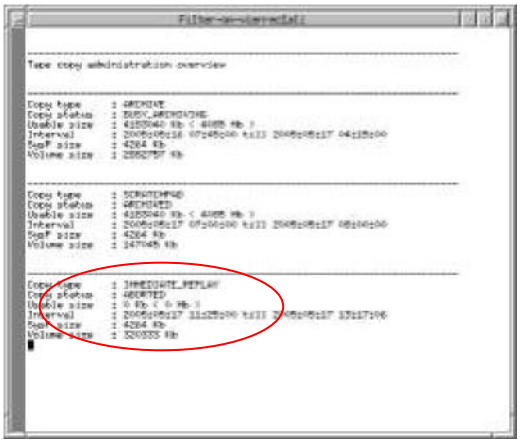

8. Check the status of the field **IMMEDIATE REPLAY** :

- If status is **FAILED**, it is not possible to replay.
- In this case, stop and start REC master node.
- After restarting, make sure the status is ***NOT_USED***,

9. Left click on “**Abort media: DISK**” and select “**ARCHIVE**”. Then, left click again on “**Abort media: DISK**” and select “**SCRATCHPAD**”.

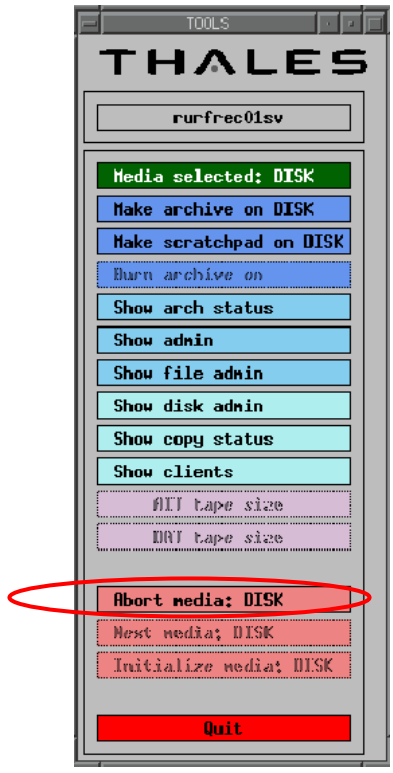

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

PART B: PROCEDURE TO FREE REPLAY POSITION

From operational supervisor window (OPS):

1. In the menu bar, at the bottom right of the screen, left click the button « **SUP ON** ».
2. Log in as "supervisor" user:

```
Login: OPSUP
Password: ******
```

3. In the menu bar at the bottom of the screen, click the button « **Info** ».
4. The window « **INFORMATION DIALOGUE WINDOW** » is displayed. Left click on « **SECT** ».
5. The window « **CONFIGURATION** » is displayed. In this window, assign (sectorize) the sectors from the position that will be used for the REPLAY to another position.



Attention !

The position selected for replay must be « free ».

6. Left click on the buttons « **STORE** » and « **OPS** » to apply new sectorization.
7. Check that the position selected for the replay is set to « **FREE** » mode.
8. In the menu bar, at the top of the screen, click on the “user” button “**FREE**”.
9. A sub-window is displayed with only two possible choice « **Shadow** » or « **Replay** »
   - Click on « **Replay** » to select this function.
10. The « **PLAYBACK PREPARATION** » window is displayed. Enter the following data:
    - The name of the position to replay such as **CWPxx**.
    - The selected period of time (date and time) to replay (**DDMMYY HHMM**).
    - The media used for the **REPLAY** (internal HD or external USB HD).
    - The audio track Number (if any).
11. Click on « **ENTER** » button to confirm your selection:
    - The « **FONCTION IN PROGRESS** » window is displayed as the system checks the data availability.
12. After a few seconds, the node restart automatically and the « **PLAYBACK CONTROL** » window is displayed.
    - According to your needs, select the corresponding replay speed (x1 à x10) and mode « **PASSIVE** » or « **INTERACTIVE** ».:
13. Click on « **CONTINUE** » to valid your selection.
    - . The RECORDED Air Situation is then displayed on the controller position.

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

PART C: PROCEDURE TO START REPLAY FROM USB EXTERNAL DEVICE

Warning!

REPLAY shall be initialized from the node hosted the CSCI REP (OPS for Mauritius)


1. From DBM connect remotely on OPS position.

```
maerdbm01lis:run> rsh maerops01li
```

2. From OPS position, run "**ECM**" tool of **Enroute** partition.


```
maerops01lis:run> ecm
```

3. The **ECM** window is displayed.

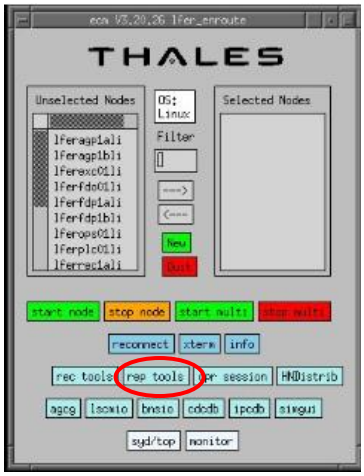

- Left click on "**rep tools**".

4. The following window is displayed:

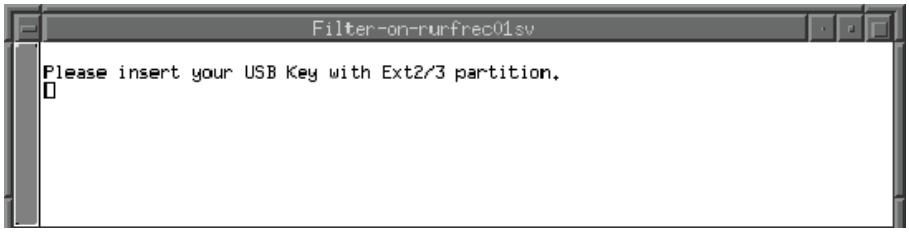

- Insert external USB disk on the OPS position
- Wait until the device is detected.


5. The "**REP Utilities**" window is displayed.

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION


This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.



- Left click on "**Choose DVD**" and in the list displayed, select the desired period to be replayed

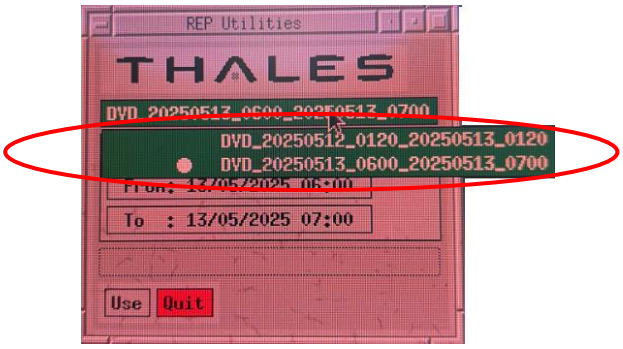

6. The "**REP Utilities**" window is filled with the selected "**DVD recording data**:"

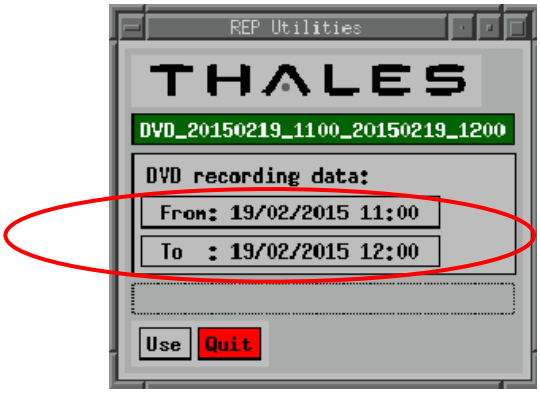

- Left click on "**Use**" before starting replay.

7. The message « **Click here only at REPLAY end** » appears in **red** :

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.



- Continue with replay on operational position following "**PART B"** of this procedure.
- At the end of replay, A la fin du replay sur l'OPSUP, exécuter la partie "**PART D"** de cette procédure.

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

PART D: PROCEDURE TO STOP A REPLAY SEQUENCE

Warning !

Never stop a replay session clicking on « STOP NODE » from the RCMS.

From the position in REPLAY mode:

1. Press simultaneously the « **Shift** » + « **REPLAY** » keys.
   - The « **PLAYBACK CONTROL** » window is displayed back :
   - Click on « **STOP** ».
2. The « **PLAYBACK PREPARATION** » window is displayed back:
   - Click on the «✱» « star » button on the top right corner.
3. The **LIVE** air situation is displayed again after a few minutes.

From the position in REP node (OPS):

4. When the replay session is ended, click on the "**Quit**" red button to free the disk and possibly select another "**DVD like**" storage date and time or end the replay.



- The external USB media can be removed from the **REP** computer.

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

Page intentionally left blank

NOT EXPORT CONTROLLED THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.