

EL MONTE RV®



GUEST GUIDE

CLASS C



Welcome to El Monte RV...

It is our pleasure to welcome you to El Monte RV. Founded in 1970, El Monte RV has grown to become one of the largest, most trusted rental RV companies in the world. Customers love us for our attention to detail, and commitment to offering reliable, high-quality, late-model RVs at affordable prices. We are delighted to bring you our industry leading customer service, dedicated to ensuring that you and every guest are treated like family.

El Monte RV is a proud member of the thl global family of RV brands delivering the most exciting way to experience the fun and freedom of the open road. Whether you're looking for off-the-beaten-path once-in-a-lifetime discoveries, the thrill of camping at your favorite festival or event, or simply a relaxed getaway, we're here to ensure that your experience is a memorable one. Once you've explored the U.S. at your own pace, we invite you to seek out more adventure with one of our thl sister brands in Australia, New Zealand, Canada, or the UK & Ireland.

At El Monte RV we Travel with Heart. We believe in doing our part to maintain the beauty of the places we visit, that's why we work hard to lessen our impact on the environment, by closely managing and appropriately reducing our energy, emissions, and water usage whenever possible. In addition, we've reduced our reliance on single-use plastics and have introduced recycling programs in our branches. We encourage our guests to follow our mission and invite you to learn more by turning to page 11 for tips for a safe trip.

We provide this detailed Guest Guide to help answer common questions while you're on the road. It's a first point of reference that covers many frequently asked questions. If you find yourself with a question that's not answered within the Guest Guide, our On Road Care team is simply a phone call away and available to help walk you through whatever else you may need assistance with.

On behalf of the entire El Monte RV crew, we wish you an incredible RV vacation full of adventure and memories that will last a lifetime.

Safe Travels,



Kate Meldrum
Chief Operating Officer,
North America



Grant Webster
CEO and Managing Director
thl



We are happy to provide you with this Guest Guide to help answer any questions you may have on the open road. Regardless of whether you are looking for helpful tips, system information or just answers to commonly asked questions – most of the answers are in this guide!

If, after referring to this guide you require additional assistance, please contact El Monte RV's On Road Care Team. Please refer to the key tag for contact information.

**Enjoy the fun and freedom
of the open road!**

TRAVEL WITH HEART	4
FREQUENTLY ASKED QUESTIONS	5
KNOW BEFORE YOU GO	7

This section contains an essential checklist for your safety and comfort. Before leaving the El Monte station, please review and check to make sure you are aware of these important items.

DRIVING & MANEUVERING THE RV	10
---	-----------

Tips for a safe trip	11
Maintaining the RV when travelling	12
Vehicle symbol glossary	14
Lights & chimes	15

PARKING, CAMPING & ENJOYING THE RV	16
---	-----------

Arriving at the campsite	17
Electrical hook up	17
Fresh water tank fill	18
Campsite/city water hook up	18
Waste tank hook up	18
Making dinette into bed	19
Television	19
Awning	19
Campsite etiquette	20
Preparing to depart the campsite	20

OPERATING SYSTEMS IN THE RV	21
------------------------------------	-----------

Monitor panel	22
Slide operation	23
Electrical systems	23
Generator	24
Furnace	25
Water heater	25
12-Volt system	26
Main battery switch	26
Microwave	26
Convection microwave	26
Roof air conditioner	27
Solar panels	27
Extended countertop	27
Fridge/freezer	28
Stovetop	29
Propane appliances	29
Shower head	30
Toilet	30
Waste water systems	30
Draining the waste tanks	30
Safety systems	31
Emergency exit	32
Coach window operation	32

ACCIDENTS, BREAKDOWNS & MAINTENANCE	33
RETURNING TO EL MONTE RV	34

Troubleshooting	34
El Monte RV locations	38
Index	39



RV WITH RESPECT

At El Monte RV we Travel with Heart. We encourage you to follow these ten principles to reduce your impact on the environment and ensure the enjoyment of our beautiful country for generations to come.



Drive carefully – respect speed limits



Camp with consideration-leave no trace




Protect the U.S. for future generations of travellers



Embrace cultures in U.S. be kind and respectful



Reduce, recycle and reuse as you travel

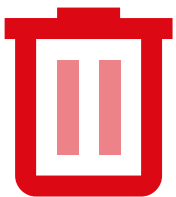

Use correct trash cans



Conserve water - short showers & fill up the sink



Prevent fires - follow local guidelines



Empty tanks at proper dump stations



Be wildlife aware!

FREQUENTLY ASKED QUESTIONS

DO I NEED A SPECIAL DRIVER'S LICENSE?

No, a special driver's license is not required. However, renters and drivers must be a minimum of 21 years of age with a permanent, valid driver's license (digital, temporary replacement or provisional license not accepted) from the country of residence and current identification (including passport for non-US residents). An International Driver's license translation is recommended but not required.

DO YOU ACCEPT DIGITAL DRIVER'S LICENSES?

No, we do not accept digital driver licenses. A hard copy of a driver's license is required.

DO YOU PROVIDE GPS?

Most of our locations rent GPS. Simply request at time of reservation or contact a helpful Customer Service Representative to add this to your reservation.

ARE VEHICLES EQUIPPED WITH A GENERATOR?

Yes, all of our vehicles are equipped with a generator.

DO I NEED TO PROVIDE MY OWN BEDDING?

Guests may provide their own bedding or kitchen equipment or rent a kitchen or convenience kits from us. Simply request at time of reservation or contact a helpful Customer Service Representative to add this to your reservation.

CAN I CHANGE THE DROP-OFF DESTINATION DURING MY RENTAL?

Please contact our Reservations department in order for them to check if this would be possible based on availability. A round-trip rental changed to a one-way rental will inquire one-way drop fees (if available). Changing drop off location cannot be guaranteed possible. Unauthorized drop offs at a different location will result in penalties.

CAN I CHANGE THE MOTORHOME THAT I ORIGINALLY BOOKED?

Yes, you may make changes to your RV type based on availability. Please be aware that any changes to your reservation may result in additional costs. Please contact our Reservations for any changes to your booking.

WHAT HAPPENS IF I HAVE TO CANCEL MY BOOKING?

Bookings made and cancelled within 48 hours free of charge, providing the intended travel is more than 7 days away.

- Minimum cancellation fee: \$300
- Up to 8 days prior to departure date: \$300
- 7 days to 4 days prior to departure date: 75% of nightly rate plus applicable one-way fee will not be refunded (\$300 minimum)
- 3 days or less prior to departure date or No Show: 100% of the full rental rate – NO REFUND

CAN I CHANGE THE RETURN DATE DURING MY RENTAL?

Please contact our Reservations department if you want to extend your rental to see if this is possible based on availability. There is no refund on unused rental nights if you return the RV early.

ARE THERE TRAVEL RESTRICTIONS?

Off-road: travel on non-public, unpaved and/or 'logging' roads is not permitted at any time

Death Valley: traveling in or traversing Death Valley is not permitted from June 1 to September 30 where ground temperatures can reach 140° F or 60° C .

Mexico: travel is permitted at Guest's own risk and only with the purchase of El Monte RV's Mexico Auto Liability Insurance (MALI), available at all southwest locations

Note: there is no reimbursement for repairs, lost use or deductibles for damage when in Mexico

New York City/Manhattan: is not permitted

Ontario/Quebec: Motorhomes are not allowed to be left unattended within the cities of Montreal, Ottawa and Quebec City. We recommend leaving the motorhome parked at a campground and using taxi or public transportation.

Alaska/Northern Canada: travel is permitted at guest's own risk but there is no reimbursement for repairs or lost use

Winter: Travel during winter months is permitted. However, freezing conditions may occur in spring and fall at higher elevations and should be anticipated and precautionary measures taken. Guests are responsible for any damage due to systems freezing due to cold weather. As a precautionary measure at certain locations, water may be replaced by anti-freeze to prevent water systems from freezing. Guests are then not allowed to use any water systems, including the toilet or shower until they have traveled to areas consistently above zero temperatures. In the event the guests want to replace the anti-freeze with water, they may re-winterize or de-winterize the vehicles with the help of an expert.

Note: Winterizing or de-winterizing costs - typically up to \$150-\$200 are the responsibility of renter

Summer: Travel in summer months and/or in extreme temperatures can strain motorhome systems such as roof and dash air conditioners, generator and refrigerator. We maintain our motorhome fleet to accommodate all weather conditions. However, guests should be made aware that the performance of motorhome systems under extreme conditions cannot be guaranteed.

On a sunny day, the temperature inside a closed vehicle can soar to 130°F (55°C) or higher. A roof air conditioner in a motorhome can only cool the air by about 20°F (11°C) from the temperature of the air entering the unit. This means that if the outside temperature is extremely high, it may take several hours to notice a significant drop in the vehicle's temperature.

LOVE YOUR RENTAL? **OWN IT!**

Ready to trade in those rental keys for
a set of your own?

✓ **EXPERIENCE THE ROAD BEAR CERTIFIED DIFFERENCE**

Our RVs are meticulously maintained after every rental, ensuring you get a vehicle in top condition.

✓ **RENTAL CREDIT TOWARDS YOUR PURCHASE**

Apply up to \$2,000 from your rental towards the purchase of a like-new used RV from El Monte RV Sales.

✓ **PRICING THAT WON'T BREAK THE BANK**

We buy straight from the manufacturer which means we can pass the savings onto you. And with financing options including 20-year terms on approved credit, we can make your payments even more affordable.

✓ **DEPRECIATION DONE RIGHT**

We absorb the depreciation, meaning you can enjoy the RVing lifestyle without the typical ownership costs.



IT'S TIME TO MAKE THE ROAD YOUR OWN

Check out our current inventory at
www.elmontervsales.com or ask one of
our helpful sales agents to find the perfect
RV for you!

EL MONTE RV®



BEFORE YOU GO

KNOW BEFORE YOU GO

NO SMOKING

Our RVs are smoke free. If you choose to smoke, use vaping devices or drugs, a minimum \$250 cleaning charge will apply.



PET POLICY

We happily welcome your furry friends. Should an additional pet cleaning be required at drop off, extra cleaning charges will apply. The Guest is responsible for any interior damage caused by chewing, scratching, etc.



WALK AROUND TOUR

Complete an outside tour of the RV to ensure all hook ups are detached and properly stowed in their compartments. Confirm that all external compartments are locked and latched. Remember a walk around tour should be performed prior to parking or moving the RV.

TIP

If you notice water running off of the RV roof while running your rooftop air conditioner do not be alarmed. This condensation run off is normal.



CAUTION

When completing the walk around tour please use caution and acknowledge the location of the generator exhaust pipe located on the driver's side.



KEYS

You will be provided with one set of keys for the RV. **To prevent losing your keys, do not leave them in the ignition and always keep them on you.**

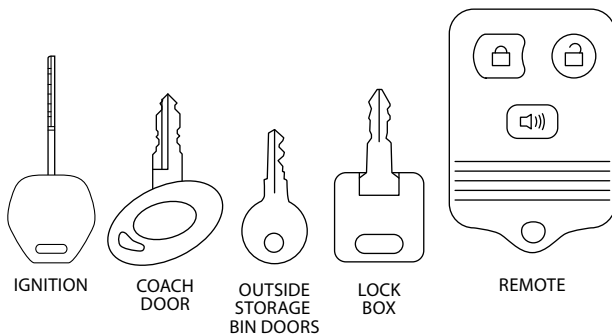


FIGURE 1: KEYS

CAUTION

If the keys are separated, **the guest is responsible for all costs associated with lost, separated or replacement keys.**



TIP

Due to the tight seal on the door, push the coach door with one hand while pulling the handle to open the door with the other.



SECURE THE COACH FOR TRAVEL

1. All roof vents and coach windows are closed.
2. Cabinet doors, drawers and counter extensions are closed.
3. Properly secure fridge and freezer doors.
4. Bathroom door is closed.
5. Water heater, water pump, furnace and stove are switched off.
6. Generator is switched off.
7. TV secured.
8. Bunk ladder secured.
9. Stow and secure all dishes, luggage, and equipment.
10. Retract the slide-outs
11. Retract the awning
12. Close the entry door and engage the deadbolt, ensuring the key is fully inserted into the lock before turning.
13. Close and lock exterior sewer outlet.
14. Close and lock all exterior compartments
15. Retract leveling system (if equipped).

TIP

Store lighter items in higher cupboards and heavier items lower down.



CAUTION

When driving, all coach windows and vents must be closed to prevent damage from wind, rain or dust and ensure guests' comfort.



DRIVER SET UP

Before getting in the driver's seat, always observe the area around the RV. A car, bicycle, person, or tree branch may be behind, near the top, or beside the RV, and remain unseen until it's too late. There are blind spots that must be checked when parking or backing up. Always use a spotter. A spotter is a person on foot outside the RV who can look out for any possible obstacles around or above the RV. Before backing up, the driver must have a clear view of the spotter, behind the RV, in the side-view mirrors.

1. To drive safely the side-view mirrors must be properly aligned
2. Remember to buckle your seat belt. It is the law!
3. Release the parking brake.
4. RV bodies extend beyond the wheels, and this causes a "tail-swing" while turning. Always make certain that the back corners will clear any fixed object when moving from a parked position or turning on the open road. Also, be aware that this same overhang can scrape the road when ascending ramps or structures that place the front wheels higher than the rear wheels.

KNOW BEFORE YOU GO

CAUTION

In all jurisdictions in North America vehicles are required to drive on the right-hand side of the road.



PLAN YOUR ROUTE

When planning your first day's route and first night's stop, remember that it will take extra time to get accustomed to the RV, secure your supplies and add fuel. For the first night, select a shorter drive and plan on arriving before dusk. We recommend a drive of no more than two hours if possible.

FUELING THE RV

Always fill the RV with the correct fuel, as labelled outside the fuel tank. The capacity of the gasoline tank is approximately 55 gal / 208l. **It is your responsibility to ensure that only GASOLINE/PETROL is used in a gasoline engine.**

This vehicle has a gasoline engine.

See FIGURE 2: FUEL FILLING CAP on this page.

CAUTION

DO NOT FILL WITH THE WRONG FUEL.

If the wrong fuel is added, the Guest is responsible for any and all related charges. In the event you refuel the RV with the wrong fuel call On Road Care Team immediately.

DO NOT START THE ENGINE. DO NOT DRIVE THE RV.



CAUTION

Ensure fuel cap is secured after use. Starting the engine with a loose fuel cap may cause a check engine light to illuminate on the dash.



FIGURE 2: FUEL FILLING CAP

PARKING

Always park the RV on a level surface. This will ensure the proper functions of the appliances and slide-out. Level parking also provides greater comfort in the coach, especially for sleeping. **Always apply the parking brake when parked.**

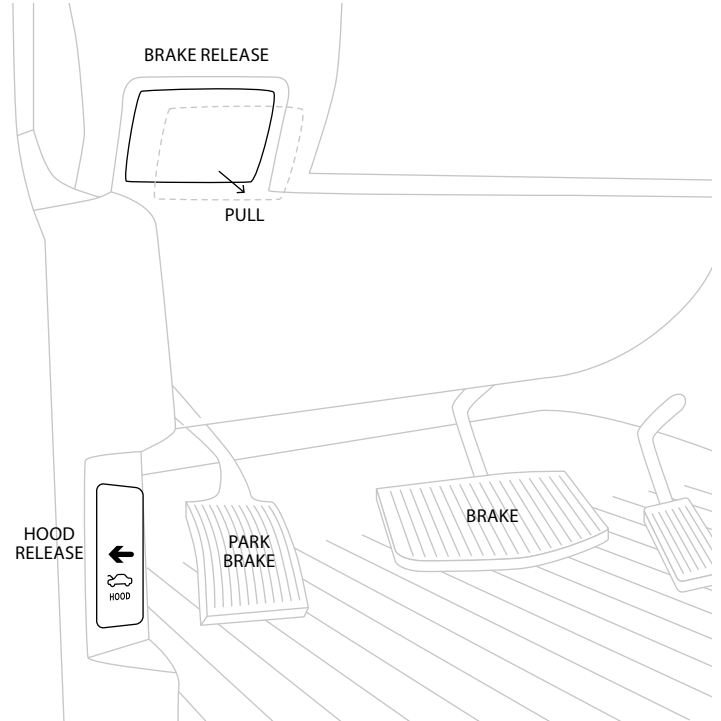



FIGURE 3: PARK BRAKE & BRAKE RELEASE

TIP

Please ensure that you have your keys on your person every time you exit the RV to avoid the inconvenience and cost of locking the keys in the RV.



EL MONTE RV®

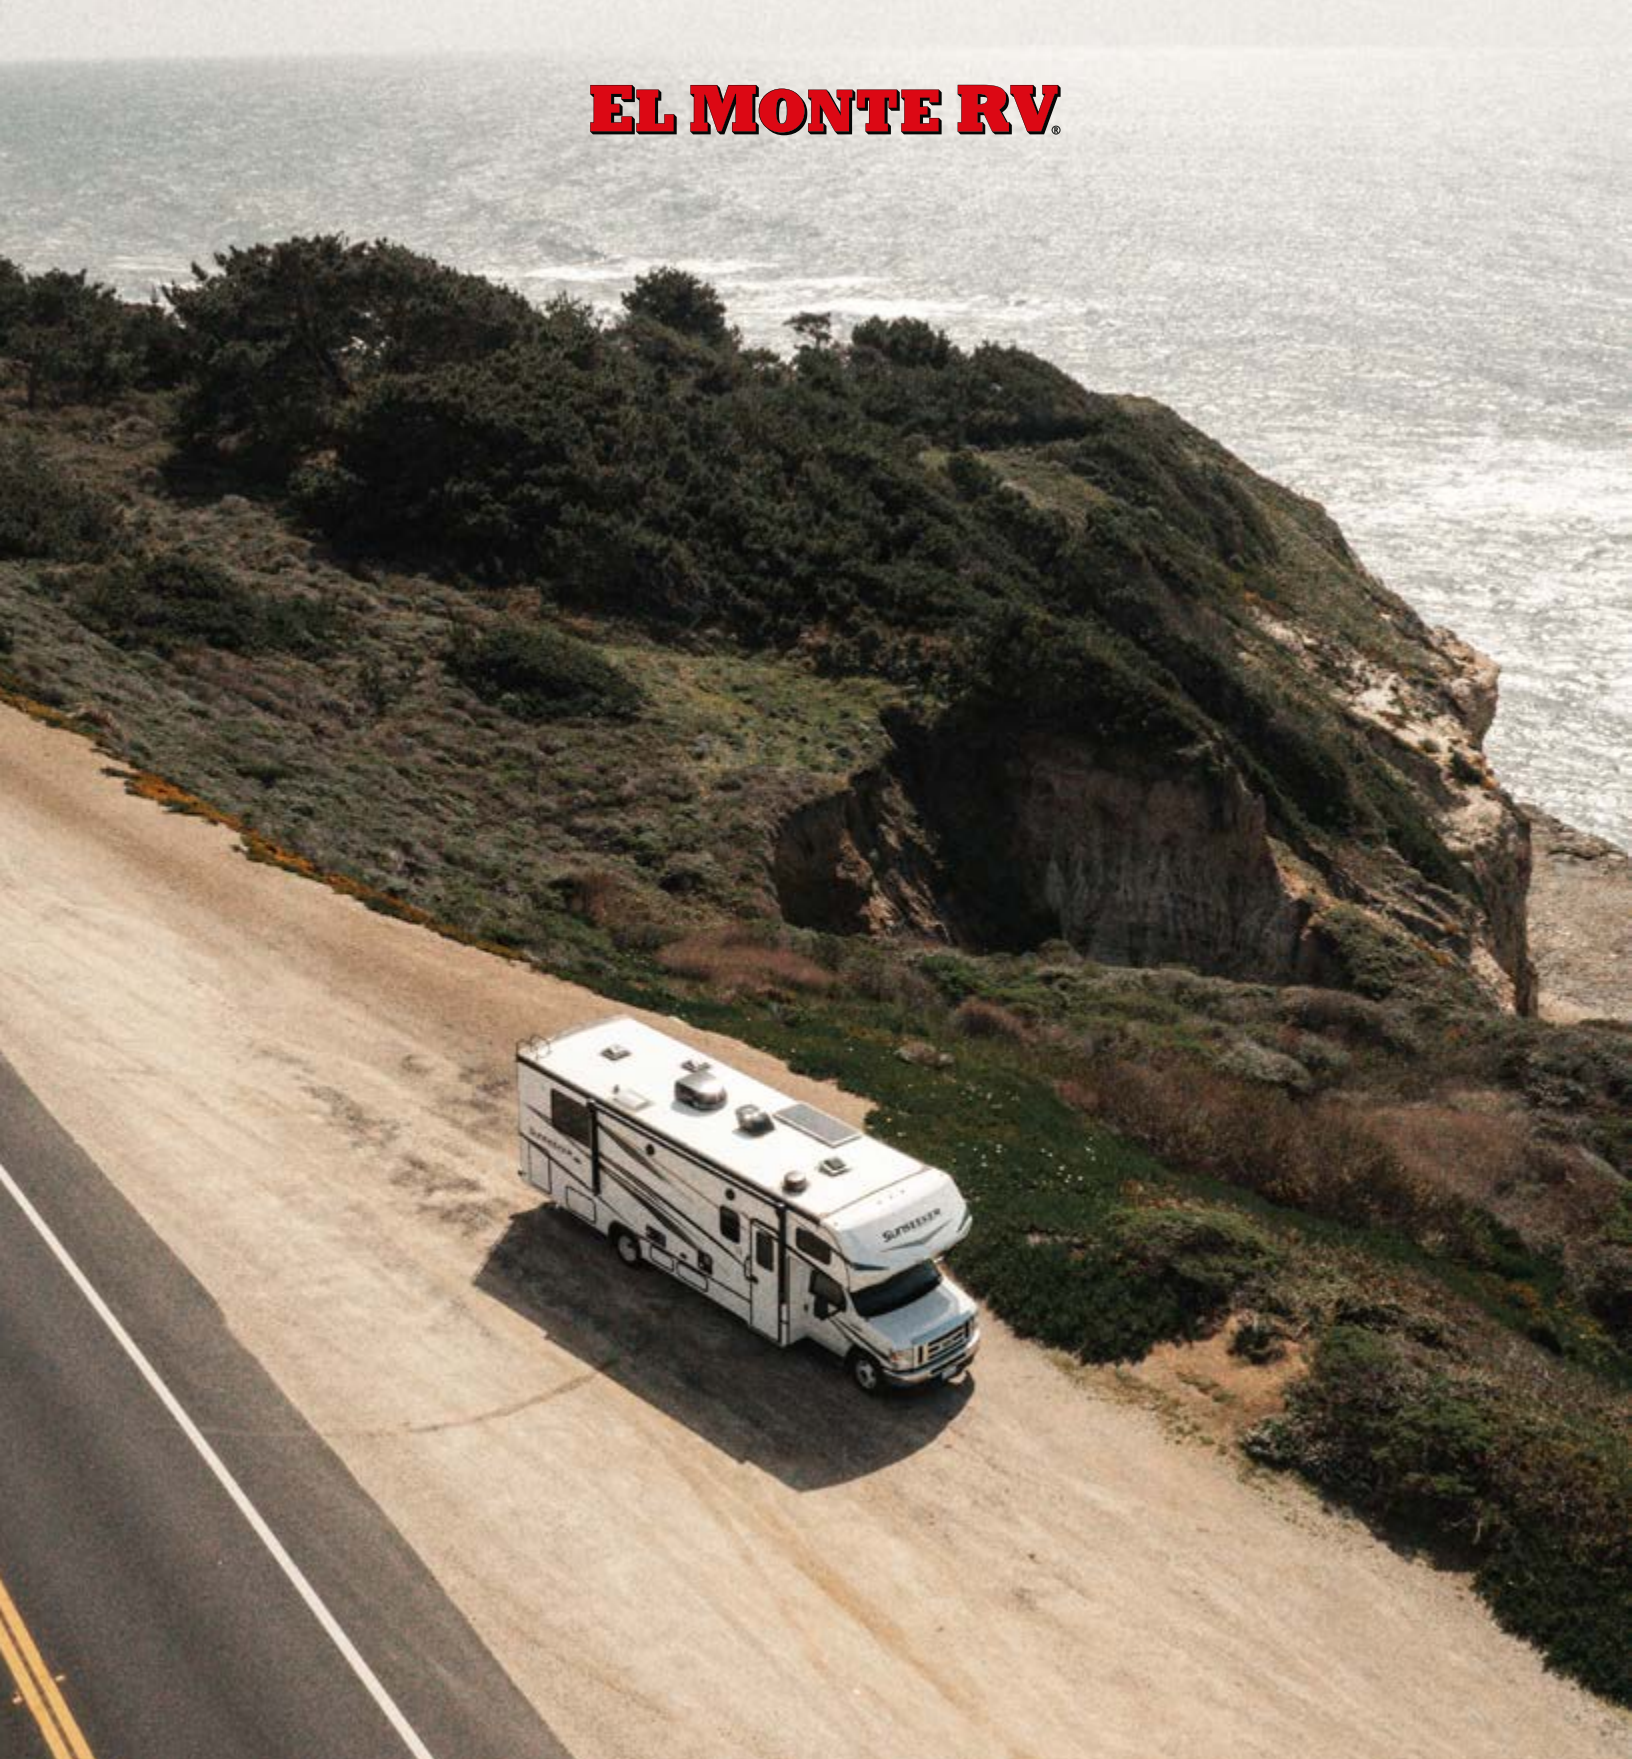

DRIVING & MANEUVERING THE RV

DRIVING & MANEUVERING THE RV

TIPS FOR A SAFE TRIP

The RV has many of the same driver controls and cab features as the automobiles you have driven. Although the RV is taller, longer and heavier than an automobile, it is a very capable vehicle and easy to drive.

Braking, steering and acceleration must be adjusted to reflect the RV's increased size and weight. This causes RVs to accelerate without driver input when travelling downhill.

SPEED & ACCELERATION

Accelerate smoothly and use caution when entering traffic and when changing lanes. Never exceed the posted speed limit; driving 10% slower than the posted speed limit will assist in better control of the RV and may increase fuel economy. When driving slower than posted speeds, please check your mirrors frequently and allow following traffic to pass.

CAUTION

Driving an RV with the brake system warning light on is dangerous. A significant decrease in braking performance may occur and the guest may be responsible for any repair costs incurred. Contact the On Road Care team if the brake system warning light is illuminated after the parking brake is released.



BRAKING & HILL BRAKING

Give yourself twice as much distance as you would when driving your own automobile when following other vehicles. That means you need to observe a 4-6 second following distance when driving the RV at highway driving speed. For **hill braking**, reduce speed early and ensure that the **TOW/HAUL is engaged**. When braking, press and release the pedal. Do not apply the brake pedal continuously as this may overheat the brake system. Allow the engine and the transmission **TOW/HAUL** to do the work. See TOW/HAUL on page 13. When parking, **always apply the parking brake**.

CAUTION

Cruise control may make operation more relaxing. However, please do not use cruise control on wet, slippery or snow-covered roads, or while traveling on hilly/mountainous terrain. Using cruise control in these conditions may result in reduced driver control and will be less fuel efficient. Under these circumstances using **TOW/HAUL** will provide improved driver control.



STEERING

The RV has a larger turning radius and will require more room than an automobile. Always reduce speed before turning and watch for **tail swing**.

CLEARANCES

RVs are much taller than conventional vehicles. At least **12 feet** of clearance space is required. There are appliances on the roof such as the air conditioner, solar panels and vents that add to the vehicle's height.

Consider height when approaching gasoline/petrol stations, under passes, tunnels, bridges, and toll booths. The RV will not fit in parking garages or drive-through windows.

Overhead damage resulting from driving into, under, or through a height restricted structure, road, or sign including but not limited to parking structures, drive-throughs, drive-in or other covered entry ways, and any roads or structures with height restricted access is **NOT** covered and the guest is responsible for all related charges.

In the event you damage the roof, call On Road Care Team immediately.

Be aware of the width of the RV when meeting, passing or being passed by other vehicles. Make sure the side-view mirrors don't project into the oncoming vehicle's lane.

PARKING & BACKING UP

Always use a spotter when backing up! Ensure that you can see the spotter in the side-view mirrors. When parking, **always apply the parking brake**.

DRIVER AWARE!

When driving an RV it is vital to be very aware of other road users, especially pedestrians, joggers, cyclists, other small vehicles, etc. Give plenty of space (up to 1.5 meters or 5ft) when driving past anyone sharing your side of the road. RVs create wind drag which can pull a bicyclist in towards the side of the RV. Remember the wing mirrors are wide and pose a threat if you are too close to the other road user. In every event, slow down, and wait until there is enough space to overtake the road user by indicating and pulling out into the other side of the road.

SEATS & SEAT BELTS

If at any time you change drivers, you must readjust the driver's seat to the position that gives comfort and full use of the side-view mirrors so that the driver can see the spotter. Always adjust the driver's seat when a new driver assumes operation of the RV.

All passengers are legally required to wear seat belts while the RV is moving.

Child seats should never be installed on the front passenger seat as the airbags may cause death or injury if the airbags are deployed. Death or serious injury can also occur to children 12 and under.

SCHOOL BUSES, SCHOOL ZONES & PLAYGROUND ZONES

In the U.S., school buses are yellow. Each school bus, when it stops, will have flashing lights and a stop sign projecting from the bus. **You must come to a complete stop when driving in either direction when you see the flashing lights and/or the protruding stop sign.** You may not continue until the flashing lights have gone out and the stop sign closes from view. In School Zones and Playground Zones you must reduce your speed to the locally posted speed limit, and you can only resume normal speed once you have passed the sign which marks the end of the school or playground zone. Heavy fines are imposed on motorists speeding in these zones.

MAINTAINING THE RV WHEN TRAVELLING

FUELING THE RV

Before filling the fuel tank and/or the propane gas tank please see FIGURE 2: FUEL FILLING CAP on page 9 and FIGURE 6: PROPANE TANK on page 13

1. Turn the engine off and apply the parking brake.
2. Turn the battery disconnect switch to the **OFF** position and close the propane gas shut-off valve.
3. After fueling, turn the battery disconnect switch to the **ON** position and open the propane gas shut-off valve.

FUEL REMINDER

You must return the RV with the same fuel level that you received at pickup.

EMERGENCY STARTER

If the engine battery becomes discharged, use the switch located on the left of the base of the driver's seat / above the driver seat belt / on the left side of the dashboard

To use this switch:

1. Press and hold emergency starter switch.
2. While holding the emergency starter switch turn the ignition key to start the RV. If the engine does not start within 10 seconds, wait 1 minute and retry starting engine with switch engaged.
3. Release the emergency start switch.

See FIGURE 5: EMERGENCY STARTUP SWITCH on this page

Troubleshooting: see TABLE 1: STARTUP on page 34.

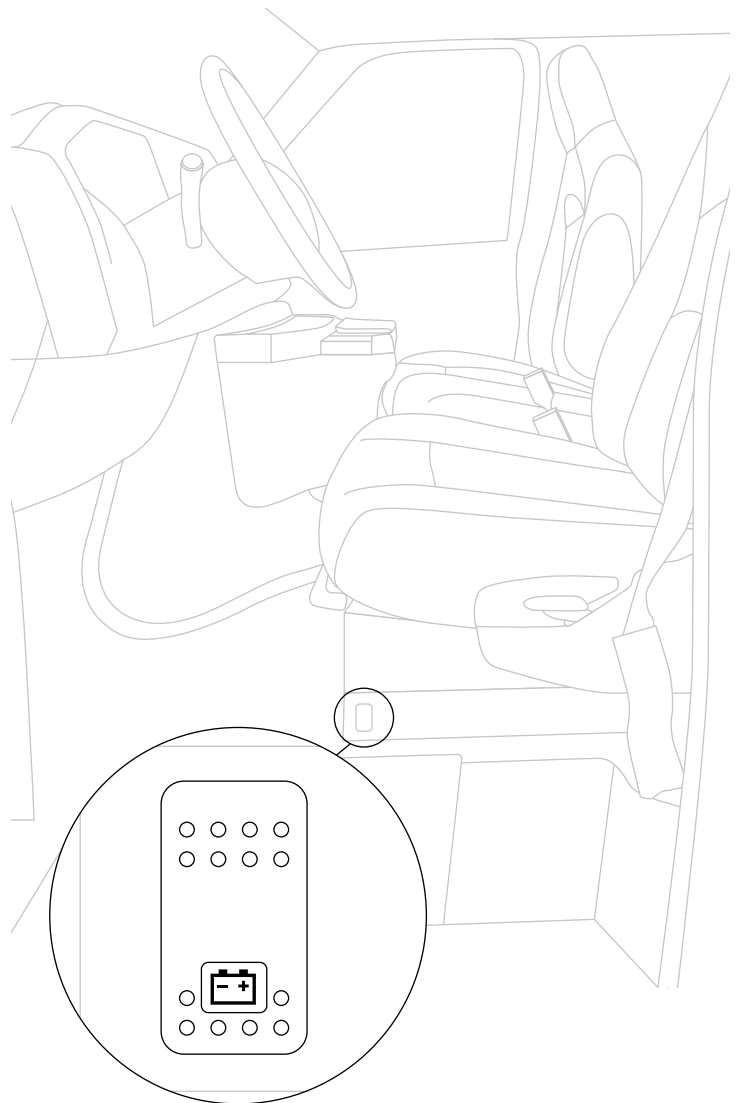


FIGURE 5: EMERGENCY STARTUP SWITCH

DRIVING & MANEUVERING THE RV

PROPANE TANK

The propane tank will be full at the time of pickup and supplies fuel for your furnace, water heater and stove. You can have your propane tank refilled at some service/gasoline/petrol stations, some U-Haul stations and some campgrounds. Ask your campground host where you can fill propane locally and they will be able to help. **Any refills required during your trip are at your expense. Avoid running out of propane.**

It is safe to drive with your propane system **ON**.

See FIGURE 6: PROPANE TANK on this page.

The RV propane capacity is displayed on the propane tank.

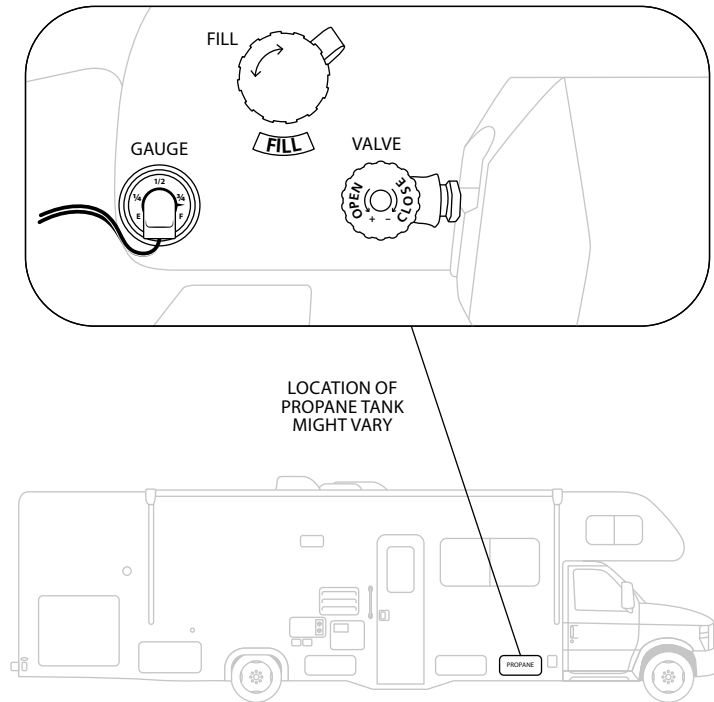


FIGURE 6: PROPANE TANK

TRAVELLING ON A FERRY

Prior to boarding any ferry, it is required by law to close the propane shutoff valve. You must turn the battery disconnect switch to the **OFF** position. After leaving the ferry, and when it is safe to do so, stop and open the propane shut off valve and turn the battery disconnect switch to the **ON** position.



UNDER THE HOOD

Please top up fluids as required or indicated by warning lights. If the RV is leaking any fluid please call On Road Care. For location of hood release see FIGURE 4: PARK BRAKE & BRAKE RELEASE on page 9.

OIL

Guests are responsible for checking and maintaining the correct oil level in the RV. In the event you need to add oil, the oil cap will indicate the proper viscosity of oil to be used. Only add 0.5 quart/liter, then check the oil level again. The best time to check the engine oil level is in the morning before driving, make sure the RV is parked level. Oil and filter changes are required every 7500 miles. If the next oil change is required, contact On Road Care for further instructions. A typical oil change should cost less than \$100.00.

Save all receipts for adding or changing oil. El Monte RV will reimburse you for those receipts. If the service outlet recommends any extra services, call On Road Care before proceeding.

TIP

For any maintenance costs over \$100.00, please contact On Road Care for prior approval.



TIRES

Should you have a flat tire, please do not attempt to change the tire yourself. Park in a safe place and call On Road Care.

Advise which tire is flat, your unit number and location. The agent will provide instructions on how to proceed. Please note the Guest is responsible for tire costs.

TOW/HAUL

El Monte RV strongly recommends the use of TOW/HAUL for additional control. It is especially useful for descending hills and slowing a heavy RV. Tow/haul automatically downshifts the transmission when the brakes are applied to maintain the desired speed without constant braking. To become familiar with Tow/haul we recommend that you engage it at your first encounter descending a hill that will require some speed control. Tow/haul is activated by pressing the button at the end of the gear-shift lever/ the button on the dashboard. When engaged an indicator will display in the dash.

See FIGURE 7: TOW/HAUL BUTTON on this page.

When braking, press and release the pedal, do not apply the brake pedal continuously as this may overheat the brake system. Allow the engine and Tow/haul to do the work.

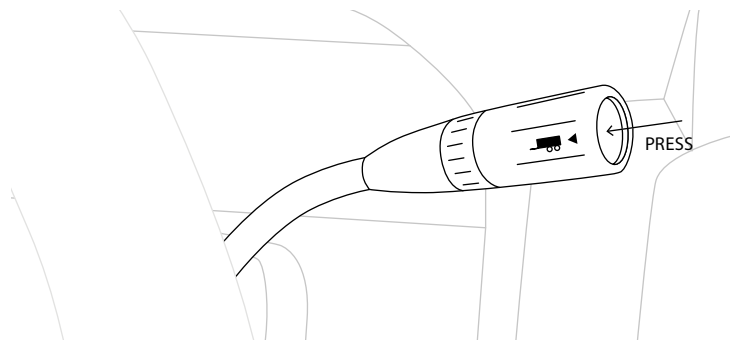


FIGURE 7: TOW/HAUL BUTTON

VEHICLE SYMBOL GLOSSARY

	Safety Alert		Hazard Warning Flasher		Do Not Open When Hot
	See Owner's Guide		Fog Lamps – Front		Battery
	Fasten Safety Belt		Fuse Compartment		Avoid Smoking, Flames or Sparks
	Air Bag – Front		Fuel Pump Reset		Battery Acid
	Air Bag – Side		Windshield Wash/Wipe		Explosive Gas
	Child Seat Lower Anchor		Windshield Defrost/Demist		Fan Warning
	Child Seat Tether Anchor		Rear Window Defrost/Demist		Power Steering Fluid
	Brake System		Power Windows Front/Rear		Maintain Correct Fluid Level
	Anti-Lock Brake System		Power Window Lockout		Service Engine Soon
	Parking Brake System		Child Safety Door Lock/Unlock		Engine Air Filter
	Brake Fluid – Non-Petroleum		Interior Luggage Compartment Release		Passenger Compartment Air Filter
	Parking Aid System		Panic Alarm		Jack
	Stability Control System		Engine Oil		Check Fuel Cap
	Cruise Control		Engine Coolant		Low Tire Pressure Warning
	Master Lighting Switch		Engine Coolant Temperature		Adaptive Cruise Control
	Door Ajar Warning		High beam Indicator		Lane Departure Indicator
	Open Hood Indicator		Parking Lamps Indicator		Powertrain Trouble Indicator
	Requires Registered Technician		Flammable		See Service Manual
	Passenger Airbag Activated		Passenger Airbag Deactivated		Hill Descent Control
	Trail Control				

LIGHTS & CHIMES

Instrument Panel icons can illuminate and alert you to a serious RV condition that may require attention and repair. Under normal conditions, the icons will illuminate when you start the RV. Icons may remain on. An illuminated yellow icon is a warning that may not require immediate attention if the RV is running normally. A red icon or a gauge pointing to the red area means you should stop as soon as it is safe to do so. **Once parked in a safe location, turn off the engine and start it again.** If the warning lights remain on, contact On Road Care Team immediately.

SERVICE ENGINE SOON



Illuminates when the ignition is first turned to the **ON** position to check the bulb. Solid illumination after the engine is started indicates the On-Board Diagnostics System has detected a malfunction or that the RV is due for service. Please notify the On Road Care Team.

ELECTRONIC THROTTLE CONTROL



Illuminates when the engine has defaulted to a 'limp-home' operation. This is a safety function of the engine to avoid any further damage or stress. Pull over when it is safe to do so and report the fault to On Road Care Team.

CHECK FUEL CAP



Illuminates when the fuel cap may not be properly closed. Unscrew the fuel cap and reinsert it.

PARKING BRAKE & BRAKE WARNING



When the ignition is turned on, the parking brake and brake system warning light will illuminate. If these lights remain illuminated when the engine is running the parking brake may still be applied. Check the parking brake for full release. Re-apply the parking brake with force and release again.

ANTI-LOCK BRAKE SYSTEM (ABS)



The ABS brake system may stop working, which equals longer braking distance and wheel lock-up possible which equals less control of vehicle. The brakes still work and it is safe to drive but should be checked by any car repair shop at the earliest convenience.

REQUIRES REGISTERED TECHNICIAN



If this is illuminated, park the vehicle safely and call the On Road Care team immediately.

AIRBAG READINESS



If this icon fails to illuminate when the ignition is turned on, continues to flash or remains on, please contact call the On Road Care Team immediately.

SEAT BELT



Reminds you to fasten your seat belt. A chime will also sound to remind you to fasten your seat belt. It is the law for occupants to always wear their seat belt while the RV is in motion. This includes guests traveling in the coach too.

ENGINE OIL PRESSURE



Illuminates when the pressure falls below the normal range. Stop the RV as soon as safely possible and switch off the engine. Check the oil level using the dipstick and add oil if needed. It is the Guest's responsibility to ensure the correct oil level. If the oil level is correct and the light stays on, contact the On Road Care Team.

ENGINE COOLANT TEMPERATURE



Illuminates when the engine coolant temperature is high. Stop the RV as soon as safely possible, switch off the engine, let it cool down and inform the On Road Care Team.

LOW TIRE PRESSURE WARNING



Illuminates when your tire pressure is low.

TRANSMISSION TOW/HAUL



Illuminates when **TOW/HAUL** has been activated. See TOW/HAUL on page 13 for further details.

ANTI-THEFT SYSTEM



The RV may be equipped with an anti-theft system. It is engaged by locking the RV with the key fob. The door light will flash when the anti-theft system has been activated. If the system alarm goes off after you've opened the RV, close the doors and use the key fob to lock and unlock.

CHARGING SYSTEM



Illuminates when the battery is not charging properly.

TIP

If the vehicle alarm goes off after you've opened the RV, close the doors and use the key fob to lock and unlock them and then start the engine.



CRUISE CONTROL



Illuminates when the cruise control is activated.

LOW FUEL



Illuminates when the fuel level is at or near empty. Find a fuel station as soon as possible. We recommend refueling before there is a 1/4 tank of gas remaining.

TURN SIGNAL



Illuminates when the left or right turn signal or the hazard lights are turned on.

HIGH BEAM



Illuminates when the high beam headlights are turned on.

STABILITY & TRACTION CONTROL INDICATOR



Flashes during operation.

KEY IN IGNITION WARNING CHIME



Sounds when the key is left in the ignition in the off/lock or accessory position and the driver's door is opened.

HEADLIGHT WARNING CHIME



Sounds when the headlights are on, the ignition is off and the driver's door is opened. Leaving these lights on can drain your engine battery.

PARKING BRAKE ON WARNING CHIME



Sounds when the parking brake is set, the engine is running and the RV is driven at speeds of more than 5 km/h (3 mph).

CAUTION

Daytime Running Lights increase the RVs visibility to oncoming drivers, but do not light the road ahead or activate taillights. This system is not adequate for night time driving. We recommend turning on the headlights whenever the RV is driven.



EL MONTE RV®



PARKING, CAMPING & ENJOYING THE RV

ARRIVING AT THE CAMPSITE

Always try to arrive at your destination while there is still some daylight so you can register and locate your campsite. If you are allowed to select your site, choose the most ideal spot which could include:

1. A level parking surface.
2. Shade.
3. A site clear of overhead or undercarriage obstructions including branches, tree stumps or rocks. **Always use a spotter to park the RV and before departing, even if the RV is equipped with a backup camera.**
4. A site with a full hookup or, at the minimum, a campsite power pole.

If you arrive after the campsite office has closed, you may still be able to check-in. If you have a reservation, it is helpful to call ahead so the campsite knows when to expect you.

CAUTION

Campfires can damage pots, pans, fleece blankets and pillows. Do not use RV Kit items on or near campsite fires. Damage charges will apply.



TIP

In order to use the roof air conditioner the RV needs to be plugged into **a minimum 30-Amp power supply**. If in doubt, ask the campsite operator.



CAUTION

The coach door handle can only be locked and unlocked with the key from outside the RV. Exiting through the coach door while the handle is locked, will not unlock the handle. Be certain you have the keys with you anytime you exit the RV.



ELECTRICAL HOOK UP

Connecting the RV to the campsite electricity supply is simple and easy.

1. Remove the campsite power cord from the RV. Plug the correct end into the socket on the side of the RV, twist base of RV connection to the right to lock, then turn the collar to lock the cord in place.
2. Locate the breaker on the campsite power pole and switch to the **OFF** position.
3. Plug the power cord into the campsite power pole then switch the campsite power pole breaker to the **ON** position.
4. Press and hold the BATT button and confirm 4 red LED lights are on, indicating the coach batteries are charging.
5. Select a 30-amp service. If a 30-amp service is not available use the 15-amp adapter. 15-amp service will limit the simultaneous use of appliances.
6. Contact campsite staff if there is no breaker located on the campsite power pole and you don't see 4 red LED lights when pushing and holding the BATT button on the monitor panel. See FIGURE 8: ELECTRIC HOOK UP on this page.

Troubleshooting: See TABLE 3: 120-VOLT ELECTRICAL SYSTEM on page 34.

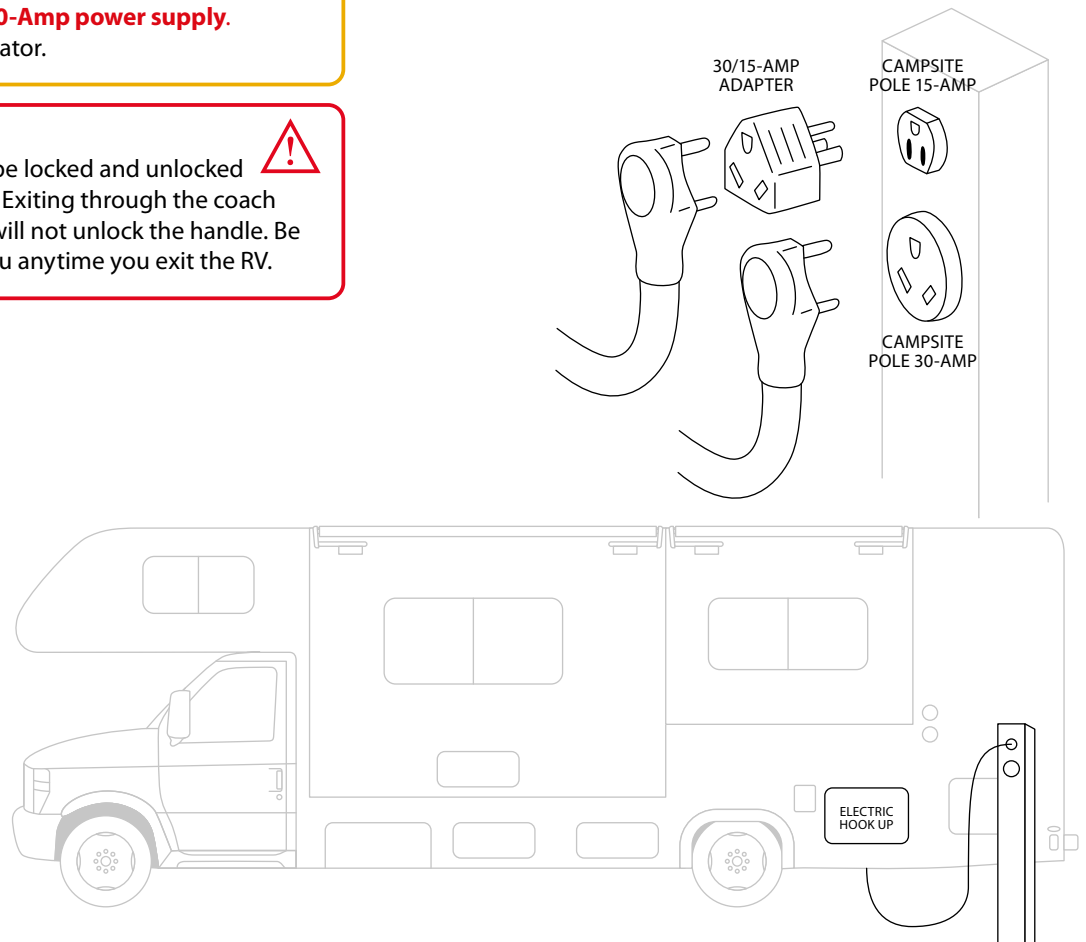


FIGURE 8: ELECTRIC HOOK UP

FRESH WATER TANK FILL

The RV is supplied with a fresh water hose for filling the fresh water tank.

Steps to fill the tank:

1. Connect the water hose to a campsite water source (tap).
2. Insert the other end into the FRESHWATER INTAKE or connect it with the fresh water tank connection.
3. Open the campsite water valve part way and fill the tank slowly.
4. Once the tank is full, water will start flowing. Not all RVs have a gravity fill and on some the 'fill hole' is a screwed connection. Water can overflow thru a separate opening (Sunseeker) or to the ground (Coachmen).

To access the water in the freshwater tank, use the water pump. The water pump switch is on the monitor panel.

The water in the freshwater tank is safe for showering, dishes and cleaning. **El Monte RV recommends bottled water for drinking and cooking.**

See FIGURE 9: FRESH WATER INTAKE on this page.

Troubleshooting: See TABLE 13: FRESH WATER SUPPLY on page 37.

TIP

While using the city water hookup **DO NOT RUN THE WATER PUMP.**



CAUTION

Make sure there is water in the fresh water tank before using the water pump. Running the pump with no water can lead to damage and may render the system inoperable.

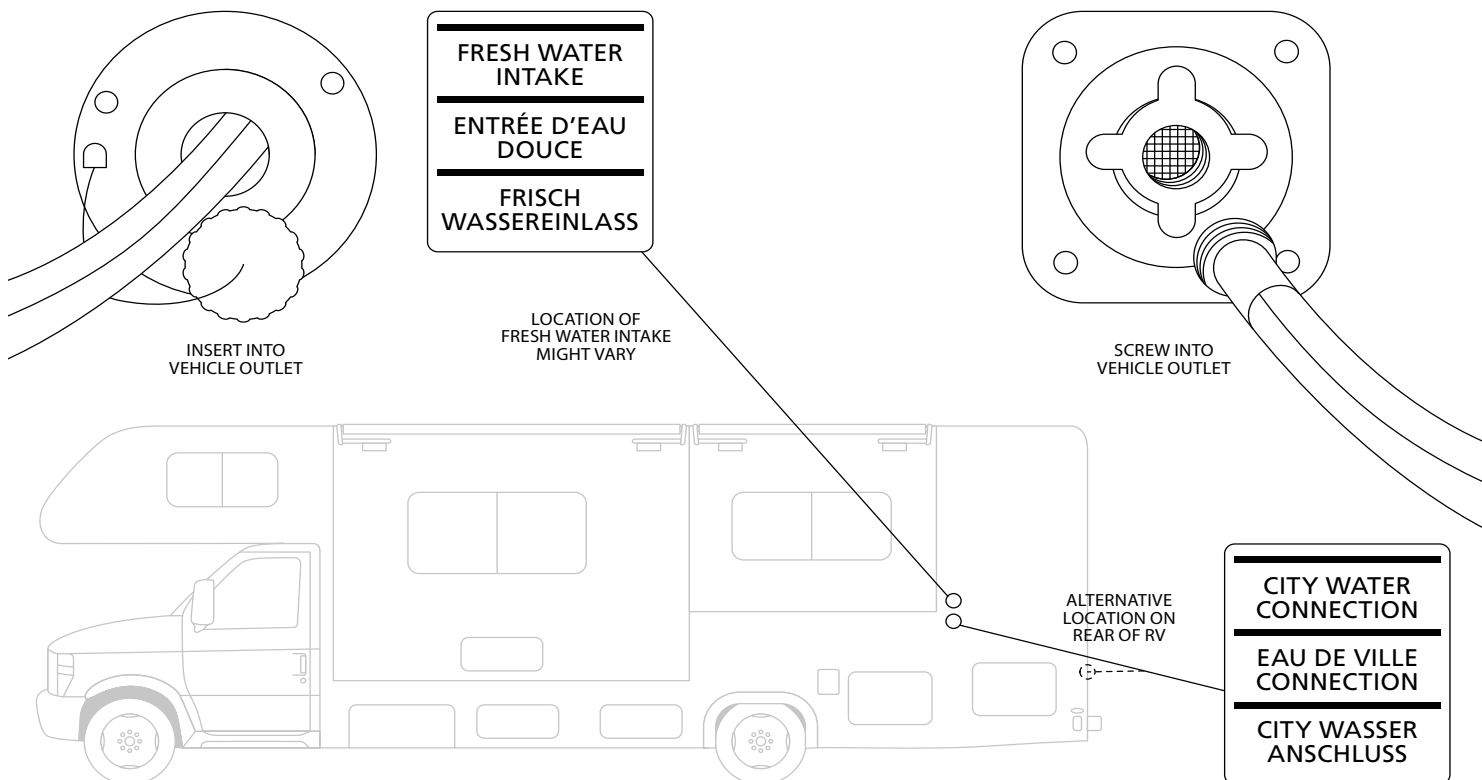


FIGURE 9: FRESH WATER INTAKE & CAMPSITE/CITY WATER CONNECTION

CAMPSITE/CITY WATER HOOK UP

There is an outside connection for the city water hookup on the side of the RV. The city water is provided at the campsite with a full hookup and will not fill or deplete your fresh water tank.

A fresh water hose is supplied with the RV, attach one end to the campsite water supply and the other to the connector on the side of the RV. **Open the campsite water supply to 1/3 and check both ends for leaks.**

See FIGURE 9: CAMPSITE/CITY WATER CONNECTION on this page.

Troubleshooting: See TABLE 13: FRESH WATER SUPPLY on page 37.

CAUTION

Always ensure to connect to the **city water connection**. Never connect the water hose to the **black tank flush** attachment. **Do not use the city water connection in cold conditions or freezing weather.**



WASTE TANK HOOK UP

See FIGURE 25: EMPTYING THE HOLDING TANK on page 30.

TIP

Careful usage and monitoring of RV resources as you use them avoids problems. Always be aware of the rate at which you are using fresh water, propane, available 12 Volt power and waste tank capacity. Check Monitor panel readings regularly.



MAKING DINETTE INTO BED

U-SHAPED DINETTE

1. If equipped turn the locking knob to the left to unlock the table top from the post.
2. Carefully pull up on the table to separate it from the post. Stow the table to the side.
3. Using a gentle rocking motion remove the post from the floor mount and store.
4. Place the table top on the dinette seat rails.
5. Place the surrounding dinette cushions on top of the table.

BENCH DINETTE

1. Locate the locking lever under the front of the table and pull to release.
2. Gently push the table down in line with the bench.
3. Place the surrounding cushions on top of the table.

BENCH DINETTE 2

If the table does not have a locking lever, you will need to:

1. Pull up, to unlock the table top from the wall
2. Gently push the table down in line with the bench.
3. Place the surrounding dinette cushions on top of the table to form the bed.

To return the table with no lever to the original position, pull up on the tabletop, match the table hinge to the wall hinge then lower the table to a flat position.

TELEVISION

We are happy to allow Guests to use the TVs. However, we cannot guarantee reception, every location change requires a new scan for reception, including when connecting with a coax cable to a provided campground cable connection. We cannot provide technical support for TVs.

TIRES

Should you have a flat tire, please do not attempt to change the tire yourself. Park in a safe place and call On Road Care. Advise which tire is flat, your unit number and location. The agent will provide instructions on how to proceed. Please note the Guest is responsible for tire costs.

ELECTRIC AWNING

Before rolling out the awning, ensure there is enough space to fully extend it and that it does not interfere with tree branches, etc. The engine needs to be off and the ignition key removed.

CAUTION

When it is windy or rainy, retract and roll-up the awning! **Damages to unrolled awnings are always considered the customers fault.**






TIP


Before driving off - ensure the awning is fully rolled up.



Troubleshooting: See TABLE 3: ELECTRICAL AWNING on page 34.

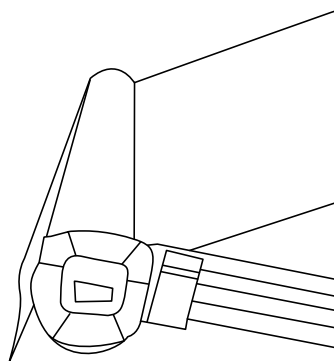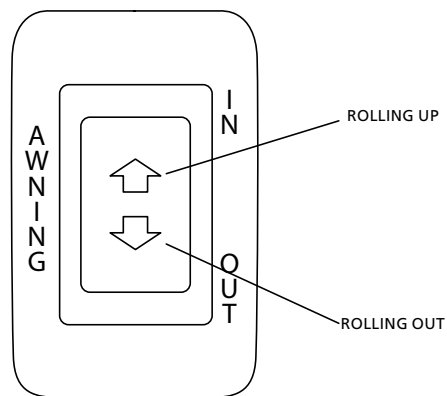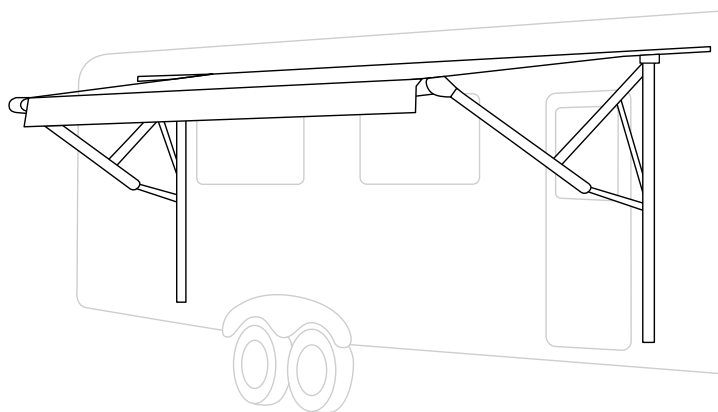

INCORRECT

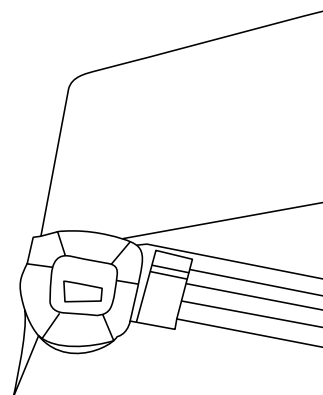

CORRECT

CAUTION

Never leave the awning unattended (absence or overnight) also **never** leave the awning open in windy conditions or rainy weather.



CAMPSITE ETIQUETTE

Common sense rules of etiquette prevail when checking into any campsite. RV Guests are part of the community of other campers and are expected to be good neighbors. Ensure you comply with campsite rules.

1. Try not to make excessive noise.
2. Respect the environment and clean up any litter. In areas with wildlife, it is absolutely prohibited to leave any food or garbage around the site.
3. Many campsites restrict the use of generators to posted times. Do not run the generator at night or for long periods.
4. For security reasons, do not leave valuables in the RV while you are away. Always lock the RV when you leave, and ensure to take the keys with you.

PREPARING TO DEPART THE CAMPSITE

1. Fill freshwater tank and empty waste tanks.
2. Check the fuel gauge and plan the first stop to ensure an adequate fuel supply is maintained. El Monte RV recommends a minimum of 1/4 tank in the summer and 1/2 tank in winter.
3. Check that there is no evidence of fluid leaks under the RV.
4. Check for overhead clearance.

TIP

Always schedule the next emptying of waste tanks before reaching a full tank. Using the campsite or other public facilities will extend the time between draining the tanks.



OUTSIDE CHECK LIST

1. If the RV has been connected to a full hookup site, follow **DRAINING THE WASTE TANKS** on page 31 to **disconnect the sewer hose from the RV**.
2. **Disconnect the power cord and the fresh water hose from the campsite outlets and stow in the RV.**
3. Lock and latch all compartment doors.
4. Perform a walk around tour. See page 8.

TIP

Exterior compartments and lock boxes are not water or dustproof. El Monte RV recommends securing high-value items or electronics inside the coach



COMPLETE INSIDE LIST

1. Turn off the generator, water heater, water pump and furnace.
2. Properly secure fridge and freezer doors.
3. Secure the TV.
4. Close all roof vents and windows.
5. Make sure all loose articles inside the RV are secured and stowed, including the bunk ladder. Anything on the counters, bed or table will move around once the RV is in motion. Lighter items should be stowed higher and heavier items lower. Close all interior doors, drawers, and cabinets.
6. Retract the slide room.
7. Retract the awning
8. Close the entry door and engage deadbolt, ensuring the key is fully inserted into the lock before turning.
9. Adjust the seat and steering wheel.
10. Adjust mirrors (if need with the help of a spotter) before starting the engine.
11. **Release parking brake.**
12. When maneuvering in tight spaces, parking lots and campgrounds, **always use a spotter** outside the RV to guide you safely.

Enjoy the Drive!

EL MONTE RV



OPERATING SYSTEMS IN THE RV

MONITOR PANEL

In El Monte RVs the monitor panel displays the status of many of the RV's systems, see FIGURE 10: MONITOR PANEL on this page.

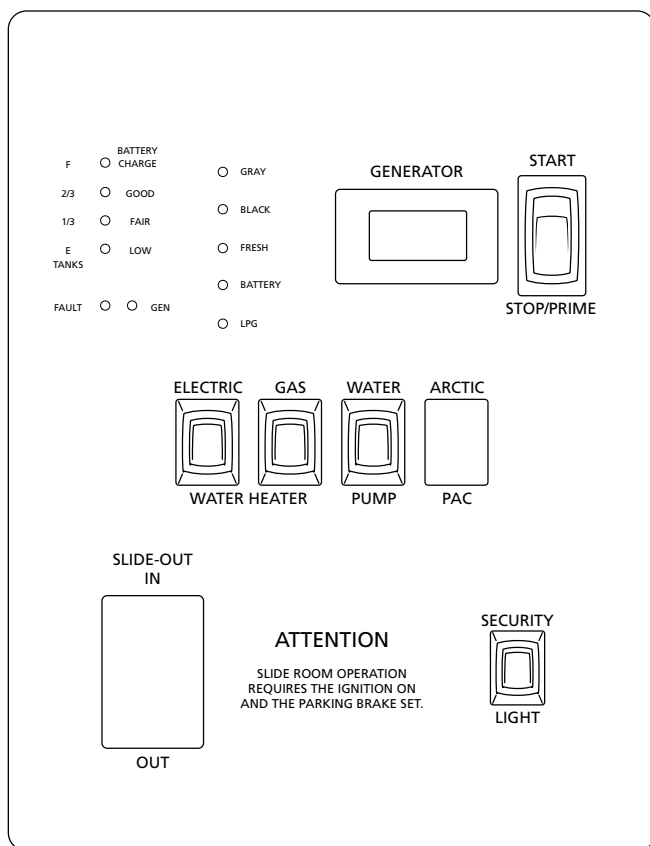


FIGURE 10: MONITOR PANEL

The panel (look and features of monitor panels can vary by model and year) allows you to conveniently check the approximate levels in the fresh water tank, black water (toilet waste), grey water (sink and shower waste), and propane tank. You can also check the condition of the coach battery, turn on the water pump, turn on the water heater, move the slide in or out, and start or stop the generator.

To check the approximate amount of water available in the fresh water tank, push that button and hold In. For example, if the tank is 2/3 full, the E, 1/3 and 2/3 indicators will light up on the panel.

The monitor panel is for convenience and the levels shown by the indicators are approximate.

On occasion, the black or gray waste tank level indicator on your monitor panel may read incorrectly. The waste tank sensors can be compromised by material inside the tank stuck to the sensor. This can cause faulty readings on the panel. To prevent this:

1. Always flush with plenty of water when using the toilet.
2. **Only** use RV toilet paper.
3. **Never** pour grease, oil, coffee grounds or other food waste down the toilet or sinks.
4. After draining waste tanks, always add toilet chemical.

CAUTION

The waste tank sensors may become inaccurate when blocked by waste materials in the tanks. To help avoid clogs and misreading sensors always flush the toilet with plenty of water and only use toilet paper suitable for RV tanks. Never pour grease, oil, coffee grounds or other food waste down the toilet or sinks. No paper towels, facial tissues, feminine hygiene products, diapers or leftovers can be flushed down the toilet. The black and grey tanks can become clogged. **Guests are responsible for costs to empty or repair clogged tanks.**

SWITCHES ON THE MONITOR PANEL

1. Some water heaters can be operated two ways: electrically or by using propane gas. The propane gas option is always available. The electric option is only available when the RV is plugged into the campsite power pole or running the generator. For instruction on operating the RV water heater see WATER HEATER on page 25.
2. The **water pump switch** will illuminate a light when on.
3. The **SLIDE-OUT** switch operates the slide room. See SLIDE OPERATION on page 23.
4. The **ARTIC PAC** or **tank heater** is not installed.
5. Various light switches control coach lighting.
6. The generator **START/STOP** switch operates the generator. See GENERATOR on page 24.
7. Push and hold the **BATT** button to see the coach battery status.

WATER PUMP SWITCH

The water pump switch has a light to indicate when ON.

The water pump switch provides access to the water from the fresh water tank. Anytime water is not required turn the water pump switch **OFF**. It is normal to hear a noise from the water pump when it is in use.

CAUTION

Make sure there is water in the fresh water tank before using the water pump. Running the pump with no water can lead to damage and may render the system inoperable.

BATTERY LEVEL

The battery button will indicate the approximate condition of the RV coach batteries.

To check the battery condition, you must first:

1. Disconnect from the campsite power pole.
2. Turn the generator and engine off.

L – Low F – Fair G – Good C – Charging

If the display is not reading at least Fair, action is required to charge the coach battery by plugging into the campsite power pole, running the RV engine or starting the generator. A Charging reading on the battery indicates that charging is occurring. It may take more than four hours to fully charge the coach battery.

Troubleshooting: See TABLE 4: MONITOR PANEL on page 35.

CAUTION

Ensure the RV is level before operating the slide-out.

Operating the slide-out while the RV is not level can cause mechanical damages.



SLIDE OPERATION

The parking brake must be engaged and the engine running before the slide will operate. Some systems will cut power to the slide-out if the engine is on to prevent operating while driving. See the instruction sticker next to the slide switch.

Before extending the slide room:

1. Check to make sure that nothing outside the RV can obstruct the slide from extending.
2. Tip the driver's seat all the way forward.
3. Ensure there are no items on top of the interior portion of the slide which would prevent the slide from opening.
4. **When the slide is in motion, no Guests should be in the slide room.**

To extend the slide room:

1. Follow any instructions at the slide switch.
2. Press and hold **OUT** on the switch.
3. Extend the slide room until it is sealed with the wall or a clicking sound is heard. **The rubber seal on the rear of the slide trim should be in contact with the wall. Release the button immediately.**

The slide room should be in the fully extended position or the fully retracted position, not halfway.

Before retracting the slide room:

1. Check for any obstructions around the exterior.
2. Tip the driver's seat all the way forward.
3. Check that the privacy curtains are clear of the slide.
4. Confirm that the floor and space around the slide is clear.

To retract the slide room:

1. Follow any instructions at the slide switch.
2. Press and hold **IN** on the switch.
3. Hold the switch until either the movement stops or a clicking sound is heard. Release the button immediately.

TIP

It is recommended to leave the slide room in during heavy rain, or to park the RV so the slide is not facing the incoming rain. Slide out seals may not stop all water intrusion during heavy precipitation.



CAUTION

Be aware of obstacles inside and outside of the RV when operating the slide. **Do not, under any circumstance, drive with the slide in the OUT position.**



Troubleshooting: See TABLE 14: SLIDE ROOM on page 37.

ELECTRICAL SYSTEMS

All RVs are equipped with three separate electrical systems: a 120-Volt system from a campsite power pole or the onboard generator and two 12-Volt systems from battery sources.

120V-VOLT SYSTEM

The microwave, roof-mounted air conditioner and 120-Volt outlets are components that will only work when the RV is connected to the campsite power pole or the generator is running.

When parked, it is always recommended that the RV is plugged into a campsite power pole or other electrical source. See FIGURE 8: ELECTRIC HOOK UP on page 17.

Troubleshooting: See TABLE 4: 120-VOLT ELECTRICAL SYSTEM on page 35.

TIP

It is recommended to have access to resources at a campground at least every 2-3 days (electric plug in, sewer hook-up and water refill options).



OUTLETS

120-Volt outlets can only be used while the RV is plugged into a campsite power pole or the generator is running.

Some 120-Volt outlets are protected by a Ground Fault Circuit Interrupter (GFCI). These outlets are intended to protect Guests from the hazards of electrical shock. If 120-Volt power is interrupted, check reset switch on the GFCI outlet, usually located in the bathroom. The GFCI button requiring reset may be located on an alternate outlet. See FIGURE 11: GFCI OUTLET on this page.

TIP

If the 120 Volt system is connected and there is no power, push the **RESET** button at the GFCI outlet. Also check the breakers in the fuse box (and campsite), sometimes the breaker trips, not the GFI.

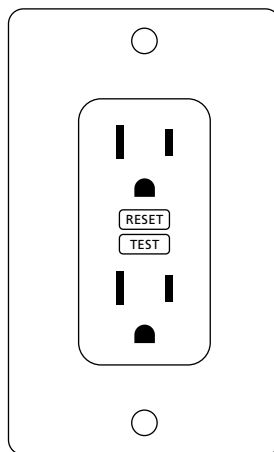


FIGURE 11: GFCI OUTLET

BREAKER/FUSE BOX

A converter is used to transform 120-Volt power to 12-Volt power when the RV is plugged into a campsite power pole or when running the generator. The converter supplies 12-Volt power to the coach.

The RV breaker/fuse box is usually located in the rear sleeping area or on the bed frame. It creates heat and requires good ventilation. Keep the area around the RV breaker/fuse box clear. See FIGURE 12: RV BREAKER/FUSE BOX on this page.

Troubleshooting: See TABLE 4: 120-VOLT ELECTRICAL SYSTEM on page 35.

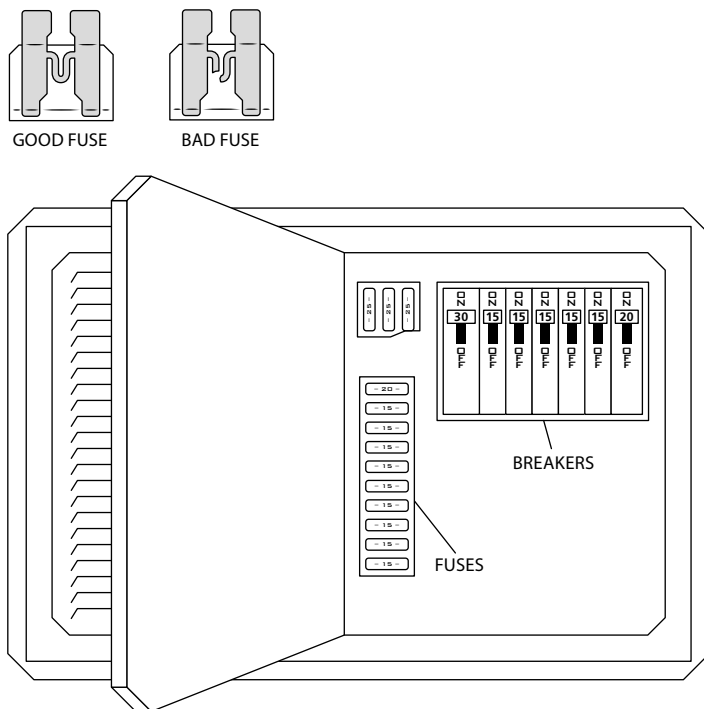


FIGURE 12: RV BREAKER/FUSE BOX

TIP

When there are power problems of any kind, try resetting all the RV breakers by turning them all the way **OFF** then back **ON** again. If a fuse needs to be replaced, ensure to replace the **fuse with the correct amperage number** (or color).



GENERATOR

When the RV is parked and no campsite power pole is available, the generator can supply 120-Volt power.

Allow the generator 3-4 minutes to warm up before using any appliances. Please be considerate of other campers and do not run the generator during the night or posted campground quiet hours.

The generator will consume about a gallon of fuel per hour of operation. The fuel supply is shared with the RV engine and requires a minimum of 1/4 tank of gasoline/petrol to operate.

Check the generator oil level every eight hours, you can see the hours on the display on the monitor panel.

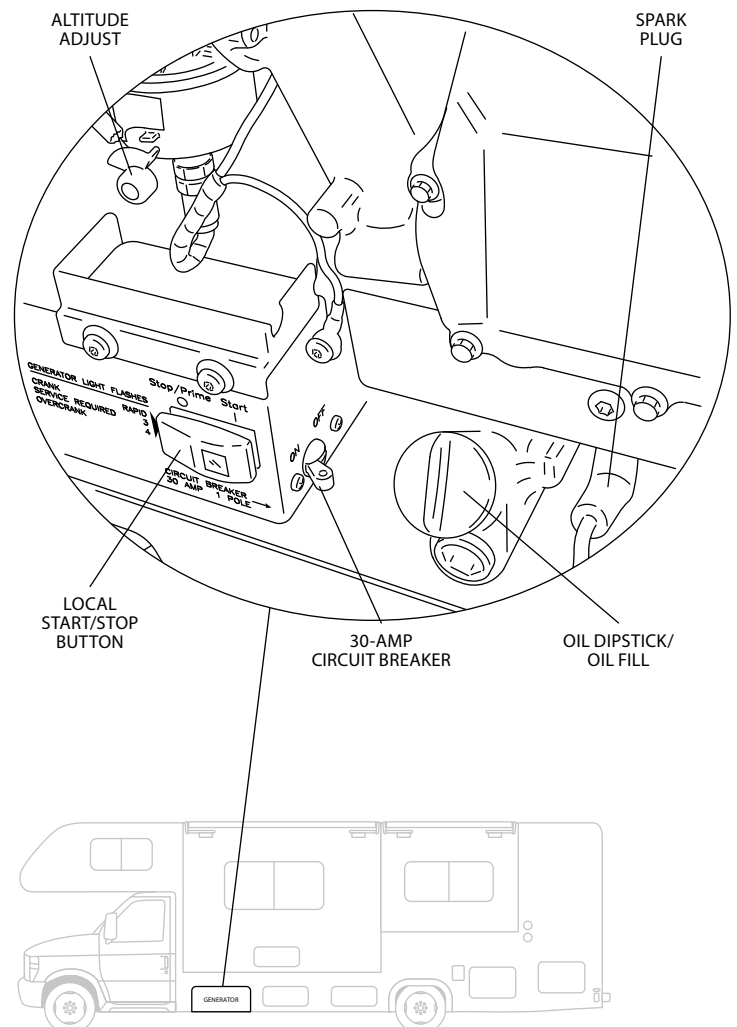


FIGURE 13: GENERATOR COMPARTMENT

GENERATOR CHECKS

Ensure the oil level is checked daily or after every eight hours of operation. If there is a need to add oil to the generator, use the same oil the RV engine requires and only add 1/4 quart/liter at a time. Keep the receipt to be reimbursed at drop off. Guests will be responsible for any damage caused by low oil levels. **Check that the RV has at least a 1/4 tank of gasoline before operating the generator otherwise the generator will not start.**

See FIGURE 13: GENERATOR COMPARTMENT on page this page.

OPERATING THE GENERATOR

The generator requires a well charged coach battery to start. It may be necessary to run the RV engine to provide sufficient power for the initial start-up.

1. Check that the 30-Amp cord in the electrical cord compartment is plugged into the 30-Amp outlet. If there is no outlet inside this compartment, your unit is equipped with an automatic transfer switch requiring no action.
2. Confirm that the roof air conditioning, microwave and any electrical appliances that are plugged into the electrical outlets are turned off.

3. The generator **START/STOP** switch is located on the monitor panel. See Figure 10: MONITOR PANEL on page 22. There is a second generator **START/STOP** switch on the generator itself. If the generator will not start from the switch inside the RV, try the switch on the generator. Some generators can be started by hand with a cord like a lawn mower. FIGURE 13: GENERATOR COMPARTMENT on previous page.
4. If the generator has not been operated in 24 hours, press and hold the **STOP/PRIME** end of the switch until the generator indicator light comes on. Then press and hold the **START** end of the switch. If the generator does not start in 15 seconds release the switch. After 30 seconds press and hold the **START** end of the switch again. **Do not prime the generator a second time.**
5. To stop the generator, press the **STOP** end of the switch

Troubleshooting: See TABLE 5: GENERATOR on page 35.

DRY CAMPING

While the vehicle is stationary for an extended period and not connected to shore power, the user needs to keep a close eye on the battery charge level.

1. **Battery Capacity:** Fully charged batteries will power the fridge through the night. Avoid setting the fridge to maximum cooling.
2. **Regular Charging:** Best is running the engine or the generator for at least one hour twice a day. (during breakfast and during dinner) to keep the batteries charged. Note that some campgrounds have quiet hours when generators can't be used. While the generator is running, charge other devices like laptops and use appliances that need 120V, such as the microwave, coffee maker, and toaster. If the generator is used for an extended period of the day to operate the air conditioner, extra charging may not be necessary.
3. **Solar Panels:** Rooftop solar panels provide charging, but can't fully replace running the engine, the generator, or using shore power. Solar panel charging rates are affected by tree canopies, cloudy days, the parking position, and the angle of the sun.
4. **Shore Power:** If maintaining battery levels is difficult during boondocking/dry camping, prioritize campgrounds with electrical hookups for the best battery charge. For extended dry camping, plan to stay at a campground with electrical hookups every third day so that the batteries can be fully charged.

FURNACE

The RV can power the furnace for extended periods of time. For comfort, and to avoid draining the battery, we recommend that you be connected to a campsite power pole.

CAUTION

Furnace vents on the outside of RVs can become **EXTREMELY HOT**. Use caution when parking to ensure there are no trees or flammable objects close. Keep children and hands away. Never lean personal articles near or against the vent.



To operate the Furnace with Thermostat 1:

See FIGURE 17: THERMOSTAT 1 on page 27.

1. Press the **ON/OFF** button once.
2. Press the **MODE** button until the **HEAT** indicator is lit.
3. Press the **FAN** button until **AUTO** indicator is lit.
4. Press the **TEMP** arrow buttons to select temperature.
5. Press **TEMP DOWN** arrow button and **FAN** button at the same time to switch the display between Celsius and Fahrenheit

To operate the Furnace with Thermostat 2:

See FIGURE 18: THERMOSTAT 2 on page 27.

6. Press the **FAN** button until it displays "auto". Always leave the Fan setting on "auto" while operating the furnace.
7. Press the **MODE** button 5 times from **OFF**, until the **FURNACE** symbol and text appears.
8. Press the **TEMP +** or **TEMP -** buttons to set the desired temperature.
9. Press and hold **TEMP +** and **TEMP -** buttons together for 2 seconds to change between Celsius and Fahrenheit.
10. Do not run the "heat pump" setting while operating the furnace.

Troubleshooting: See TABLE 6: FURNACE on page 35.

WATER HEATER

The RV has the capability to heat water with electricity and/or propane gas. If the **ELECTRIC** water heater switch is on and the RV is connected to a campsite power pole, the water will be heated by electricity. If the **GAS** water heater switch is on, water can be heated by propane gas at any time. Choose between the two options on the monitor panel. See FIGURE 10: MONITOR PANEL on page 22.

To heat water with gas:

1. Press the **GAS** water heater switch. The water heater switch has a light to indicate when on.
2. Once the **GAS** switch is turned on the water will start heating on propane gas and will take 15-20 minutes to heat a full tank of water.
3. If the **DSI/FAULT** light above the **GAS** switch stays on continuously, see troubleshooting TABLE 7: WATER HEATER on page 36.

TIP

Please note it takes a significant amount of power to heat water electrically. Avoid running the AC, the microwave and the water heater at the same time. This electrical load may trip the breakers in the RV breaker/fuse box, generator or on the campsite power pole.



12-VOLT SYSTEM

The RV has two 12-Volt battery systems, one for the engine and one for the coach. The engine battery is charged by the alternator while driving the RV. It supplies power to the engine ignition system, dash controls, switches and all automotive exterior lighting.

The coach battery 12 Volt system supplies power to lights and electronic controls for the appliances. The coach batteries are charged in two ways:

1. From the alternator when the engine is running.
2. From the 120-Volt system when plugged into a campsite power pole or the generator is running.

Troubleshooting: See TABLE 2: 12-VOLT SYSTEM on page 34.

El Monte RV recommends having access to resources at a campground at least every 2-3 days for campsite electric plug in, and access to sewer dump and water refill resources.

TIP

Be aware that it may take up to four hours charging time to achieve 80% capacity. A full battery charge may take twice that time.



CAUTION

It Is Not Recommended To Rely On Engine Only Charging For Extended Periods Of Time.



MAIN BATTERY SWITCH

The main battery switch controls the power to the inside coach of the RV and can be found on the left of your entry steps.

Keep the switch at the on position for your 12-Volt electrical systems to operate. See FIGURE 14: MAIN BATTERY SWITCH on this page.

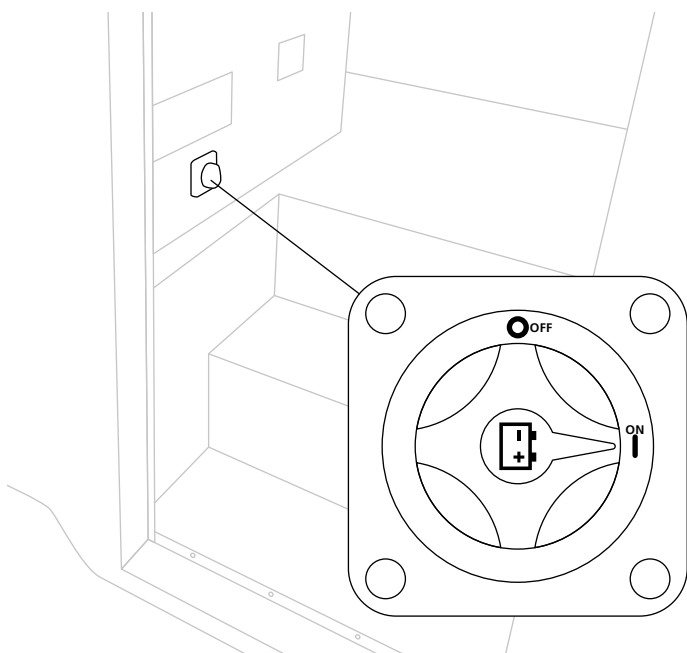


FIGURE 14: MAIN BATTERY SWITCH

MICROWAVE

The RV microwave operates on 120-Volt power only. The RV must be plugged into a campsite power pole or the generator must be running. The microwave in the RV will operate like your household microwave.

Troubleshooting: see TABLE 10: MICROWAVE on page 36.

CONVECTION MICROWAVE

Some RVs are equipped with a convection microwave instead of a traditional oven. The convection microwave circulates hot air throughout the oven cavity to make crispy foods quickly and evenly. See FIGURE 15: CONVECTION MICROWAVE on this page. Do not place plastic or wood utensils or containers within the convection microwave as they will melt and burn. The convection microwave may take up to 25% longer than a traditional microwave to cook.

The convection microwave can only be programmed to ten different cooking temperatures, which are displayed on the number pad.

Cook with Convection:

1. Press **CONVECTION**.
2. Use the number pad to select your desired temperature.
3. Use the number pad to enter desired cooking time.
4. Press **START**.

Preheat and Cook with Convection:

1. Press **CONVECTION**.
2. Use number pad to select desired temperature.
1. Press **START** ("PREH" will flicker in the display until it reaches the designated temperature).
2. Open the door and place food at the center of the turntable
3. Use the number pad to enter desired cooking time.

1. Press **START**.

Grill:

1. Press **GRILL**.
2. Use the number pad to enter desired cooking time.
1. Press **START**.

1 230°F	2 250°F	3 265°F
4 285°F	5 300°F	6 320°F
7 340°F	8 355°F	9 375°F
Clock	0 390°F	Reset

FIGURE 15: CONVECTION MICROWAVE

EXTENDED COUNTERTOP

Lift the counter extension into the working position and reach under to lift the support arms into place. **Be careful, as these arms are on springs and can snap into place if not cautious.** To return the counter to its resting position, reach under and find the release buttons at the end of each support arm. Push these buttons in at the same time while gently lifting the counter extension. While still holding the release buttons in, carefully push the counter back down into its travel position.

See FIGURE 16: EXTENDED COUNTERTOP on this page.

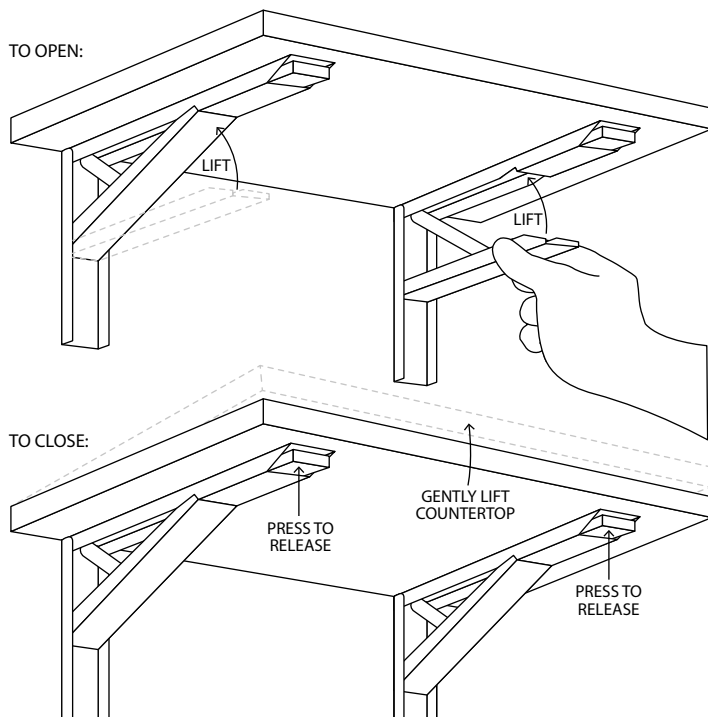


FIGURE 16: EXTENDED COUNTERTOP

ROOF AIR CONDITIONER

The roof air conditioner will only operate when the RV is plugged into a campsite power pole or the generator is running.

To operate the Roof air conditioner with Thermostat 1:

See FIGURE 17: THERMOSTAT 1 on this page.

1. Press the **ON/OFF** button once.
2. Press the **MODE** button until the **COOL** indicator is lit.
3. Press the **FAN** button until **AUTO** indicator is lit.
4. Press **TEMP DOWN** arrow button and **FAN** button at the same time to switch the display between Celsius and Fahrenheit.

To operate the Roof air conditioner with Thermostat 2:

See FIGURE 18: THERMOSTAT 2 on this page.

1. Press the **MODE** button until the **COOL** symbol and text appears.
2. Press the **FAN** button until the **FAN** text reads **AUTO**. Always leave fan on **AUTO**.
3. Press the **TEMP +** or **TEMP -** button to set your desired temperature.
4. Press and hold **TEMP +** and **TEMP -** together for 2 seconds to change between Celsius and Fahrenheit.

TIP

If you notice water running from the RV roof while running your rooftop air conditioner do not be alarmed. This condensation run off is normal.

Troubleshooting: see TABLE 12: ROOF AIR CONDITIONER on page 37.

SOLAR PANELS

Some El Monte RVs are equipped with solar panels to help maintain battery charge. **The solar system is automatic and no Guest action is required for proper operation.** Solar panels are a green feature brought to you by El Monte RV!

See FIGURE 19: SOLAR PANEL DISPLAY on this page.

Troubleshooting: see TABLE 8: SOLAR PANEL on page 36

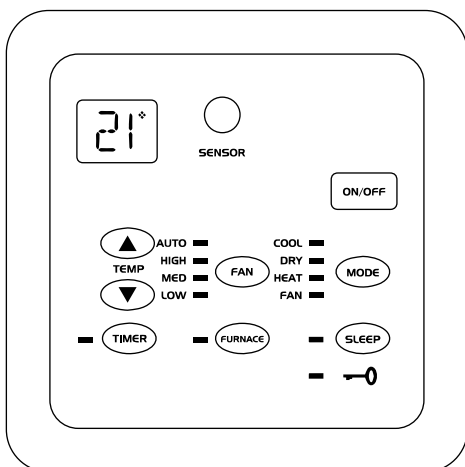


FIGURE 17: THERMOSTAT 1

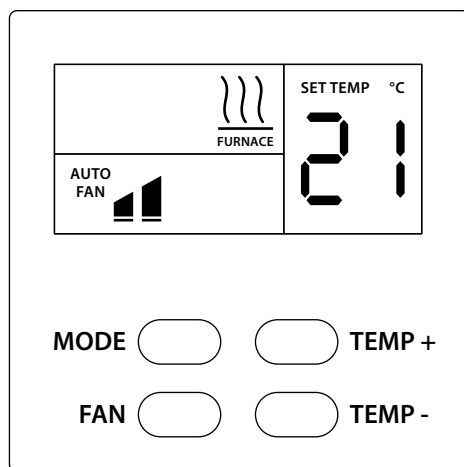


FIGURE 18: THERMOSTAT 2

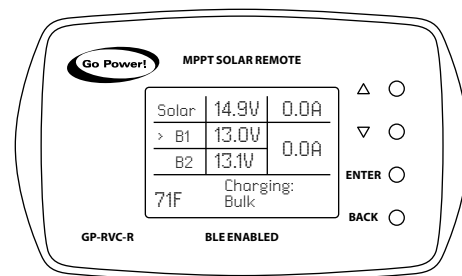


FIGURE 19: SOLAR PANEL DISPLAY

FRIDGE/FREEZER

Turn the fridge ON:

See FIGURE 20: 12-VOLT BATTERY POWER FRIDGE/FREEZER on this page.

1. Open the fridge door
2. Locate the temperature control
3. Press and hold the **SET** button for 10 seconds until the flashing light turns solid. The fridge is now on.

Turn the fridge OFF:

1. Open the fridge door
2. Locate the temperature control
3. Press and hold the **SET** button for 10 seconds until the solid light starts to flash. The fridge is now off.

Fridge Temperature Control:

1. Open the fridge and push the **SET** button to adjust to desired temperature 3.
2. Allow the fridge to cool before making further adjustments.
The fridge takes up to 6 hours to cool down after starting.
3. Some fridges may look different and cool with LP instead of 12V. The temperature control is in the top right corner of the fridge, you can slide the white plastic clip and the connected cable up and down.

TIP

If the fridge only has a temperature dial, and there is no adjustment in the freezer compartment, the dial in the fridge will control both the temperature in the fridge and freezer. The recommended setting for this style of fridge is COLD. See FIGURE 21: FRIDGE STYLE 2 on this page. Some fridges may look different and cool with LP instead of 12V. The temperature control is located on the top right corner of the fridge, and can be controlled by sliding the white plastic clip and connected cable up and down.

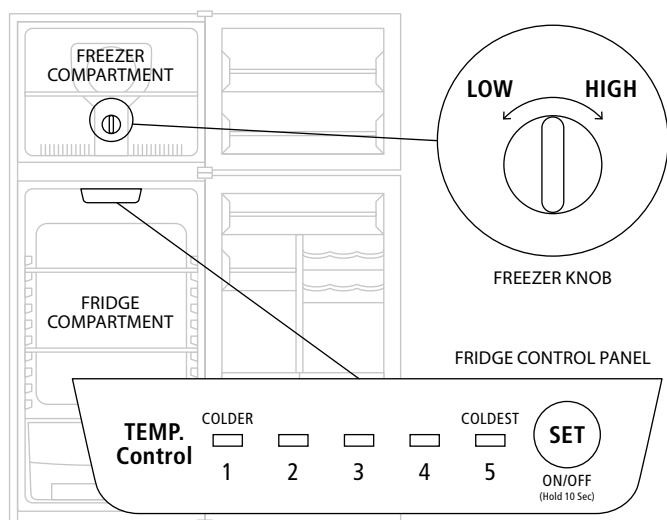


FIGURE 20: 12-VOLT BATTERY POWER FRIDGE/FREEZER

Freezer Temperature Control:

1. If the freezer is not cold enough. Turn the knob to the right.
2. Allow the freezer to cool before making further adjustments. The fridge takes up to 6 hours to cool down after starting.

To keep the fridge/freezer cold:

1. Make sure the shelves are not covered with paper or packed with too much food items that restrict air flow.
2. Allow hot or warm items to cool to room temperature before placing into fridge.
3. Opening the doors frequently will impair the fridge's ability to cool.
4. Park the RV on level ground. The fridge/freezer will not work properly if the RV is not level.

Troubleshooting: See TABLE 9: FRIDGE/FREEZER on page 36.

TIP

The recommended temperature setting for the fridge is 3, the middle setting is recommended for the freezer.



TIP

If the fridge is struggling to maintain temperature, we recommend adding frozen water bottles or ice to the bottom drawers. As opposed to adjusting the temperature setting.

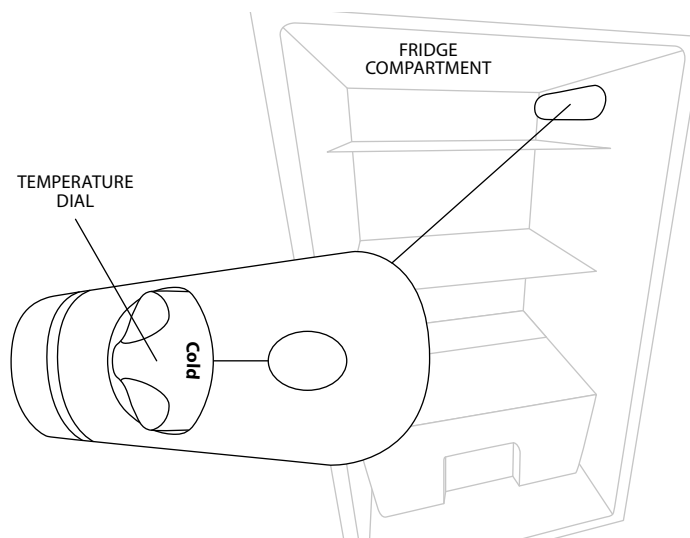


FIGURE 21: FRIDGE STYLE 2

STOVETOP

CAUTION

If applicable to the RV, lift the glass cover before use and keep it open while cooking. Do not close the glass top after use until the stove has had time to cool down.



Ventilation is necessary when operating the stovetop. Open a window or vent, open the living room vent and run the overhead fan while cooking.

To light the stovetop: (See FIGURE 22: LIGHTING THE STOVETOP on this page.)

1. Engage power switch on the right side.
2. Holding the lighter or match in one hand, pull the trigger to produce a flame. Position the flame over burner to be lit.
3. Turn the knob to the **HIGH** position, then adjust the flame to the desired level.

TIP

Some RVs may be equipped with an auto-igniter feature, push and hold the desired knob in and turn to the high position until the range stove top lights. Adjust knob to desired temperature.



PROPANE APPLIANCES

The propane tank supplies fuel for the furnace, water heater and stove. The propane tank is located outside the RV. See FIGURE 6: PROPANE TANK on page 16.

The propane shutoff valve on the tank will need to be open for propane appliances to operate.

The propane system is designed to allow travel with the RV propane tank valve open. Before boarding any FERRY, it is important that the propane tank valve is closed. See TRAVELLING ON A FERRY on page 13.

CAUTION

If the smell of propane is present in the RV at any time, extinguish any open flames and pilot lights. Stop the propane supply by closing the propane shut off valve on the propane tank. Open all doors and windows and step away from the RV. All occupants should leave the area until the smell dissipates. If the problem persists, call On Road Care.

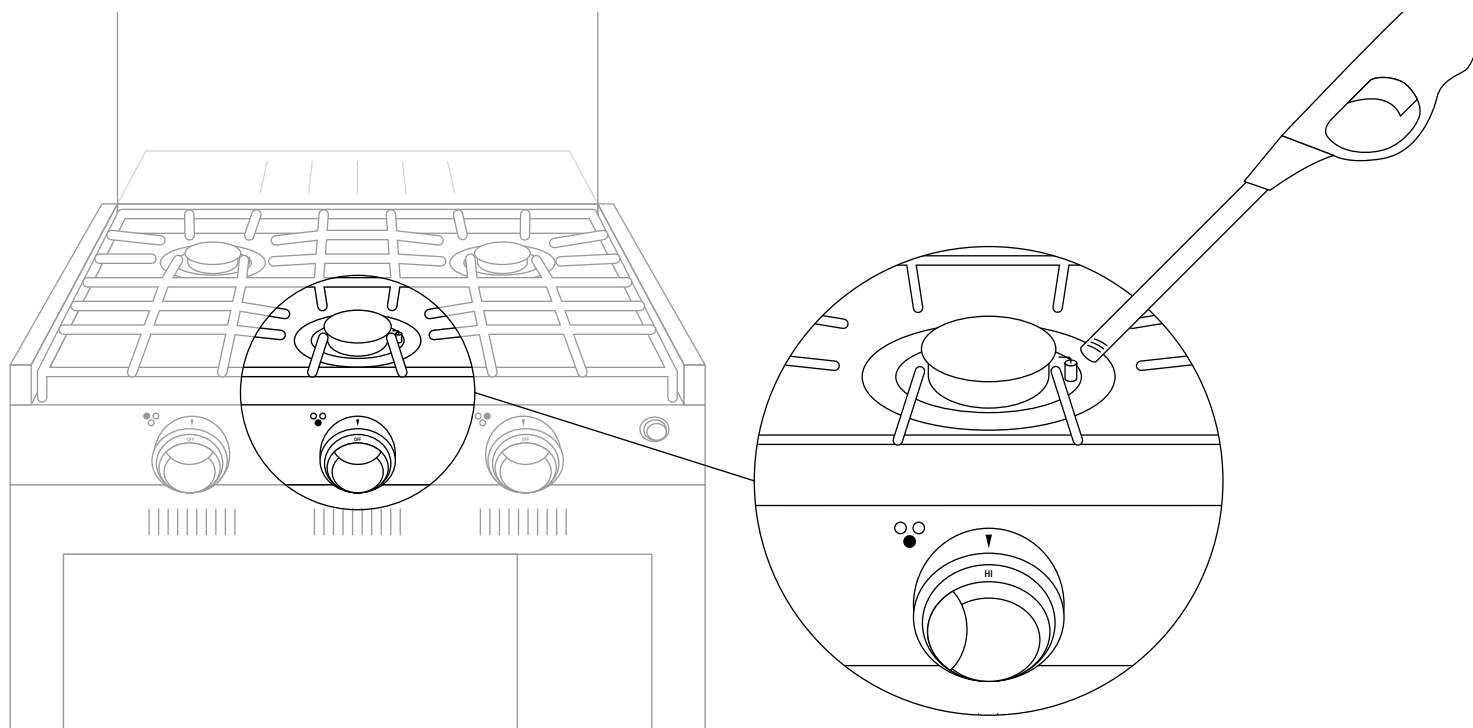


FIGURE 22: LIGHTING THE STOVETOP

SHOWER HEAD

There is a water saver button located on the shower head. After adjusting water temperature at the taps, use the water saver button to stop/start water flow to manage water usage during your shower.

If there is no water flow to your shower the water saver button may already be engaged. Push it to start water flow.

See FIGURE 23: WATER SAVER BUTTON on this page.

STYLE 2:

The shower head has a lever that can be adjusted to choose different shower head settings. Rotate the lever at the bottom of the head all the way to the right side to turn the water to the "OFF" or water-saving position. Rotate back to the original position to turn back on.

See FIGURE 24: SHOWERHEAD STYLE 2 on this page.

TOILET

The RV toilet is equipped with a flush lever located behind the lid, or a foot pedal on the base. See FIGURE 25: TOILET FLUSH on this page. A toilet chemical has been provided with the RV, more can be purchased at most Walmart stores or at some campground offices. Every time the black tank is emptied, put another chemical pod in and add about 3 gallons / 10 liters of water to the tank.

WASTE WATER SYSTEMS

The RV has two wastewater holding tanks, a grey waste tank and a black waste tank. The grey tank collects waste from the kitchen sink, bathroom sink and shower. The black tank collects waste from the toilet.

Before using, move lever/pedal halfway to add water. **The bowl should be ¼ full before using.**

To avoid waste system problems:

1. Only use RV toilet paper (approved for use in marine, RVs or septic tanks) and lots of water when flushing.

2. Never flush paper towels, facial tissue, feminine hygiene products or diapers into the toilet as these will **clog the drain**.
3. When the RV is connected to a full-service campsite, keeping the valves closed will allow the tanks to fill. This will provide enough flow to drain thoroughly prior to departure.

CAUTION

Always engage the flush halfway to fill the bowl ¼ full of water after using the toilet. This water acts as a seal to keep foul odors out of the RV living space



CAUTION

Never attempt to unclog the sink, shower, or toilet with chemicals. These will damage the plumbing mechanisms. **Toilets clogged due to inappropriate materials will be cleared at the Guest's expense.**



DRAINING THE WASTE TANKS

Observe the monitor panel to track the tank levels as they fill. See FIGURE 10: MONITOR PANEL on page 22.

Draining waste tanks works best when the tanks are more than 2/3 full. Higher tank levels promote complete draining. Only drain the waste tanks at a dump location.

See FIGURE 26: EMPTYING THE HOLDING TANKS on page 31.

TIP

Always plan the next dump before reaching full. Using the campsite or other public facilities will extend the time between draining the tanks. Fill the tank to 2/3 or more and dump if you will not have access to a dump facility in the next 2-3 days. You can look up dump stations along your way for example on www.rvdumpsites.net or www.sanidumps.com.

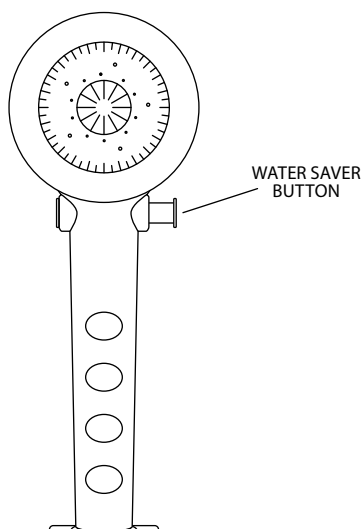


FIGURE 23: WATER SAVER BUTTON

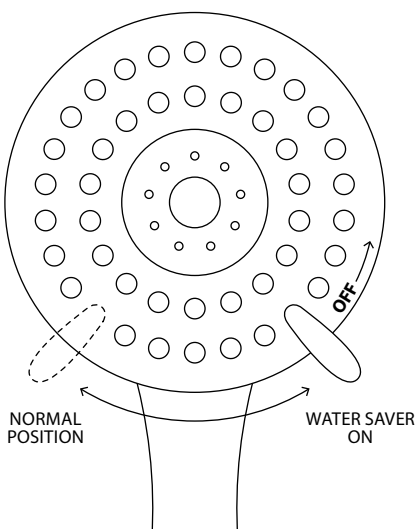


FIGURE 24: SHOWERHEAD STYLE 2

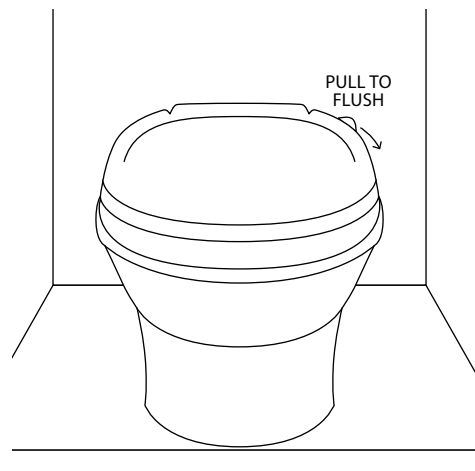


FIGURE 25: TOILET FLUSH

OPERATING SYSTEMS IN THE RV

1. Remove the sewer hose from the storage compartment.
2. Remove the dust cap from the sewer pipe outlet and connect the sewer hose to it. Twist to make sure the hose is firmly attached.
3. Place the opposite end of the sewer hose into the dump hole.
4. Always drain the **BLACK** waste tank first. Pull the handle marked **BLACK** (Some vehicles might have two black water handles) or the larger of the two handles until it stops at about 8 cm (3 inches)
5. Once the **BLACK** waste has completely drained, flush the toilet with about 5-10 liters (1-2 gallons) of fresh water to rinse the **BLACK** waste tank
6. Close the **BLACK** waste tank valve.
7. Pull the handle marked **GREY** or the smaller of the two valve handles until it stops at about 5 cm (1.5 inches).
8. When the **GREY** tank has completely drained, raise the hose where it is connected to the RV and keep the hose elevated while, hand-over-hand, moving towards the opposite end of the hose. This will help in draining the hose.
9. Close the **GREY** waste tank valve, detach and store the sewer hose and replace the cap on the outlet pipe.
10. Add one packet of toilet chemical to the toilet and flush. This process must be repeated every time you drain the waste tanks.

Winter exception

In winter, many campsites and dump stations are closed. Take advantage of every opportunity to empty the holding tanks. Using the campsite or other public facilities will extend the time between draining the tanks.

TIP

Location of the black and grey holding tank valves may vary. If the grey tank lever is not located beside the sewer outlet, it may be separate on the passenger side of the RV. If the grey tank lever is not located beside the sewer outlet, it may be located on the passenger side of the RV or next to the hose connection.



SAFETY SYSTEMS

Your safety is our first concern.

If alarms are heard from any detectors, stop the RV, turn off the engine, turn off the battery disconnect switch, turn off your LPG tank valve, open doors and windows, check your stove/oven to make ensure the knobs are in the OFF position, exit the RV and let it air out. If an alarm sound continues, locate that alarm and press the reset button. If pressing the button mutes the alarm, turn the battery disconnect switch back on. If the problem persists, call On Road Care.

When operating the generator, or parked close to a campfire, the windows should be kept closed. Generator exhaust or campfire smoke could trigger detectors. Strong chemicals (including nail polish) and excessive dust in the sensor can set off the carbon monoxide/LPG alarm.

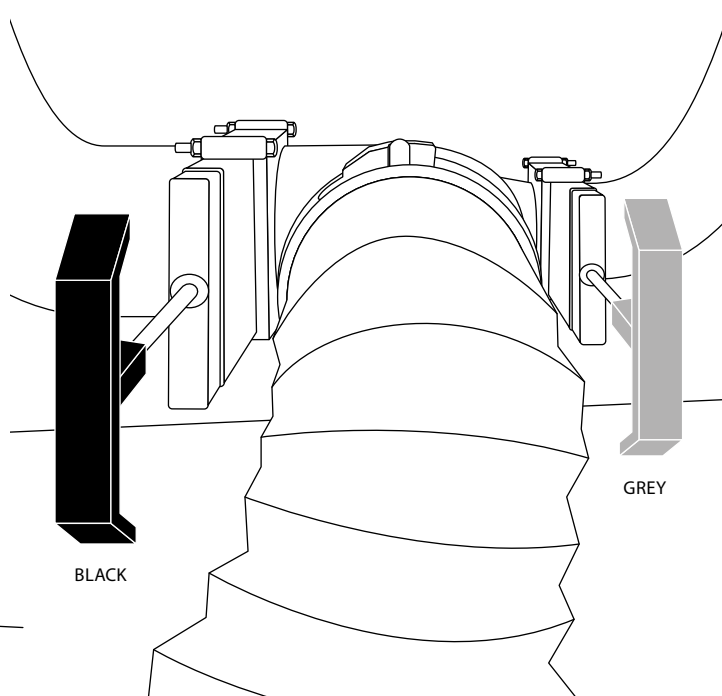
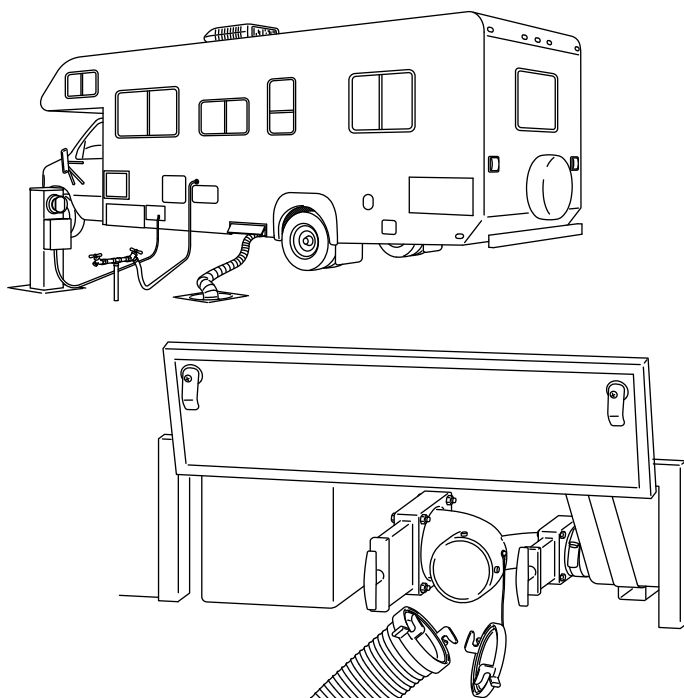


FIGURE 26: EMPTYING THE HOLDING TANKS

SMOKE DETECTOR

The RV is equipped with a smoke detector for your protection and peace of mind. It is located on the ceiling. The detector is powered by replaceable batteries. If batteries need to be replaced, the detector will emit a periodic chirping sound. Replace batteries with new ones. Keep the receipt for reimbursement by El Monte RV.

Do not disconnect the smoke detector for the sake of convenience when cooking. Instead, open vents, windows and doors to air the unit out. The smoke detector may save your life.

Replacing the batteries

1. Gently pull down on front of smoke detector to open. It will stay open with the hinge.
2. Remove the **9V battery** and return depleted batteries for El Monte RV to recycle.
3. Install new battery and keep your receipt for reimbursement.
4. Test alarm by pressing **TEST** button.
5. Close smoke detector.

6. Test alarm again.

See FIGURE 27: SMOKE DETECTOR on this page.

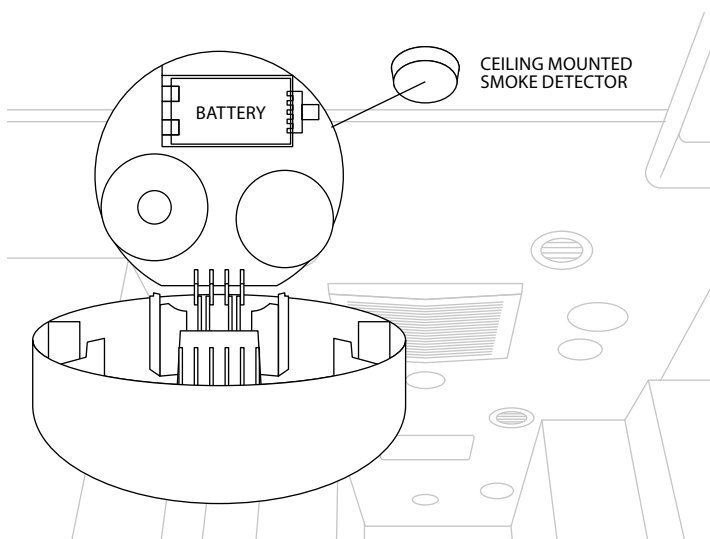


FIGURE 27: SMOKE DETECTOR

PROPANE GAS DETECTOR

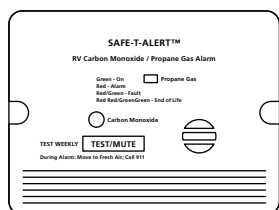


FIGURE 28: GAS/CO DETECTOR

It is important to note the detector is sensitive to more than just propane gas. Other combustibles which may be detected include alcohol, colognes, perfumes and most cleaning fluids. The position of the detector varies according to the make and model of the RV. It is usually located close to the floor of the coach.

If you smell a strong odor of LPG then immediately:

1. Put out any open flame.
2. Turn off the battery disconnect switch.
3. Proceed to the exterior LPG shut off valve and turn off the LPG flow.
4. Open all windows, vents, and the entry door.
5. Check your stove / oven to ensure the knobs are in the OFF position.
6. Call our toll-free Roadside assistance number for directions.

Never operate the RV's stove and or oven while driving.

Never leave the appliance unattended during use.

Never use the stove or oven for heating or to dry clothing. Please take time to locate its position.

See FIGURE 28: GAS/CO DETECTOR on this page.

CARBON MONOXIDE (CO) DETECTOR

The carbon monoxide detector is an electronic device designed to detect and alert you of possible CO gas in the RV. This detector is in combination with the propane gas detector. Strong cleaning chemicals, nail polish or dust can set off the alarm.

FIRE EXTINGUISHER

Locate the position of the fire extinguisher in the RV. In most cases this will be near the step well of the coach entry door. The fire extinguisher is provided for emergency use only and should never be used to extinguish a campfire.

See FIGURE 29: FIRE EXTINGUISHER on this page.




FIGURE 29: FIRE EXTINGUISHER

To use the fire extinguisher:

1. Pull the ring at the top.
2. Aim the nozzle at the base of the flames and press or squeeze the lever.
3. Spray over the entire width at the base of the flames by sweeping the nozzle from side to side.

EMERGENCY EXIT

The RV has an emergency exit which is marked by the word **EXIT** on one of the rear windows. You may also exit the RV by the main entry door or the front cab doors.

COACH WINDOW OPERATION

The RV windows may be opened by pulling slightly on the latch to release the window and sliding the glass. El Monte RV recommends closing the vents and coach windows while driving to prevent damage from wind, rain and dust.

COMMUNICATING WITH EL MONTE RV

On the road, you may encounter the need to attend to minor repairs. As per your contract, you may proceed with repairs, and/or parts costing up to but not greater than \$100.00 without prior authorization.

Please keep receipts for reimbursement at drop off.

Urgent circumstances, including those on the list below, may occur in which you **must call** the On-Road-Care Team before proceeding. **Do not attempt repairs** or corrections without calling El Monte RV's On Road Care Team immediately at the **number on key tag**.

1. If the incorrect fuel is added to your fuel tank, **STOP**. Do not start or drive the RV. Call the On Road Care Team.
2. If you have a **flat tire**, see TIRES on page 13. Call the On Road Care Team.
3. After any **automobile accident** or **collision**, see AUTOMOBILE ACCIDENT on this page. Call the On Road Care Team for help.
4. In the case of a **mechanical failure** rendering the RV inoperable, see EMERGENCY – BREAKDOWN on this page
5. If alarms are heard from any detectors, stop the RV, turn off the engine, turn off the battery disconnect switch, turn off your LPG tank valve, open doors and windows, check your stove/oven to make ensure the knobs are in the **OFF** position, exit the RV. If an alarm sound continues, locate that alarm and press the reset button. If pressing the button mutes the alarm, turn the battery disconnect back **ON** and turn the propane valve **ON**.
6. If you have had to use the **fire extinguisher**, call the On Road Care Team to report usage.

AUTOMOBILE ACCIDENT

If anyone is injured, seek medical help first.

If necessary, call **911** for the police and ambulance.

1. Do not move the person or the RV.
2. Turn the hazard lights on (flashers).

Call the On Road Care Team. To keep your insurance effective, you must contact us within 24 hours of any accident. There is an envelope in your glovebox that has the registration, insurance details and two copies of a Collision Report. Complete the Collision Report as detailed as possible, take a clear picture of it and email to our On Road Care Team within 24 hours.

If you don't have a Collision Report, collect the following from the other parties involved::

1. Name, address, and telephone number of the driver.
2. Driver's license number and the province/state/country in which it was issued.
3. License plate number and the name of the registered owner.
4. All insurance information, i.e. the name of the insurance company, the policy number, the effective and expiration dates of the policy and year, make & serial number of the vehicle.
5. A description and as many photos as possible of all noticeable damage to all involved vehicles and any fixed objects or property.
6. Collect the name, address and telephone number of any passengers and/or witnesses.
7. If the police are called, get the officer's name, badge number, telephone number, and police file number.

EMERGENCY – BREAKDOWN

In the case of mechanical failure rendering the RV inoperable:

1. If possible, move the RV completely off the road.
2. Call the On Road Care Team.

If you are in a remote area, raise the hood and attempt to flag a passerby. Ask the person who stops to call the On Road Care Team number for you. Give that passerby your rental agreement number and RV number to reference the call.

Never abandon the RV under any circumstances.

REPAIRS

1. Guests are authorized and will be reimbursed for repairs up to \$100.00.
2. All repairs over \$100.00 require an authorization from El Monte RV.
3. Maintaining fluid levels does not require authorization.

RETURNING TO EL MONTE RV

PRE-DROP-OFF REQUIREMENTS

We would be happy if you return the RV in the same condition as you received it. Drop off may require some time to complete, please be prepared. Schedule your post RV travel accordingly.

El Monte RV branches are open for drop off between 8:00am - 11:00am (hours can be different in winter). An additional fee will apply for late drop-offs.

1. Appliances, bathroom, cupboards, all surfaces, and floor are clean. The floor does not need to be mopped, just broom clean.
2. Make sure all dishes are washed and put back in the kitchen cabinets/drawers.
3. Drain the waste tanks.
4. Remove all garbage.
5. The fuel tank is filled to the same level as at pickup.
6. One full tank of propane is included with the starter kit, guests who do not receive a starter kit must return the unit with the propane tank full.

7. Emptying of the freshwater tank is not required.
8. Make sure all your luggage is packed before arriving at the drop off branch.

Remember to re-check all cupboards and storage compartments for personal items.

DO YOU WANT TO BECOME OUR GUEST FOR LIFE?

It's been our pleasure to welcome you as our Guest. Thank you for choosing to experience the U.S. in an El Monte RV. We are sure your travels have been rewarding. You, like many of our Guests, may have had thoughts about owning your own RV and all the freedom that could provide.

Please check out our professionally maintained used RVs for sale at www.ElMonteRVSales.com and speak with one of our Sales Agents to learn how the price of your El Monte RV experience can be applied towards your purchase.

TROUBLESHOOTING

TABLE 1: STARTUP

Problem	Cause	Solution
RV ignition key will not turn	Gear selector not in Park	Place gear selector in the Park position.
	Steering system is locked	Rotate steering wheel left and right while turning key.
RV ignition key will turn but engine will not start	Low engine battery	Use EMERGENCY STARTER on page 12

TABLE 2: 12-VOLT SYSTEM

Problem	Cause	Solution
No 12-Volt power in RV	Battery disconnect switch is turned off	Turn battery disconnect switch ON .
	Low coach battery	Run the engine or generator to recharge the coach battery or connect to campsite power. Recharging requires a minimum of four hours, but a full charge may require twice that time.

TABLE 3: ELECTRICAL AWNING

Problem	Cause	Solution
Awning does not move	Safety inter-lock engaged	Apply parking brake and remove key from ignition.
	No power supply	Turn on battery disconnect.
	Weak battery	Running engine for 15min - start generator - turn off engine
		Connect to campground electricity
	Fuse blown	Replace fuse in fuse box

TROUBLESHOOTING

TABLE 4: 120-VOLT ELECTRICAL SYSTEM

Problem	Cause	Solution
RV breaker/fuse box and/or campsite power pole breakers keep tripping	Overloaded circuits	Turn off appliances and unplug personal items, then reset all breakers inside RV breaker/fuse box and at the campsite power pole. Turn them all to OFF and then back to ON again.
RV generator running but no 120-Volt power	Breakers in RV breaker/fuse box tripped	Reset all breakers inside RV breaker/fuse box. Turn them all to OFF and then back to ON again.
	Breaker on the generator tripped	See TABLE 5.
Plugged into campsite power pole but no 120-Volt power in coach	Power cord poorly connected at one or both ends	Remove and re-insert the power cord at both ends. See ELECTRICAL HOOK UP on page 17
	Breaker at campsite power pole is off	Cycle campsite power pole breakers OFF and ON again.
	Breakers in the RV breaker/fuse box are off	Reset all breakers inside RV breaker/fuse box. Turn them all to OFF and then back to ON again.
120-Volt power outlets inside and outside the RV do not work	Breakers in the RV breaker/fuse box are tripped	Reset all breakers inside RV breaker/fuse box. Turn them all to OFF and then back to ON again.
	GFCI outlet tripped	Press the RESET button on bathroom, galley or exterior GFCI outlets. See FIGURE 11: GFCI OUTLET on page 23.

TABLE 5: GENERATOR

Problem	Cause	Solution
Generator fails to crank	Low coach battery	Start RV engine then start generator.
Generator cranks but won't start	Not enough RV fuel	Add RV fuel. The tank needs to be more than ¼ full.
Generator starts and runs then stops when start switch is released	Low oil level	Bring oil to the appropriate level. See GENERATOR CHECKS on page 24.
Generator breaker	Overloaded breaker	Turn off some of the electric load and then reset the breaker. See FIGURE 13: GENERATOR COMPARTMENT on page 24.
Generator runs then surges	Generator engine is not up to operating temperature	Turn off all appliances and allow the generator 3-4 minutes to warm up.

TABLE 6: FURNACE

Problem	Cause	Solution
Furnace blows cold air only	Thermostat is set on fan instead of furnace	See FURNACE on page 24.
	Control System needs to be reset	Turn the battery disconnect switch to the OFF position for 30 seconds and turn back ON .
	Propane gas shut-off valve is closed	Open the propane gas shut-off valve.
	Propane gas tank is empty	Have the propane gas tank refilled.
	Air in the propane gas lines	Turn the furnace off. Light a stove burner and run until the flame is steady. Turn the furnace on. If after 45 seconds there is no heat, turn it off. Repeat, it may require 3 reset cycles to purge the air.
	Low coach battery	See TABLE 2.
Furnace blows hot air but roof top AC fan is on	Thermostat fan setting is incorrect	See FURNACE on page 24 to set fan to AUTO .
	Heat Pump Icon ON with Furnace Icon ON	Press mode button once more or until ONLY Furnace Icon is ON .

TROUBLESHOOTING

TABLE 7: WATER HEATER

Problem	Cause	Solution
No hot water using electric water heater	Water heater electric switch is off	Press the water heater electric switch ON at the monitor panel.
	No 120-Volt power	See TABLE 3.
No hot water when using gas water heater	Water heater gas switch is off	Press the water heater gas switch to ON at the monitor panel.
	Propane gas shut-off valve is closed	Open the propane shut-off valve.
	Propane gas tank is empty	Have the propane gas tank refilled.
	Air in the propane gas line	Light a stove burner and run until the flame is steady. Cycle the gas water heater switch several times until the water heater turns on, waiting 45 seconds between cycles.
	Flame was blown out by the wind	Reposition RV away from wind.
	Low coach battery	See TABLE 2.
Water heater does not re-ignite after use	Water in tank is already hot	Carefully check if water from the faucet is already hot.
Water dripping from exterior water heater cover	The water heater relief valve is weeping	A few drips are part of normal operation.
DSI/FLT light above switch is ON continuously	Gas water heater ignition failure	Turn water heater switch off, and then back on. Attempt this twice.

TABLE 8: SOLAR PANEL

Problem	Cause	Solution
Red light flashing on the solar controller.	Not enough sun light for the panels to charge.	Move your RV into the sun light.

TABLE 9: FRIDGE/FREEZER

Problem	Cause	Solution
Electric fridge does not cool or is not cold enough	Low coach battery	See TABLE 2: 12-VOLT SYSTEM.
	Temperature control set incorrectly	The recommended temperature setting for the fridge is 3 or COLD, the middle setting is recommended for the freezer if applicable.
	Frozen air circulation chamber	Contact On Road Care.

TABLE 10: MICROWAVE

Problem	Cause	Solution
Microwave will not operate	No 120-Volt power to microwave	See TABLE 3.

TABLE 11: DRAINAGE

Problem	Cause	Solution
Sink, toilet or shower is not draining	Grey or black tank if full	Check the monitor panel for tank indication. If the tank is full, empty the tank at an available sani dump.
	Grey or black tank if clogged	Do not use caustic chemicals to unclog drains. Contact On Road Care.

TROUBLESHOOTING

TABLE 12: ROOF AIR CONDITIONER

Problem	Cause	Solution
Roof air conditioner does not run	Thermostat not set correctly	See ROOF AIR CONDITIONER on page 31.
	No 30-Amp 120-Volt power	Confirm 30-Amp for dual A/Cs. See TABLE 3.
Roof air conditioner does not stay running	Cooling coils inside Air Conditioner are frozen	Turn off AC and let stand for 45-60 minutes to allow thawing.
	Air Conditioner breaker keeps tripping	See TABLE 3.
Air conditioner leaking clear fluid	Air Conditioner unit releasing condensation	It is normal for AC to release condensation.

TABLE 13: FRESH WATER SUPPLY

Problem	Cause	Solution
No fresh water in the RV	Water pump switch is off	Turn the water pump switch on at the monitor panel.
	Fresh water tank empty	Fill fresh water tank.
	No campsite water supply	Attach the fresh water hose to the CITY WATER connection on the RV. Attach the other end to the campsite water supply and open the campsite water valve.
No water coming out of taps when water pump is on, and tank has been refilled	Running water pump when water tank was empty, air in water lines	Contact On Road Care.

TABLE 14: SLIDE ROOM

Problem	Cause	Solution
No slide movement when switch is pressed	No Power	Follow instruction posted at slide switch, engage the parking brake and start the RV engine.
Slide jams or stops partway in or out	Obstructions in the path of the slide	Remove any objects over, under and at the sides that are blocking movement. Check both inside and outside the RV. Reverse slide direction for a few inches and try again.
	Low power	Follow instruction posted at slide switch, engage the parking brake and start the RV engine.
	Slide motors are not synchronized	Reverse direction until the slide is fully retracted or extended, then try again. Follow directions posted at the slide switch.
	Faulty motor control	Reverse direction by 3-5cm (1-2 inches) , then advance, then reverse and advance until slide is all the way in. Do not operate the slide again unless you have contacted Road care.
	RV is not level	Bring IN the slide room. Ensure the RV is level before operating the slide rooms. Contact On Road Care if you experience further difficulties.

EL MONTE RV LOCATIONS



Los Angeles (LAX)

12818 Firestone Blvd.
Santa Fe Springs, CA 90670
+1 (562) 404-9300

Orlando (MCO)

3800 W Colonial Dr.
Orlando, FL 32808
+1 (407) 872-7730

New York/New Jersey (NYC)

3401 B Tremley Point Rd.
Linden, NJ 07036
+1 (908) 474-9000

Dallas (DFW)

3500 S. Central Expressway (Hwy 75)
McKinney, TX 75070
+1 (972) 562-1900

Miami (MIA)

[c/o RV Florida Group LLC]
13700 SW 248th Street
Princeton (Miami), FL 33032
+1 (305) 362-2777

Chicago (ORD)

21W700 North Ave.
Glen Ellyn, IL 60137
1+ (630) 469-1936

San Francisco (SFO)

6301 Scarlett Ct.
Dublin, CA 94568
+1 (925) 803-0331

Seattle (SEA)

1541 S. 96th Street
Seattle, WA 98108
+1 (206) 334-7303

Las Vegas (LAS)

3800 Boulder Highway
Las Vegas, NV 89121
+1 (702) 269-8000

Denver (DEN)

6586 Brighton Blvd.
Commerce City, CO 80022
+1 (720) 570-1200

San Diego (SND)

[c/o Santee Rents]
8665 Mission Gorge Road # A1
Santee, CA 92071
+1 (619) 449-1513

Salt Lake City (SLC)

c/o Full Service Storage
2222 West 2300 South
West Valley City, UT 84119
+1 (801) 256-6818

12-Volt system	26	Figure 16: Extended countertop	27	Requires registered technician	15
120V-Volt system	23	Figure 17: Thermostat 1	27	Roof air conditioner	27
Airbag readiness	15	Figure 18: Thermostat 2	27	RV with respect	4
Anti-lock Brake System (ABS)	15	Figure 19: Solar panel display	27	Safety systems	31
Anti-theft system	15	Figure 20: 12-Volt battery power fridge/ freezer	28	School buses, school zones & playground zones	12
Arriving at the campsite	17	Figure 21: Fridge style 2	28	Seat belt	15
Automobile accident	33	Figure 22: Lighting the stovetop	29	Seats & seat belts	11
Awning electric	19	Figure 23: Water saver button	30	Secure the coach for travel	8
Battery level	22	Figure 24: Showerhead style 2	30	Service engine soon	15
Before you go	7	Figure 25: Toilet flush	30	Shower head	30
Bench dinette	19	Figure 26: Emptying the holding tanks	31	Slide operation	23
Bench dinette 2	19	Figure 27: Smoke detector	32	Smoke detector	32
Braking & hill braking	11	Figure 28: Gas/CO detector	32	Solar panels	27
Breaker/fuse box	24	Figure 29: Fire extinguisher	32	Speed & acceleration	11
Campsite/city water hook up	18	Fire extinguisher	32	Stability & traction control indicator	15
Carbon monoxide (CO) detector	32	Fresh water tank fill	18	Steering	11
Charging system	15	Fridge/freezer	28	Stovetop	29
Check fuel cap	15	Fueling the RV	9	Switches on the monitor panel	22
Clearances	11	Fueling the RV	12	Table 1: Startup	34
Communicating with El Monte RV	33	Fuel reminder	12	Table 2: 12-Volt system	34
Complete inside list	20	Furnace	25	Table 3: 120-Volt electrical system	35
Convection microwave	26	Generator	24	Table 4: Electrical awning	34
Cruise control	15	Headlight warning chime	15	Table 5: Generator	35
Draining the waste tanks	30	High beam	15	Table 6: Furnace	35
Driver aware	11	Key in ignition warning chime	15	Table 7: Water heater	36
Driver set up	8	Keys	8	Table 8: Solar panel	36
Driving & maneuvering the RV	10	Lights & chimes	15	Table 9: Fridge/freezer	36
Dry camping	25	Low fuel	15	Table 10: Microwave	36
Electrical hook up	17	Low tire pressure warning	15	Table 11: Drainage	36
Electrical systems	23	Main battery switch	26	Table 12: Roof air conditioner	37
Electronic throttle control	15	Maintaining the RV when travelling	12	Table 13: Fresh water supply	37
Emergency – breakdown	33	Making dinette into bed	19	Table 14: Slide room	37
Emergency starter	12	Microwave	26	Television	19
Engine coolant temperature	15	Monitor panel	22	Tips for a safe trip	11
Engine oil pressure	15	Oil	13	Tires	13
Extended countertop	27	Operating systems in the RV	21	TIRES	19
Figure 1: Keys	8	Operating the generator	24	Toilet	30
Figure 2: Fuel filling cap	9	Outlets	23	Tow/haul	13
Figure 3: Park brake & brake release	9	Outside check list	20	Transmission tow/haul	15
Figure 5: Emergency startup switch	12	Parking & backing up	11	Turn signal	15
Figure 6: Propane tank	13	Parking brake & brake warning	15	Under the hood	13
Figure 7: Tow/haul button	13	Parking brake on warning chime	15	U-shaped dinette	19
Figure 8: Electric hook up	17	Parking, camping & enjoying the RV	16	Vehicle symbol glossary	14
Figure 9: Fresh water intake & campsite/ city water connection	18	Plan your route	9	Walk around tour	8
Figure 10: Monitor panel	22	Pre-drop-off requirements	34	Waste tank hook up	18
Figure 11: GFCI outlet	23	Preparing to depart the campsite	20	Waste water systems	30
Figure 12: RV breaker/fuse box	24	Propane gas appliances	29	Water heater	25
Figure 13: Generator compartment	24	Propane gas detector	32	Water pump switch	22
Figure 14: Main battery switch	26	Propane tank	13		
Figure 15: Convection microwave	26	Repairs	33		

EL MONTE RV®

