

SPORTS RACING

HIGH-SPEED
1:10 SCALE

H
HOSIM[®]
POWER IN YOUR HANDS!



NO.X07
NO.X08
NO.X07W



Hosim Store



Facebook



Instagram



Prize Questionnaire

✉ US@HOSIM.COM
🌐 WWW.HOSIM.COM
📞 Phone: +1 (989) 430-5314

RECHARGEABLE BATTERY
LETS YOU ENJOY THE FUN OF DRIVING

2.4Ghz

REMOTE CONTROL SYSTEM
ALLOWS FOR INTERFERENCE-FREE RC ACTION

4WD

INDEPENDENT SUSPENSION
FOR IMPROVED SHOCK ABSORPTION

AGES 14+

CONTENTS

01~05	Precautions
06~09	Product configuration
10~14	Quick start
15	Operation
16~19	Troubleshooting
20~23	Parts list
24~33	Exploded view
34	Warranty policy
35	Contact
36	Active warranty
37	CE & FCC

Introduction

Thank you for purchasing our Hosim RC Truck. Amazingly speed, efficient operation and long run times are just some of the benefits.

This manual contains the instructions you will need to operate and maintain your model so that you can enjoy it for years to come. However, please be advised that this model is a hobby-grade RC car which will require maintenance and replacing parts. Rest assured that Hosim is a team of professionals who aim to provide the highest level of factory support possible.

We know you're excited about getting your new model on the road, but it's very important that you take some time to read through the Owner's Manual. This manual contains all the necessary setup and operating procedures that will allow you to unlock the performance potential that Hosim engineers designed into your model. Also, be sure to read and follow the precautions and warnings in this manual and on any labels or tags attached to your model. They are there to educate you on how to operate your model safely and also get maximum life and performance from your model. Even if you are an experienced R/C enthusiast, it's important to read and follow the procedures in this manual.

Thank you again for choosing Hosim RC Cars. We work hard every day to assure you receive the highest level of customer satisfaction possible.

We truly want you to enjoy your new model!

Terms of use

This product is surrendered by Hosim to the purchaser with the understanding that the purchaser accepts the responsibility that driving this model and using the enclosed accessories in a careless, improper, or unsafe manner can result in serious injury or death.

Also, the purchaser assumes all liability resulting from any misuse, unsafe handling, failure to follow instructions, or any action that constitutes a violation of any applicable laws or regulations. Hosim shall not be liable for personal injury, loss of property, or loss of life resulting from the use of this product under any circumstances, including intentional, reckless, negligent, or accidental behavior. Hosim shall also not be liable for any special, indirect, incidental, or consequential damages arising out of the assembly, installation, or use of their products or any accessory or chemical required to use their products. By the act of operating/using the product, the user accepts all resulting liability and releases Hosim of any and all liability associated with its use. If you as the user do not accept liability of ownership, Hosim requests that you do not use this product.

Do not open any of the enclosed materials. Return the model to Hosim but please be advised that we absolutely cannot accept an item for return or exchange after it has been run or is otherwise no longer in as-new condition. All information contained in this Owner's Manual is subject to change without notice. Hosim reserves the right to make changes and improvements to products without incurring any obligation to incorporate such improvements into products previously sold.

If you have any questions about your model or its operation, call Hosim Customer Support at **+1 (989) 430-5314 or**
US@HOSIM.COM

Safety is your responsibility!

• WARNING: RISK OF INJURY!

Do not stand directly behind the car while driving to avoid personal injury from rocks, sticks, or other thrown objects, especially during full throttle starts. Keep any spectators and animals at a safe distance. Wearing eye protection is recommended.

WARNING! CAUTION! DANGER! FIRE HAZARD!

CHARGING AND DISCHARGING BATTERIES HAS THE POTENTIAL FOR FIRE, EXPLOSION, SERIOUS INJURY, AND PROPERTY DAMAGE IF NOT PERFORMED AS PER THE INSTRUCTIONS. BEFORE USE, READ AND FOLLOW ALL MANUFACTURER'S INSTRUCTIONS, WARNINGS AND PRECAUTIONS.

NEVER ALLOW CHILDREN UNDER THE AGE OF 14 TO CHARGE OR USE THE BATTERIES WITHOUT THE SUPERVISION OF A RESPONSIBLE, KNOWLEDGEABLE ADULT.

DO NOT LEAVE THE BATTERIES OR CHARGER UNATTENDED WHILE CHARGING.

Charging and handling precautions

- **REMOVE the batteries from your car before charging.**
 - DO NOT let any exposed battery contacts or wires touch each other. This will cause the battery to short circuit and create the risk of fire.
 - While charging, ALWAYS place the battery on a nonflammable surface such as concrete.
 - NEVER charge batteries on wood, cloth, carpet or on any other flammable material.
 - ALWAYS charge batteries in a well-ventilated area.
 - REMOVE flammable items and combustible materials from the charging area.
 - DO NOT place objects on top of the charger or batteries.
 - If any battery or battery cell is damaged in any way, do NOT charge, discharge, or use the battery.
 - DO NOT disassemble, crush, short circuit, or expose the batteries or cells to flame or any other source of ignition.
 - If a battery gets hot to the touch during the charging process, disconnect the battery from the charger and discontinue charging immediately.
 - ALWAYS unplug the charger and disconnect the batteries when not in use.
 - DO NOT leave the charger and batteries unattended while charging, discharging, or any time that the charger is ON with batteries connected.
- If there are any signs of a malfunction or in the event of an emergency, unplug the charger from the power source and disconnect the batteries from the charger.
- DO NOT expose the batteries and charger to water or moisture.
 - ALWAYS store battery packs safely out of the reach of children and pets.
 - DO NOT charge batteries under ANY of the following conditions:
 - Batteries that are hot to the touch.
 - Batteries that are not expressly stated by the manufacturer to be suitable to accept the power output (voltage and amperage) the charger delivers during the charging process.
 - Batteries that are damaged or defective in any way.
- Examples of damage or defects include, but are not limited to, batteries with dented cells, damaged or frayed wires, loose connections, fluid leaks, corrosion, plugged vents, swelling, cell deformity, impact damage, melted components, or any other signs of damage.
- Battery packs that have been altered from original manufacturer configuration.
 - Non-rechargeable batteries (explosion hazard).
 - Batteries that have missing or unreadable labels, preventing you from properly identifying the battery type and specifications.

Precautions

- Because your model is controlled by radio, it is subject to radio interference from many sources that are beyond your control. Since radio interference can cause momentary losses of radio control, always allow a safety margin in all directions around the model in order to prevent collisions.
 - Range test your radio system in the area that you will be running the model to ensure that you have range that covers the area you want to drive.
- After range testing, drive slowly in the area at first to make sure there is no interference that can cause momentary lapses of control.
- Always use new or freshly charged batteries in your model to maximize signal power output and range.
 - The motors, batteries, and speed control can become hot during use. Be careful to avoid getting burned.
 - Choose the right location to drive. Your model is absolutely not intended for use on public roads or congested areas where its operation can conflict with or disrupt pedestrian or vehicular traffic. This is to prevent the possibility of injury or death resulting from collision with the model by another human being or animal.
 - Do not drive the RC car by yourself. Bring a friend along to act as a spotter to alert you if a person or animal is approaching.
 - Do not operate your model at night, or anytime your line of sight to the model may be obstructed or impaired in any way.
 - Do not drive the model close to you where a mistake or loss of control could cause the model to collide with you or any spectator.
 - Always carefully inspect your model for damage or loose components before running.
- Do not drive the model if it is damaged in any way. Tighten any loose hardware.
- Never pick up the model by its tires or wheels. Always keep your hands safely clear of moving parts whenever the batteries are plugged in.
 - Keep the RC car stored with the batteries removed, out of the reach of children and protected from access by any other unauthorized driver.
 - Always disconnect the batteries in the model when it is not in use.
- Never store the vehicle with batteries in the model, as this can cause a fire leading to property damage, serious personal injury or even death.
- Do not continue to operate the model with low batteries or you could lose control of it.
- Indications of low battery power include slow operation and delayed vehicle response.
- Stop immediately at the first sign of weak batteries. When the batteries in the transmitter become weak, the red power light will begin to flash.
- Stop immediately and install new batteries.
- Most importantly, use good common sense at all times.

Speed control

Your model's electronic speed control (ESC) is an extremely powerful electronic device capable of delivering high current. Please closely follow these precautions to prevent damage to the speed control or other components.


- **Disconnect the Battery:** Always disconnect the battery or batteries from the speed control when not in use.
- **Insulate the Wires:** Always insulate exposed wiring with heat shrink tubing to prevent short circuits.
- **Transmitter on First:** Switch on your transmitter first before switching on the speed control to prevent runaways and erratic performance.
- **Don't Get Burned:** The ESC and motor can become extremely hot during use, so be careful not to touch them until they cool. Supply adequate airflow for cooling.
- **No Reverse Voltage:** The ESC is not protected against reverse polarity voltage.

MOTOR CARE

- **Seat the by driving smoothly on a flat surface during use of the first battery charge.** Failing to do so can greatly reduce motor performance and functional life.
- **Prolong motor life by preventing overheating conditions.** Undue motor wear results from frequent turns, stops and starts, pushing objects, driving in deep water and tall grass, and driving continuously up hill.

Tighten the wheel

Tighten the wheel nuts before each running session and periodically check the tightness of the wheel nuts while you are running.

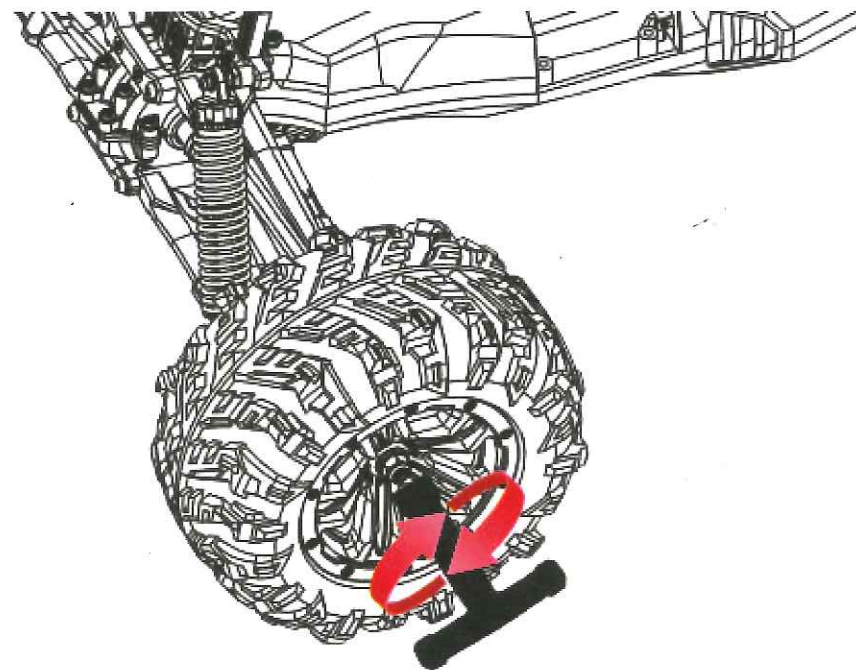

X07 Product Configuration



Transmitter



2*7.4V 2600mAh Battery Pack



Waterproof Bag



USB charger



Wrench



ScrewDriver



Cleaning Brush



Body Clips



Body clip



Wheel Nuts



Battery Strap



User Manual

X08 Product Configuration



Transmitter



2*7.4V 2600mAh Battery Pack



Waterproof Bag



USB charger



Wrench



ScrewDriver



Cleaning Brush



Body Clips



Body clip



Wheel Nuts



Battery Strap



User Manual

X07W(Blue) Product Configuration



Transmitter



2*7.4V 2600mAh Battery Pack



Waterproof Bag



USB charger



Wrench



ScrewDriver



Cleaning Brush



Body Clips



Body clip



Wheel Nuts



Battery Strap



User Manual

X07W(Purple) Product Configuration



Transmitter



2*7.4V 2600mAh Battery Pack



Waterproof Bag



USB charger



Wrench



ScrewDriver



Cleaning Brush



Body Clips



Body clip



Wheel Nuts




Battery Strap



User Manual

Remove The Truck Body

Pull out the pins and remove the body

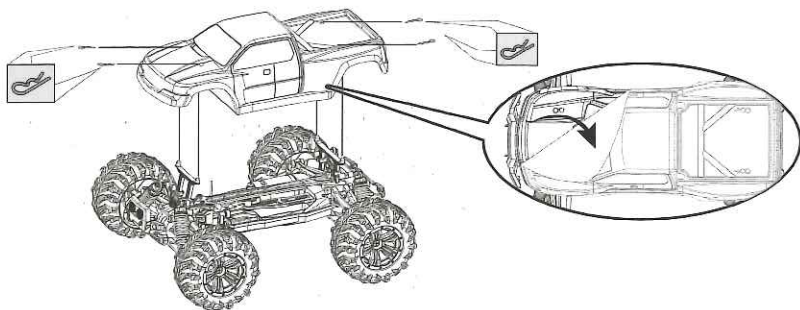


Make sure all accessories are properly attached, remove the protection film from the body before turning on the truck.


Install Transmitter Batteries

- 1、Remove the battery lid.


Battery lid

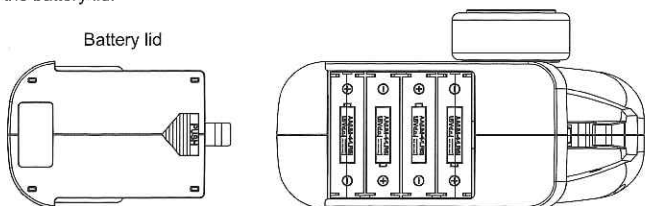

- 2、Load 4 AA-size alkaline batteries as shown in the illustration. Caution: install batteries with correct polarity.

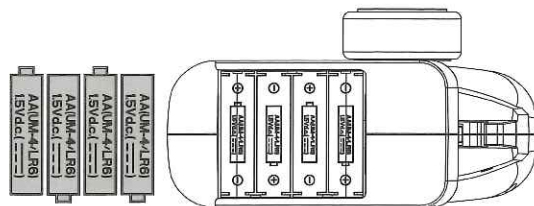



- 3、Replace the lid as shown.

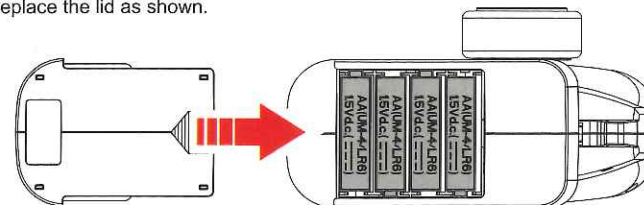


⚠ Cautions: The longest distance is above 80 meters and distance beyond this can affect the sensibility of the operation.

Charge and Install Rechargeable Battery Pack

- (1)a) Insert the USB charger into the outlet (figure 4).
b) Connect the battery pack to the USB charger (figure 5) note the solid red light on the charger.
c) When charging is completed, red light and green light.
- (2) Remove the model lid, open the battery cover lid

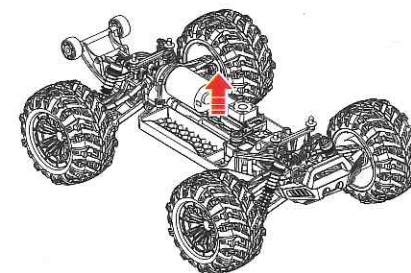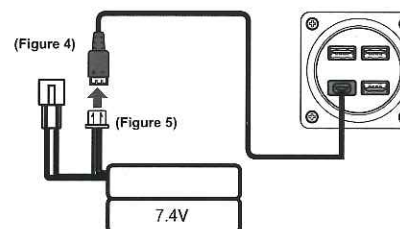


- (3) Installing battery

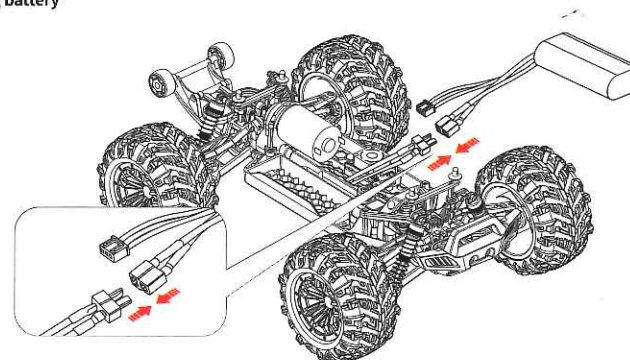


USB Charger Precautions

⚠ CAUTION


- (1).The USB charger does not apply the input current bigger than 4A.
(2).When input current is bigger than 4A,the USB charger will start-up protection mode ,all the lights will turn off.



Transmitter instructions

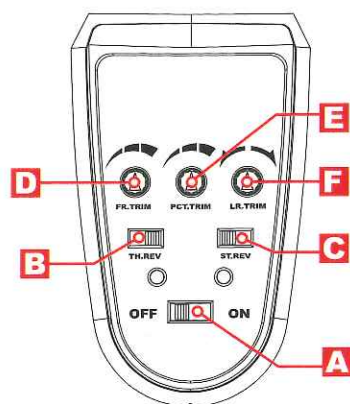

- A. Power switch C. Steering switch
 B. Front and rear switch
 D. Percentage adjustment before and after
 E. Steering gear percentage fine adjustment
 F. Left and right fine adjustment of steering gear

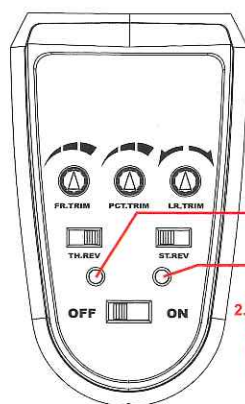

1. Turn on the power switch on the transmitter, red LED will turn solid and green LED will flash.


(1) Red LED

(2) Green LED

2. When pairing successful with the car, green LED will turn solid.




Green LED will flash when power is low on the transmitter, please replace the batteries before continuing

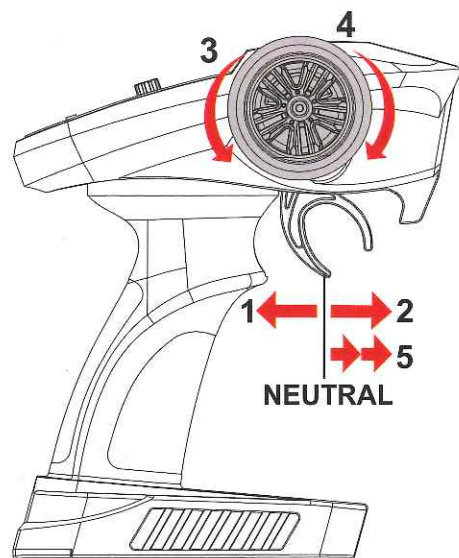


1. Forward 4. Right
 2. Brake 5. Backward
 3. Left

2.4GHz Top
 Qualified

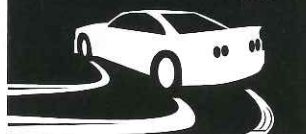

Transmitter switch instructions

A. Transmitter (Switch)

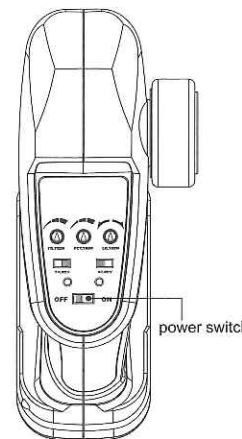



- Red-green flashes indicate shortage of power.
- Solid red and flashing green indicate a state of pairing.
- Flashing red with no green indicate serious shortage of power. Please replace batteries immediately.

⚠ Cautions:

- A new frequency bind is required after each on-off of the power switch.
- Switch OFF the power switch of chassis and then switch OFF the power switch of the transmitter after playing.
- Remove all batteries when it's not used for a long time.



B. Check the Steering

Operate the steering wheel to check if the front tires move correctly.

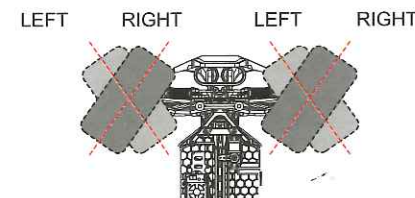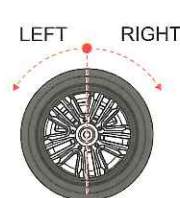

Amount of front tire movement varies according to the amount of the steering wheel movement. If the wheel is turned all the way left or right, the front tires will also steer all the way right or left.

C. Turn Trim

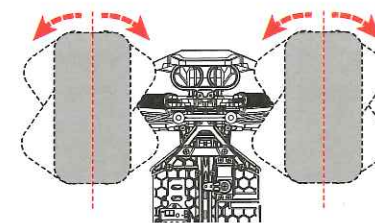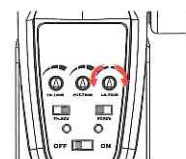


For adjusting the front tires left and right.

Precisely adjust the steering trim in case the front tires are not straight but the steering wheel is placed at neutral position.

Adjust again when running.

Transmitter switch instructions

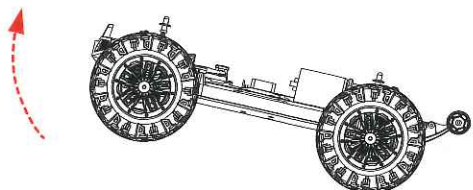


Keep the front tires suspended when adjusting the steering trim.

D. Check Throttle

Pull the transmitter lever backward, the RC car forward.
Pull the transmitter lever forward, the RC car backward.

When the transmitter lever is pulled back halfway, the RC car will move forward slowly.
When the transmitter lever is fully pulled back, the RC car will move forward quickly.

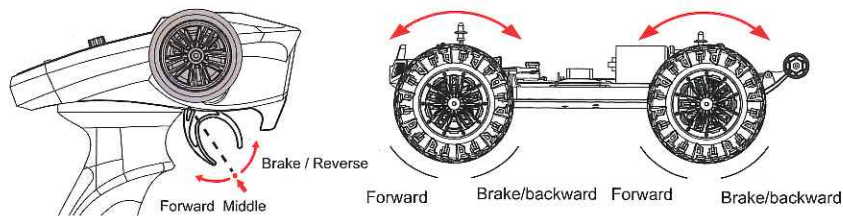


OPERATION

1. ALWAYS turn on your transmitter before you turn on the receiver in the vehicle. Always power off the receiver before turning your transmitter off.




2. ALWAYS operate your vehicle in a wide open area. Operating the vehicle on slippery floor or indoors may crash because of the high speed.

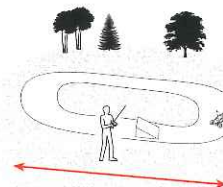

3. WARNING: Please be cautious that the water level should be lower than the bottom of the truck. If excessive amount of water gets into the body of the truck and cause damage or other related problems, We will not be responsible for such damages. Customers will be responsible for any replacements and additional accessories if needed.



4. ALWAYS start with low speed, or the vehicle may slip or run on curves. (as shown on Pic 1) NEVER operate your vehicle in max speed. Operating the vehicle in highest speed may hurt yourself and damage your vehicle.

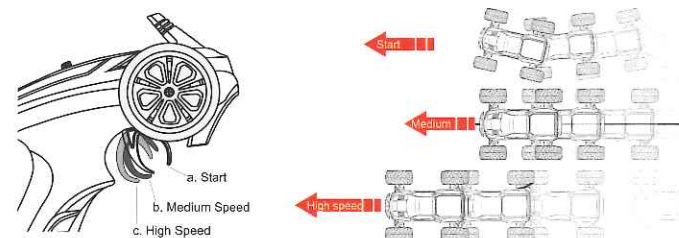

(Pic 1)

Troubleshooting

The vehicle does not move at all

1. Make sure that the vehicle is paired up with the transmitter successfully.
2. Make sure that the battery is connected and has been fully charged before operating.
*LOW-BATTERY MODE: When the power of the battery is low and it has been detected by the vehicle, Low-battery mode will be activated automatically. A flashing red light on the ESC will be discovered and the car light will be flashing at the same time.
3. Please kindly check whether the brushless motor. If unexpected noise (i.e. constantly "Zack" noise) has been found from the motor, then contact us to replace a new motor for you. If the items is still under warranty
4. OVERHEATING-PROTECTION MODE: When the ESC has detected that the internal temperature has reached certain high temperature while driving, in order to protect the vehicle itself, it will shut down the car instantly. Thus, please place the vehicle in a cool place for approximately 10 minutes then you can start to operate again.
WARNING: The temperature of the ESC surface is extremely high please do not touch it directly with your hands for your own safety. Please contact us, if you have proceeded all the instructions above and the vehicle still has no any movement.

Wheels are not spinning properly/coming off

1. Tighten the locknuts #XLF-1012 in place by using the wrench we provided.
2. Please kindly check for the relative connecting parts of the wheel, e.g. optical axis #XLF-1013 and rear dogbone #XLF-JSCD.

Troubleshooting

Wheels are not spinning properly/coming off

3. If all these parts are intact, wheels are still not spinning correctly, then the differentials gears might have been broken and need to be replaced.
Please contact us if you need to replace any spare part from our model vehicle.

Battery is not charging/charger not working

1. If you operate our model vehicle for the first time, make sure that you have used up the power of battery completely before your first charging.
PLEASE NOTICE: DO NOT USE DEFECTIVE/SWOLLEN BATTERY UNDER ANY CIRCUMSTANCES.
2. Followings are the light indications on the USB charger while charging:
Blinking red light for few seconds= USB charger is plugged.
Blinking green light =Battery is charging.
Solid green and red light =Battery is fully charged.
Solid red light turns into flashing=Battery is defective.
Do not hesitate to contact us, if you have found out that the battery or USB charger is inoperative.

Vehicle drives uncontrollably and not respond correctly

1. Please do not press any buttons on the remote while pairing with the vehicle.
2. *RESET MODE: Switch off the vehicle and unplug the battery for about 10 seconds, reconnect the battery with the vehicle and rebind with the remote. Then the vehicle will be commanded properly.

Troubleshooting

Stripping sound upon accelerating

1. Please kindly check and make sure all the parts are right in place. Clean up all the dust and dirt which remain on it. You can also refer to the exploded-view drawings on the manual to confirm exact location of the spare part.
 2. You can also check the front and rear differentials #X07-CS05 #F28-CS02 #X07-CS06.
- These parts should function appropriately with both axles and the main drive shaft.

Customer service

① You can find all replacement parts on our website at WWW.HOSIM.COM.

If you have any questions about your model or its operation, call HOSIM Customer Support at

☎ +1 (989) 430-5314 (EST: 10:00-18:00)

✉ E-mail:

US@HOSIM.COM

CA@HOSIM.COM

EU@HOSIM.COM



If your car has problem, please scan the QR code below for some frequently asked questions and solutions!



TROUBLESHOOTING

Troubleshooting

Vehicle drives uncontrollably and not respond correctly

3. The switches on the remote might have adjusted at maximum level and have not place back to the original point.

*Usually this type of malfunction is caused by a defective transmitter. Please let us know if you are wishing to get the replacement of a new remote in this case.

Vehicle cannot pair up with the transmitter

*If the vehicle is pairing with the remote successfully, solid red light on the ESC will be observed.

1. Ensure the power of 2A batteries is sufficient.
2. Try to keep the transmitter and the vehicle a few feet away from each other while pairing.
3. Try to keep the vehicle away from large metal objects to avoid interruption while pairing.

Steering not working properly

1. Make sure that the batteries from the transmitter and the model vehicle are sufficient.
2. Please kindly check the steering arm set #D12029 and other connecting parts to the steering servo. Tips: Please contact us if you wish to replace the any spare part. If your warranty is expired, no worries, you can find all accessories under our official website: www.hosim.com



NO.C12002	
PRODUCT NAME	Vehicle bottom
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.C12007	
PRODUCT NAME	Upper rocker arm
SPECIFICATIONS	Plastic
QUANTITY	1X2



NO.C12008	
PRODUCT NAME	Front rocker arm
SPECIFICATIONS	Plastic
QUANTITY	1X2



NO.C12009	
PRODUCT NAME	Rear rocker arm
SPECIFICATIONS	Plastic
QUANTITY	1X2



NO.C12010	
PRODUCT NAME	Rear universal joint
SPECIFICATIONS	Metal
QUANTITY	1X2



NO.C12011	
PRODUCT NAME	Front universal joint
SPECIFICATIONS	Metal
QUANTITY	1X2



NO.C12012	
PRODUCT NAME	Rear transmission box
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.C12015	
PRODUCT NAME	Front transmission box
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.MC12018	
PRODUCT NAME	Steering component
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.C12026	
PRODUCT NAME	Shock-proof seat
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.C12028	
PRODUCT NAME	Drag link
SPECIFICATIONS	
QUANTITY	1X2



NO.D12029	
PRODUCT NAME	Rudder connecting pole
SPECIFICATIONS	
QUANTITY	1X1



NO.C12068	
PRODUCT NAME	Tripod
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.X07-TB01	
PRODUCT NAME	Reinforcement piece
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.C12050	
PRODUCT NAME	Motor base
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.C12052	
PRODUCT NAME	Reinforced sheet of rocker arm
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.C12069	
PRODUCT NAME	Hexagonal set
SPECIFICATIONS	Metal
QUANTITY	1X4



NO.C120401	
PRODUCT NAME	Drive gear
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.C120402	
PRODUCT NAME	Drive gear
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.F12025	
PRODUCT NAME	Transmitter
SPECIFICATIONS	
QUANTITY	1X1



NO.FY-BZ02	
PRODUCT NAME	Oil-filled shock absorber
SPECIFICATIONS	
QUANTITY	1X2



NO.FY-BZ03	
PRODUCT NAME	Metal shock absorber
SPECIFICATIONS	
QUANTITY	1X2



NO.FY-JSZ01	
PRODUCT NAME	Hydraulic metal shock absorption
SPECIFICATIONS	
QUANTITY	1X2



NO.FY-JSZ02	
PRODUCT NAME	Hydraulic metal shock absorption
SPECIFICATIONS	
QUANTITY	1X1



NO.X07-CS05	
PRODUCT NAME	Differentials
SPECIFICATIONS	
QUANTITY	1X1



NO.F28-CS02	
PRODUCT NAME	Front differential mechanism components
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.X07-CS06	
PRODUCT NAME	Rear differential mechanism components
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.FY-DT02	
PRODUCT NAME	LED Wire
SPECIFICATIONS	
QUANTITY	1X1



NO.FY-HBX03	
PRODUCT NAME	Rear gear-box assembly
SPECIFICATIONS	
QUANTITY	1X1



NO.FY-QBX03	
PRODUCT NAME	Front gear-box assembly
SPECIFICATIONS	
QUANTITY	1X1



NO.FY-JSB01-S	
PRODUCT NAME	Front rocker arm
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.FY-JSB02-S	
PRODUCT NAME	Rear rocker arm
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.XWSDJ	
PRODUCT NAME	Motor
SPECIFICATIONS	
QUANTITY	1X1



NO.XLF-JSCD	
PRODUCT NAME	Transmission dog bone
SPECIFICATIONS	Metal
QUANTITY	2X2



NO.FY-QFZ04	
PRODUCT NAME	Front bumper
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.FY-SR29	
PRODUCT NAME	Heat sink
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.FY-WY01	
PRODUCT NAME	Tail
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.FY-DJ01	
PRODUCT NAME	Servo
SPECIFICATIONS	
QUANTITY	1X1



NO.FY-5200	
PRODUCT NAME	Battery
SPECIFICATIONS	
QUANTITY	1X1



NO.FY-2600K	
PRODUCT NAME	Battery
SPECIFICATIONS	
QUANTITY	1X1



NO.X7-CK03	
PRODUCT NAME	Body shell
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.X7-CK04	
PRODUCT NAME	Body shell
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.X8-CK03	
PRODUCT NAME	Body shell
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.X8-CK04	
PRODUCT NAME	Body shell
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.X07W-CK01	
PRODUCT NAME	Body shell
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.X07W-CK02	
PRODUCT NAME	Body shell
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.HS-45AH1	
PRODUCT NAME	Brushless ESC
SPECIFICATIONS	
QUANTITY	1X1



NO.X15-2852	
PRODUCT NAME	Motor
SPECIFICATIONS	
QUANTITY	1X1



NO.XLF-12-B	
PRODUCT NAME	Tires
SPECIFICATIONS	
QUANTITY	2X2



NO.XLF-12-R	
PRODUCT NAME	Tires
SPECIFICATIONS	
QUANTITY	2X2



NO.XLF-13	
PRODUCT NAME	Tires
SPECIFICATIONS	
QUANTITY	1X2



NO.XLF-14	
PRODUCT NAME	Tires
SPECIFICATIONS	
QUANTITY	1X2



NO.FY-HC02	
PRODUCT NAME	Steering Servo Arm
SPECIFICATIONS	Metal
QUANTITY	1X1



NO.X-03MAX	
PRODUCT NAME	Wheelie bar
SPECIFICATIONS	Plastic
QUANTITY	1X1



NO.FY-CHA02	
PRODUCT NAME	USB Charger
SPECIFICATIONS	
QUANTITY	1X1



NO.XLF-1018	
PRODUCT NAME	R-shape lock catch
SPECIFICATIONS	R1.2
QUANTITY	1X8



NO.XLF-1012	
PRODUCT NAME	Flange locknut
SPECIFICATIONS	Metal
QUANTITY	1X8



NO.XLF-1007	
PRODUCT NAME	Screw
SPECIFICATIONS	2.6X8PB
QUANTITY	1X8



NO.XLF-1008	
PRODUCT NAME	Screw
SPECIFICATIONS	2.5X12PM
QUANTITY	1X8



NO.XLF-1009	
PRODUCT NAME	Half thread screw
SPECIFICATIONS	2.5X26PB
QUANTITY	1X8



NO.XLF-1010	
PRODUCT NAME	Step screw
SPECIFICATIONS	4X8PM
QUANTITY	1X8



NO.XLF-1020	
PRODUCT NAME	Screw
SPECIFICATIONS	2.5X8.5PM
QUANTITY	1X8



NO.XLF-1021	
PRODUCT NAME	Screw
SPECIFICATIONS	2.6X8KM
QUANTITY	1X8



NO.XLF-1022	
PRODUCT NAME	Screw
SPECIFICATIONS	3X12KB
QUANTITY	1X8



NO.XLF-1023	
PRODUCT NAME	Screw
SPECIFICATIONS	2.3X18KB
QUANTITY	1X8



NO.XLF-1024	
PRODUCT NAME	Screw
SPECIFICATIONS	2.5X15PM
QUANTITY	1X8



NO.XLF-1025	
PRODUCT NAME	Screw
SPECIFICATIONS	3X8PM
QUANTITY	1X8



NO.XLF-1013	
PRODUCT NAME	Steel pipe
SPECIFICATIONS	2.5X10
QUANTITY	1X8



NO.XLF-1014	
PRODUCT NAME	Screw
SPECIFICATIONS	2.5X42PM
QUANTITY	1X8



NO.XLF-1016	
PRODUCT NAME	Bearing
SPECIFICATIONS	5X9X3
QUANTITY	1X4



NO.XLF-1017	
PRODUCT NAME	Bearing
SPECIFICATIONS	8X12X3.5
QUANTITY	1X8



NO.XLF-0154	
PRODUCT NAME	Bearing
SPECIFICATIONS	10X15X4
QUANTITY	1X8



NO.XLF-0168	
PRODUCT NAME	Bearing
SPECIFICATIONS	6.3X9.5X3.2
QUANTITY	1X8



NO.XLF-1001	
PRODUCT NAME	Screw
SPECIFICATIONS	2.5X6PM
QUANTITY	1X8



NO.XLF-1004	
PRODUCT NAME	Screw
SPECIFICATIONS	2.6X12KB
QUANTITY	1X8



NO.XLF-1006	
PRODUCT NAME	Screw
SPECIFICATIONS	2.6X8KB
QUANTITY	1X8




NO.C12053	
PRODUCT NAME	Reinforcement Piece
SPECIFICATIONS	Metal
QUANTITY	1X1




NO.C00000	
PRODUCT NAME	Main driving shaft
SPECIFICATIONS	Metal
QUANTITY	1X1


C12015 Front Transmission Box Set Assembly

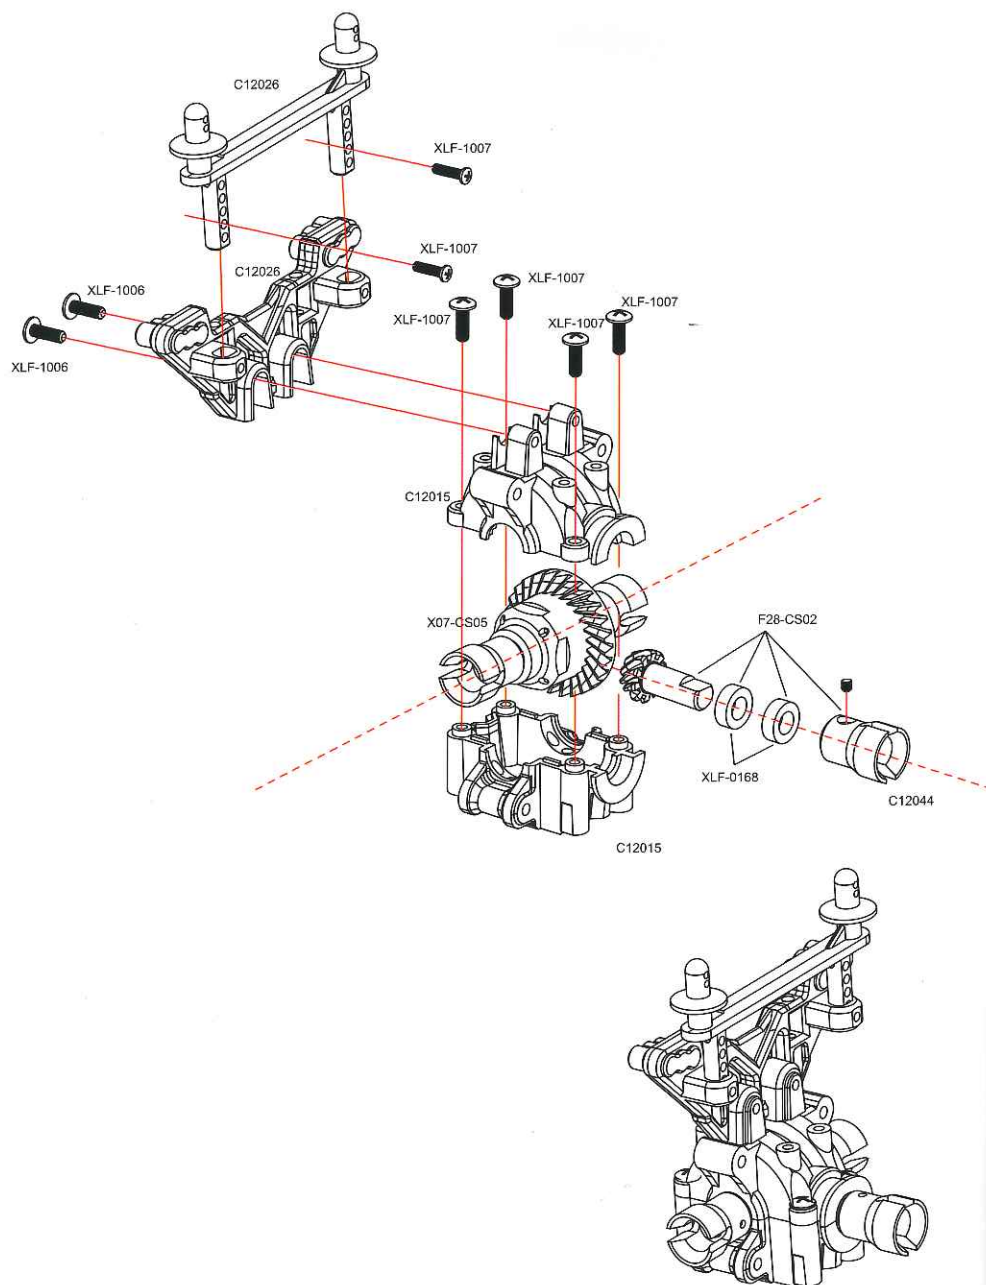


Front Bumper & Front Swing Set Assembly

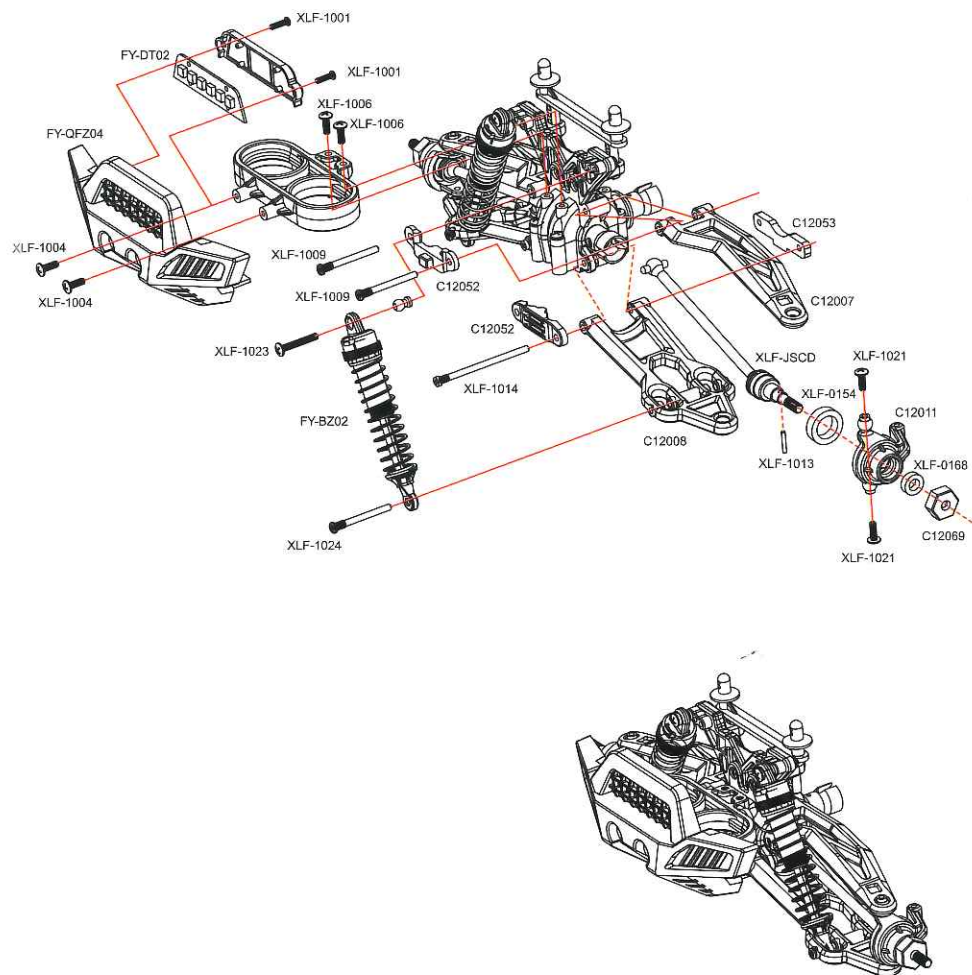


Steering Component Set Assembly

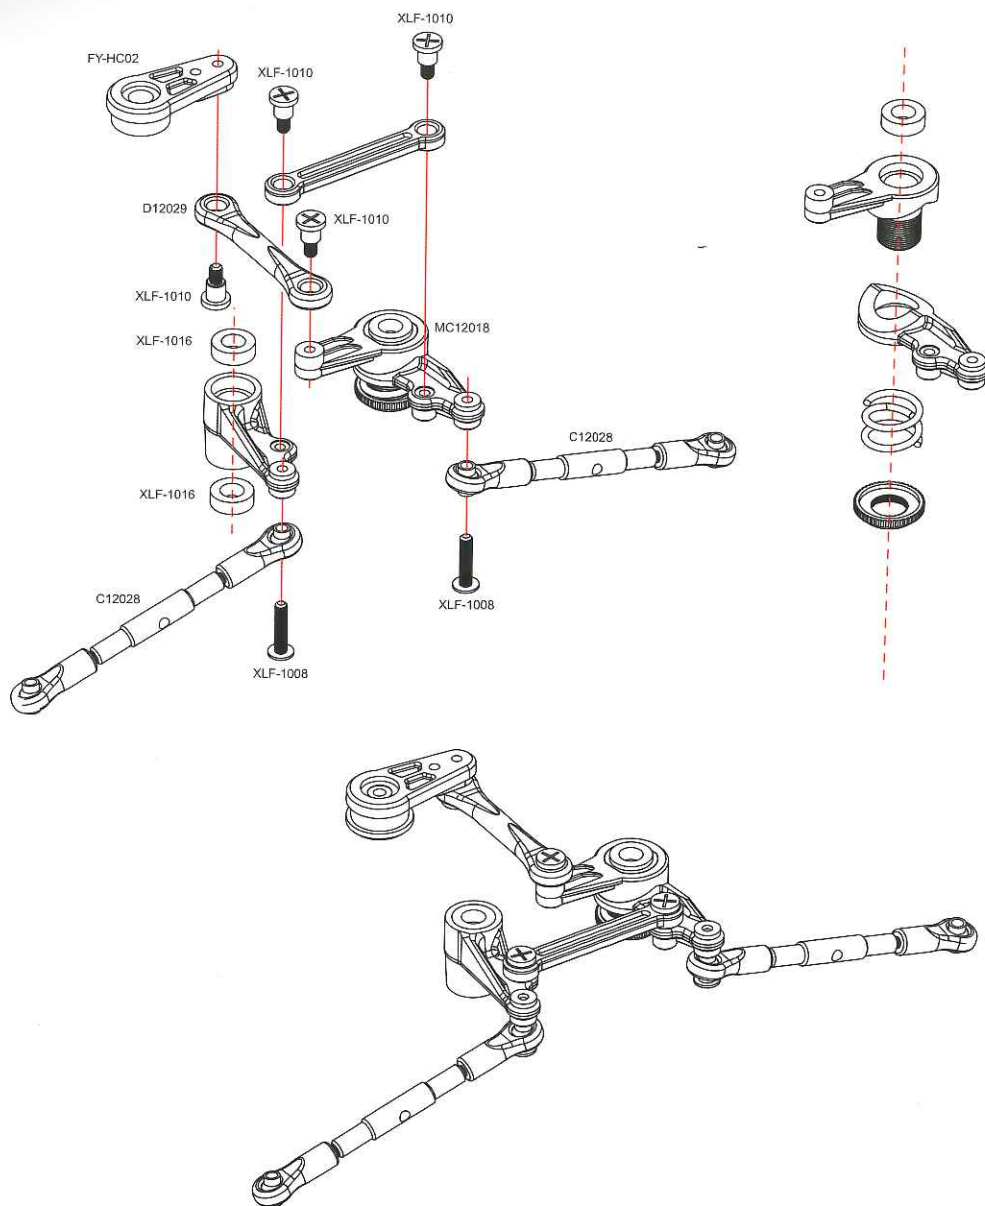


Motor Assembly

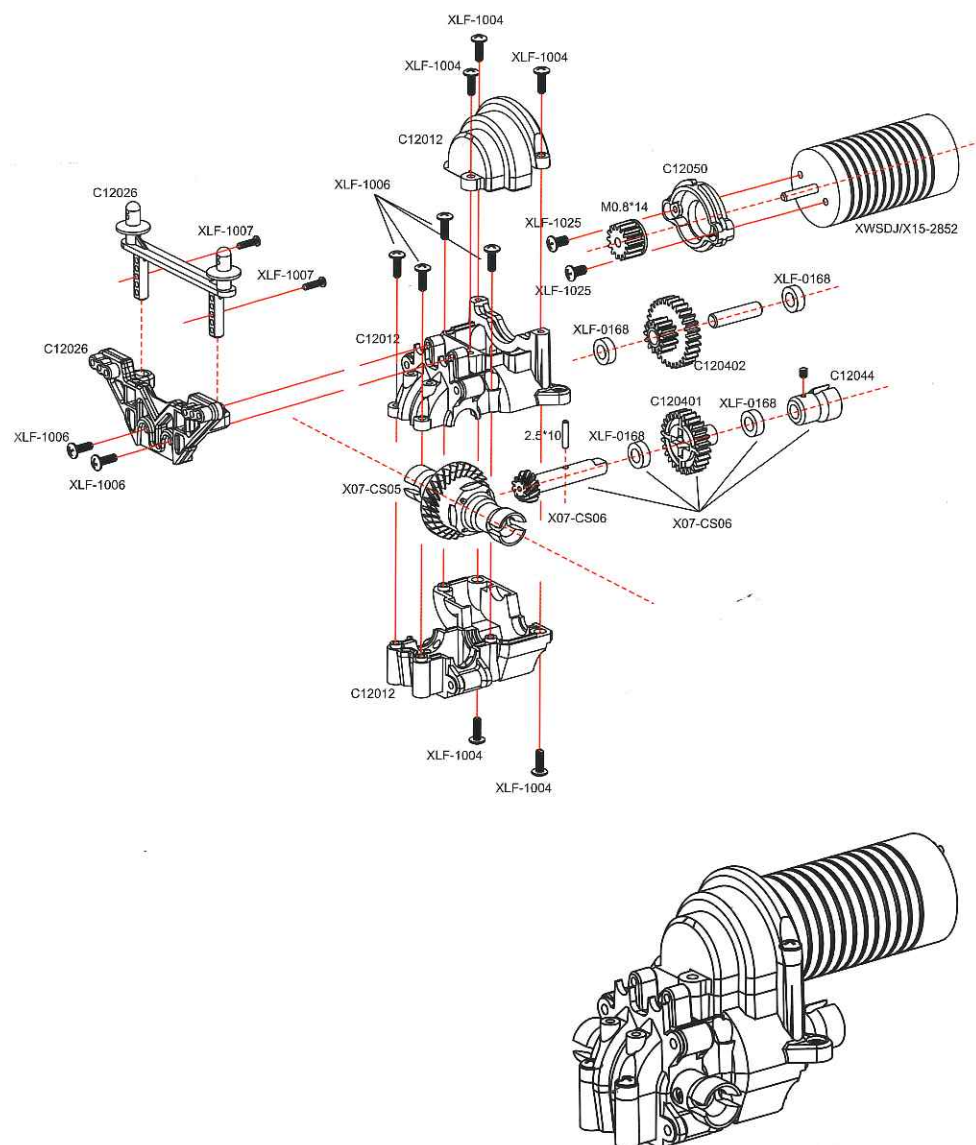


High Speed RC Car Assembly

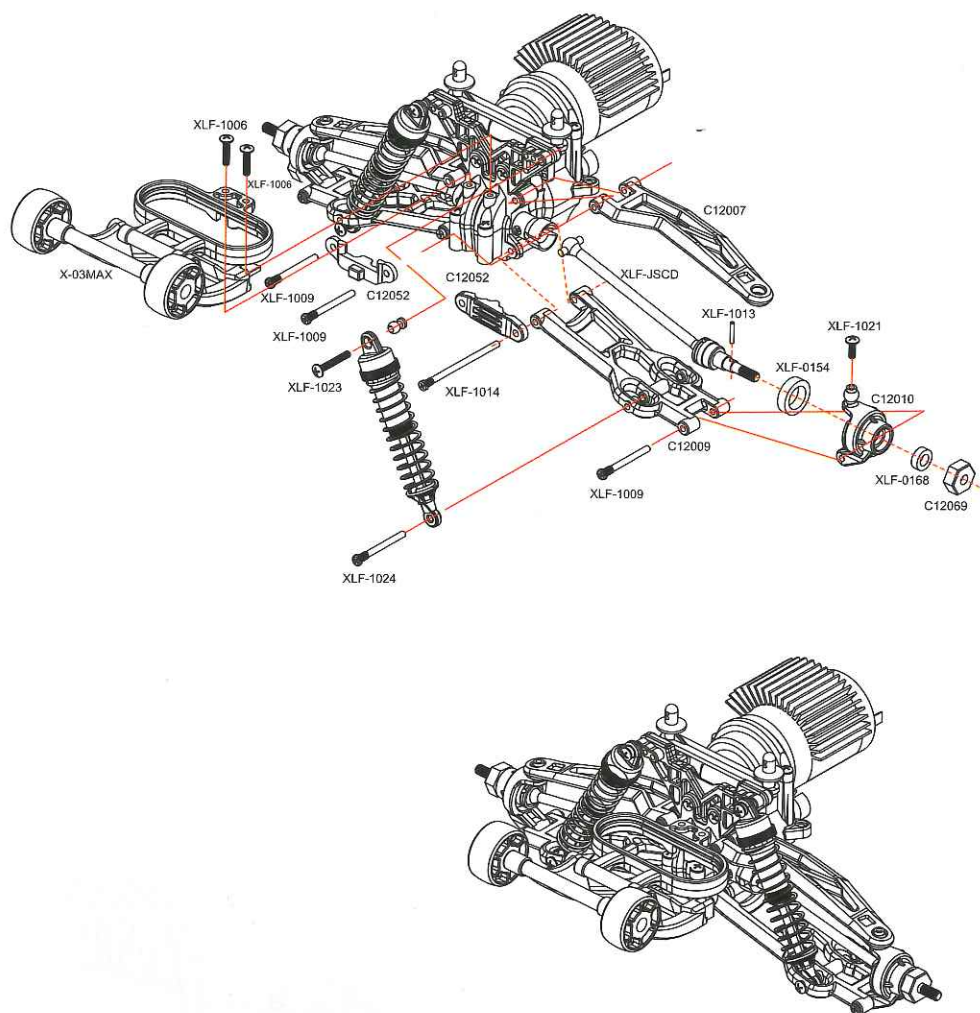


RC Car Chassis Assembly

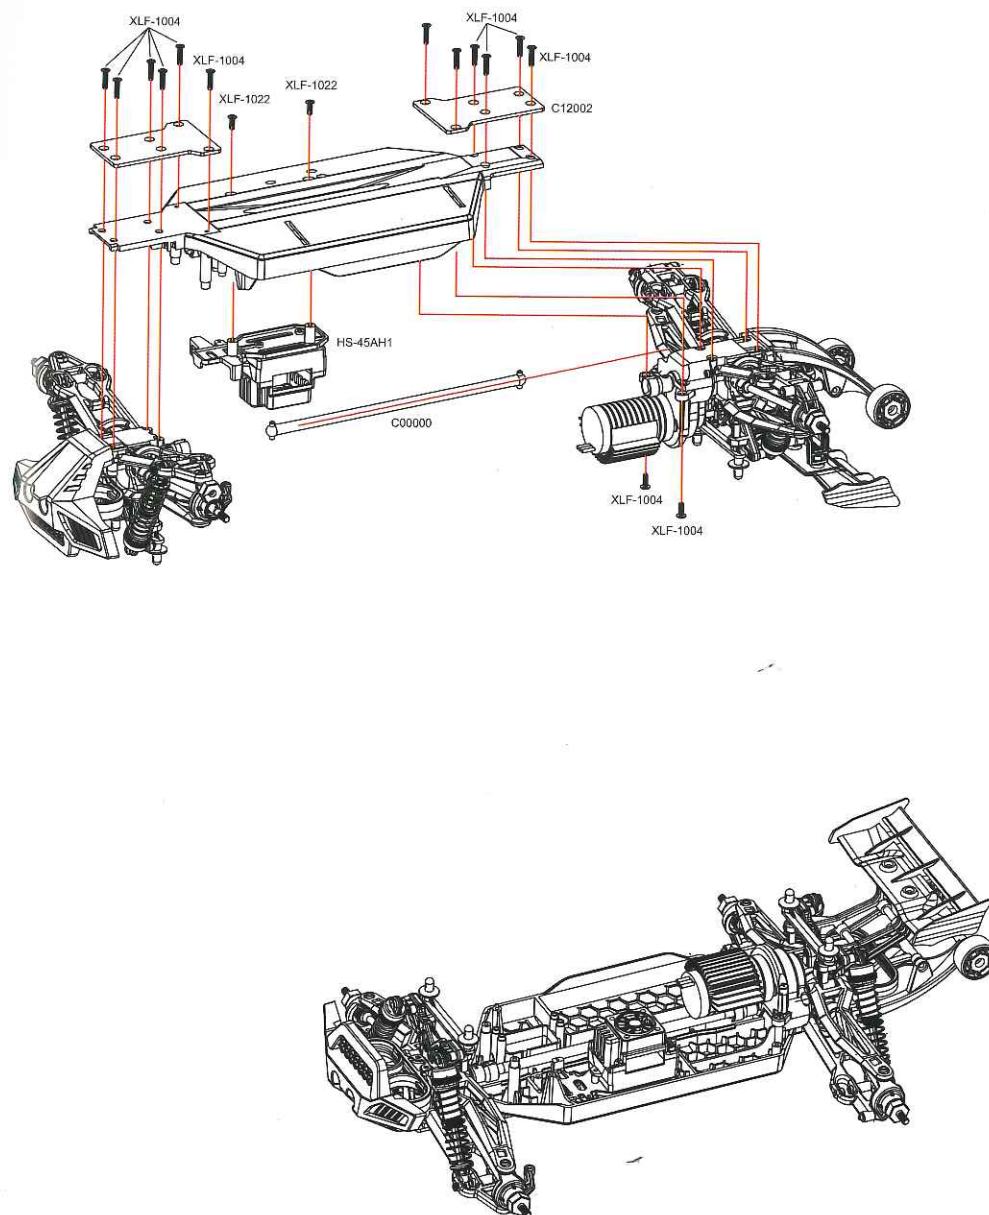


High Speed RC Car Assembly

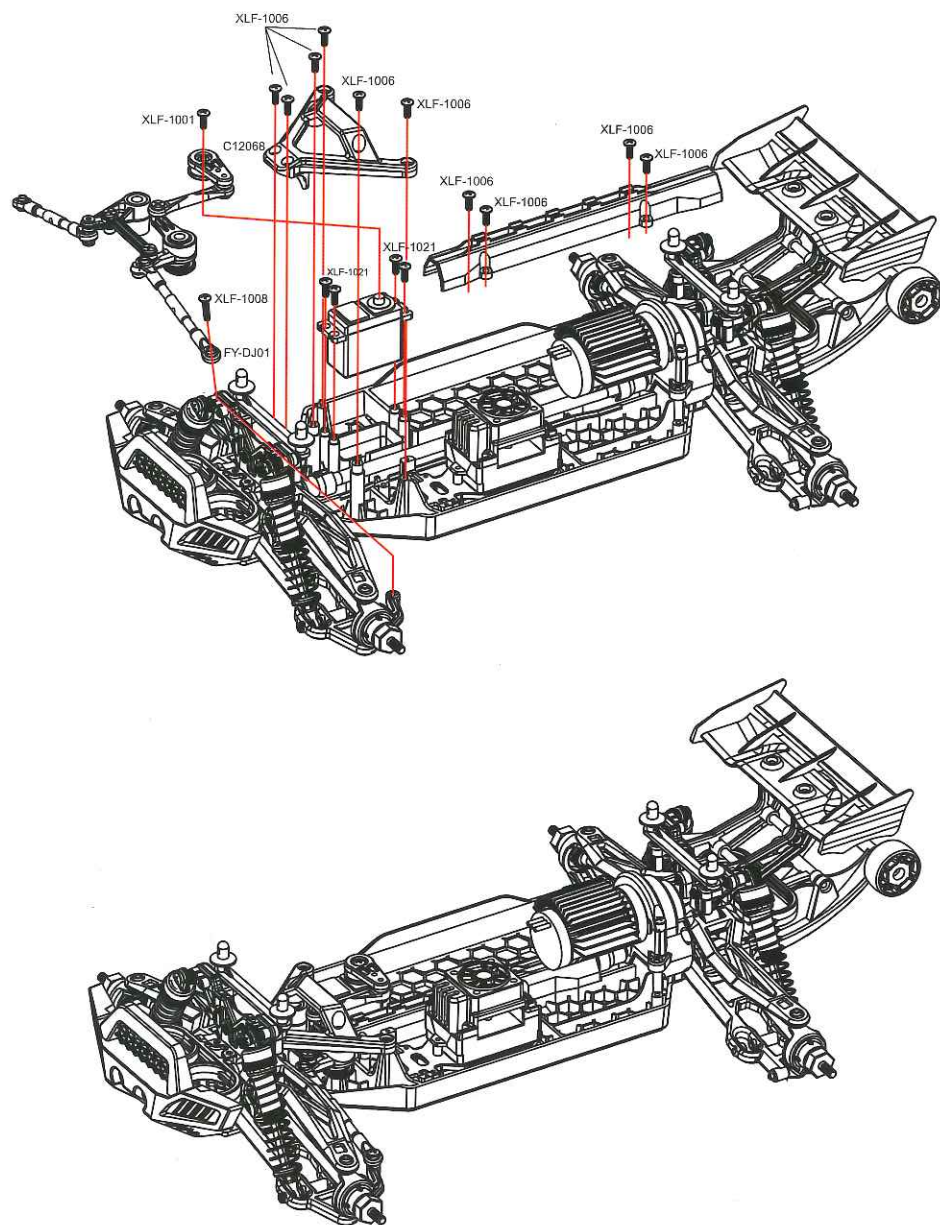


X07 High Speed RC Car Assembly

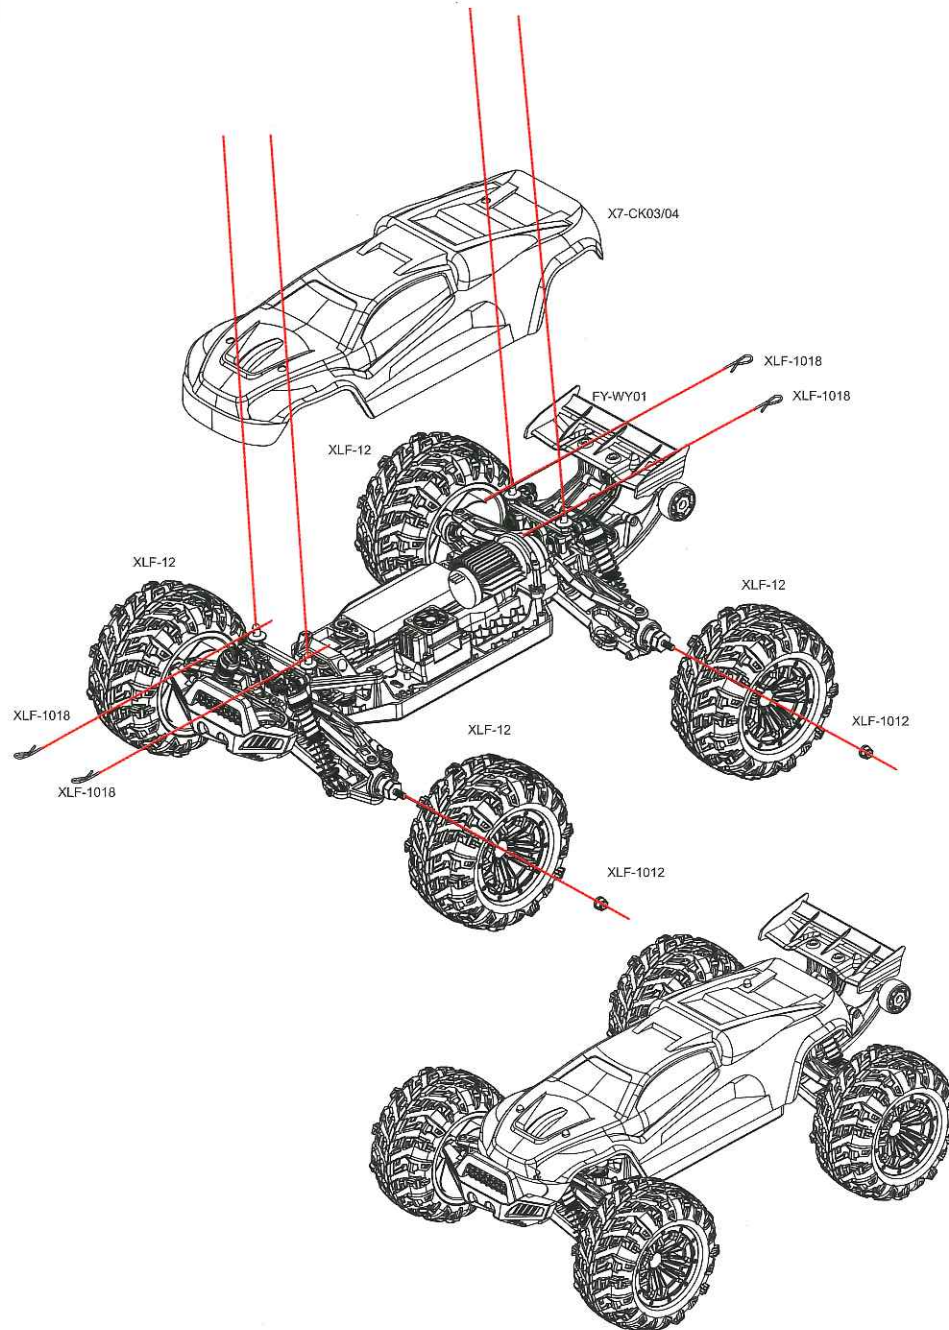

X08 High Speed RC Car Assembly

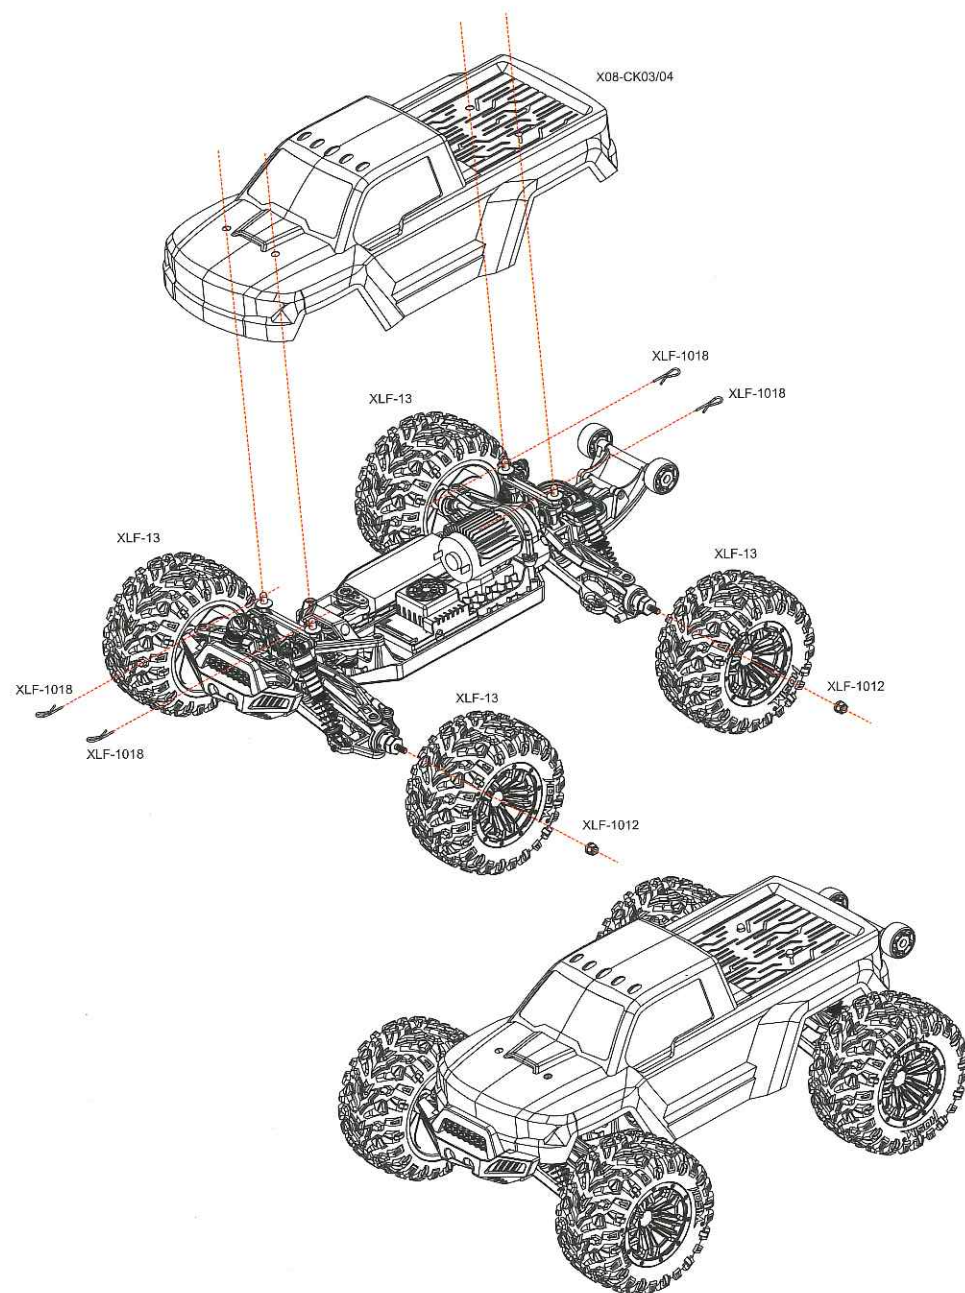

X07W High Speed RC Car Assembly

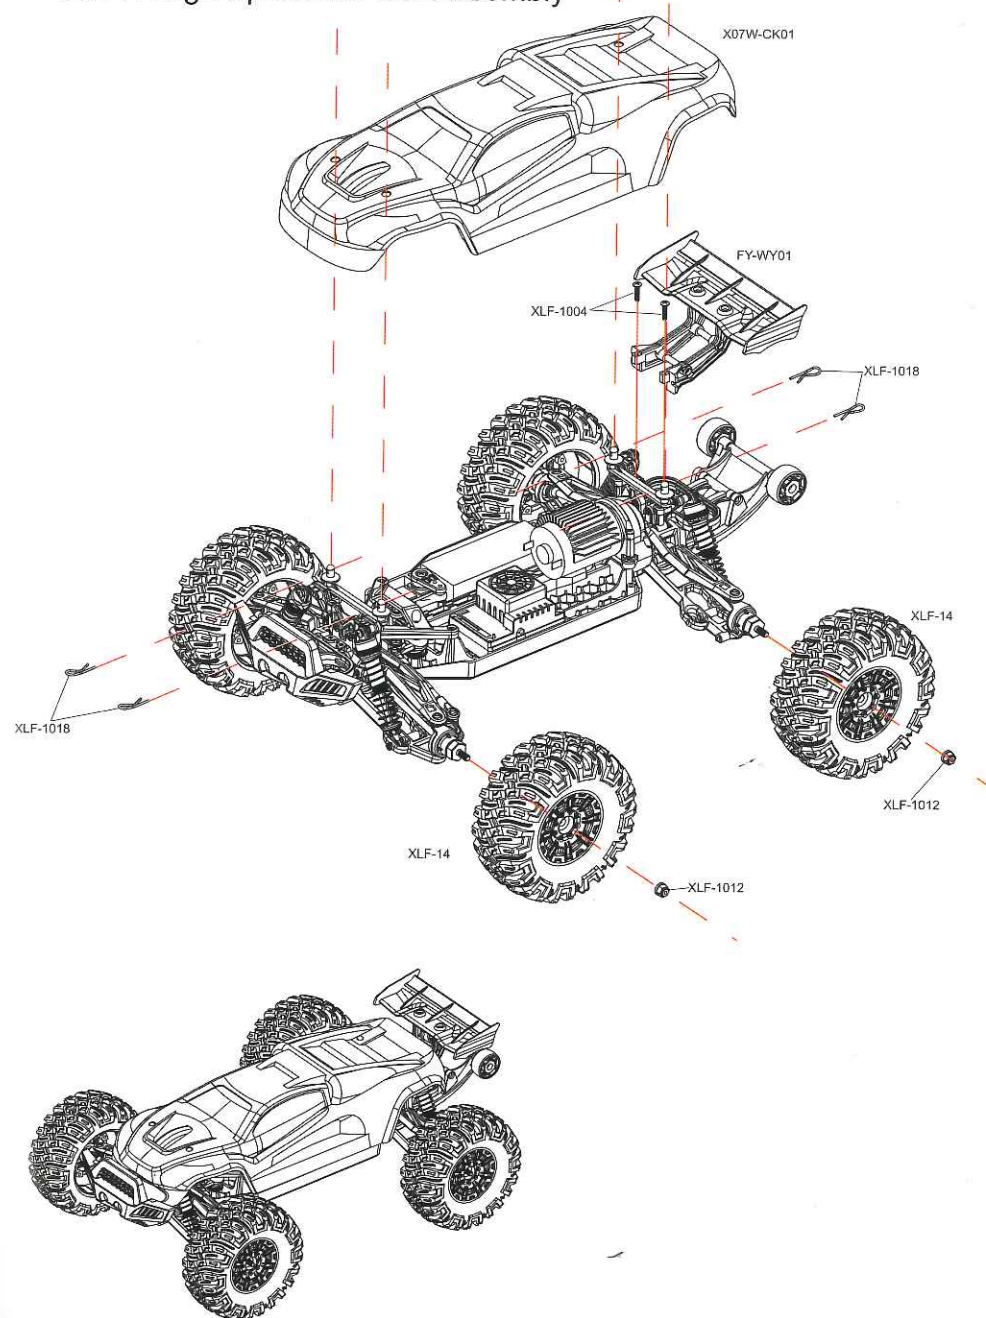

Warranty policy

To ensure that you don't invalidate the terms of the warranty please read and understand this booklet.

Hosim is always committed to higher quality products. We are trying our best to meet customer's expectations. But for high-speed toy cars it is difficult to avoid damage, it is still possible to break or cause damage by crashing or misuse. Most RC car parts are consumables and will wear with use (wires servo, differential, tires, shafts, bumpers, shocks, arms etc).

All the parts of this car are available to be purchased separately, to allow you to get years of use from your RC truck.

If you can't determine which accessory has the problem by yourself, please contact us by phone, email or Amazon backstage.

Warranty is only valid if the items were purchased directly from Hosim (purchases from third party sellers will not be covered under the warranty)

• 1. BEFORE the product has been used

Please check carefully when you receive the product. If you find defects in materials, workmanship, assembly, or have not received the complete package, please contact us by phone, email, or Amazon backstage.

• 2. COVERED BY WARRANTY

- A. 1 year warranty for the Motor (excludes damages caused by the user, including but not limited to gear wear and incorrect maintenance)
- B. 6 months warranty for the Electronic Speed Controller (excludes damages caused by the user, including but not limited to internal damage and incorrect maintenance)
- C. 3 months warranty for Wires servo and Differential (excludes damages caused by the user, including but not limited to gear wear and incorrect maintenance)

• 3. NOT COVERED BY WARRANTY

- A. All other parts not mentioned above, such as but not limited to: shock absorber, axle, arm, wheel, screw, etc.
- B. Lack of maintenance, improper use or abuse
- C. Water damage or problems resulting from water intake

⚠ Caution

- (1). Small parts. Keep out of reach of small children.
- (2). Please operate in an open field without any wave interference.
- (3). When transmitter is low in power, please stop and change batteries immediately.
- (4). On backout after the removal, please do not place discarded to avoid contamination sanitation.
- (5). Please store the car and the transmitter in a dry and cool environment.
- (6). Keep away from fire, hot or humid environment.
- (7). If car battery is wet, be sure to wipe and dry it completely to avoid any damage.

⚠ Notice

- Please note the battery polarities when installing or replacing batteries
- Non-rechargeable batteries can not be charged
- Remove rechargeable battery pack from car before charging
- Charge the battery under adult supervision
- Do not mix new and old batteries, or batteries of different types
- Remove batteries from car once they are exhausted
- Watch for short circuits at power terminals
- Touching the transmitter antenna while operating the car can affect the remote control distance; broken antennas should be handled by an adult
- This car is equipped with powerful driving forces. When moving at high speed, please do not try to break abruptly due to inertia.
- When the car moves slowly, it indicates power is low. Please recharge following charging instructions.
- When charging, please ensure power sockets are connected properly.
- While not used for a long time, please remove batteries from the car and the transmitter.
- Unpack the car under adult supervision.
- Keep this manual for future reference.

☎ Customer service

You can find all replacement parts on our website at
WWW.HOSIM.COM.

If you have any questions about your model or its operation, call HOSIM Customer Support at

+1 (989) 430-5314 (EST: 10:00-18:00)

E-mail:

US@HOSIM.COM

CA@HOSIM.COM

EU@HOSIM.COM



ACTIVATE YOUR 1 YEAR WARRANTY HOSIM CARE PROTECTION PLAN

Step 1 :

Scan QR code to answer the question:



Customer Satisfaction Form

Thank you for filling out the form. Your response has been recorded.

Step 2:

As soon as you have completed the questionnaire, please confirm it by:

Scan the QR code to visit the website or redirect to the Facebook

OR

Send the activation email to Hosim Support Team via
US@HOSIM.COM

OR

Contact the seller on amazon



Hosim Store



Facebook



YouTube



CE Compliance for Users in the European Union WEEE Compliance:

Please help the environment by disposing of your product responsibly at the end of its life. The wheeled bin symbol indicates that this product should not be disposed of in your household waste containers. Instead, the product should be disposed of by using a designated collection point for the recycling of waste electrical and electronic equipment. The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) requires that the best available recycling techniques be employed to minimize the impact on the environment. Recycling electronics helps by keeping harmful chemicals out of the environment, and also saves money by reusing precious metals. Remove any batteries and dispose of them and the product at your local authority's recycling facility. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the location where you purchased this product.

Declaration of Conformity for RED Directive In accordance with IEC 17050-1

This is to certify that the following products conform to the requirements of the RED Directive 2014/53/EU and that all essential test suites have been carried out.



FCC PART 15 B Notice CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. IF this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.