



MATCHA SOUS

USER GUIDE

Table of Contents

1. Important Safeguards	4
2. Meet Your Sous	6
3. Quick Start	8
4. Everyday Operation	9
5. Advanced Controls	10
6. Technique & Recipes	12
7. Cleaning, Care & Storage	14
8. Troubleshooting	16
9. Charging & Specifications	17
10. Sous Support	19

10. Sous Support

One-Year Limited Warranty

Presso Inc. is the warrantor. Presso Inc. warrants to the original purchaser that a new Matcha Sous™, model LHMC0110, purchased from Matcha Sous or an authorized seller will be free from defects in materials and workmanship under normal use in accordance with this guide for one year from the date of purchase. A current list of authorized sellers is available at matchasous.com. This warranty applies only to products delivered and used in the United States.

If a covered defect is confirmed, Presso Inc. will, at its option, repair or replace the product or refund the purchase price. A repaired or replacement product is covered for the remainder of the original warranty period or 90 days from the date you receive it, whichever is longer.

What is not covered

This warranty does not cover normal wear; cosmetic damage; loss of the removable mixing whisk or charging cable; ordinary cable wear; physical damage to the charging cable; or damage caused by accident, misuse, abuse, overfilling, improper cleaning, dishwasher use, liquid entering the base or charging port, operation while connected to power, an incompatible or damaged charging cable, adapter, or power source, unauthorized modification or repair, failure to follow this guide, or use with milk or any substance other than matcha powder, water, and beverage syrup. For purposes of this warranty, "beverage syrup" means a clear, pourable, dairy-free flavoring syrup.

The supplied charging cable is covered only against defects in materials or workmanship. Ordinary wear, misuse, and physical damage are not covered. Damage caused by an incompatible cable, adapter, or power source is not covered.

Replacement parts purchased separately, including mixing whisks and charging cables, are warranted against defects in materials and workmanship for 90 days from the date of purchase.

Use of a third-party part or service does not by itself void this warranty. Damage caused by an incompatible part, accessory, repair, or modification is not covered. Warranty service under this warranty will be performed by Presso Inc. or a service provider it designates.

How to make a claim

Email care@matchasous.com with proof of purchase, a description of the issue, and photographs or video if reasonably requested. Warranty correspondence may also be mailed to the address below. Presso Inc. will determine coverage after reviewing the claim information and, if needed, inspecting the product. If a return is required, follow the return instructions provided. Do not ship the product without authorization. For a claim confirmed as covered, Presso Inc. will pay standard ground shipping to and from its designated service location within the United States.

Limitations

To the extent permitted by law, any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited to one year from the date of purchase. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

To the extent permitted by law, Presso Inc. is not liable for incidental or consequential damages. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Nothing in this warranty limits liability for personal injury to the extent such limitation is prohibited by applicable law.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. It does not limit rights that cannot be waived under applicable law.

Warrantor and support

Presso Inc.
1733 Monrovia Ave., Suite Y
Costa Mesa, CA 92627
care@matchasous.com
matchasous.com

Specifications

Item	Specification
Model	LHMC0110
Rated power	4 W
Charging input	DC 5 V, 1 A
Working capacity	40–120 mL (120 mL max.)
Maximum water temperature	175°F (79°C)

Disposal and recycling

The appliance contains a rechargeable lithium-ion battery. Do not dispose of it in household trash. Recycle batteries and electronic products in accordance with applicable local requirements.

Welcome

Matcha asks a lot of a little: a few grams of tea, a measured amount of water, and the movement that brings them together.

Meet your Matcha Sous™—a second set of hands for the step that most often depends on technique.

You choose the tea, temperature, and ratio. The Sous Cycle™ brings matcha and water together, then changes pace to settle larger bubbles and refine the finish.

Before you begin

Read this guide in its entirety before first use, and keep it for future reference.

This guide is intended exclusively for use with Matcha Sous™ and provides important instructions for safe operation, cleaning, care, and maintenance. In this guide, “Sous” and “the appliance” refer to the complete Matcha Sous™ product. “Base,” “mixing cup,” and “mixing whisk” refer to the individual components identified in this guide. Images are for illustrative purposes only.

If you have questions or encounter an issue while using your Matcha Sous™, contact us at care@matchasous.com.

1. Important Safeguards

WARNING — SHARP POINT



The drive pin at the bottom of the mixing cup is extremely sharp. Do not remove the mixing whisk or clean the cup while the appliance is in use. Never place fingers, hands, utensils, or cleaning tools directly onto the pin. Keep the mixing whisk installed whenever practical so the pin is not exposed.

WARNING — ELECTRICAL SAFETY



The base contains electrical components and is not waterproof. Never immerse it, rinse it under running water, spray it with water, or place it in a dishwasher. If liquid enters the base or charging port, stop using the appliance and disconnect it from power.

WARNING — CHOKING HAZARD



The removable mixing whisk is a small part. Keep it out of reach of children, especially children under 3 years of age.

9. Charging & Specifications

Battery safety

- The appliance contains a built-in rechargeable lithium-ion battery. Do not remove, puncture, crush, open, burn, or disassemble the battery.
- Charge on a hard, dry, stable surface away from water, excessive heat, direct sunlight, and flammable materials. Do not charge unattended.
- Do not charge the appliance when it or the charging port is wet.
- Stop charging and using the appliance if it becomes unusually hot, swollen, damaged, discolored, leaking, or gives off an unusual odor. Contact care@matchasous.com.

Charging indicators

LO appears when the battery is low. A scrolling dash appears while charging. When charging is complete, all lights turn off and the appliance enters power-saving mode.

To charge

1. Power off the appliance and make sure the charging port is completely dry.
2. Connect the supplied USB-C charging cable or an undamaged, compatible USB-C replacement cable to a USB power adapter rated for 5 V DC output. The appliance charging input is 5 V DC, 1 A. Do not use fast-charging, quick-charging, or high-voltage modes.
3. Disconnect the cable when charging is complete. Do not operate the appliance while it is connected to power.

8. Troubleshooting

What you notice	Likely cause	What to do
No lights or response	Asleep, low battery, cable, or outlet issue	Touch the control panel. When Power/Start blinks, press and hold for approximately 2 seconds. Charge as directed in Section 9 and test the outlet.
Display shows LO	Battery low	Charge the appliance before use.
Matcha is not moving evenly	Whisk missing, mis-seated, damaged, or obstructed	Switch off. Inspect the whisk without touching the sharp pin; clean and reinstall it.
Matcha remains clumpy	Matcha added before water, not sifted, excessive dose, matcha characteristics, moisture, or interrupted cycle	Add water first, sift evenly, and allow the full cycle to finish. If needed, reduce the dose or increase water without exceeding 120 mL.
Too much foam	Dose, temperature, or setting does not suit the tea	Begin with the matching factory preset. Change one variable at a time.
Liquid rises or spills	Overfilled cup, wrong volume selected, or unsupported ingredient	Stop if safe. Let hot liquid settle, clean and dry the appliance, then restart using only permitted ingredients. Never exceed 120 mL.
Unusual sound, vibration, or movement	Whisk not seated, foreign material, or damaged component	Stop immediately. Power off, allow movement to end, and inspect safely. Do not continue if damage is visible.
Liquid entered the base or charging port	Water exposure	Disconnect from power and stop using the appliance. Do not charge, operate, or attempt to dry it with heat. Contact support.
Problem continues	Service required	Stop using the appliance and contact care@matchasous.com . Do not disassemble or repair it yourself.

Safety and Your Sous

Upon unpacking

- Remove all packaging and inspect the base, mixing cup, mixing whisk, charging cable, and charging port for damage. Do not use the appliance if any component is damaged; contact care@matchasous.com.
- Keep all packaging materials, including plastic bags, out of reach of children.

Intended use

- Matcha Sous™ is intended for indoor use only.
- Use it only to mix matcha powder with water and, if desired, a beverage syrup. Add water first. Do not add milk, ice, solid ingredients, fruit purées, honey, or thick sauces. Using the appliance for any other purpose may result in injury or damage.

Children and supervision

- This appliance is not a toy. Do not allow children to operate or play with it. Keep the appliance, charging cable, and removable mixing whisk out of reach of children.
- Anyone unable to operate the appliance safely and independently must use it only with appropriate supervision. Keep children away from the appliance during operation to prevent accidental injury.


Safe operation

- Place the base on a clean, dry, stable, level surface. Keep the underside of the mixing cup and the top of the base clean, dry, and free of objects.
- The base is not waterproof. Never spray, rinse, or immerse it. Water entering the base may cause electric shock or a short circuit.
- Do not add water hotter than 175°F (79°C). Hot water can cause burns.
- The combined volume of water and syrup must not exceed the selected volume mark or the 120 mL maximum. Overfilling may cause hot liquid to spill.
- The mixing cup may become hot during use. Handle it only by the silicone sleeve.
- Do not move the appliance or remove the mixing cup while a cycle is in progress. Wait until the cycle is complete and the mixing whisk has stopped.

Charging and service

- Charge only as directed in Section 9. Do not operate the appliance while it is connected to power.
- If the appliance malfunctions, stop using it immediately and power it off. If the malfunction occurs during charging, disconnect it from power if safe to do so.
- Do not modify, disassemble, or attempt to repair the appliance. Use only compatible replacement parts that meet the specifications in this guide.

2. Meet Your Sous

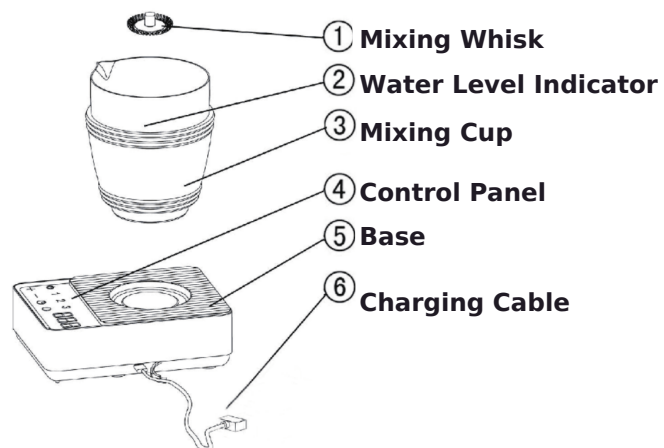

Individual controls are explained in Section 5, Advanced Controls.

SMALL PART

The mixing whisk is held in place magnetically. When removed, it may feel loose and is easy to misplace.

Cleaning, Care & Storage, continued

4. Wipe the base

Use a soft, barely damp cloth on the exterior, then dry immediately. Never spray, rinse, or immerse the base. Take care not to scratch it.

5. Dry completely

Dry the cup, whisk, and base surfaces before reassembly or charging.

6. Reinstall the whisk

With the power off, place the whisk over the center drive pin. It may feel loose until the cup is placed on the base and the magnetic coupling engages; this is normal. Do not touch or press down on the exposed drive pin.

Storage

- Store indoors in a cool, dry place away from direct sunlight and excessive heat.
- Keep the installed mixing whisk in place or store it securely so the drive pin is not left exposed.
- Do not place objects on the base or beneath the mixing cup.
- For long-term storage, recharge the battery periodically.

Natural discoloration

Matcha residue and minerals naturally present in water may leave light cosmetic discoloration or spotting inside the stainless-steel cup over time. This does not by itself indicate a defect. Rinse promptly and dry completely after each use to minimize residue and mineral spotting.

7. Cleaning, Care & Storage

Clean promptly. Keep the base dry.

WARNING - SHARP POINT

Switch the appliance off before cleaning. The drive pin beneath the mixing whisk is extremely sharp. Remove and replace the whisk by its outer edge; never press down on the pin or reach into the cup without first locating it.

1. Power off


Wait until the mixing whisk has stopped completely, then remove the cup from the base.

2. Remove the mixing whisk carefully

Lift it by the outer edge. Place it where it cannot be lost, dropped, or reached by children. Store it securely whenever it is removed.

3. Wash the food-contact parts

HAND WASH ONLY. Wash the cup and whisk with mild dish soap and a soft sponge, then rinse with clean water. If syrup was used, wash promptly to prevent sticky residue. Neither part is dishwasher safe. Do not place the base or any component in a dishwasher. Do not use metal brushes or abrasive or corrosive cleaners.

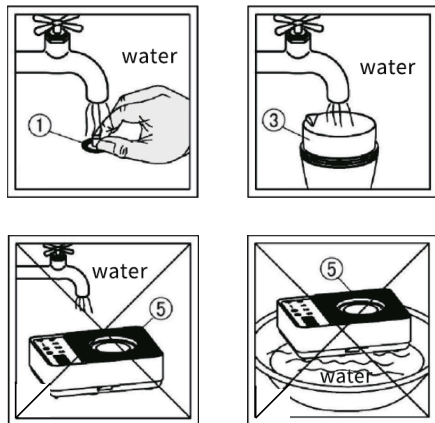

Before first use

1. Inspect

Remove all packaging and confirm that the appliance and all parts are not damaged.

2. Charge

Fully charge the appliance before first use. Follow the charging instructions in Section 9.

3. Wash the food-contact parts

Remove the mixing whisk. Hand-wash the mixing cup and mixing whisk with mild dish soap and a soft sponge. Rinse with clean water and dry completely. The cup and whisk are hand-wash only; no component is dishwasher safe. Wipe the base only.

4. Install the mixing whisk

With the power off, place the whisk over the center drive pin inside the cup. The whisk may feel loose until the cup is placed on the base and the magnetic coupling engages; this is normal. Do not touch or press down on the exposed drive pin.

3. Quick Start

1. Add liquid

Confirm that the mixing whisk is installed correctly. Add **water first**, at or below **175°F (79°C)**. If using a beverage syrup, add it after the water, either before or after the matcha. Count it toward the total volume. Never exceed 120 mL.

2. Sift matcha

Sift the measured matcha over the liquid so the fine powder can disperse evenly.

3. Place the cup

Set the mixing cup securely into the circular indentation on the clean, dry base.

4. Wake and power on

Touch anywhere on the unlit control panel. When **Power/Start** blinks, press and hold it for approximately 2 seconds.

5. Choose the volume

Select the preset matching the total liquid volume: 1 = 40 mL, 2 = 80 mL, or 3 = 120 mL.

6. Start the cycle

Press **Power/Start** once. The cup must remain properly seated. If it is not, the cycle may begin, stop shortly afterward, and the appliance will power off. Reposition the cup and repeat steps 4–6. Do not move the appliance or remove the cup during a cycle.

7. Pour and finish

When the tone sounds and movement has stopped, pour the prepared matcha and finish as desired.

8. Rinse and repeat

Clean the mixing cup and whisk promptly. Keep the base dry.

Starting Recipes

Starting points, not fixed rules—adjust ratio and temperature to suit your preferences.

Matcha, Straight

70 mL water · 2 g matcha

Add water first, sift the matcha over it, then run Sous. Pour and taste; adjust the ratio and temperature to suit your preferences.

Iced Matcha Latte

40 mL water · 3 g matcha · milk · ice · sweetener if desired

Add water first, sift the matcha over it, then run Sous. Pour over milk and ice; sweeten if desired.

Hot Matcha Latte

40 mL water · 3 g matcha · steamed milk · sweetener if desired

Add water first, sift the matcha over it, then run Sous. Finish with steamed milk; sweeten if desired.

6. Technique & Recipes

A better finish begins before the cycle.

Water first

Matcha disperses through water; it does not dissolve into it. Add water first, then sift matcha over it. If using a beverage syrup, add it only after the water and count it toward the total volume. For a latte, add milk only after the cycle, outside the mixing cup.

Measure to the selected mark

The water-level indicators are guides, not precise measurements. The 40, 80, and 120 mL settings are tuned for different working volumes—too little or too much total liquid can change the movement, texture, and spill risk.

Let the full Sous Cycle finish

The first stage provides the stronger movement needed to disperse the matcha. The second changes pace to settle larger bubbles and refine the surface. Removing the cup early interrupts that finish.

Adjust the cup, not the fundamentals

Matcha varies by tea, dose, and temperature. Begin with the factory setting that matches your total liquid volume. Adjust only after tasting, and change one variable at a time.

4. Everyday Operation

Three factory presets for three working volumes.

Preset	Liquid	Time	Mixing	Finish
1	40 mL	10 s	50%	26%
2	80 mL	20 s	70%	45%
3	120 mL	30 s	90%	75%

Each factory preset stores the primary mixing time, primary mixing speed, and finishing-stage speed. Preset 1, for example, mixes for 10 seconds at 50% speed, then finishes at 26%. Speed percentages are relative to the appliance's maximum programmed mixing speed.

How the Sous Cycle works

After **Power/Start** is pressed, the display counts down the primary mixing stage. Sous then enters its finishing stage: four seconds of movement followed by one second of rest, repeated for 25 seconds. When preparation is complete, one tone sounds, the display turns off, and the power indicator flashes in standby.

Standby and power

- To turn on, touch anywhere on the unlit control panel. When **Power/Start** blinks, press and hold it for approximately 2 seconds.
- To start, select preset 1, 2, or 3, then press **Power/Start** once.
- To enter programming mode, press and hold the desired preset. Two tones sound; the selected preset number and mL value blink.
- After 10 seconds without input, changes save and programming mode exits. After 10 seconds without operation in standby, Sous enters power-saving mode.
- To power off, press and hold **Power/Start** for approximately 2 seconds.

FOR BEST RESULTS

Use freshly sifted matcha, the selected total liquid volume, and water at a temperature appropriate for your tea.

5. Advanced Controls


Each preset stores three adjustable values: primary mixing time, primary mixing speed, and finishing-stage speed.

PROGRAMMING MODE

In programming mode, the selected preset number and corresponding mL value blink. The active value also blinks while it is being adjusted.


1. Touch the control panel to wake the appliance. When **Power/Start** blinks, hold it for approximately 2 seconds to turn the appliance on. Hold Preset 1, 2, or 3 to enter programming mode. Two tones confirm entry.
2. Adjust any or all three values: press **Time** for primary mixing time; press **Speed** for primary mixing speed; or hold **Time** and **Speed** together for finishing-stage speed.
3. After the final adjustment, wait 10 seconds without pressing a button to confirm the changes and exit programming mode.

Change the primary mixing time

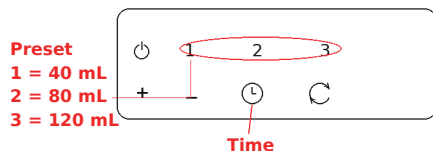

Select a preset (1, 2, or 3). Press **Time**—its indicator flashes. Use + / - to adjust in 5-second increments (5-100 seconds). Wait 10 seconds without input to confirm all changes and exit programming mode.


Change the primary mixing speed

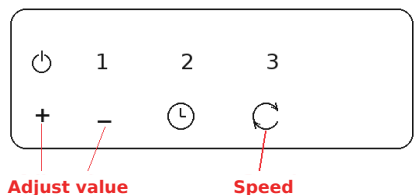

Select a preset, then press **Speed**; its indicator flashes. Use + / - to adjust the speed. At or below 30%, each press changes the speed by 2%; above 30%, each press changes it by 5%. Range: 10-100%. Wait 10 seconds without input to confirm all changes and exit programming mode.


Advanced Controls, continued

Change the finishing-stage speed

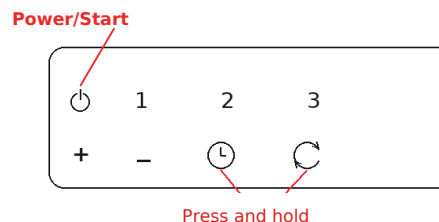

Select a preset (1, 2, or 3). Press and hold **Time** and **Speed** together until both indicators flash. Use + / - to adjust from 10-100%. Wait 10 seconds without input to confirm all changes and exit programming mode.

Restore one factory preset

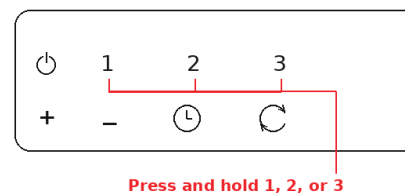

Enter programming mode as described above. Then press and hold the desired preset button—1, 2, or 3—for 3 seconds. Two tones confirm that the selected preset has returned to its factory time, speed, and finishing-speed values. The other two presets remain unchanged.