

# MATCHA SOUS

USER GUIDE

## Table of Contents

|                                    |    |
|------------------------------------|----|
| 1. Important Safeguards .....      | 3  |
| 2. Meet Your Sous .....            | 4  |
| 3. Quick Start .....               | 5  |
| 4. Everyday Operation .....        | 6  |
| 5. Advanced Controls .....         | 7  |
| 6. Technique & Recipes .....       | 8  |
| 7. Cleaning, Care & Storage .....  | 9  |
| 8. Troubleshooting .....           | 10 |
| 9. Charging & Specifications ..... | 11 |
| 10. Support .....                  | 12 |

Matcha asks a lot of a little: a few grams of tea, a measured amount of water, and the movement that brings them together.

Meet your Matcha Sous™—a second set of hands for the step that most often depends on technique.

You choose the tea, temperature, and ratio. The Sous Cycle™ brings matcha and water together, then changes pace to settle larger bubbles and refine the finish.

### Before you begin

Read this guide in its entirety before first use, and keep it for future reference.

This guide is intended exclusively for use with Matcha Sous™ and provides important instructions for safe operation, cleaning, care, and maintenance. In this guide, “**Sous**” and “**the appliance**” refer to the complete Matcha Sous™ product. “**Base**,” “**mixing cup**,” and “**mixing whisk**” refer to the individual components identified in this guide. Images are for illustrative purposes only.

If you have questions or encounter an issue while using your Matcha Sous™, contact us at [care@matchasous.com](mailto:care@matchasous.com).

## 1. Important Safeguards

### WARNING — SHARP POINT



The drive pin at the bottom of the mixing cup is extremely sharp. Do not remove the mixing whisk or clean the cup while the appliance is in use. Never place fingers, hands, utensils, or cleaning tools directly onto the pin. Keep the mixing whisk installed whenever practical so the pin is not left exposed.

### WARNING — ELECTRICAL SAFETY



The base contains electrical components and is not waterproof. Never immerse it, rinse it under running water, spray it with water, or place it in a dishwasher. If liquid enters the base or charging port, stop using the appliance and disconnect it from power.

### WARNING — CHOKING HAZARD



The removable mixing whisk is a small part. Keep it out of reach of children, especially children under 3 years of age.

## Safety and Your Sous

### Upon unpacking

- Remove all packaging and inspect the base, mixing cup, mixing whisk, charging cable, and charging port for damage. Do not use the appliance if any component is damaged; contact [care@matchasous.com](mailto:care@matchasous.com).
- Keep all packaging materials, including plastic bags, out of reach of children.

### Intended use

- Matcha Sous™ is intended for indoor use only.
- Use it only to mix matcha powder with water and, if desired, a beverage syrup. Add water first. Do not add milk, ice, solid ingredients, fruit purées, honey, or thick sauces. Using the appliance for any other purpose may result in injury or damage.

### Children and supervision

- This appliance is not a toy. Do not allow children to operate or play with it. Keep the appliance, charging cable, and removable mixing whisk out of reach of children.
- Anyone unable to operate the appliance safely and independently must use it only with appropriate supervision. Keep children away from the appliance during operation to prevent accidental injury.


### Safe operation

- Place the base on a clean, dry, stable, level surface. Keep the underside of the mixing cup and the top of the base clean, dry, and free of objects.
- Do not immerse the base in water during cleaning. It contains electronic components, and immersion may cause electric shock or a short circuit.
- Do not add water hotter than 175°F (79°C). Hot water can cause burns.
- The combined volume of water and syrup must not exceed the selected volume mark or the 120 mL maximum. Overfilling may cause hot liquid to spill.
- The mixing cup may become hot during use. Handle it only by the silicone sleeve.
- Do not move the appliance or remove the mixing cup while a cycle is in progress. Wait until the cycle is complete and the mixing whisk has stopped.

### Charging and service

- Use the supplied USB-C charging cable or an undamaged, compatible USB-C replacement cable with a USB power adapter rated for 5 V DC output. The appliance charging input is 5 V DC, 1 A. Do not use fast-charging, quick-charging, or high-voltage modes. Do not operate the appliance while connected to power; disconnect the cable before adding water or beginning a cycle. If a charging cable becomes damaged, stop using it and replace it with an undamaged, compatible USB-C cable that meets these requirements. If the charging port is damaged or otherwise compromised, stop using the appliance.
- If the appliance malfunctions, stop using it immediately and power it off. If the malfunction occurs during charging, disconnect it from power if safe to do so.
- Do not modify, disassemble, or attempt to repair the appliance. Use only compatible replacement parts that meet the specifications in this guide.

## 2. Meet Your Sous

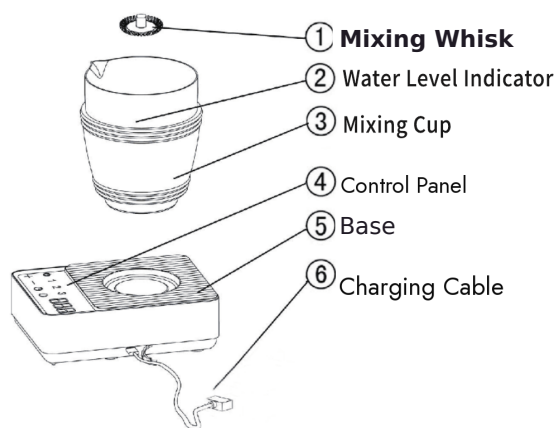

Individual controls are explained in Section 5, Advanced Controls.

### SMALL PART

The mixing whisk is held in place magnetically. When removed, it may feel loose and is easy to misplace.

## Before first use

### 1. Inspect.

Remove all packaging and confirm that the appliance and all parts are not damaged.

### 2. Charge.

Fully charge the appliance before first use using the supplied USB-C cable and a USB power adapter rated for 5 V DC output. The appliance charging input is 5 V DC, 1 A. A scrolling dash appears while charging; all lights turn off when charging is complete. Do not use fast-charging, quick-charging, or high-voltage modes. Do not leave the appliance unattended while charging.

### 3. Wash the food-contact parts.

Remove the mixing whisk. Hand-wash the mixing cup and mixing whisk with mild dish soap and a soft sponge. Rinse with clean water and dry completely. The cup and whisk are hand-wash only; no component is dishwasher safe. Wipe the base only.

### 4. Install the mixing whisk.

With the power off, place the whisk over the center drive pin inside the cup. The whisk may feel loose until the cup is placed on the base and the magnetic coupling engages; this is normal. Do not touch or press down on the exposed drive pin.

## 3. Quick Start

### 1. Add liquid.

Confirm that the mixing whisk is installed correctly. Add **water first**, at or below **175°F (79°C)**. If using a beverage syrup, add it after the water, either before or after the matcha. Count it toward the total volume. Never exceed the selected mark or 120 mL.

### 2. Sift matcha.

Sift the measured matcha over the liquid. This helps the fine powder disperse evenly.

### 3. Place the cup.

Set the mixing cup securely into the circular indentation on the clean, dry base.

### 4. Wake your Sous.

Press any button to wake Sous into standby. Press and hold **Power/Start** for approximately 2 seconds to enter settings mode.

### 5. Choose the volume.

Select 40, 80, or 120 mL. The selected volume and Power indicators flash, and the display shows the selected volume.

### 6. Start the cycle.

Press **Power/Start**. Do not move the appliance or remove the cup while a cycle is in progress. Wait until the cycle is complete and the mixing whisk has stopped.

### 7. Pour and finish.

When the tone sounds and movement has stopped, pour the prepared matcha into your cup and finish as desired.

### 8. Rinse and repeat.

Switch off, then clean the mixing cup and whisk promptly. Keep the base dry.

#### KEEP IT WITHIN THE LINE

Select the setting that matches the total liquid volume. Never fill above 120 mL. The selected volume determines the program used for that amount.

## 4. Everyday Operation

Three volumes. One-button preparation.

| Preset | Liquid | Mixing time | Mixing speed | Finishing speed | Suggested use                   |
|--------|--------|-------------|--------------|-----------------|---------------------------------|
| 1      | 40 mL  | 10 s        | 50%          | 26%             | Concentrated matcha for a latte |
| 2      | 80 mL  | 20 s        | 70%          | 45%             | Matcha served with more water   |
| 3      | 120 mL | 30 s        | 90%          | 75%             | Larger-volume preparation       |

Each preset stores three values: how long the primary mixing stage runs, how fast it runs, and how fast the finishing stage runs afterward. Preset 1, for example, mixes for 10 seconds at 50% speed, then finishes at 26%.

### How the Sous Cycle works

After **Power/Start** is pressed, the power indicator remains lit and the display counts down the primary mixing stage. Sous then enters its finishing stage: four seconds of movement followed by one second of rest, repeated for 25 seconds. The display shows the remaining finishing time. When preparation is complete, one tone sounds, the display turns off, and the power indicator flashes in standby.

### Standby and power

- When Sous is off, all indicators and the display are off. Press any button to wake it into standby; only the power indicator flashes.
- Press and hold **Power/Start** for approximately 2 seconds to enter settings mode.
- Select 40, 80, or 120 mL. The selected volume and power indicators flash, and the display shows the selected value.
- Settings confirm automatically after 10 seconds without input. After 20 seconds without further operation, Sous enters power-saving mode.
- To power off, press and hold **Power/Start** for approximately 2 seconds. All indicators turn off.

### FOR BEST RESULTS

Use freshly sifted matcha, the selected total liquid volume, and a water temperature appropriate to your tea. Put only matcha powder, water, and optional beverage syrup in the mixing cup. Do not add milk, ice, solid ingredients, fruit purées, honey, or thick sauces.


## 5. Advanced Controls

Make a preset your own. The factory presets are designed for immediate use — customize only when a tea, dose, or service style calls for it.


### BEFORE CHANGING SETTINGS

Record the factory values and adjust one variable at a time.

### Change the primary mixing time

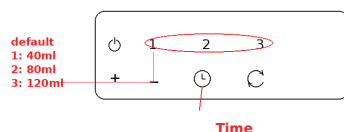


Select a volume (1, 2, or 3). Press **Time**—its indicator flashes. Use + / - to adjust in 5-second increments (5-100 seconds). Wait 10 seconds to confirm.

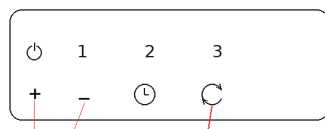


Select a volume, then press **Speed**; its indicator flashes. Use + / - to adjust the speed. At or below 30%, each press changes the speed by 2%; above 30%, each press changes it by 5%. Range: 10-100%. Wait 10 seconds to confirm.

### Change the finishing-stage speed

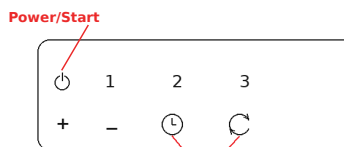

Press and hold **Time** and **Speed** together until both indicators flash. Use + / - to adjust from 10-100%. Wait 10 seconds to confirm and exit.

### Restore one factory preset

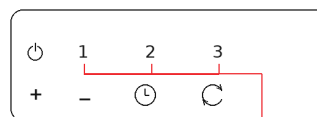

Restores one preset at a time, leaving the other two unchanged. While in settings mode, press and hold the volume button for the preset you want to reset — 1, 2, or 3 — for 3 seconds. Two tones confirm that preset has returned to its factory time, speed, and finishing-speed values.

## 6. Technique & Recipes

**A better finish begins before the cycle.**

### Water first

Matcha disperses through water; it does not dissolve into it. Add water first, then sift matcha over it. If using a beverage syrup, add it only after the water and count it toward the total volume. For a latte, add milk only after the cycle, outside the mixing cup.

### Measure to the selected mark

The water-level indicators are guides, not precise measurements. The 40, 80, and 120 mL settings are tuned for different working volumes—too little or too much total liquid can change the movement, texture, and spill risk.

### Let the full Sous Cycle finish

The first stage provides the stronger movement needed to disperse the matcha. The second changes pace to settle larger bubbles and refine the surface. Removing the cup early interrupts that finish.

### Adjust the cup, not the fundamentals

Matcha varies by tea, dose, and temperature. Begin with the factory setting that matches your total liquid volume. Adjust only after tasting, and change one variable at a time.

## Starting Recipes

Starting points, not fixed rules — adjust ratio and temperature to suit your tea.

### Matcha, Straight

80 mL water · 2 g matcha

Add water first, sift the matcha over it, then run Sous. Pour and taste; adjust ratio and temperature to the tea.

### Iced Matcha Latte

40 mL water · 4 g matcha · milk · ice · sweetener if desired

Add water first, sift the matcha over it, then run Sous. Pour over milk and ice; sweeten if desired.

### Hot Matcha Latte

40 mL water · 4 g matcha · steamed milk · sweetener if desired

Add water first, sift the matcha over it, then run Sous. Finish with steamed milk; sweeten if desired.

## 7. Cleaning, Care & Storage

**Clean promptly. Keep the base dry.**



### WARNING — SHARP POINT

Switch the appliance off before cleaning. The drive pin beneath the mixing whisk is extremely sharp. Remove and replace the whisk by its outer edge; never press down on the pin or reach into the cup without first locating it.

#### 1. Power off.

Wait until the mixing whisk has stopped completely, then remove the cup from the base.


#### 2. Remove the mixing whisk carefully.

Lift it by the outer edge. Place it where it cannot be lost, dropped, or reached by children.

Keep the removable mixing whisk away from children. Store it securely when removed.

#### 3. Wash the food-contact parts.

HAND WASH ONLY. Remove the mixing whisk. Wash the cup and whisk by hand with mild dish soap and a soft sponge, then rinse with clean water. If syrup was used, wash promptly to prevent sticky residue. Neither part is dishwasher safe. Do not place the base or any component in a dishwasher. Do not use metal brushes or abrasive or corrosive cleaners.

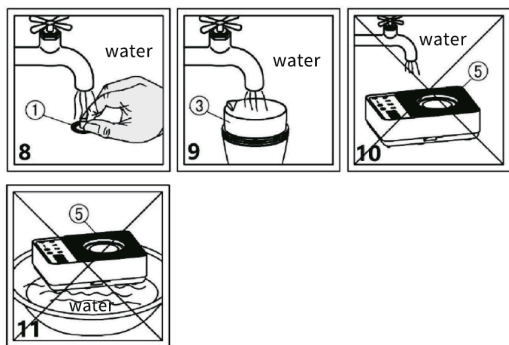

#### 4. Wipe the base.

Use a soft, barely damp cloth on the exterior, then dry immediately. Never spray, rinse, or immerse the base. Take care not to scratch the base.

#### 5. Dry completely.

Dry the cup, whisk, and base surfaces before reassembly or charging.

#### 6. Reinstall the whisk.

With power off, lower the whisk onto the center pin until it sits level. Do not push a finger onto the pin.

## Storage

- Store indoors in a cool, dry place away from direct sunlight and excessive heat.
- A spare mixing whisk is stored in the holder on the underside of the base. Make sure it is secure before moving the appliance.
- Keep the installed mixing whisk in place or store it securely so the drive pin is not left exposed.
- Do not place objects on the base or beneath the mixing cup.
- For long-term storage, recharge the battery periodically.

## About staining

Matcha's naturally occurring pigments and polyphenols may leave light cosmetic discoloration inside the stainless-steel cup over time. This does not by itself indicate a defect. Rinse promptly after each use to minimize staining and mineral spotting.



## 8. Troubleshooting

| What you notice                          | Likely cause                                                                                                                                    | What to do                                                                                                                                                                                                                        |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Buttons flash; cycle will not start      | Cup not seated correctly                                                                                                                        | Remove the cup, make sure the contact surfaces are clean and dry, then reseal it squarely.                                                                                                                                        |
| No lights or response                    | The appliance is asleep, the battery is low, or there is a cable or outlet issue                                                                | Press any button, then hold <b>Power/Start</b> for approximately 2 seconds. Charge with the approved setup. Test the outlet. Stop if the cable or port is damaged.                                                                |
| Display shows <b>LO</b>                  | Battery low                                                                                                                                     | <b>LO</b> appears at approximately 3.5 V. Charge the appliance before use.                                                                                                                                                        |
| Matcha is not moving evenly              | Whisk missing, mis-seated, damaged, or obstructed                                                                                               | Switch off. Carefully inspect the whisk without touching the sharp pin; clean and reinstall it. Use only a compatible replacement whisk that meets the specifications in this guide.                                              |
| Matcha remains clumpy                    | Matcha added before water, matcha not sifted, too much matcha for the water volume, matcha characteristics or moisture, or an interrupted cycle | Add water first, sift the matcha evenly over it, and allow the full Sous Cycle to finish. If clumping continues, reduce the matcha dose or increase the water without exceeding 120 mL. Results may vary depending on the matcha. |
| Too much foam                            | Dose, temperature, or setting does not suit the tea                                                                                             | Begin with the matching factory preset. Change one variable at a time; reduce customization only within approved ranges.                                                                                                          |
| Liquid rises or spills                   | Overfilled cup, wrong volume selected, or unsupported ingredient                                                                                | Stop the cycle if safe. Let hot liquid settle, clean and dry the appliance, then restart using only permitted ingredients. Keep the combined water-and-syrup volume within the selected mark and never above 120 mL.              |
| Unusual sound, vibration, or movement    | Whisk not seated, foreign material, or damaged component                                                                                        | Stop immediately. Power off, allow movement to end, and inspect safely. Do not continue if damage is visible.                                                                                                                     |
| Liquid entered the base or charging port | Water exposure                                                                                                                                  | Disconnect from power and stop using the appliance. Do not charge, operate, or attempt to dry it with heat. Contact support.                                                                                                      |
| Problem continues                        | Service required                                                                                                                                | Stop using the appliance and contact <a href="mailto:care@matchasous.com">care@matchasous.com</a> . Do not disassemble or repair it yourself.                                                                                     |

## 9. Charging & Specifications

### Battery safety

- The appliance contains a built-in rechargeable lithium-ion battery. Do not remove, puncture, crush, open, burn, or disassemble the battery.
- Charge only with the supplied USB-C charging cable or an undamaged, compatible USB-C replacement cable and a USB power adapter rated for 5 V DC output. The appliance charging input is 5 V DC, 1 A. Do not use fast-charging, quick-charging, or high-voltage modes.
- Charge on a hard, dry, stable surface away from water, excessive heat, direct sunlight, and flammable materials. Do not charge unattended.
- Do not charge the appliance when it or the charging port is wet.
- Do not operate the appliance while it is connected to power. Disconnect the USB-C cable before adding water or beginning a cycle.
- Stop charging and using the appliance if it becomes unusually hot, swollen, damaged, discolored, leaking, or gives off an unusual odor. Contact [care@matchasous.com](mailto:care@matchasous.com).

### Charging indicators

**LO** appears when battery voltage is low (approximately 3.5 V). A scrolling dash appears while charging. When charging is complete, all lights turn off and the appliance enters power-saving mode.

### To charge

1. Power off the appliance and make sure the charging port is completely dry.
2. Connect the supplied USB-C charging cable or an undamaged, compatible USB-C replacement cable to a USB power adapter rated for 5 V DC output. The appliance charging input is 5 V DC, 1 A.
3. Disconnect the cable when charging is complete. Never operate the appliance while it is connected to power.

## Specifications

|                           |                         |
|---------------------------|-------------------------|
| Model                     | LHMC0110                |
| Power consumption         | 4 W                     |
| Operating rating          | DC 3.7 V, 1 A           |
| Charging input            | DC 5 V, 1 A             |
| Battery                   | Li-ion, 3.7 V, 1800 mAh |
| Working capacity          | 40-120 mL (120 mL max.) |
| Maximum water temperature | 175°F (79°C)            |
| Net / gross weight        | 0.52 kg / 0.75 kg       |
| Cable / connection        | 1 m USB-C               |
| IP rating                 | IPX1                    |

### Disposal and recycling

The appliance contains a rechargeable lithium-ion battery. Do not dispose of it in household trash. Recycle batteries and electronic products in accordance with applicable local requirements.

## 10. Support

Your Sous, looked after.

### One-Year Limited Warranty

**Presso Inc. is the warrantor.** Presso Inc. warrants to the original purchaser that a new Matcha Sous™, model LHMC0110, purchased from Matcha Sous or an authorized seller will be free from defects in materials and workmanship under normal use in accordance with this guide for one year from the date the product is delivered to the original purchaser. This warranty applies only to products delivered and used in the United States.

If a covered defect is confirmed, Presso Inc. will, at its option, repair or replace the product or refund the purchase price. A repaired or replacement product is covered for the remainder of the original warranty period or 90 days from the date it is returned or delivered to you, whichever is longer.

#### What is not covered

This warranty does not cover normal wear; cosmetic damage; loss of the removable mixing whisk or charging cable; ordinary cable wear; physical damage to the charging cable; or damage caused by accident, misuse, abuse, overfilling, improper cleaning, dishwasher use, liquid entering the base or charging port, operation while connected to power, an incompatible or damaged charging cable, adapter, or power source, unauthorized modification or repair, failure to follow this guide, or use with milk or any substance other than matcha powder, water, and beverage syrup.

The supplied charging cable is covered only against defects in materials or workmanship. Loss, ordinary wear, misuse, and physical damage are not covered. Damage caused by an incompatible cable, adapter, or power source is not covered.

Use of a third-party part or service does not by itself void this warranty. Damage caused by an incompatible part, accessory, repair, or modification is not covered. Warranty service under this warranty will be performed by Presso Inc. or a service provider it designates.

#### How to make a claim

Email [care@matchasous.com](mailto:care@matchasous.com) with proof of purchase, a description of the issue, and photographs or video if reasonably requested. Warranty correspondence may also be mailed to the address below. Presso Inc. will determine coverage after reviewing the claim information and, if needed, inspecting the product. If a return is required, follow the return instructions provided. Do not ship the product without authorization. For a claim confirmed as covered, Presso Inc. will pay standard ground shipping to and from its designated service location within the United States.

#### Limitations

To the extent permitted by law, any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited to one year from the date of delivery. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

To the extent permitted by law, Presso Inc. is not liable for incidental or consequential damages. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. It does not limit rights that cannot be waived under applicable law.

#### Contact

Matcha Sous / Presso Inc.  
1733 Monrovia Ave., Suite Y  
Costa Mesa, CA 92627  
[care@matchasous.com](mailto:care@matchasous.com)  
[matchasous.com](http://matchasous.com)

### Product identification

**Model:** LHMC0110

#### Warrantor and support

Presso Inc.  
1733 Monrovia Ave., Suite Y  
Costa Mesa, CA 92627  
[care@matchasous.com](mailto:care@matchasous.com)  
[matchasous.com](http://matchasous.com)

**Made in China**