

Viewer: Using the N6Cam Viewer

This document describes how to use the N6Cam Viewer tool.

Table of Contents

- References
- Usage
 - GUI
 - CLI

References [↗](#)


- na

Usage [↗](#)


GUI [↗](#)

 Use **F11** to toggle full-screen mode

1. Connect your N6Cam to the PC
2. Open the viewer (it should detect the N6Cam automatically)
 - a. Normal operation:

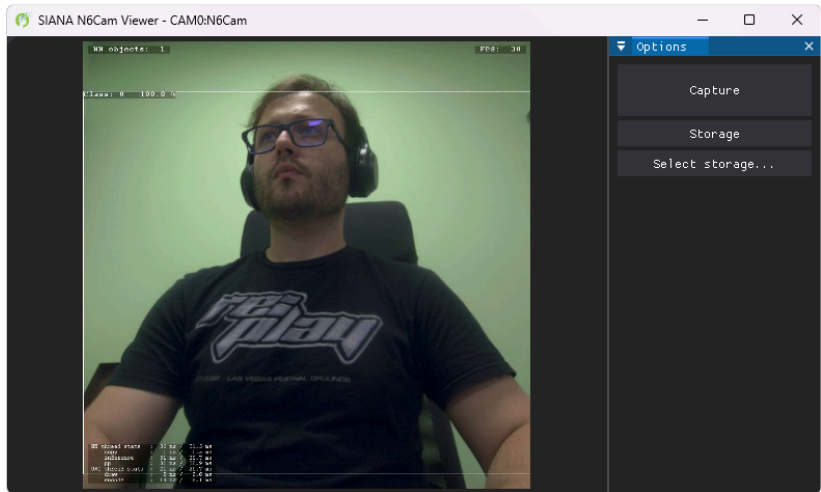

- b. The viewer will wait for the device in case of disconnection. Capture will be disabled until normal operation is recovered.

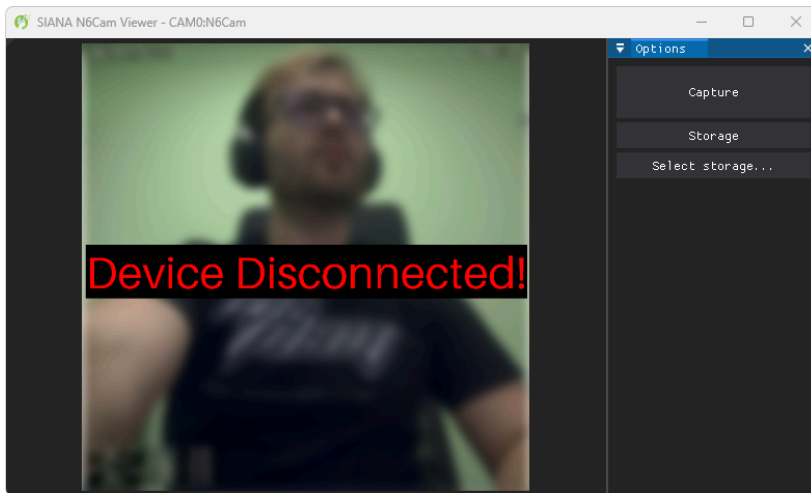

CLI ↻

i Use this if your device is not listed as an N6Cam device

1. Listing connected cameras:

```
1 SIANA-N6Cam-Viewer-<version> --list          # On Linux
2 SIANA-N6Cam-Viewer-<version>.exe --list | more # On Windows
```

This should print a list of connected/available cameras, with syntax

```
1 <NAME>@<ADDRESS>
```

For example:

a. On Linux:

```
1 Available cameras:
2 - HP_Wide_Vision_HD_Camera@/dev/video0
3 - N6Cam@/dev/video2
4 - N6Cam@/dev/video4
```

b. On Windows

```
1 Available cameras:
2 - HP Wide Vision HD Camera@0
3 - N6Cam@0
4 - N6Cam@1
```

Note: On Windows, the camera address is the index of each device.

2. Staring viewer for custom camera:

```
1 SIANA-N6Cam-Viewer-<version> --camera "<REFERENCE>" # On Linux
2 SIANA-N6Cam-Viewer-<version>.exe --camera "<REFERENCE>" # On Windows
```

For example:

a. Single camera:

- When only using the `<NAME>` the viewer will try to capture the first available camera with that name

```
1 SIANA-N6Cam-Viewer-<version>.exe --camera "N6Cam"
```

- To specify a particular camera, you can include the address/index:

```
1 SIANA-N6Cam-Viewer-<version>.exe --camera "N6Cam@/dev/video4" # On Linux
2 SIANA-N6Cam-Viewer-<version>.exe --camera "N6Cam@1" # On Windows
```

b. Double camera: List the camera references separated by `;`. Use the same rules as for a single camera.

```
1 SIANA-N6Cam-Viewer-<version>.exe --camera "N6Cam;HP Wide Vision HD Camera"
```

c. Starting an RTSP session:

```
1 SIANA-N6Cam-Viewer-<version> --camera "<NAME>@rtsp://<ADDRESS>" # On Linux
2 SIANA-N6Cam-Viewer-<version>.exe --camera "<NAME>@rtsp://<ADDRESS>" # On Windows
```

For example:

```
1 SIANA-N6Cam-Viewer-<version> --camera "N6Cam@rtsp://192.168.50.82"
```