


i.MX8M Plus PWR

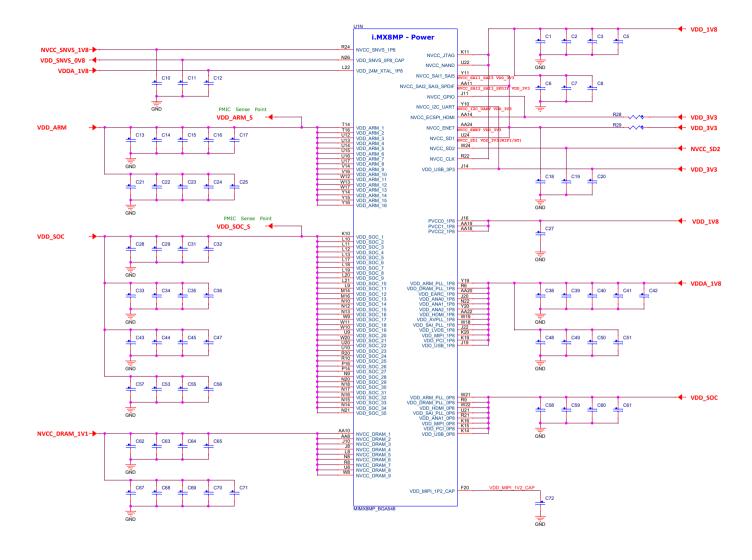


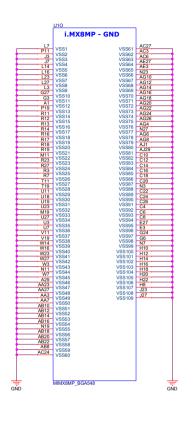



DEBIX
Title
DEBIX Model A Schematics www.debbi.io
Size Document Number P05
CPU PWR Number 1 of 11


i.MX8M Plus 10 Interface

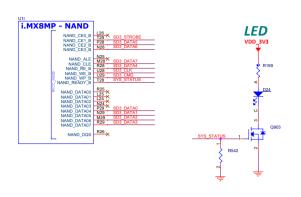


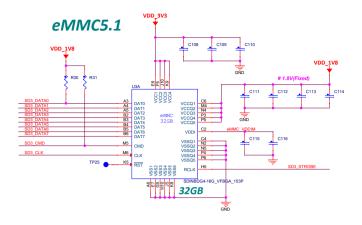


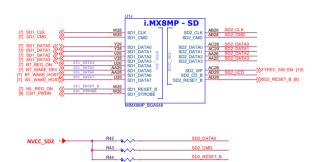


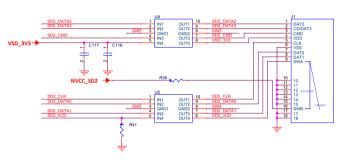


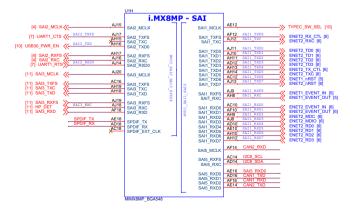

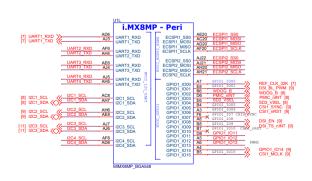

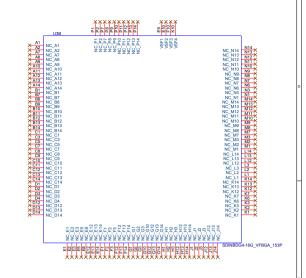




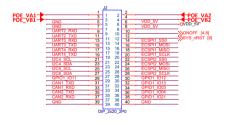



Title	DEBIX Model A Schematics www.debix.io	
Size A2	Document Number	-
	CPU IO&SDIO	


i.MX8M Plus PHYs MISC

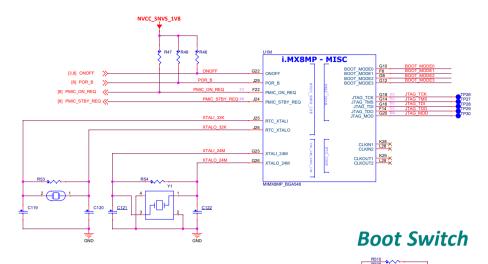



			VDD_1V8	SW1 4 3	BOOT MODE3 BOOT MODE2 BOOT MODE1 BOOT MODE0
BOOT_MODE1	BOOT_MODE0	Boot Modes		SW_DIP-2_SM	
0	0	Boot From Internal Fuses			<u> </u>
0	1	USB Serial Download			2 E E E
1	0	USDHC3 (eMMC boot only, SD3 8-bit)		- G	ÑD
1	1	USDHC2 (SD boot only, SD2)			

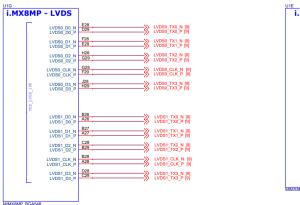


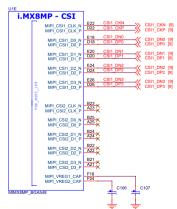

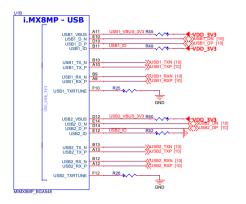

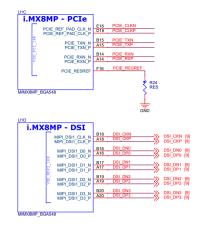

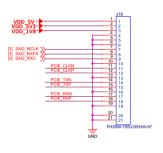

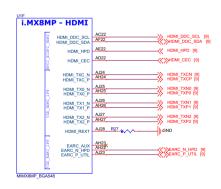

Title	DEBIX Model A Schematics	www.debix.io		
Size A2	Document Number CPU PHY&MISC			Re V0:

