

5400 series tractors

MF 5425
MF 5435
MF 5445
MF 5455
MF 5460
MF 5465
MF 5470
MF 5475
MF 5480



Foreword

We would like to welcome you to the ever-growing number of people who own a Massey Ferguson tractor; people who appreciate quality. We are proud of every tractor that leaves our factories, each being technically advanced and of a high quality.

This Operator's Manual contains the specifications for your new tractor. Please ensure that all operators read the instructions and follow them carefully. The pages that follow contain vital information on your tractor; please read them carefully.

Your Massey Ferguson dealer will guarantee you quality servicing and will provide you with all the assistance you need. When it comes to servicing, remember that your dealer knows your tractor best and that he wants you to be completely satisfied.

Please leave this Operator's Manual in the tractor if resold. The subsequent owner will need the information it contains.

All information and specifications in this manual are up to date at the time of publication. However, our on-going policy to improve our products obliges us to reserve the right to make alterations at any time without notice.

Please note that this manual relates to all models and refers to both standard and optional equipment. You may therefore find details relating to equipment that is not fitted on your tractor.

This Operator's Manual complies with Directive 2010/52 EC.

Massey Ferguson, Beauvais



5400 series tractors

1	Tractor identification	11
1.1	Locating serial numbers	13
1.1.1	Locating serial numbers	13
1.2	Your tractor identification details	14
1.2.1	Your tractor identification details	14
2	Safety instructions and safety points - Warranty	15
2.1	Introduction	17
2.1.1	Introduction - Safety instructions	17
2.2	Safety – Symbols and terms	19
2.2.1	Safety – Symbols and terms	19
2.3	Safety decals and instructions	20
2.3.1	Checking and replacing the safety decals and instructions	20
2.3.2	Presentation and location of the safety decals and instructions	21
2.4	General safety instructions	27
2.4.1	Awareness of the safety instructions and symbols	27
2.4.2	Operator familiarity in the use of the tractor	27
2.4.3	Filling the fuel tank	28
2.4.4	Getting into and out of the cab	28
2.4.5	Mandatory procedure before dismounting the tractor	28
2.5	Special instructions	30
2.5.1	Specific recommendations for agricultural and forestry tractors	30
2.6	Special safety instructions for preparing the tractor for use	32
2.6.1	Protective clothing	32
2.6.2	Activated carbon filter information	32
2.6.3	Safety devices and items	34
2.6.4	Checking the tractor	35
2.7	Specific safety instructions for starting the tractor	37
2.7.1	Protection of persons other than the operator	37
2.7.2	Start up safely	37
2.7.3	Checks to be carried out after start-up	38
2.8	Specific safety instructions for using the tractor	39
2.8.1	General instructions	39
2.8.2	Protection of persons other than the operator	40
2.8.3	Overturning	40
2.8.4	Tractor towing	42
2.8.5	Road use	42
2.8.6	Parking brake	44
2.8.7	Power take-off	44
2.8.8	Implements	45
2.8.9	Front-end loader	47
2.9	Specific safety instructions for servicing the tractor	48
2.9.1	Pollution warning to observe when servicing the tractor	48
2.9.2	General instructions	48
2.9.3	Handling instructions	49
2.9.4	Special instructions for cleaning the tractor	50
2.10	Protective structures	52
2.10.1	Protective structures: use and accreditation	52
2.10.2	Cab or ROPS (depending on model)	52
2.10.3	Seat belt	52
2.10.4	Instructor seat	53
2.11	Warranty	54
2.11.1	General	54



Table of contents

2.11.2	Pre-delivery inspection and commissioning on the user's premises	54
2.11.3	Warranty procedure	54
2.11.4	Procedure to follow if changing region	54
2.11.5	Servicing during and after the warranty period	55
3	Operation	57
3.1	Cab	59
3.1.1	Steering console	59
3.1.2	Instrument panel	60
3.1.3	Control unit	62
3.1.4	Start switch	62
3.1.5	Pedals	63
3.1.6	Steering wheel	63
3.1.7	Seat	64
3.1.8	Right-hand console	68
3.1.9	Left-hand console	69
3.1.10	Upper console	69
3.1.11	Manual air conditioning	72
3.1.12	Sun visor	73
3.1.13	Roof hatch	74
3.1.14	Opening windscreen	75
3.1.15	Wheel chock(s) (optional)	76
3.2	Engine	78
3.2.1	Running-in	78
3.2.2	Start-up	78
3.2.3	Stopping the engine	78
3.2.4	Engine speed	79
3.3	Transmission	80
3.3.1	General information about the Dyna-4 transmission	80
3.3.2	Engaging the transmission	80
3.3.3	Transmission control	80
3.3.4	Selecting the ratio at start-up	82
3.3.5	Power Shuttle	83
3.3.6	Creeper gears and super creeper gears	84
3.3.7	Speed limitation	85
3.3.8	Cold temperature conditions	85
3.3.9	Tractor towing	85
3.4	Brakes	86
3.4.1	Brake pedals	86
3.4.2	Hydraulic trailer brake	86
3.4.3	Pneumatic trailer brake	87
3.4.4	Parking brake	88
3.5	Steering	89
3.5.1	Steering	89
3.6	Front axle	90
3.6.1	Four-wheel drive front axle	90
3.6.2	Suspended front axle	90
3.7	Differential lock	91
3.7.1	Differential lock	91
3.8	Power take-off	92
3.8.1	Power take-off	92
3.8.2	Zuidberg front power take-off	92
3.8.3	Rear power take-off (PTO)	94
3.8.4	Power take-off external control	95
3.8.5	Interchangeable 540 and 1000 rpm PTO	95
3.8.6	Shiftable 540 and 1000 rpm PTO	95
3.8.7	Proportional PTO	98
3.8.8	Economy PTO	98
3.8.9	Power take-off electronic controls	99
3.9	Linkage	100
3.9.1	Rear linkage: Electronic controls	100
3.9.2	Rear linkage: Unlocking the controls	100

3.9.3	Rear linkage: Hitching a rear implement	101
3.9.4	Rear linkage: Lowering	102
3.9.5	Rear linkage: Lifting	102
3.9.6	Rear linkage: Setting the depth limit	103
3.9.7	Rear linkage: Transport position setting	103
3.9.8	Rear linkage: Active transport control system	103
3.9.9	Rear linkage: Operation in working position	104
3.9.10	Rear linkage: Operation at headlands	105
3.9.11	Front linkage	105
3.10	Linkage	108
3.10.1	Three-point linkage: general information	108
3.10.2	Three-point linkage: lower links	108
3.10.3	Three-point linkage: top link	108
3.10.4	Three-point linkage: lift rods	109
3.10.5	Three-point linkage: stabilisers	110
3.10.6	Multi-hole drawbar	110
3.10.7	Swinging drawbar	110
3.10.8	Stud for semi-mounted trailer	111
3.10.9	4-wheel trailer clevis hitch	112
3.10.10	Dromone auto-hitch	112
3.11	Auxiliary hydraulics	114
3.11.1	Types of spool valve	114
3.11.2	Hydraulic spool valve control	114
3.11.3	Open Centre 100 l/min	116
3.12	Wheels and tyres	119
3.12.1	Wheel studs	119
3.12.2	Adjusting the front wheel track width	119
3.12.3	Adjusting the 4WD front axle stops	121
3.12.4	Adjusting the rear wheel track width	122
3.12.5	Dual wheels	122
3.12.6	Tyre pressures	124
3.12.7	Liquid ballasting	127
4	Maintenance	129
4.1	Service guide	131
4.1.1	Service guide	131
4.2	Cab	134
4.2.1	Air conditioning system: condenser	134
4.2.2	Air conditioning system: checking the air conditioning system	134
4.2.3	Cab air filters	134
4.2.4	ROPS or cab attachment	136
4.2.5	Windscreen washer	136
4.2.6	Hinge and lock lubrication	137
4.3	Engine	138
4.3.1	Recommended products	138
4.3.2	Fuel	138
4.3.3	Perkins 4-cylinder engine	140
4.3.4	SisuDiesel 4-cylinder engine	141
4.3.5	6-cylinder Sisu engine	141
4.3.6	Engine oil level check	142
4.3.7	Draining the engine oil	142
4.3.8	Replacing the engine oil filter	143
4.3.9	Breather system	143
4.3.10	Fuel system: fuel prefilter	143
4.3.11	Fuel system: fuel filter	143
4.3.12	Fuel system: Water filter (optional)	144
4.3.13	Fuel system: bleeding	145
4.3.14	Fuel system: injection pump, regulator and injectors	146
4.3.15	Air filter	146
4.3.16	Cooling system	147
4.3.17	Checking the fan/alternator V belt	149
4.3.18	Checking the fan/alternator/air conditioning Poly-V belt	149



Table of contents

4.3.19	Replacing the fan/alternator belt	149
4.3.20	Fuel	150
4.3.21	Biodiesel fuel	151
4.4	Transmission	154
4.4.1	Recommended products	154
4.4.2	Checking the hydraulic system level	154
4.4.3	Draining the hydraulic system	154
4.4.4	Filtering the hydraulic system	155
4.4.5	Transmission oil cooler (according to version)	156
4.4.6	Lubricating the rear axle shaft bearings	156
4.5	Brakes	157
4.5.1	Bleeding the brake system	157
4.6	Power take-off	158
4.6.1	Recommended products	158
4.6.2	Lubrication	158
4.6.3	Zuidberg front power take-off	158
4.7	Front axle and steering	159
4.7.1	Recommended products	159
4.7.2	Two-wheel drive front axle: lubrication	159
4.7.3	Four-wheel drive front axle: checking the oil level in the final drives	160
4.7.4	Four-wheel drive front axle: draining the oil in the final drives	161
4.7.5	Four-wheel drive front axle: Checking the front axle oil level	161
4.7.6	Four-wheel drive front axle: Draining the oil from the front axle	162
4.7.7	Four-wheel drive front axle: lubrication	163
4.8	Linkage	167
4.8.1	Recommended products	167
4.8.2	Three-point linkage: lubrication	167
4.8.3	Auto-hitch: lubrication	168
4.8.4	Front linkage: lubrication	169
4.9	Auxiliary hydraulics	170
4.9.1	Filtering the auxiliary hydraulic system	170
4.10	Electrical equipment	172
4.10.1	Batteries	172
4.10.2	Alternator	172
4.10.3	Power socket (ISO)	172
4.10.4	Adjusting the headlights	173
4.10.5	Fuses	174
4.10.6	Relay	175
4.10.7	Fuses and engine relay	176
4.11	Pressure washing	179
4.11.1	Pressure washing	179
4.12	Storing your tractor	180
4.12.1	Storing your tractor	180
5	Technical specifications	181
5.1	General specifications	183
5.1.1	Model 5425	183
5.1.2	Model MF 5435	183
5.1.3	Model MF 5445	184
5.1.4	Model MF 5455	185
5.1.5	Perkins model MF 5460	186
5.1.6	SisuDiesel model MF 5460	186
5.1.7	Model 5465	187
5.1.8	Model 5470	188
5.1.9	Model 5475	189
5.1.10	Model 5480	189
5.2	Cab	191
5.2.1	Noise levels (dBA) at operator's ears	191
5.3	Engine	192
5.3.1	Engine specifications	192
5.3.2	Fuel system and air filter	193
5.3.3	Cooling	193

5.3.4	Tightening torques	193
5.4	Transmission	194
5.4.1	Forward speed for models MF 5425/MF 5435 with Dyna-4 transmission and 18.4R38 tyres	194
5.4.2	Forward speed for models MF 5445/MF 5455 with Dyna-4 transmission and 18.4R38 tyres	194
5.4.3	Forward speed for models MF 5460/MF 5470 with Dyna-4 transmission and 18.4R34 tyres	195
5.4.4	Forward speed for model MF 5465 with Dyna-4 transmission and 18.4R34 tyres	195
5.4.5	Forward speed for models 5475/5480 with Dyna-4 transmission and 18.4R34 tyres	196
5.4.6	Gearbox	196
5.4.7	Final drives	197
5.4.8	Rear differential lock	197
5.5	Brakes	198
5.5.1	Brake technical specifications	198
5.6	Front axle and steering	199
5.6.1	Four-wheel drive front axle	199
5.6.2	Steering	199
5.6.3	Tightening torques	199
5.7	Power take-off	200
5.7.1	Specifications	200
5.7.2	Tightening torques	200
5.8	Hydraulic linkage	201
5.8.1	Rear linkage	201
5.9	Auxiliary hydraulics (according to specification or country)	202
5.9.1	Open Centre 57 l/min	202
5.9.2	Open centre 100 l/min (optional)	202
5.9.3	Closed centre system with flow and pressure control	203
5.10	Electrical equipment	205
5.10.1	Electrical equipment technical specifications	205
5.11	Wheels and tyres	206
5.11.1	Wheels	206
5.11.2	Tyres	206
5.11.3	Tightening torques	206
5.12	Capacities and dimensions	207
5.12.1	Capacities	207
5.12.2	Dimensions and weights	208
5.12.3	Attachment points: Models MF 5425/MF 5435/MF 5445/MF 5455	211
5.12.4	Attachment points: Perkins model MF 5460	213
5.12.5	Attachment points: SisuDiesel 5460 model	214
5.12.6	Attachment points: Model MF 5465	216
5.12.7	Attachment points: Models 5470/5480	217
5.12.8	Attachment points: Model 5475	219
6	Accessories	221
6.1	Cab accessories	223
6.1.1	Cab accessories	223
6.2	Engine accessories	224
6.2.1	Engine accessories	224
6.3	Transmission accessories	225
6.3.1	Transmission accessories	225
6.4	Front axle and steering accessories	226
6.4.1	Front axle and steering accessories	226
6.5	Power take-off accessories	227
6.5.1	Power take-off accessories	227
6.6	Linkage accessories	228
6.6.1	Linkage accessories	228
6.7	Auxiliary hydraulics accessories	229
6.7.1	Auxiliary hydraulics accessories	229

*Table of contents*

6.8	Electrical equipment accessories	230
6.8.1	Electrical equipment accessories	230
6.9	Wheels and tyres accessories	231
6.9.1	Wheels and tyres accessories	231

1. Tractor identification

1.1	Locating serial numbers	13
1.1.1	Locating serial numbers	13
1.2	Your tractor identification details	14
1.2.1	Your tractor identification details	14



1.1 Locating serial numbers

1.1.1 Locating serial numbers

T006946

IMPORTANT: Please quote the serial number of your tractor in all correspondence with your dealer or agent.

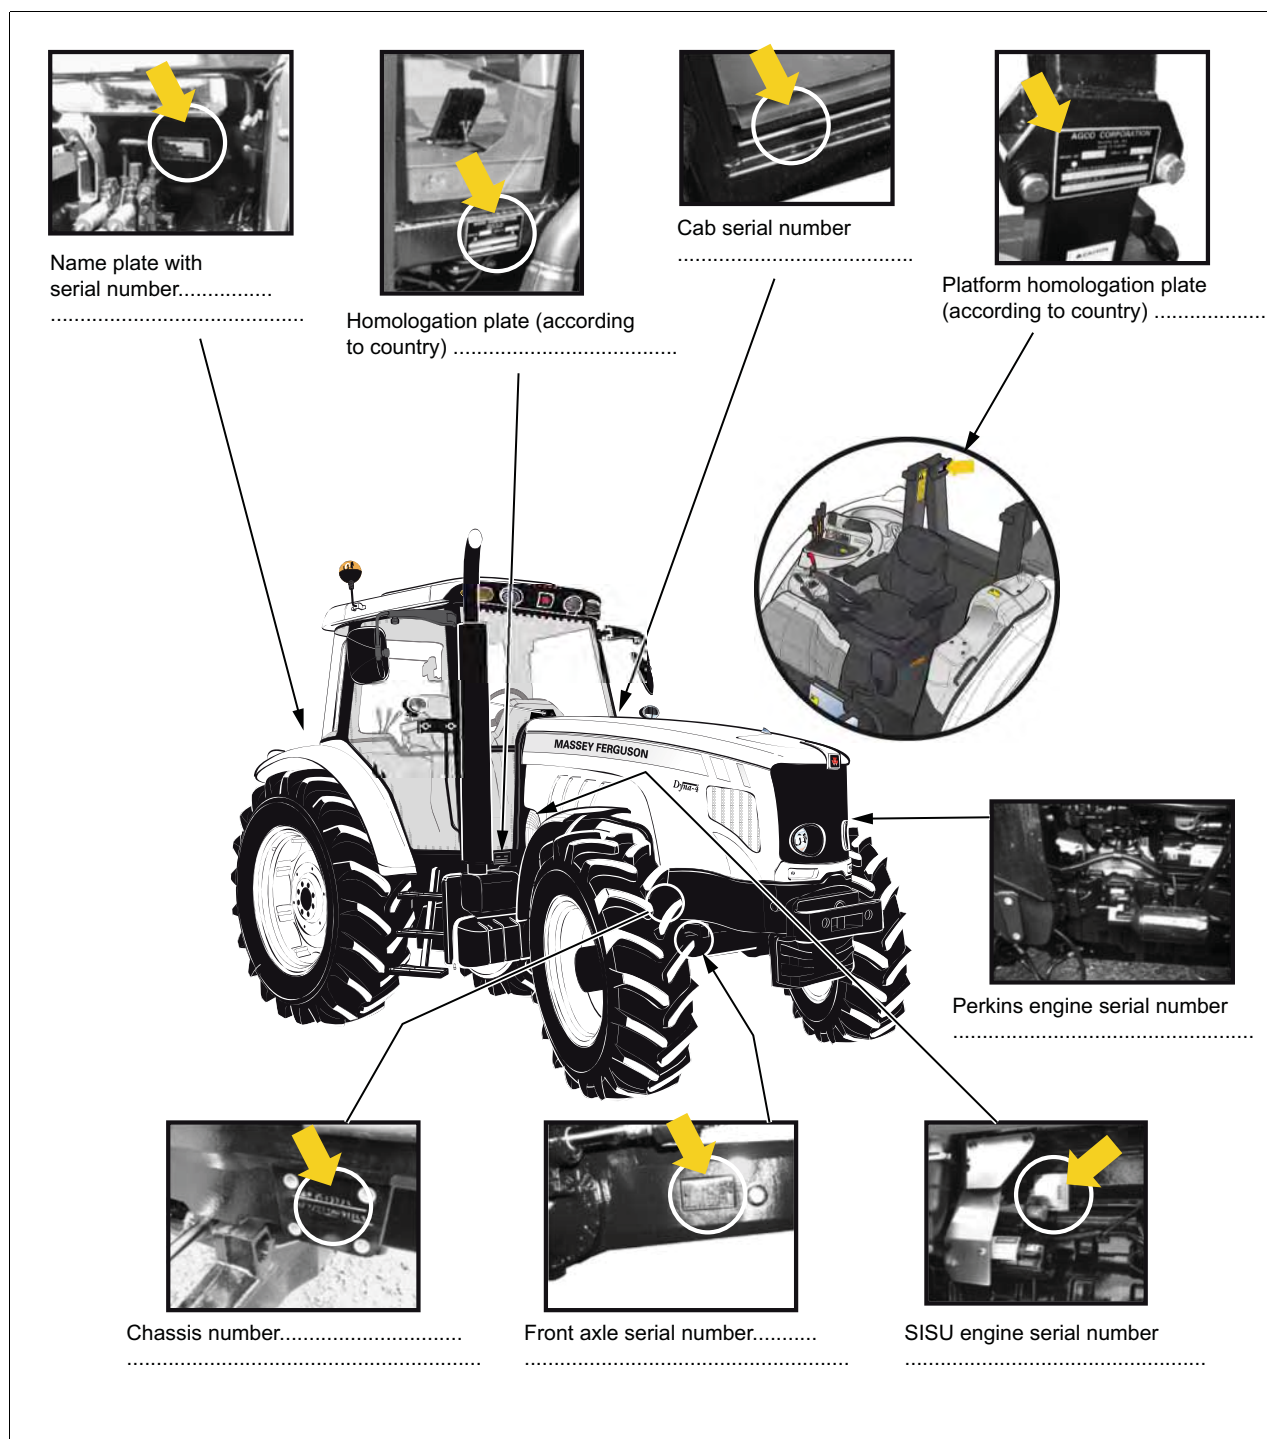


Fig. 1.

1017767



1. Tractor identification

1

1.2 Your tractor identification details

1.2.1 Your tractor identification details

T000866

Model: _____

Serial number: _____

Engine serial number: _____

Owner's name: _____

Street: _____

Postcode: _____

Town: _____

County: _____

Country: _____

Dealer code: _____

Tractor received from (tick one of the following):☐

Factory

☐

Other dealer (transfer)

Notes: _____

2. Safety instructions and safety points - Warranty

2

2.1	Introduction	17
2.1.1	Introduction - Safety instructions	17
2.2	Safety – Symbols and terms	19
2.2.1	Safety – Symbols and terms	19
2.3	Safety decals and instructions	20
2.3.1	Checking and replacing the safety decals and instructions	20
2.3.2	Presentation and location of the safety decals and instructions	21
2.4	General safety instructions	27
2.4.1	Awareness of the safety instructions and symbols	27
2.4.2	Operator familiarity in the use of the tractor	27
2.4.3	Filling the fuel tank	28
2.4.4	Getting into and out of the cab	28
2.4.5	Mandatory procedure before dismounting the tractor	28
2.5	Special instructions	30
2.5.1	Specific recommendations for agricultural and forestry tractors	30
2.6	Special safety instructions for preparing the tractor for use	32
2.6.1	Protective clothing	32
2.6.2	Activated carbon filter information	32
2.6.3	Safety devices and items	34
2.6.4	Checking the tractor	35
2.7	Specific safety instructions for starting the tractor	37
2.7.1	Protection of persons other than the operator	37
2.7.2	Start up safely	37
2.7.3	Checks to be carried out after start-up	38
2.8	Specific safety instructions for using the tractor	39
2.8.1	General instructions	39
2.8.2	Protection of persons other than the operator	40
2.8.3	Overturning	40
2.8.4	Tractor towing	42
2.8.5	Road use	42
2.8.6	Parking brake	44
2.8.7	Power take-off	44
2.8.8	Implements	45
2.8.9	Front-end loader	47
2.9	Specific safety instructions for servicing the tractor	48
2.9.1	Pollution warning to observe when servicing the tractor	48
2.9.2	General instructions	48
2.9.3	Handling instructions	49
2.9.4	Special instructions for cleaning the tractor	50
2.10	Protective structures	52
2.10.1	Protective structures: use and accreditation	52
2.10.2	Cab or ROPS (depending on model)	52
2.10.3	Seat belt	52
2.10.4	Instructor seat	53
2.11	Warranty	54
2.11.1	General	54
2.11.2	Pre-delivery inspection and commissioning on the user's premises	54
2.11.3	Warranty procedure	54
2.11.4	Procedure to follow if changing region	54
2.11.5	Servicing during and after the warranty period	55

2.1 Introduction

2.1.1 Introduction - Safety instructions

T000867

2

Operator's Manual

NOTE: This Operator's Manual is widely published and distributed and the availability of the attachments indicated, whether fitted to the basic tractor or as an accessory, may vary depending on the country or region in which the tractor is used. To find out which attachments are available in a given region, contact a Massey Ferguson dealer.

The purpose of this manual is to enable the owner and the operator to operate the tractor appropriately under normal conditions of use. Providing they follow the instructions carefully, the tractor will give many years of service in the Massey Ferguson tradition.

Use for any other activity (particularly forestry work) is considered to be contrary to the intended use.

The commissioning of equipment by the Massey Ferguson dealer on the user's premises enables the dealer to ensure that these operating and service instructions are properly understood. Always consult the Massey Ferguson dealer if there is any part of this manual that you do not understand. It is important that these instructions are understood and followed.

This manual does not cover all operation and safety instructions relevant to the implements and accessories that may be fitted at the time of tractor delivery or later. It is essential that operators use and understand the Operator's Manuals relating to these implements and accessories.

IMPORTANT: This manual must always be kept with the tractor. For extra copies, contact your Massey Ferguson dealer.

This chapter in the Operator's Manual highlights certain basic safety-related situations that may be encountered during normal operation and servicing of the tractor and provides the information needed to handle these situations.

This chapter supplements any safety instructions given in other chapters of this manual.

It may be necessary to take additional precautions, depending on the implements and accessories used and the working conditions on-site or in the service area. Massey Ferguson can under no circumstances exercise direct control over the commissioning, operation, inspection, lubrication or servicing of the tractor. It is therefore YOUR responsibility to take suitable safety precautions in such areas.



WARNING:

It is your responsibility to read and understand the instructions that appear in this chapter before using the tractor. They must then be strictly adhered to throughout the working day.

Servicing, spare parts, accessories and conditions of use

Daily servicing should become a routine, and a logbook of operating hours should be kept.

When spare parts are required, it is important to use only genuine Massey Ferguson parts. Massey Ferguson dealers supply genuine parts and can offer advice concerning their fitting and use. The use of lower quality parts may cause serious damage. Customers are advised only to purchase their spare parts from an approved Massey Ferguson dealer. In the same way, you must only use accessories specifically adapted to your tractor.

Owing to the considerable variation in operating conditions, it is not possible for the manufacturer to formulate complete or absolute assertions in its publications concerning the performance or operating methods of its machines or to accept liability for any loss or damage which may result from such assertions or possible errors or omissions.

If the tractor is to be used in abnormal conditions which could cause damage (use in deep water or in paddy fields for instance), you should consult your Massey Ferguson dealer to obtain special instructions to prevent the warranty from becoming void.

These tractors are designed only for usual farming activities (intended use). Use for any other activity (particularly forestry work) is considered to be contrary to the intended use.

Strict compliance with the repairs, service and operating conditions as specified by Massey Ferguson is also an essential component of the intended use.

IMPORTANT: Massey Ferguson accepts no responsibility in the event of damage to equipment or personal injury resulting from improper use.

The tractor must only be used, serviced and repaired by personnel who have full knowledge of its specific features and who are aware of the applicable safety measures (prevention of accidents).

2. Safety instructions and safety points - Warranty

Customers are strongly advised to contact a Massey Ferguson dealer in the event of after-sales problems and for any adjustments which may be necessary.

2

2.2 Safety — Symbols and terms

2.2.1 Safety — Symbols and terms

T000869

2

Signal



This safety alert symbol means CAUTION! BE ALERT! YOUR SAFETY DEPENDS ON IT!

The safety alert symbol identifies important safety notices on machines, safety signs, in instruction books or elsewhere. When you see this symbol, be alert to the risk of injury or death. Follow the instructions in the safety notice.

SAFETY is paramount! Why?

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS ARE COSTLY
- ACCIDENTS CAN BE AVOIDED

Terms

The terms DANGER, WARNING and CAUTION are used with the safety alert symbol. It is essential to learn how to recognise these safety messages and to follow the recommended safety measures and instructions.



DANGER:

indicates an imminently hazardous situation which, if not avoided, will result in DEATH or VERY SERIOUS INJURY.



WARNING:

indicates a potentially hazardous situation which, if not avoided, could result in DEATH or SERIOUS INJURY.



CAUTION:

indicates a potentially hazardous situation which, if not avoided, may result in MINOR or MODERATE INJURY.

The terms IMPORTANT and NOTE are not directly related to personal safety, but are used to provide additional information and advice on the operation or maintenance of equipment.

IMPORTANT: *identifies specific instructions or procedures which, if not strictly applied, could damage or destroy the tractor, its equipment or the surrounding area.*

NOTE: *identifies points of particular interest for the most effective and suitable operation or repair.*



2.3 Safety decals and instructions

2.3.1 Checking and replacing the safety decals and instructions

T000871

**WARNING:*****Never remove or obscure the safety decals and instructions.***

Replace any safety decals and instructions that are illegible or missing. Replacement decals are available from the dealer in the event of loss or damage. If a second-hand tractor has been purchased, check that all of the safety decals and instructions are correct, legible and in the correct position. To do this, refer to the section on the presentation and location of these decals.

2.3.2 Presentation and location of the safety decals and instructions

T001270

2

2. Safety instructions and safety points - Warranty

2

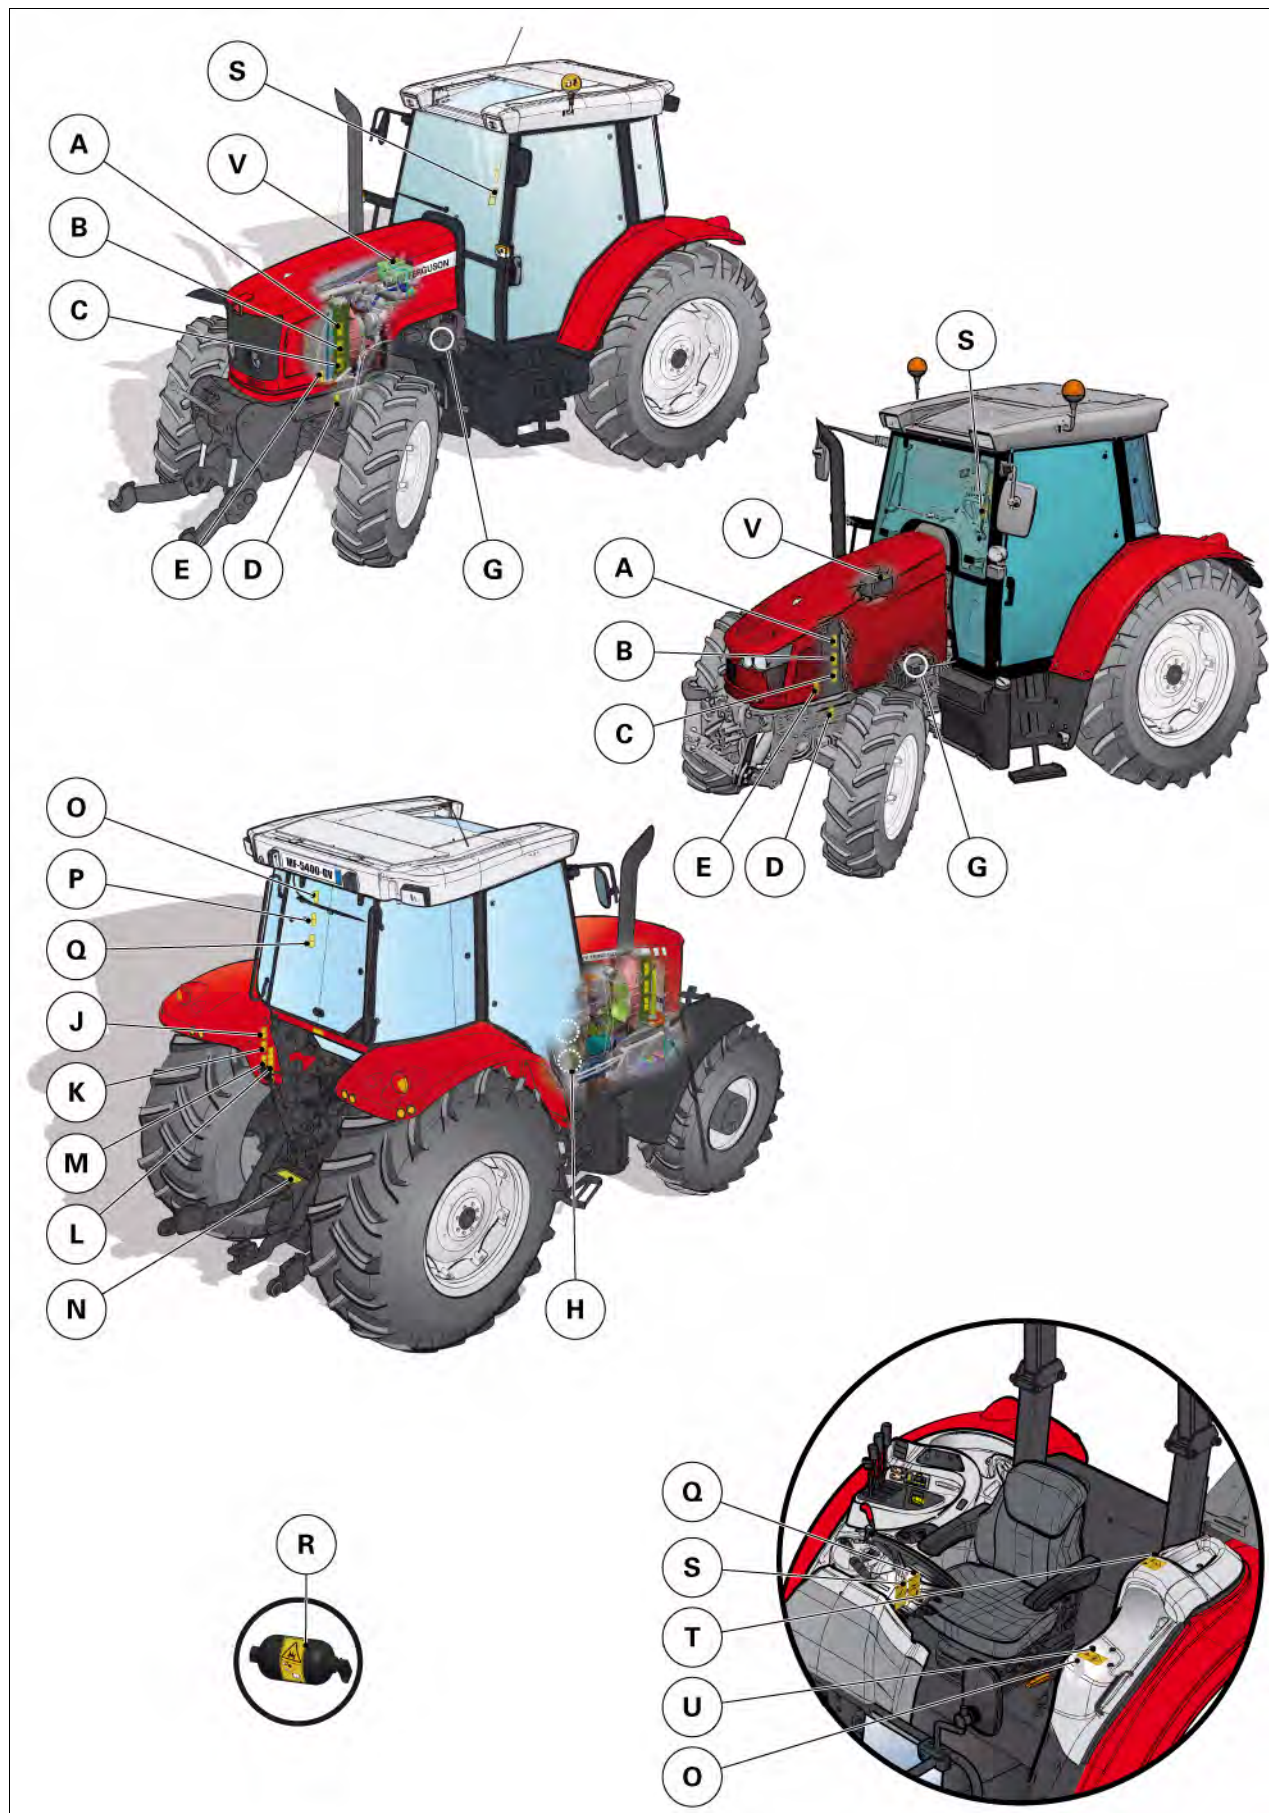
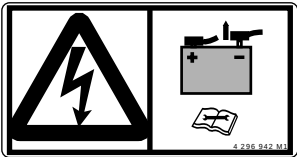
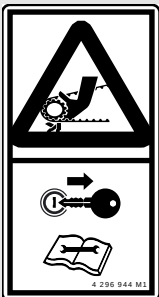
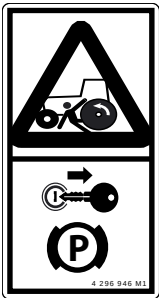
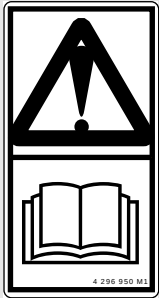
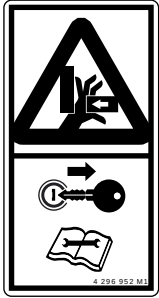



Fig. 1.


I018463

	– 4296942M1 ((H) <i>fig. 1</i>) – WARNING: Electric shock hazard – risk of personal injury and component damage. Remove negative (ground) cable from battery before removing starter solenoid cover and before servicing electrical system.
	– 4296944M1 ((A) <i>fig. 1</i>) – WARNING: Entanglement hazard in belt drives. Keep hands clear of rotating parts and belts while engine is running. Switch off the ignition and remove the key before working on the tractor.
	– 4296946M1 ((O) <i>fig. 1</i>) – WARNING: Runaway machine and runover hazards. Switch off the ignition, remove the ignition key and engage the Park-Lock before leaving the tractor.
	– 4296950M1 ((Q) <i>fig. 1</i>) – WARNING: To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor.
	– 4296952M1 ((D) <i>fig. 1</i>) – WARNING: Pinch point hazard Keep clear of axle suspension system when engine is running. Switch off the ignition and remove the key before working on the tractor.
	– 4296954M1 ((J) <i>fig. 1</i>) – WARNING: Driveline separation hazard, which may result in personal injury and machine damage. Make sure drawbar / 3-point hitch is in correct position and check length of PTO driveshaft when attaching PTO driven equipment. See Operating section of manual for detailed information.

2. Safety instructions and safety points - Warranty





2

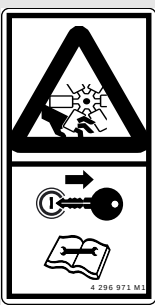	– 4296958M1 ((P) <i>fig. 1</i>) – WARNING: Risk of being crushed under tractor in the event of a roll-over. Keep seat belt fastened snugly when operating, do not jump if tractor starts to tip.
	– 4296960M1 ((U) <i>fig. 1</i>) – WARNING: Crushing hazard if the tractor overturns Wear the seat belt when using the instructor seat Read the Operator's Manual for more information: – The instructor seat is not intended for use by children. – The instructor seat must not be used to transport passengers. – The instructor seat must only be used by service personnel or for training purposes.
	– 4296962M1 ((V) <i>fig. 1</i>) – DANGER: Falling and crushing hazard. Do not sit on the tractor fenders.
	– 4296967M1 ((C) <i>fig. 1</i>) – WARNING: Burn hazard – hot surfaces. Keep away from hot engine components when engine has been running. Shut off engine, remove key and wait for system to cool before performing maintenance or repair work.
	– 4296969M1 ((M) <i>fig. 1</i>) – WARNING: Crushing hazard between tractor and implement. Stand outside of tractor tire when using external controls for 3-point hitch. Do not stand between tractor and implement.
	– 4296971M1 ((B) <i>fig. 1</i>) – WARNING: Shearing hazard – engine fan. Keep your hands away from the fan and the belts when the engine is running. Shut off engine and remove key before performing maintenance or repair work.

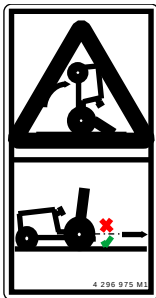 4 296 975 M1	– 4296975M1 ((K) <i>fig. 1</i>) – DANGER: Rear overturn hazard, which may result in personal injury or death. Pull only from approved drawbar or lower links of 3-point hitch at horizontal position or below. Never pull from above rear axle centerline.
 4 296 977 M1	– 4296977M1 ((L) <i>fig. 1</i>) – DANGER: Entanglement hazard – PTO driveline. Stand clear of rotating shafts. Keep all driveline, tractor and equipment guards in place during operation.
 4 296 979 M1	– 4296979M1 ((I) <i>fig. 1</i>) – DANGER: Lead-acid battery hazards - o Explosive gases; - o Corrosive liquid (sulphuric acid); Keep away from all naked flames or sparks Shield eyes when working on or around battery. Read safety and operating instructions in the Operator Instruction Book for further information.
 4 296 981 M1	– 4296981M1 ((G) <i>fig. 1</i>) – DANGER: Runaway machine and runover hazards. Only start the engine when seated in the seat with the PTO disengaged and the transmission in the neutral position. DO NOT short across starter terminals to start engine.
 4 296 985 M1	– 4296985M1 ((E) <i>fig. 1</i>) – WARNING: Pinch point hazard due to moving parts Keep hands clear of linkage when pivoting coolers
 4 297 149 M1	– 4297148M1 ((N) <i>fig. 1</i>) – WARNING: Falling hazard Do not step on PTO shield.

2. Safety instructions and safety points - Warranty

2

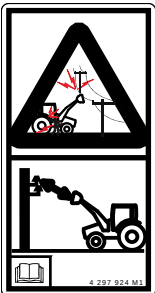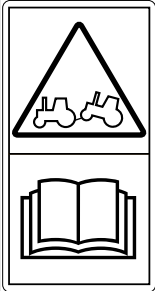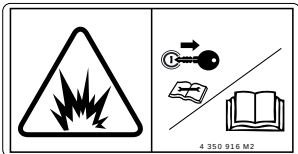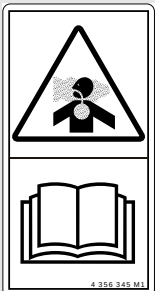	– 4297924M1 ((S) <i>fig. 1</i>) – DANGER: Electrocution hazard Tractors fitted with a front loader: Exercise extreme caution to avoid coming into contact with power lines.
	– 4349217M1 ((T) <i>fig. 1</i>) – WARNING: Towing – Carefully read the specific instructions from the Operator's Manual before towing the tractor.
	– 4350916M2 ((R) <i>fig. 1</i>) – DANGER: Explosion hazard – contents under pressure. Fill accumulators with nitrogen only – other gases may explode. See Operation section of manual for detailed information.
	– 4356345M1 ((W) <i>fig. 1</i>) – WARNING: Hazardous environments Put on suitable protective clothing, safety goggles and a respirator before working in an area that is being treated. See Operation section of manual for detailed information.

2.4 General safety instructions

2.4.1 Awareness of the safety instructions and symbols

T000880

Remember that you alone are responsible for safety. Good safety practices protect not only you, but also bystanders. Before using the tractor, study the instructions given in this book with care, as well as all of the safety decals and instructions fixed to the tractor: Make them an integral part of your safety procedure. Also note all the usual protective measures which should be taken when working and above all, don't forget:

Safety depends on you. You can prevent accidents which could cause serious injury or death.



WARNING:

In some of the illustrations in this book, the safety panels and guards have been removed for reasons of clarity. Never use the tractor if these parts are not in place. If some of these parts have been removed for repair purposes, they must be refitted before use.

2.4.2 Operator familiarity in the use of the tractor

T000881



WARNING:

The operator must not drink alcohol or take any medication that may affect his concentration or co-ordination. If taking medication, whether prescribed or not, the operator must seek medical advice with regard to his ability to operate machinery safely.

To be able to use your tractor, it is first necessary:

- to be familiar with operating an agricultural tractor
- to have been trained in the operation of the tractor that you have just purchased
- to have read and understood this entire book — always consult the dealer as soon as there is any doubt or lack of understanding [fig. 1](#)
- find out about the rules and safety regulations applicable to the work you are doing. Some regulations specify that no one under the age of 16 may operate power machinery, for example. This includes tractors. It is your responsibility to know what these regulations are and to observe them in the operating area or situation. These rules include, but are not limited, to the safety instructions relating to correct operation of the tractor as described in this book.
- Do not allow children or unqualified persons to operate the tractor.
- Do not allow children to use the instructor seat.
- The instructor seat is only intended for short periods of use.

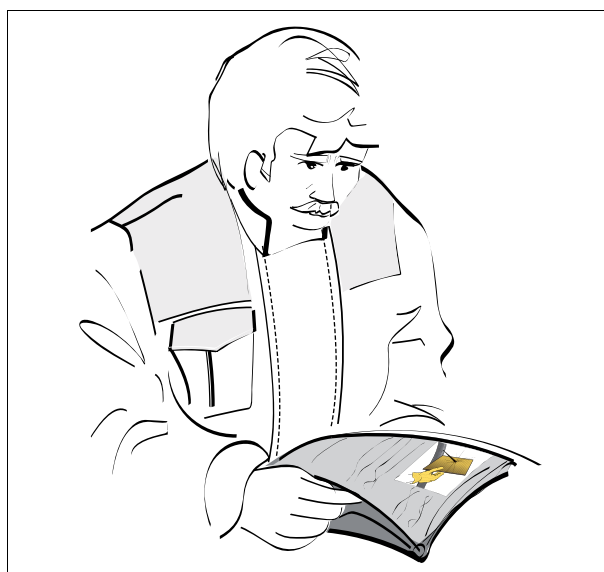


Fig. 1.

I002903

2. Safety instructions and safety points - Warranty

-  **WARNING:**
In poor conditions, slow down and be extra careful, and engage 4-wheel drive if fitted.

It is important to have good knowledge of the operation of the tractor as well as all of its accessories and attached implements.

Remember that rain, snow, ice, loose gravel or soft ground can change the performance of the tractor.

2.4.3 Filling the fuel tank

T001555

- Always switch off the engine before filling up.
- Do not smoke while refuelling the tractor. Keep away from naked flames [fig. 2](#).
- Proceed with care to prevent any splashes.



Fig. 2.

I024804

2.4.4 Getting into and out of the cab

T000883

- Always use three-point contact with the tractor and face the tractor when mounting and dismounting. (Three-point contact means that both hands and one foot or one hand and both feet are in contact with the tractor at all times when getting on and off).
- Clean your shoes and wipe your hands before getting on the tractor.
- Use handrails, grab handles, ladders or steps (if fitted) when getting on and off. Do not use the control levers as a handhold.
- Do not step on pedals when getting in and out.
- Never attempt to mount or dismount a moving tractor.
- Never jump off a tractor when it is running except in an emergency.

2.4.5 Mandatory procedure before dismounting the tractor

T000902

Before getting out of the cab, whether during the course of or at the end of the working day, always:

1. Immobilise the tractor by applying the parking brake.
2.  **DANGER:**
Place the reverse shuttle lever in the neutral position.
3. Disengage the front and rear PTO.
4. Lower the implements to the ground.



5. Stop the engine (see the chapter in the Operation section of the Operator's Manual). Ensure that the engine is not idling and has stopped.
6. Remove the ignition key.

2.5 Special instructions

2.5.1 Specific recommendations for agricultural and forestry tractors

T006914

Hot surfaces

Be careful of surfaces which may be hot, in particular engine and hydraulics components, during operation and services.

FOPS (Falling Object Protection Structure)

- Alternative 1 (no FOPS available): Protection against falling objects is not provided, unless clearly specified otherwise.
- Alternative 2 (optional FOPS fitted): Protection against falling objects is provided under OECD-code 10 (Energy level 1365 J). If a higher protection level is necessary, additional safety equipment should be installed on the tractor (no original equipment available).

OPS (Operator Protection Structure)

- Alternative 1 (no OPS available): Protection against penetrating objects is not provided, unless clearly specified otherwise.
- Alternative 2 (optional OPS fitted): Protection against penetrating objects is provided under ISO 8084 (Machinery for forestry). Before operating, check if protection is adapted to your work conditions.

Hazardous substances

NOTE: A mark indicating the cab's level of protection against hazardous substances is located on the front left-hand pillar inside the cab. For platform tractors, this mark is displayed on the arch.

IMPORTANT: Always wear personal protective equipment when handling the filters.

- Alternative 1 (less cab or cab under category 1): Protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes is not provided. In particular, tractors fitted with these cabs are not to be used for spraying pesticides without any additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.
- Alternative 2 (cab under category 2): Protection against hazardous substances (agricultural chemicals etc.) in the form of aerosols and fumes is not provided. In particular, tractors fitted with these cabs are not to be used for spraying pesticides without any additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

Protection against dust (category 2 of standard EN15695-1:2009) is provided under the following conditions:

- all roof hatch, cab doors and cab windows are closed
- cab ventilation is running
- air filter is clean and is serviced under maintenance interval (refer to service guide). When replacing the filter, only a filter certified for at least category 2 cabs is permitted. Activated carbon filters do not improve the cab's level of protection. Always refer to the user instructions provided with the filter.
- Alternative 3 (cab under category 4): The cab is equipped with protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes. For pesticide spraying, tractors fitted with these cabs must also have a specially designed filter for category 4 cabs.

This protection (category 4 of standard EN 15695-1:2009) is provided under the following conditions:

- All roof hatches, doors and windows are closed
- Cab ventilation is running
- Air filters are clean and serviced according to the maintenance interval (refer to service guide)

Given the risk associated with contaminants entering the cab when opening the door to enter or exit the vehicle, this protection is designed to supplement, but not necessarily replace, the use of personal protective equipment when working in an environment with aerosols and/or fumes, such as pesticides. The chemical manufacturer's instructions concerning the use of personal protective equipment must be followed.

When replacing the filter, only a filter certified for at least category 4 cabs is permitted.

Always refer to the user instructions provided with the filter. Once spraying operations are complete, it is important to return the special filter to its case and replace it with a standard anti-dust filter.

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**