


ccvs.ebe

Attributes

```
ebe name=ccvs
nodes: p n cp cn
rparms: rm=1
outparms: i_c i v pwr
```

Description

ccvs.ebe is a current-controlled voltage source, with nodes and parameters as shown in the figure.

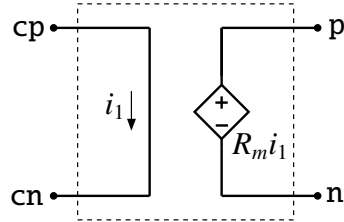

The branch current, branch voltage, and power absorbed are made available as output variables i , v , and pwr , respectively. The controlling current is made available as output variable i_c .