


# The *LETTÉ* Diffuser Product Guide

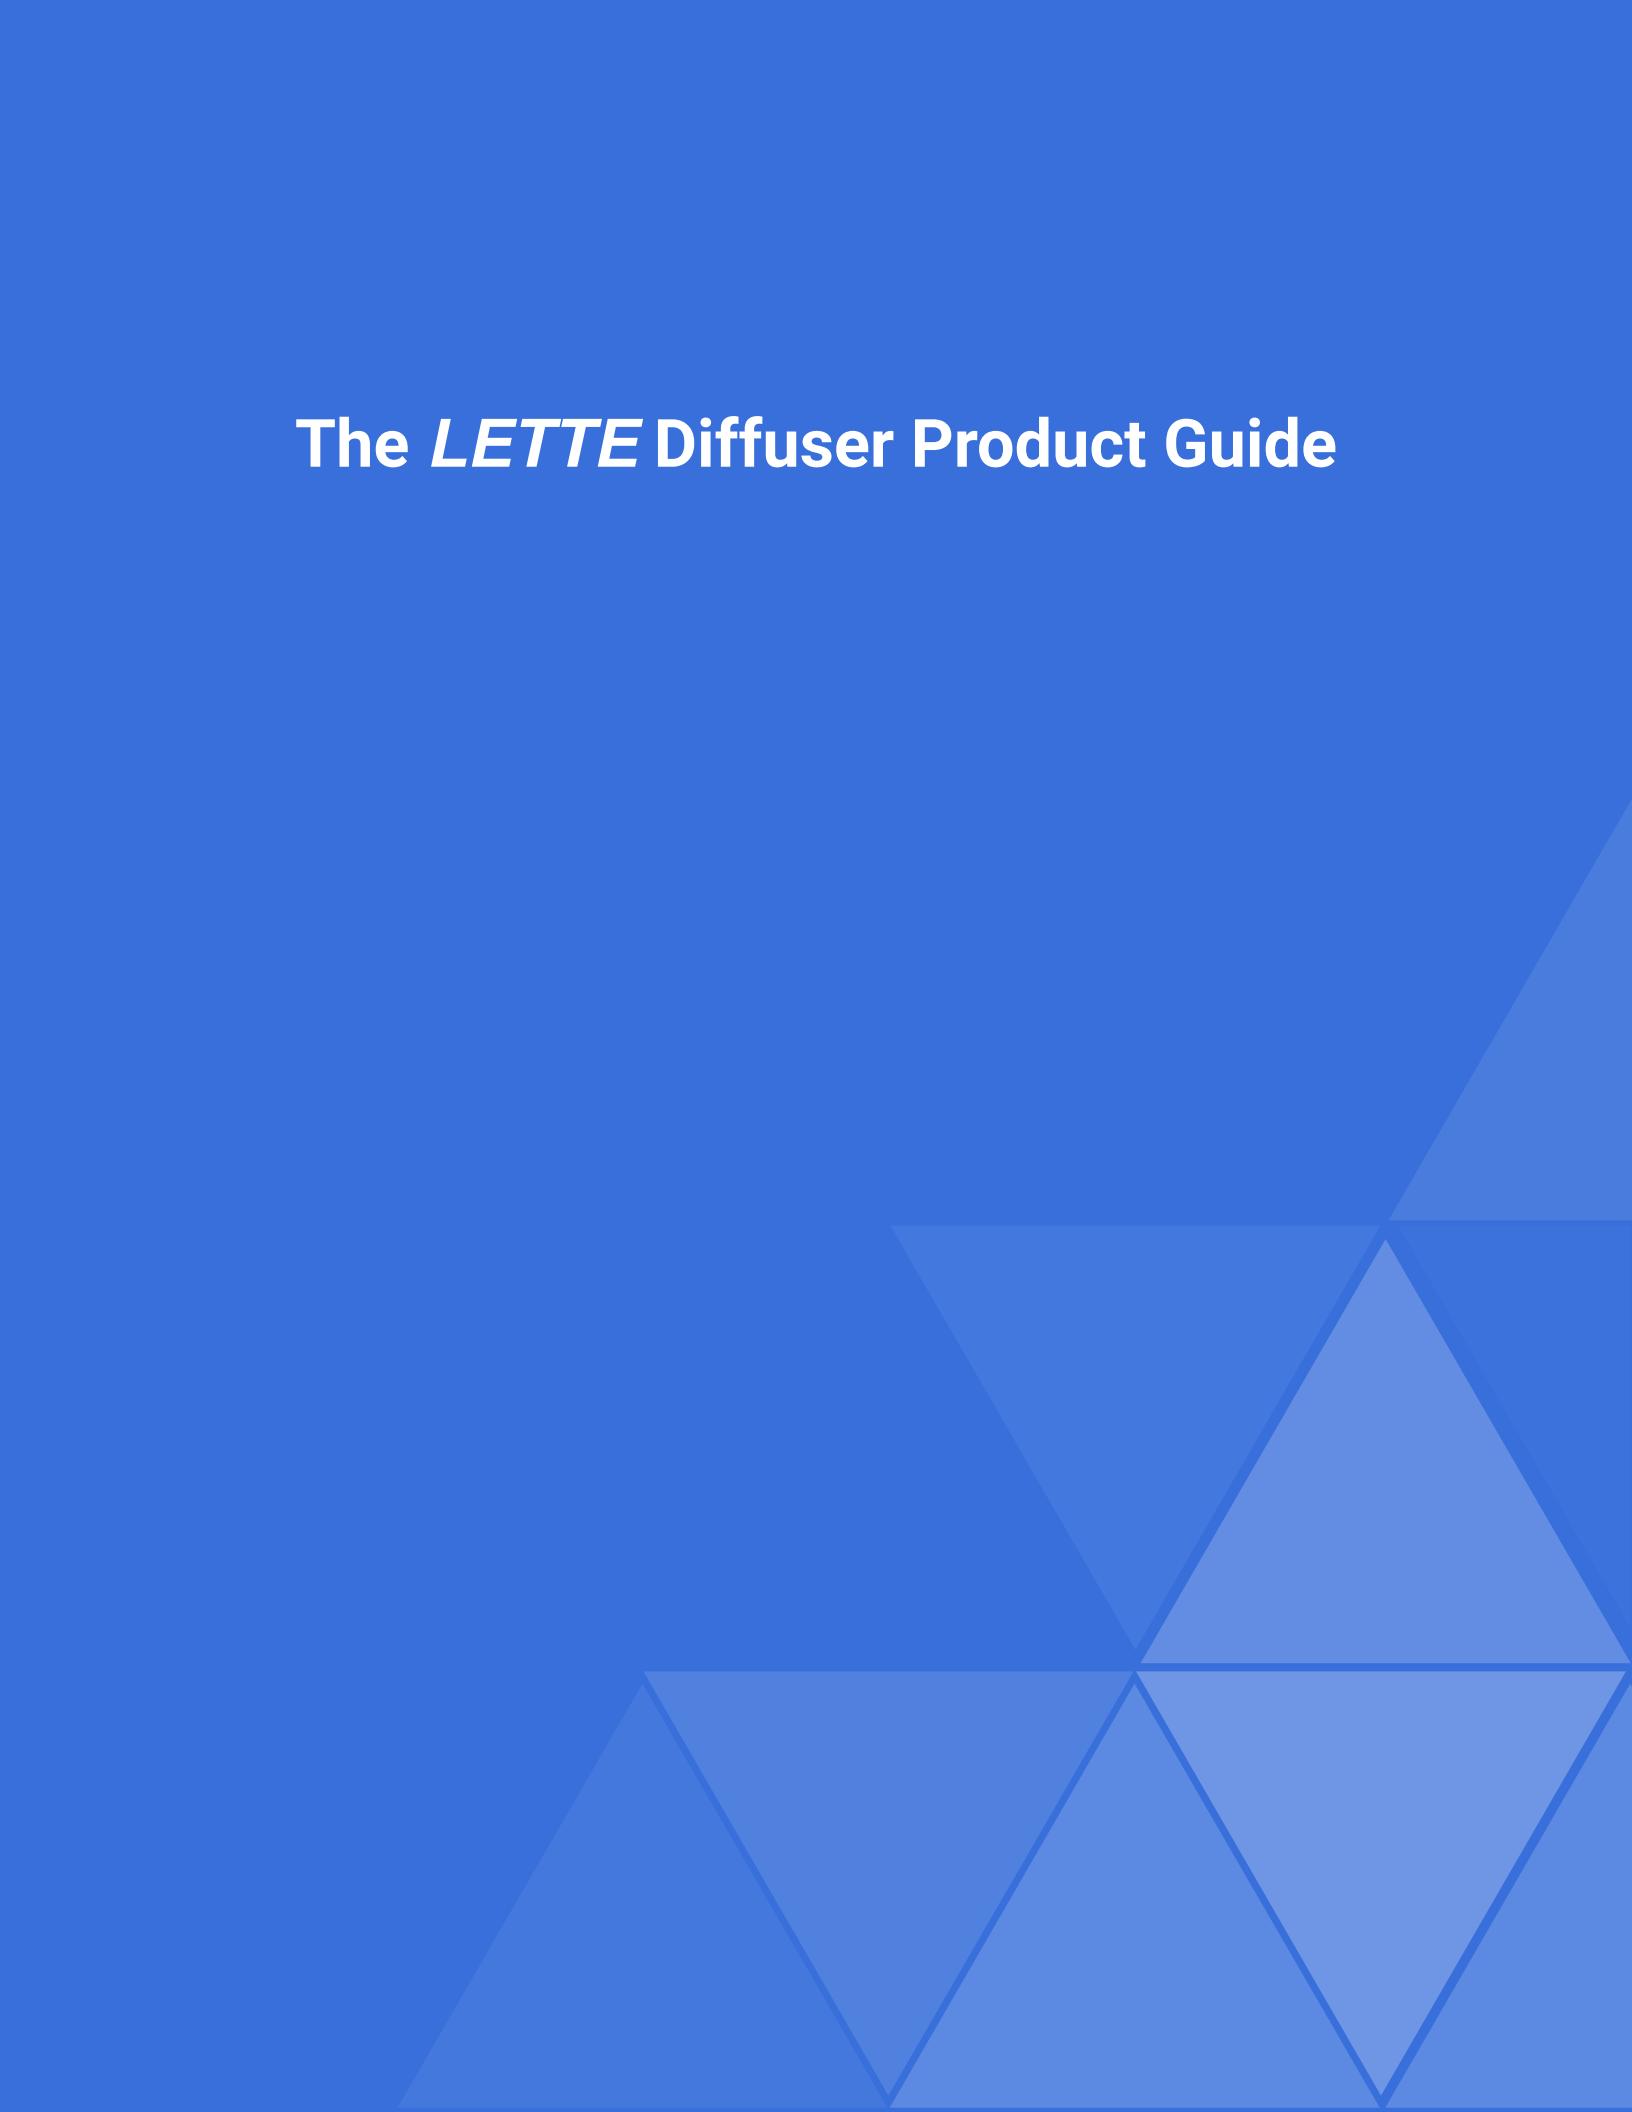

# Contents

<b>Chapter 1. The LETTE Diffuser.....</b>	<b>1</b>
<b>Chapter 2. Turning on your LETTE Diffuser.....</b>	<b>2</b>
<b>Chapter 3. Cleaning your LETTE Diffuser.....</b>	<b>3</b>
<b>Chapter 4. Specifications.....</b>	<b>4</b>

## Chapter 1. The *LETTÉ* Diffuser

The *LETTÉ* Diffuser is an essential oil diffuser.

The *LETTÉ* Diffuser uses ultrasonic technology to transform water and essential oils into a fine mist, that produces a fragrant aroma in the air. Use your favorite essential oil or a blend of oils and enjoy the benefits of aromatherapy in the convenience of your home.



Image source: [freepik](#), [pvproductions](#)

## Chapter 2. Turning on your *LETTÉ* Diffuser

Awaken your senses and enjoy the benefits of aromatherapy with your *LETTÉ* Diffuser.

Before turning on your diffuser, you will need room temperature water and essential oil(s).

To turn on your diffuser, follow these instructions:

1. Place your diffuser on a flat surface and remove the water tank lid.
2. Use the provided measuring cup to fill the water tank to the "MAX fill" line with room temperature water.

 **CAUTION:** Do not overfill the water tank as this can damage your *LETTÉ* Diffuser.

3. Add 4-6 drops of your favorite essential oil(s) and place the water tank lid back on top of your diffuser.
4. Plug the head of the AC adaptor into the power jack on the side of your diffuser and plug the other end into an electrical outlet.
5. Press the Mist button to turn on your diffuser.

For safety, your diffuser will shut off automatically when water runs out of the water tank.

Your *LETTÉ* Diffuser will do the rest. Sit back and enjoy the aroma!

## Chapter 3. Cleaning your *LETTÉ* Diffuser

For best results with your *LETTÉ* Diffuser, we recommend cleaning it after each use.

Before you clean your *LETTÉ* Diffuser, you will need water, mild soap, and a soft cloth towel.

To clean your diffuser, follow these instructions:

1. Unplug the AC adaptor from the electrical outlet and from the side of your diffuser.
2. Remove the water tank lid and empty out any remaining water.
3. Place your diffuser on a flat surface.
4. Add a small amount of water and mild liquid soap in the water tank and use a soft cloth towel to gently clean the water tank and any other soiled areas outside of the water tank.

 **CAUTION:** Do not use harsh cleaning chemicals or abrasive materials as this can damage your *LETTÉ* Diffuser.

5. Rinse out the water tank and dry off any access water.
6. Place the water tank lid back on top of your diffuser.

Your *LETTÉ* Diffuser is clean and ready to be put to work again!

# Chapter 4. Specifications

The dimensions, weight, and other technical information about the *LETTE* Diffuser.

**Table 1. Specifications for the *LETTE* Diffuser**

Name	Value
Water Capacity (ml)	300
Materials	Plastic
Dimensions (in)	6.6 x 6.6 x 4.75
Weight (oz)	14.7
Wattage (W)	10
Continuous Operation	Up to 3 hours
Coverage Area (sq ft)	200 - 300