


VC Quick Installation Guide

1. Installation and Connections


▼ Video Conference - Connecting to PC

Camera System Switch should be set to USB Mode

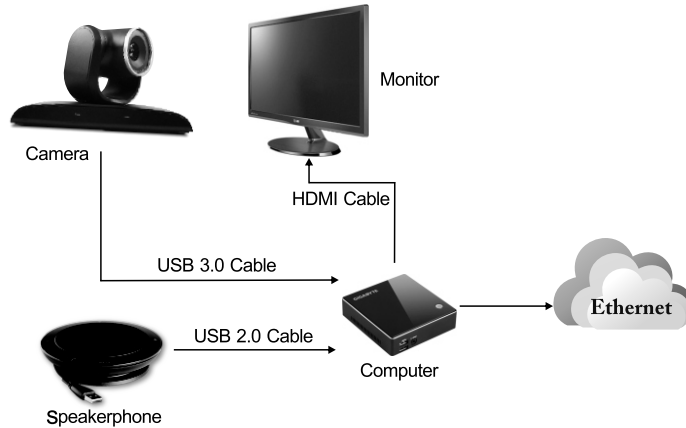


▼ Video Conference - Connecting to the conference host

Camera System Switch should be set to HDMI Mode

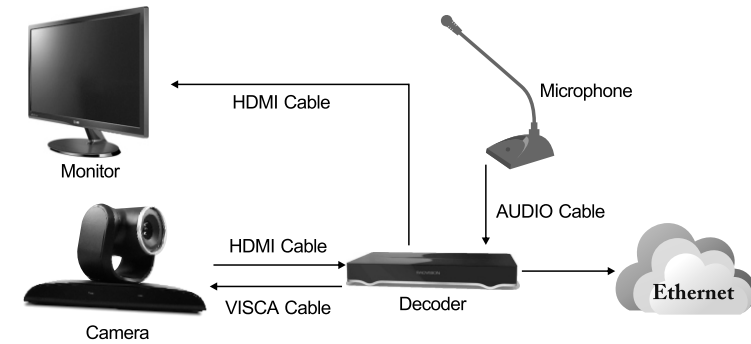

▼ Video Conference - connecting to dual monitor

Camera System Switch should be set to USB Mode

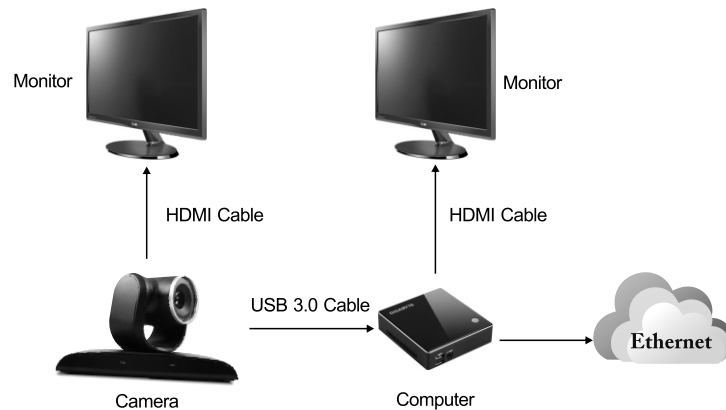

2. Instruction on DIP SWITCH Setting

2.1 System Switch



Setting	Function Descriptions
DIP 1	HDMI / USB Mode OFF : USB Mode(USB and HDMI can output screens simultaneously) ON : HDMI Mode(Only HDMI has output screens)
DIP 2	Output Resolution OFF : 1080P / ON : 720P
DIP 3	Power Frequency OFF : 60Hz / ON : 50Hz
DIP 4	Bulk / ISO Mode OFF : Bulk Mode / ON : ISO Mode

2.2 IR SELECT




ID	Setting
1	☒
2	☐
3	☐

1. 安装与连接

▼ 软体视讯会议-连接PC

摄像机 System Switch 需设定在USB Mode

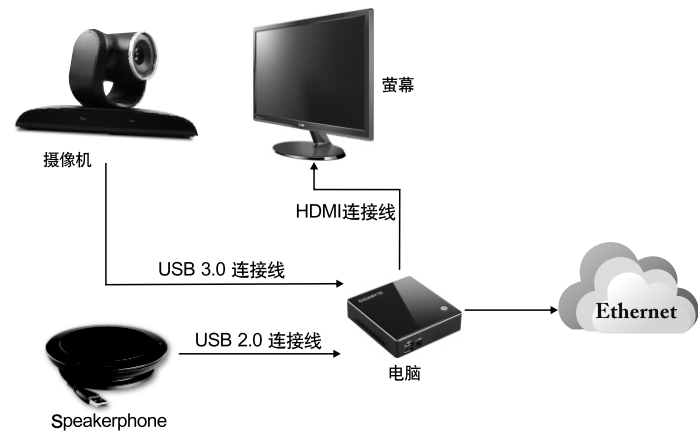


▼ 软体视讯会议-连接双萤幕

摄像机 System Switch 需设定在USB Mode



▼ 软体视讯会议-连接会议主机

摄像机 System Switch 需设定在HDMI Mode

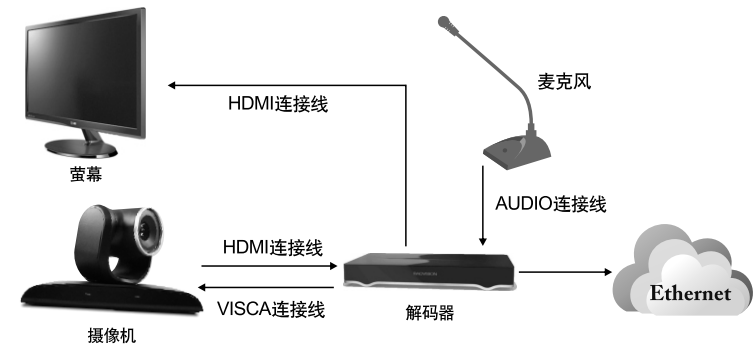

2.DIP SWITCH 设定说明

2.1 System Switch



设定(Setting)	功能说明
DIP 1	HDMI / USB Mode OFF : USB Mode(USB及HDMI可同时输出画面) ON : HDMI Mode(只输出HDMI画面)
DIP 2	输出解析度 OFF : 1080P / ON : 720P
DIP 3	电源频率 OFF : 60Hz / ON : 50Hz
DIP 4	Bulk / ISO Mode OFF : Bulk Mode / ON : ISO Mode

2.2 IR SELECT



ID	设定(Setting)
1	☒
2	☐
3	☐