

VC-BC301P Installation Guide

www.MyLumens.com

Lumens[®]


⚠ Important

- *Please activate your warranty:www.MyLumens.com/reg.
- *To download the updated software, multilingual manuals, and Quick Start Guide, please visit Lumens[™] website at:
<https://www.MyLumens.com/support>.


1. Product Overview

1.1 Product Overview


Front panel

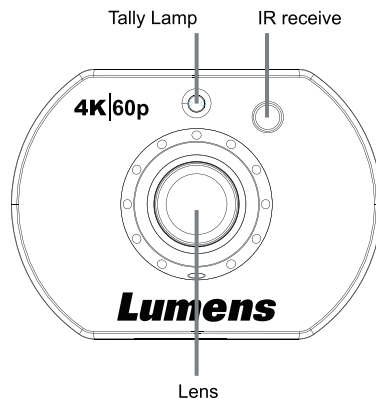

Bottom

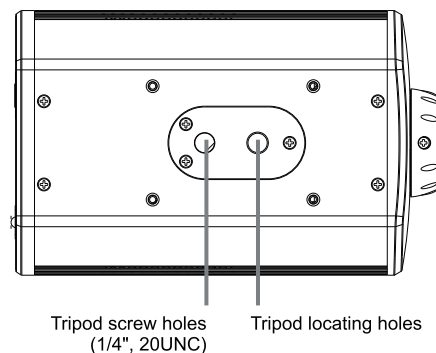


Rear panel

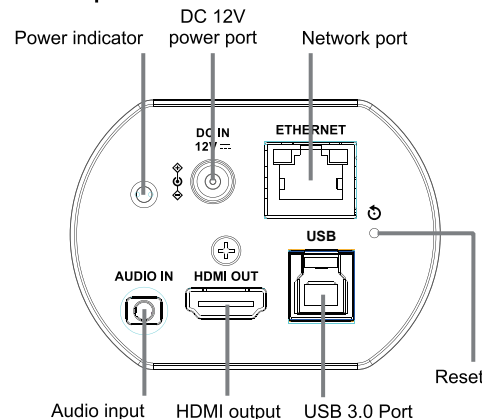


2. Installing Camera

You can use the bracket accessory kit in the accessories to install the camera on the wall or table

2.1 Wall-mounted frame: Install on the wall

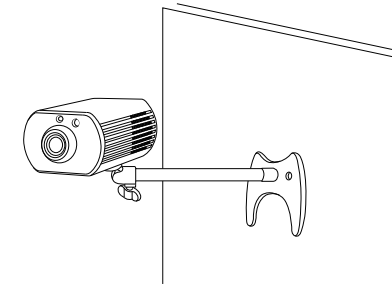

2.2 Tripod: Install on the table

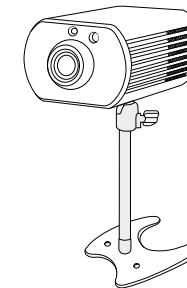

3. Connection description

3.1 Power supply


1. Use the accessory DC 12V power adapter for power supply.
2. Use a router or hub that supports IEEE 802.3 af for PoE power supply.

3.2 HDMI output

1. The factory output resolution of VC-BC301P is 4K/29.97p. Please make sure the connected display device supports 4K resolution.

4. Description for Single-camera Connection

4.1 IP output: Use the network cables to connect to the computer; output the screen through IP; and control VC-BC301P.

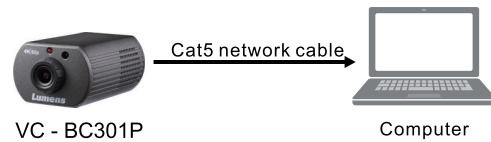


4.2 HDMI output: Use an HDMI cable to connect to the monitor to view the images, and to control the VC-BC301P through IP with the control keyboard.



5. Description for Multi-camera Connection

5.1 Connect multiple units of VC-BC301P, the control keyboard and the computer to the same router; use the control keyboard to control VC-BC301P through IP; and use the computer to view the images.

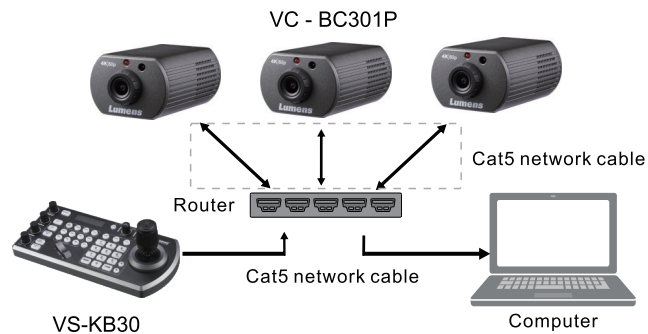


6. Start Using

6.1 Open the browser, and enter the IP address of VC-BC301P in the address bar.

* Default IP: 192.168.100.100



6.2 Enter the account and password to view the images and control VC-BC301P.

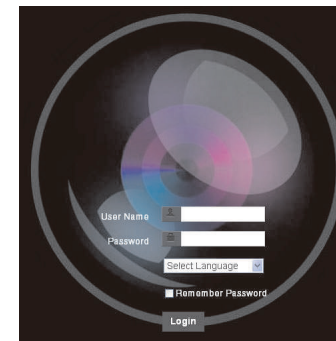

Account: admin
Password: 9999

