


VC-BC801P Quick Installation Guide

1. Connecting the Product

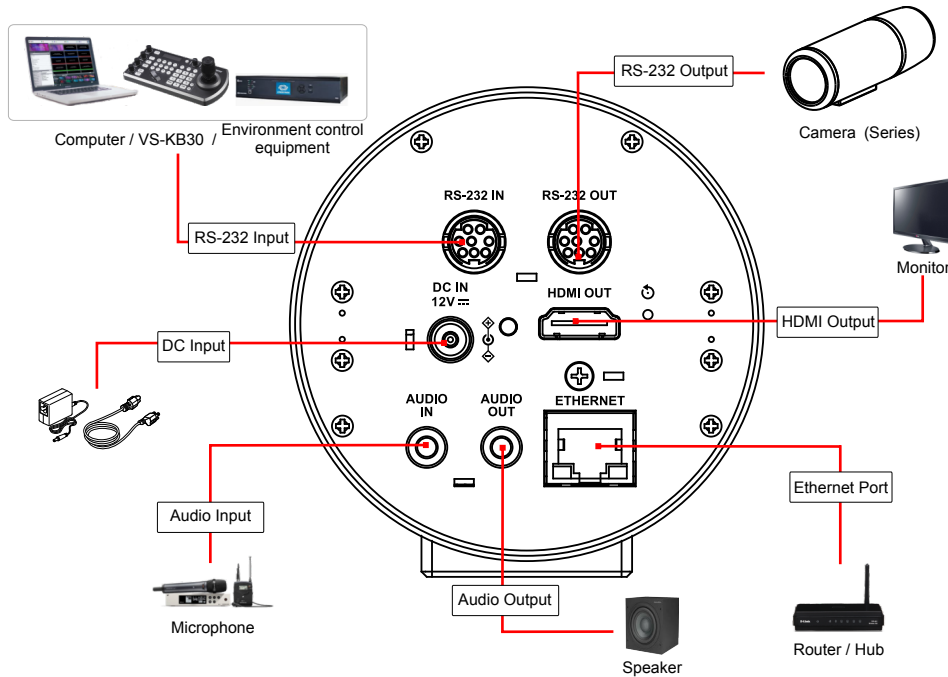

[Note]

- ※It supports DC 12 V power cord or PoE IEEE 802.3 af router/hub power supply
- ※The factory default output resolution is 4K. Please make sure that the connected display device supports 4K resolution


2. Precautions for installation

- To install by yourself, please follow the installation procedures steps by steps, ensure steady and tight installation of the device.
- Ensure the safety of the installation environment. Please do not install the camera on unstable ceiling, wall or in a place where the device is in danger of falling to avoid any accident.

3. Instruction for installation steps

- Lock the camera and the mounting arm

Use the tripod screw holes at the bottom to fix the camera on the mounting arm.

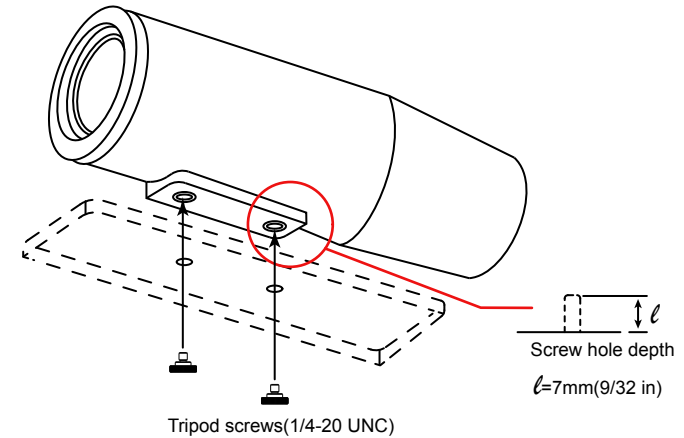


[Note]

- ※Please use 4.5~7mm(3/16~9/32 in) screws to ensure that the cameras are properly fixed.
- ※Do not use screws larger than 7 mm(9/32 in), which may cause improper installation and internal damage of the equipment.
- ※Depending on the shape of the installation base and its position in relation to the camera lens, part of the images may be obscured. When installing the camera, please make sure that the installation base and frame are not in the camera's angle of view.

4. Steps for cable connection

- Remove the rear cover of the camera

Rotate counterclockwise to remove the rear cover

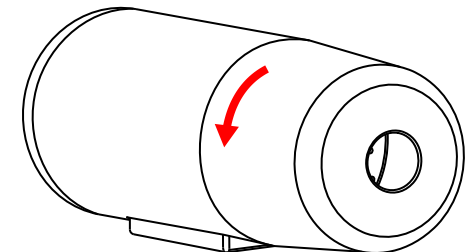

4. Connection cables

1 Thread the cables to be connected through the hole in the rear cover

2 Can be used with cable holders to manage the cables


● Attach the holder 1 to the cable
(Please have the latch facing upwards)




● Press the holder inward and fasten it




● Insert the holder 2 into the holder 1
from the bottom upwards
(a clicking sound will be heard when inserted)

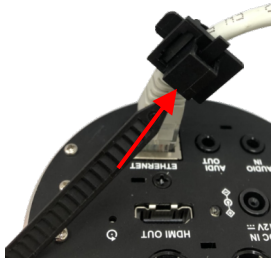

● Fix the holder 2 into the camera slot
(press the latch to adjust the distance)

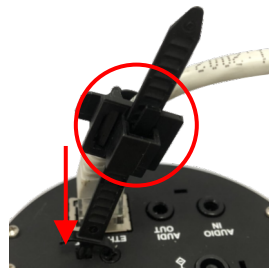


3 Please make sure to cover the rear cover after finishing the connection

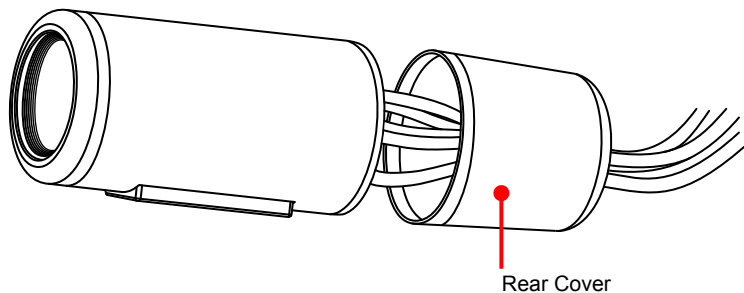


5. Camera connection description

1 IP output: Use the network cables to connect to the computer; output the screen through IP; and control **VC-BC801P**.

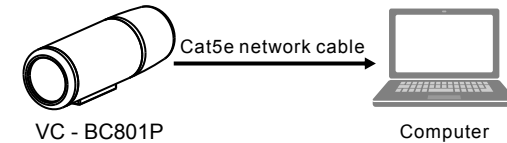

2 HDMI output: Use an HDMI cable to connect to the monitor to view the images, and to control the VC-BC801P through RS-232 or IP with the control keyboard.

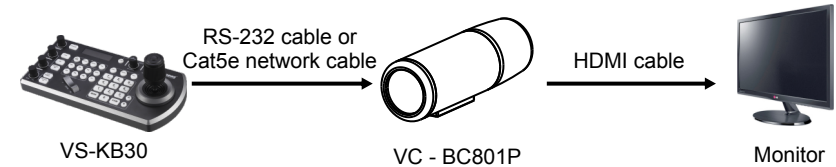

6. View the camera IP image

1 Open the browser, and enter the IP address in the address bar



2 Enter the account and password to view the camera images and control the camera



Account: admin
Password: 9999

※ If it is not connected to a DHCP router, the default IP address is 192.168.100.100
※ Access is available by connection through the Lumens VMS software. For details of the operations of Lumens VMS, please download the software and its user manual from the official Lumens website (<https://www.Mylumens.com/support>)

※ For more tutorial videos, please check out My Lumens YouTube channel.

