


VC-BC801P

Box Camera

User Manual - English

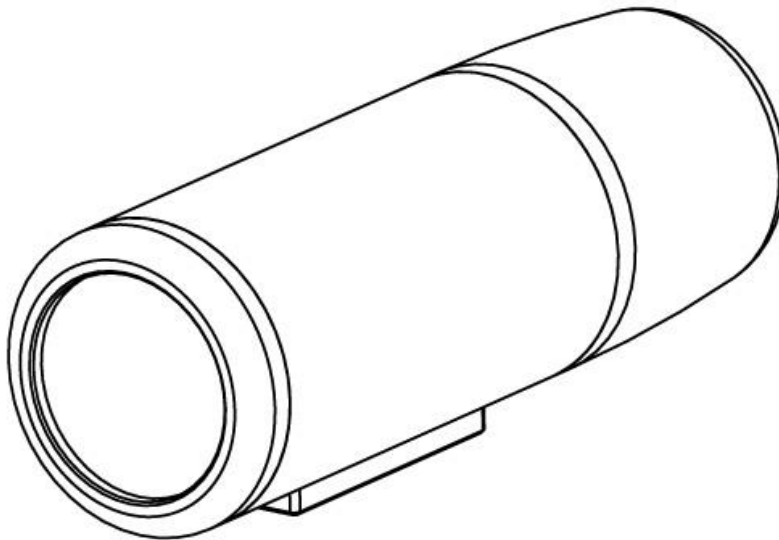

[Important]


To download the latest version of Quick Start Guide, multilingual user manual, software, or driver, etc., please visit Lumens
<https://www.MyLumens.com/support>

Table of Contents

Chapter 1	Package Contents	2
Chapter 2	Function Introduction.....	3
2.1	I/O functions Introduction	3
2.2	Tally Lamp Function Description.....	3
2.3	LED Indicator Description	3
Chapter 3	Instruction for installation	4
3.1	VC-BC801P size.....	4
3.2	Notices on instruction for installation.....	4
3.3	Camera Installation	4
3.4	Cable connection	5
3.5	Connecting devices	6
Chapter 4	Network Function Settings Description	7
4.1	Web System Requirements	7
4.2	Connecting Camera to Network.....	7
4.3	Web Page Function Description	10
Chapter 5	Troubleshooting	24
Chapter 6	Safety Instructions	25
Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information ...		26
Copyright Information		27

Chapter 1 Package Contents


VC-BC801P

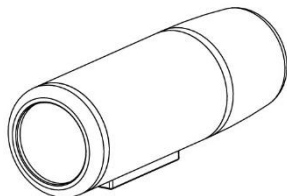

**Quick Installation
Guide**




Power Cord

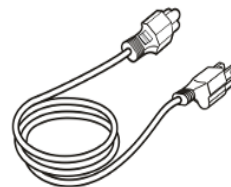


**Appearance may vary
depending on
country/region**

Power Adapter

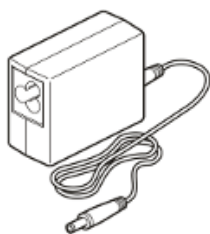

Chapter 2 Function Introduction

2.1 I/O functions Introduction

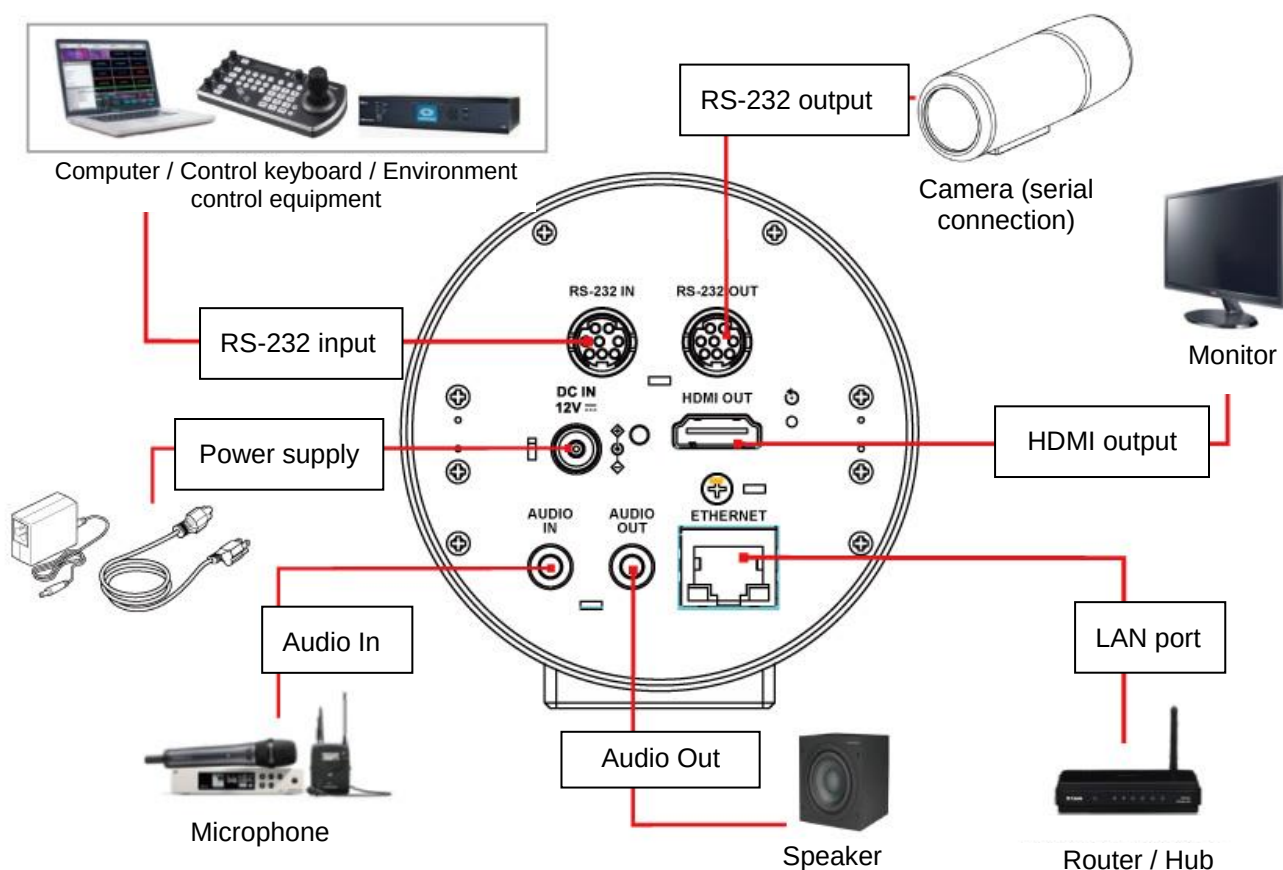

2.2 Tally Lamp Function Description

The Tally lamp function may be enabled through the control of RS232 command. Please refer to [VC-BC801P RS-232 command set](#) document

2.3 LED Indicator Description


Status	Power	Standby
Startup in progress	Green light	Orange light
In use	Green light	No indicator
In standby mode	No indicator	Orange light
Tally mode	Red light	Red light

Chapter 3 Instruction for installation

3.1 VC-BC801P size

Length x Width x Height: 265.42 x 93.0 x 90.0 mm

Weight: 1.2 Kg

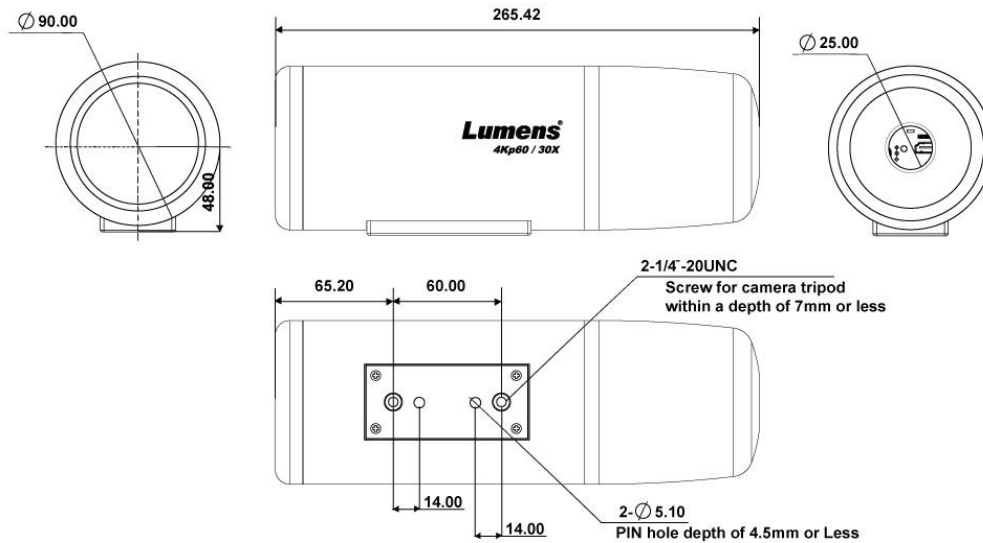


3.2 Notices on instruction for installation

- To install by yourself, please follow the installation procedures steps by steps, ensure steady and tight installation of the device
- Ensure the safety of the installation environment. Please do not install the camera on unstable ceiling, wall or in a place where the device is in danger of falling to avoid any accident.

3.3 Camera Installation

- Lock the camera and the mounting arm

Use the tripod screw holes at the bottom to fix the camera on the mounting arm.

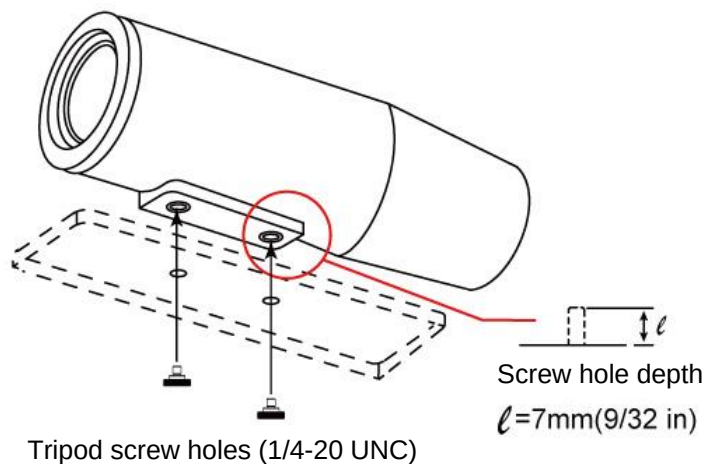


<Remark>

- Please use 4.5 ~ 7 mm (3/16 ~ 9/32 in) screws to ensure that the cameras are properly fastened
- Do not use screws larger than 7 mm (9/32 in), which may cause improper installation and internal damage of the equipment
- Depending on the shape of the installation base and its position in relation to the camera lens, part of the images may be obscured. When installing the camera, please make sure that the installation base and frame are not in the camera's angle of view.

3.4 Cable connection


3.4.1 Remove the rear cover of the camera

Rotate counterclockwise to remove the rear cover

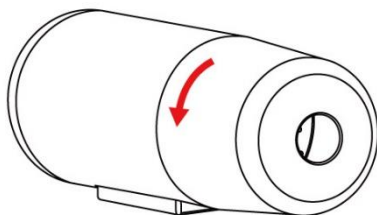


3.4.2 Connection cables

- Thread the cables to be connected through the hole
- Can be used with cable holders to manage the cables

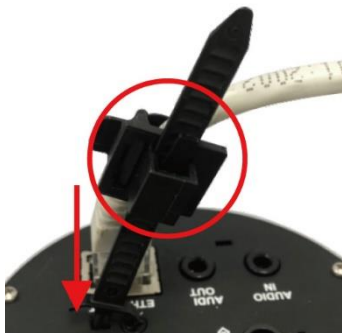
Attach the holder 1 to the cable (Please have the latch facing upwards)	Press the holder inward and fasten it
	
Insert the holder 2 into the holder 1 from the bottom upwards (a clicking sound will be heard when inserted)	Fix the holder 2 into the camera slot (press the latch to adjust the distance)
	

3.4.3 Please make sure to cover the rear cover after finishing the connection

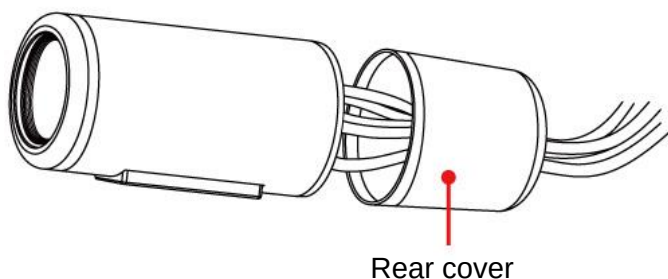


3.5 Connecting devices

- RS-232 serial connection
With RS-232 in/out, at most 7 Lumens cameras can be connected.

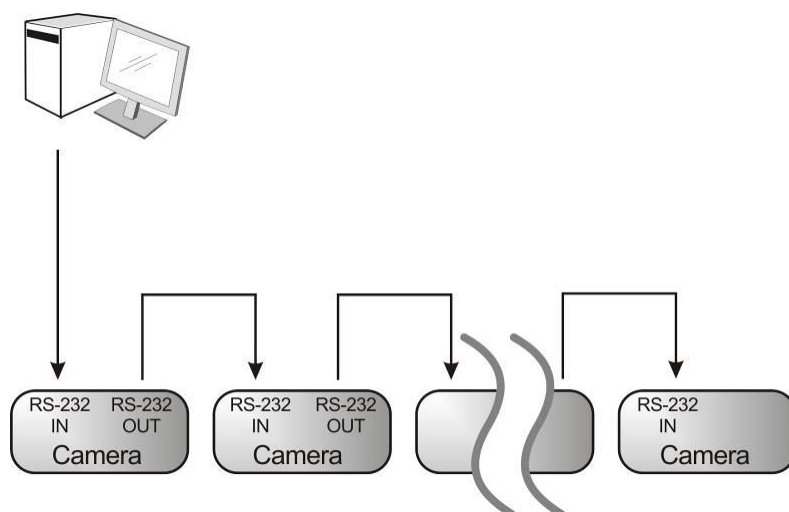


- RS-232 pins definition instructions

▼ RS-232 IN Pins Instructions

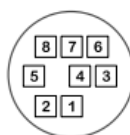

NO	Pins	Signals
1	DTR	Data Transmission Reade
2	DSR	Data Set Reade
3	TXD	Transmit Data
4	GND	Ground
5	RXD	Receive Data
6	GND	Ground
7	IR OUT	IR Commander Signal
8	N.C.	No Connection

▼ RS-232 OUT Pins Instructions

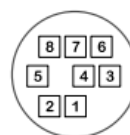

NO	Pins	Signals
1	DTR	Data Transmission Reade
2	DSR	Data Set Reade
3	TXD	Transmit Data
4	GND	Ground
5	RXD	Receive Data
6	GND	Ground
7	OPEN	Reserved
8	OPEN	Reserved


▼ RS-232 Connection Instructions

RS-232 IN of VC

1. DTR
2. DSR
3. TXD
4. GND
5. RXD
6. GND
7. IR OUT
8. N.C.

RS-232 of PC

1. CD
2. RXD
3. TXD
4. DTR
5. GND
6. DSR
7. RTS
8. CTS
9. RI

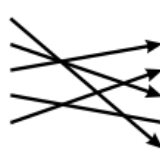


▼ RS-232 Connection Instructions

RS-232 IN of Next Camera

1. DTR
2. DSR
3. TXD
4. GND
5. RXD
6. GND
7. IR OUT
8. N.C.

RS-232 OUT of Last Camera

1. DTR
2. DSR
3. TXD
4. GND
5. RXD
6. GND
7. OPEN
8. OPEN

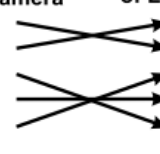

Chapter 4 Network Function Settings Description

4.1 Web System Requirements

Web Browser


- Internet Explorer 11 or above
- FireFox 66.0.3 or above
- Chrome 73 or above
- Edge 42.17134 or above
- Safari 12.1 or above

4.2 Connecting Camera to Network

4.2.1 Connecting to Internet


Two common connection methods are shown below

1. Connecting via switch or router

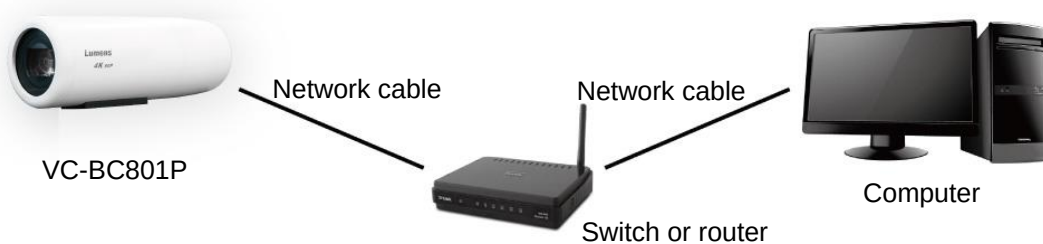


2. To connect directly through network cable, the IP address of the computer should be changed so that it is on the same network segment as the camera

E.g.: The factory-preset default IP address of the camera is [192.168.100.100](#). The computer IP address must be set with the same network segment, such as [192.168.100.101](#), so that the computer can be connected correctly with the camera

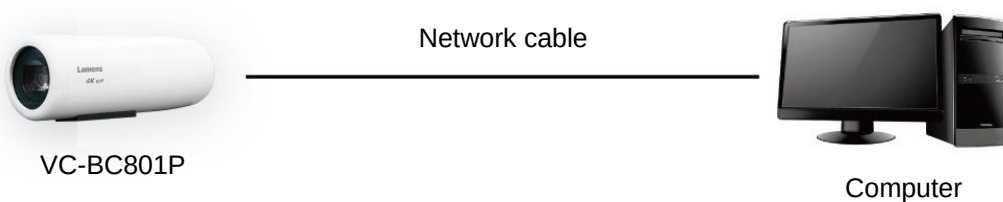


3. Change network settings

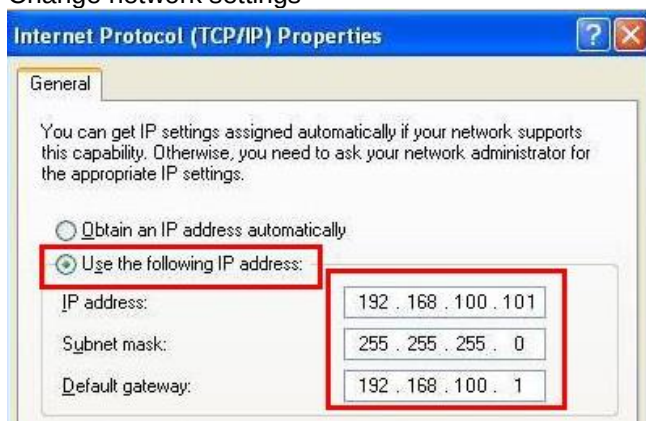

4.2.2 Using Lumens VMS Software to View the Images

- The VC-BC801P DHCP initial setting is ON. If VC-BC801P is connected to the local area network (LAN), the camera IP can be retrieved via the following methods
 - Install Lumens VMS software (Please download from the Lumens official website, <https://www.MyLumens.com/support>)
 - Open LUMENS VMS software
 - Search for the camera: Press  [automatically search for the device] button to locate the VC-BC801P camera
 - Click VC-BC801P in the list and start operation after connecting to network
- <Remark>** When using automatic search, the camera and computer must be in the same network segment, e.g.: 192.168.4.X

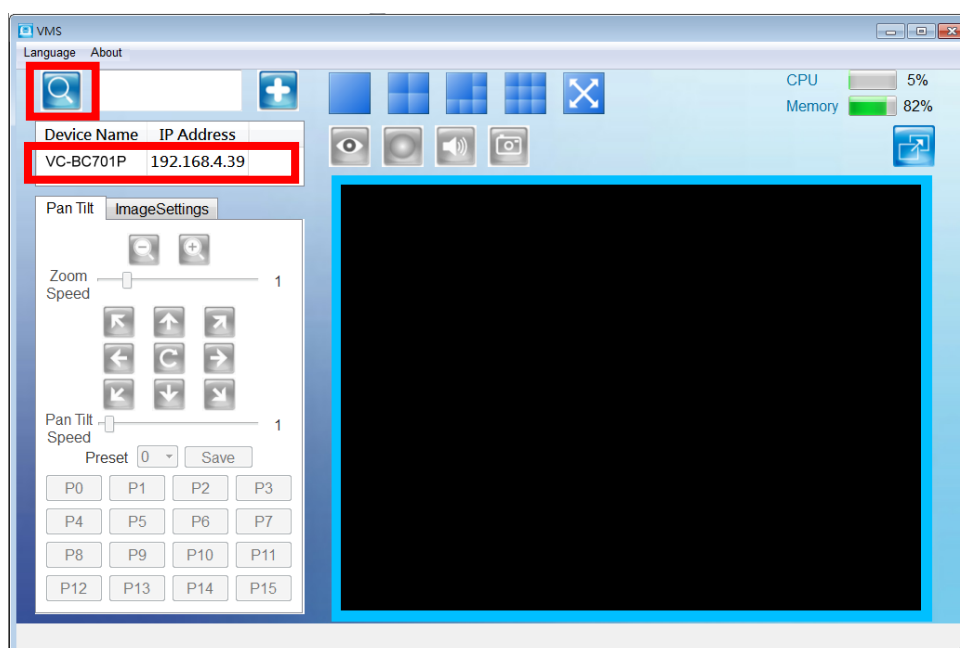

4.2.3 Using the Browser to View the Images

- Open the browser, and enter the URL of VC-BC801P in the IP address bar
E.g.: <http://192.168.100.100> (default IP address)
 - Enter administrator's account and password
Account: admin (Default)
Password: 9999 (Default)
- <Remark>** For a first-time login, please refer to [4.3.3 Account Management](#) to change the default password



4.2.4 Using RTSP Player to View the Images

In addition to the browser and VMS, other free softwares also can be used for RTSP connection, such as VLC, Quick Time and PotPlayer



RTSP connection address formats are as follows:

- RTSP Main Streaming => <rtsp://camera IP:8554/hevc>
- RTSP Sub1 Streaming => <rtsp://camera IP:8557/h264>
- RTSP Sub2 Streaming => <rtsp://camera IP:8556/h264>

If password authentication is enabled, the RTSP connection address is as follows:


- RTSP Main Streaming
<rtsp://Username:Password@camera IP:port/hevc>
- RTSP Sub1/ Sub2 Streaming
<rtsp://Username:Password@camera IP:port/h264>
- To enable password authentication function, please refer to [4.3.9 Setting --- Network](#)

Example: Open VLC software and enter URL: <rtsp://192.168.100.150:8557/h264>

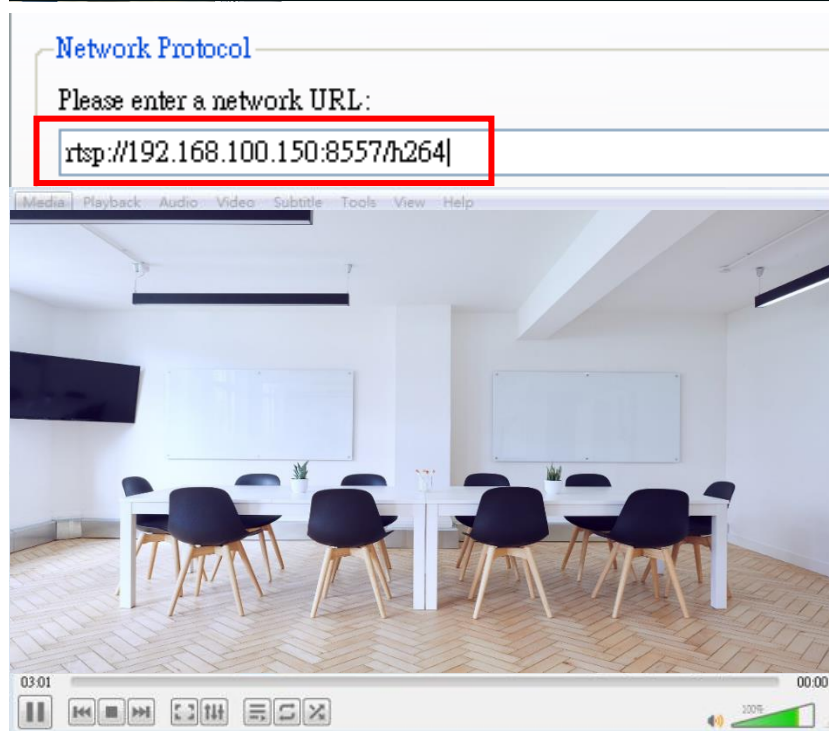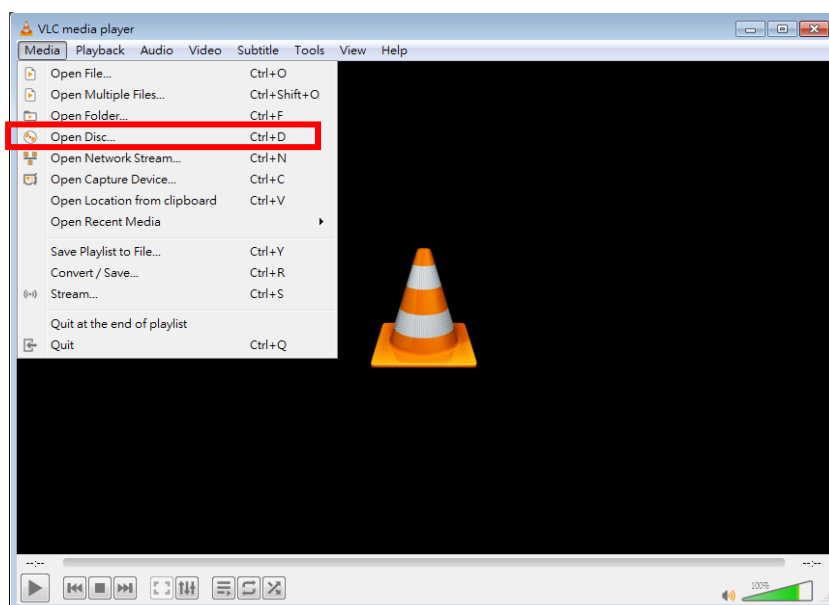


4.3 Web Page Function Description

4.3.1 Login Screen

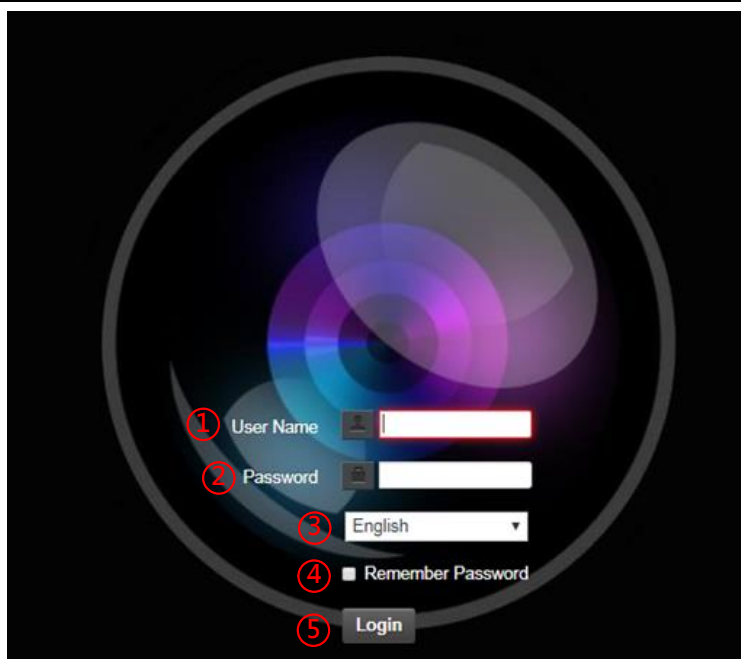

No	Item	Function Descriptions
1	User name	Enter user login account (default: admin)
2	User Password	Enter user password (default: 9999) <Remark> For a first-time login, please refer to 4.3.3 Account Management to change the default password
3	Language selection	Currently, the system supports English, Traditional Chinese and Simplified Chinese
4	Remember password	Save user account name and password to the browser. When you log in next time, there is no need to re-enter them
5	Login	Log into the administrator screen on the website

4.3.2 Live View

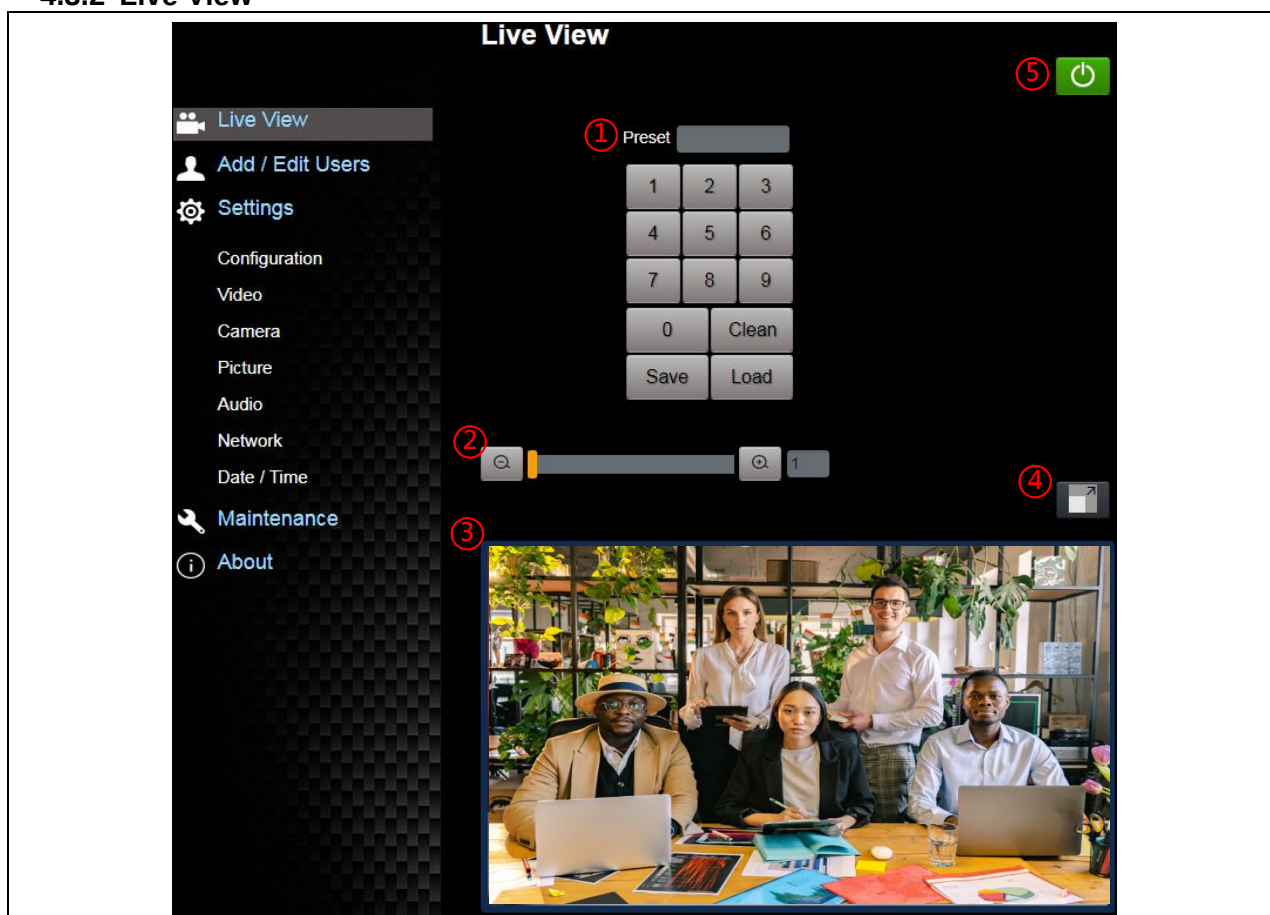

No	Item	Function Descriptions
1	Default preset not set	Select the number first and then select SAVE or LOAD
2	Zoom ratio	Adjust the zoom-in or zoom-out ratio via scroll bar
3	Preview window	Display the screen currently captured by the camera
4	Switch to Full Screen	Switch the preview window to full screen
5	Power button	Turn on or turn off the camera power

4.3.3 Account Management

Add / Edit Users

1. User Name
 Password
 Confirm Password

2. Authority ☐ Admin ☒ Operator ☐ Viewer


3.

4.

User Name	Authority	
admin	Administrator	Edit


No	Item	Function Descriptions			
1.	Add user account	Enter a user name and password to add a new user			
2.	Permission setting	Set the new account management permissions			
		User Type	Admin	Operator	Viewer
		View images	Y	Y	Y
		Settings	Y	Y	N
		Account management	Y	N	N
3.	Applying setting	Add the newly created user to the list of accounts			
4.	List of accounts	Edit: Modify the user password and permissions Delete: Delete the user account			

4.3.4 Setting - Configuration

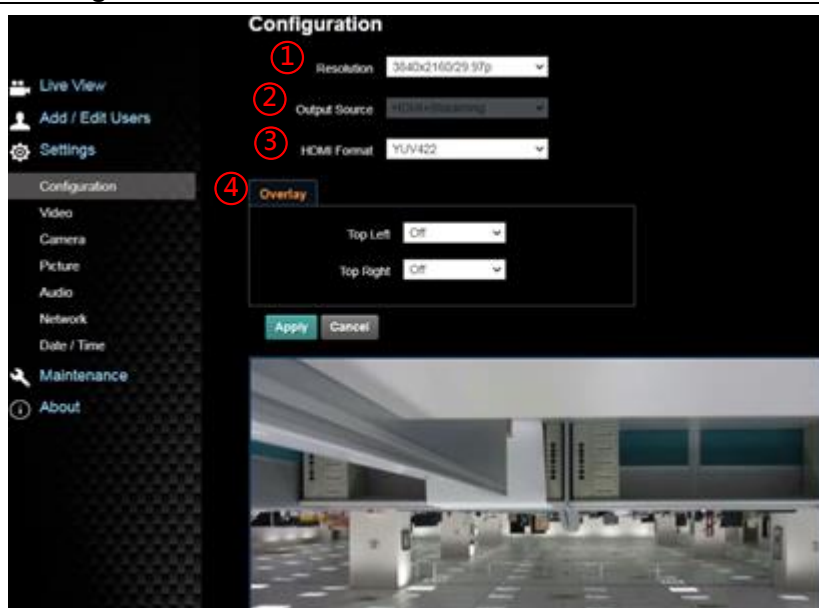

No	Item	Function Descriptions									
1	Resolution	Set the resolution of the camera, resolutions supported by the camera are as follows: 3840x2160P 60/59.94/50/30/29.97/25 fps 1080P 60/59.94/50/30/29.97/25 fps 720P 60/59.94/50/30/29.97/25 fps 1080i 60/59.94/50 fps After switching to the resolution, the camera will restart. Please refresh the browser									
2	Output source	According to the output resolution, selections are available for HDMI output, streaming output, or HDMI + streaming output. For output signals supported by different resolution, please refer to the following table: <table><tr><th>Resolution</th><th>Available output modes</th></tr><tr><td>3840x2160 60/ 59.94/ 50</td><td>HDMI or streaming single output</td></tr><tr><td>3840x2160 30/ 29.97/ 25</td><td rowspan="4">Simultaneous HDMI and streaming outputs</td></tr><tr><td>1080p 60/ 59.94/ 50/ 30/ 29.97/ 25</td></tr><tr><td>720p 60/ 59.94/ 50/ 30/ 29.97/ 25</td></tr><tr><td>1080i 60/ 59.94/ 50</td></tr></table>	Resolution	Available output modes	3840x2160 60/ 59.94/ 50	HDMI or streaming single output	3840x2160 30/ 29.97/ 25	Simultaneous HDMI and streaming outputs	1080p 60/ 59.94/ 50/ 30/ 29.97/ 25	720p 60/ 59.94/ 50/ 30/ 29.97/ 25	1080i 60/ 59.94/ 50
Resolution	Available output modes										
3840x2160 60/ 59.94/ 50	HDMI or streaming single output										
3840x2160 30/ 29.97/ 25	Simultaneous HDMI and streaming outputs										
1080p 60/ 59.94/ 50/ 30/ 29.97/ 25											
720p 60/ 59.94/ 50/ 30/ 29.97/ 25											
1080i 60/ 59.94/ 50											
3	HDMI Format	Select YUV422, YUV420, or RGB <Remark> YUV420 is limited to two resolution options: 3840 x 2160/59.94p and 3840 x 2160/50p									
4	Overlay	Set the stream to display [date and time] or [custom content] and to display [location]									

4.3.5 Setting - Video

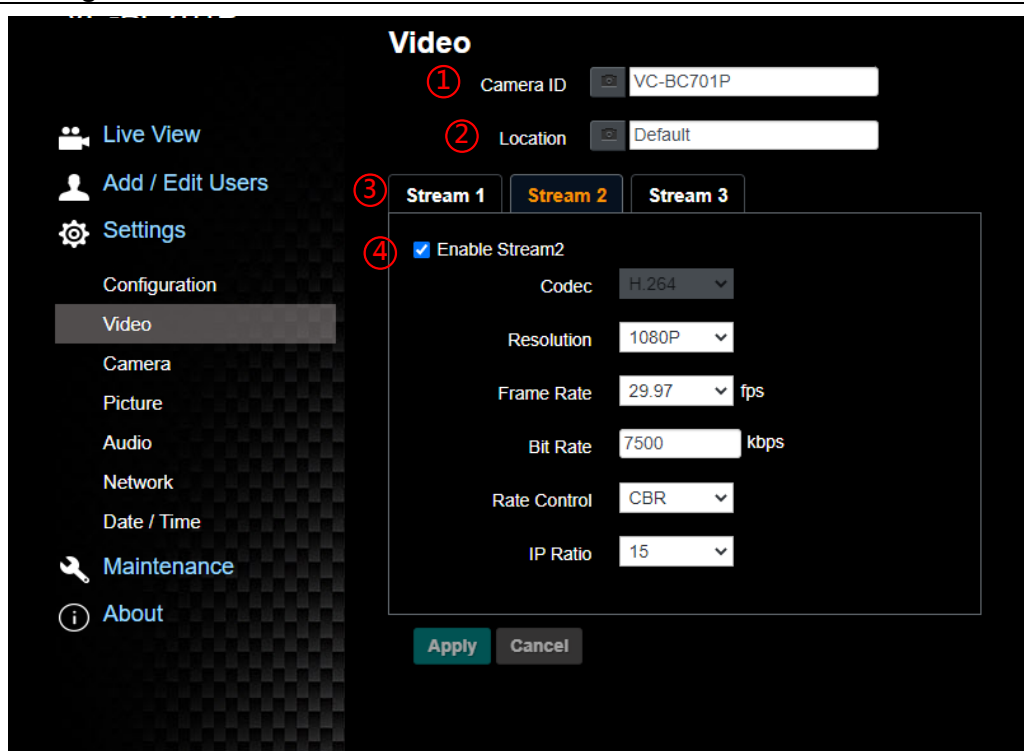


No	Item	Function Descriptions
1	Camera ID	Modify the camera name ● Camera names are limited to 1 - 12 characters ● Please mix uppercase and lowercase letters or numbers for characters. Special symbols such as [/] and [space] cannot be used
2	Camera Location	Modify the location of the camera, such as Room 1 ● Camera location is limited to 1 - 12 characters ● Please mix uppercase and lowercase letters or numbers for characters. Special symbols such as [/] and [space] cannot be used
3	Streaming 1 / Streaming 2 / Streaming 3	VC-BC801P supports 3 streaming outputs. Please refer to 4.3.5.1 Streaming Parameter Setting for relevant settings
4	Enable Streaming	Confirm whether or not the streaming function is opened





4.3.5.1 Streaming parameter setting

Function		Streaming 1	Streaming 2	Streaming 3
Encode Format		H.265	H.264	
Resolution		4K / 1080P / 720P	1080P/720P/1080i 640 x 360 (Streaming Mode)	640 x 360
Frame Rate		Setting according to the supported resolution <Remark> Streaming 2 only supports 59.94 / 50 when the resolution is 1080i		
Bit Rate (kbps)	Range	2,000 ~ 20,000	2,000 ~ 20,000	512 ~ 5,000
	Factory Default	15,000	7,500	1,000
Rate Control		VBR / CBR		
IP Ratio		Setting according to the supported resolution <Remark> Streaming 2 only supports 15 / 25 when the resolution is 1080i		


4.3.6 Setting - Camera

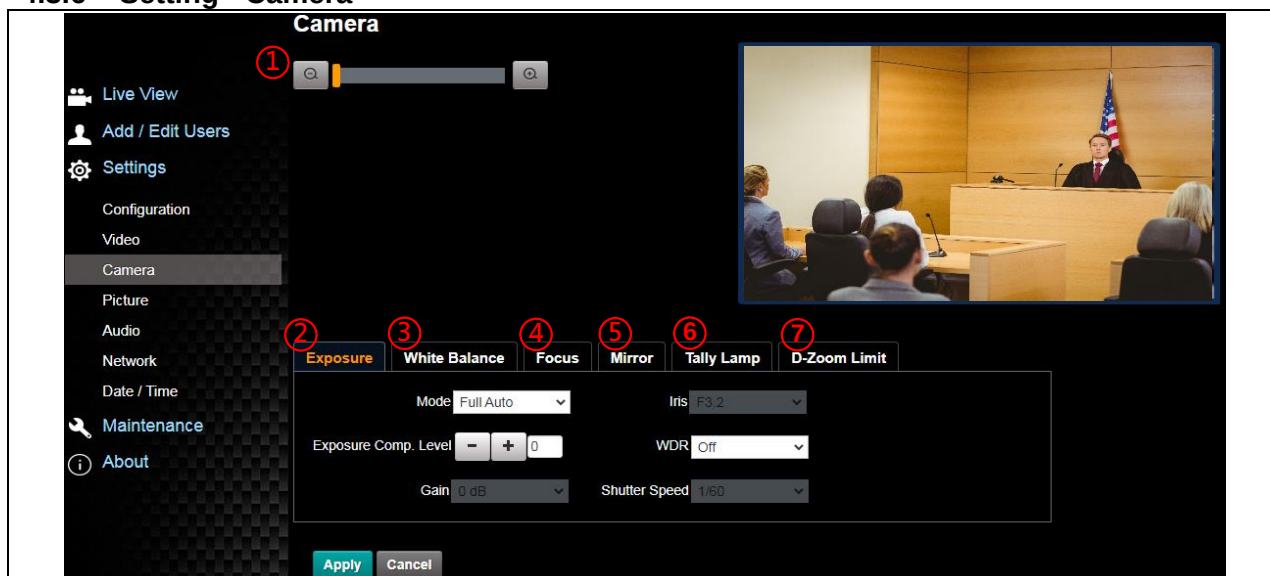

No	Item	Function Descriptions
1	Zoom ratio	Adjust the zoom-in or zoom-out ratio via scroll bar
2	Exposure	Exposure White Balance Focus Mirror Tally Lamp D-Zoom Limit Mode: Full Auto Iris: F3.2 Exposure Comp. Level: -, +, 0 WDR: Off Gain: 0 dB Shutter Speed: 1/60 • Mode: Select exposure mode (Automatic/Shutter Priority/Aperture Priority/Manual) • Exposure Comp. Level: Select exposure compensation level • Gain: The gain limit is adjustable when the exposure mode is set to [Manual] • Iris: The size of aperture is adjustable when the exposure mode is set to [Manual] or [Aperture Priority] • WDR: Set the level of wide dynamic range (WDR) in order to obtain better images • Shutter Speed: The shutter speed is adjustable when the exposure mode is set to [Manual] or [Shutter Priority]
3	White Balance	Exposure White Balance Focus Mirror Tally Lamp D-Zoom Limit Mode: Auto One Push Trigger Manual Red: -, +, 64 Manual Blue: -, +, 64 • Mode: Select the color temperature mode ✓ Auto ✓ Indoor ✓ Outdoor ✓ One Push WB ✓ ATW ✓ Manual ✓ Sodium Lamp

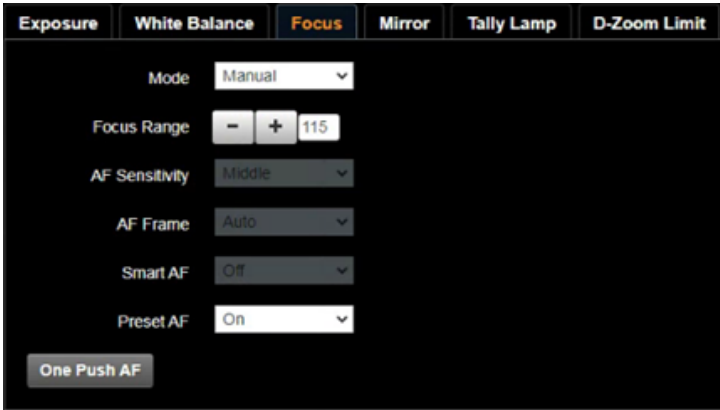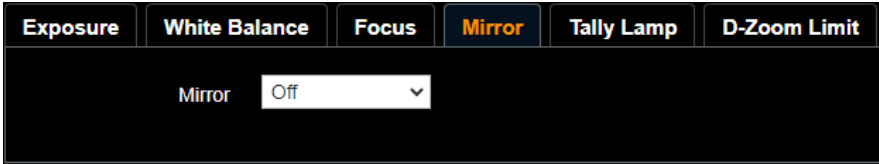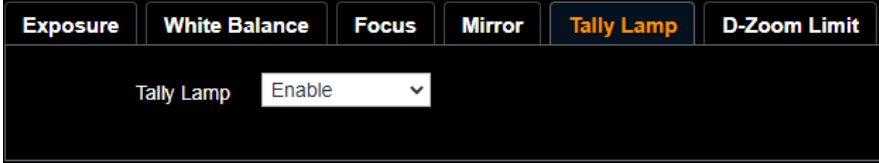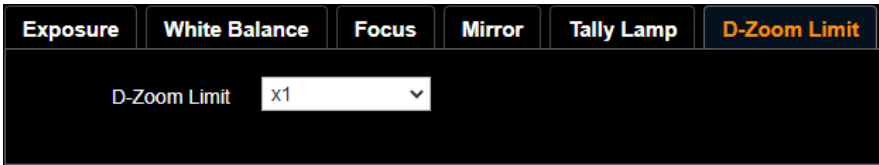
		● One Push WB: One push color temperature is adjustable when the white balance mode is set to [One Push WB] ● Manual Red/Blue: Manually adjust blue/red color temperature
4	Focus	 ● Mode: Select manual/automatic focus ● Focus Range: The focusing range is adjustable when the focus mode is set to "Manual" ● AF Sensitivity: Set automatic focus sensitivity ● AF Frame: Set automatic focus range ● Smart AF: Turn on this function and AF will mainly focus on the face ● Preset AF: Set whether to perform auto focus after Preset ● One Push AF: When the manual focus mode is on, click the button to perform one auto focus
5	Mirror	 ● Mirror: Set the mode at which the image is mirror and flipped ✓ Off ✓ Mirror ✓ Flip ✓ Mirror+Flip
6	Tally Lamp	 Enable/Disable Tally Lamp <Remark> When it is disabled, the Tally lamp will not receive RS232 commands to trigger Enable or Disable
7	D-Zoom Limit	 Set the D-Zoom Limit, x1 - x12

4.3.7 Setting - Picture

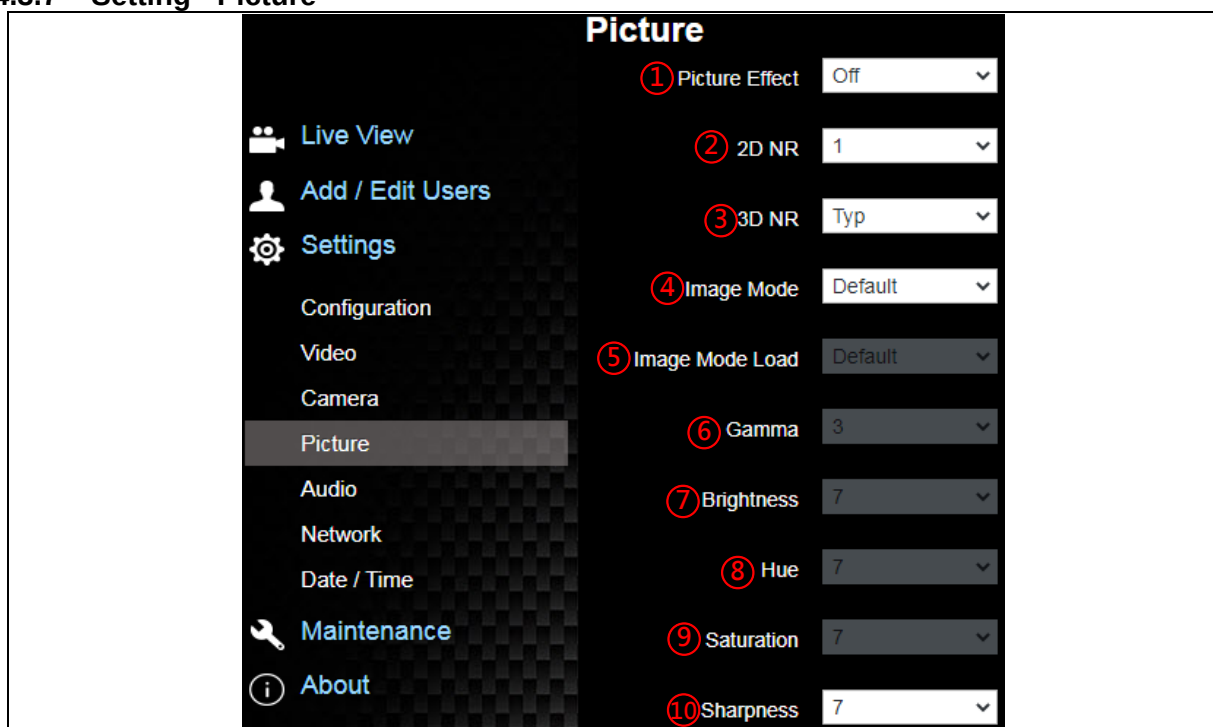

No	Item	Function Descriptions
1	Picture Effect	Set picture effect, Off/Neg/Black and White
2	2D noise reduction	2D noise reduction settings
3	3D noise reduction	3D noise reduction settings
4	Image mode	The user may customize his/her desired image mode
5	Image Mode Load	When no custom setting is needed, reset the picture parameters back to the factory default by selecting this item
6	Gamma	Gamma Level adjustment; Adjustable when the image mode is set to Custom
7	Brightness	Brightness adjustment of the image; Adjustable when the image mode is set to Custom
8	Hue	Hue adjustment; Adjustable when the image mode is set to Custom
9	Saturation	Saturation adjustment of the image; Adjustable when the image mode is set to Custom
10	Sharpness	Adjust the sharpness of the image

4.3.8 Setting - Audio

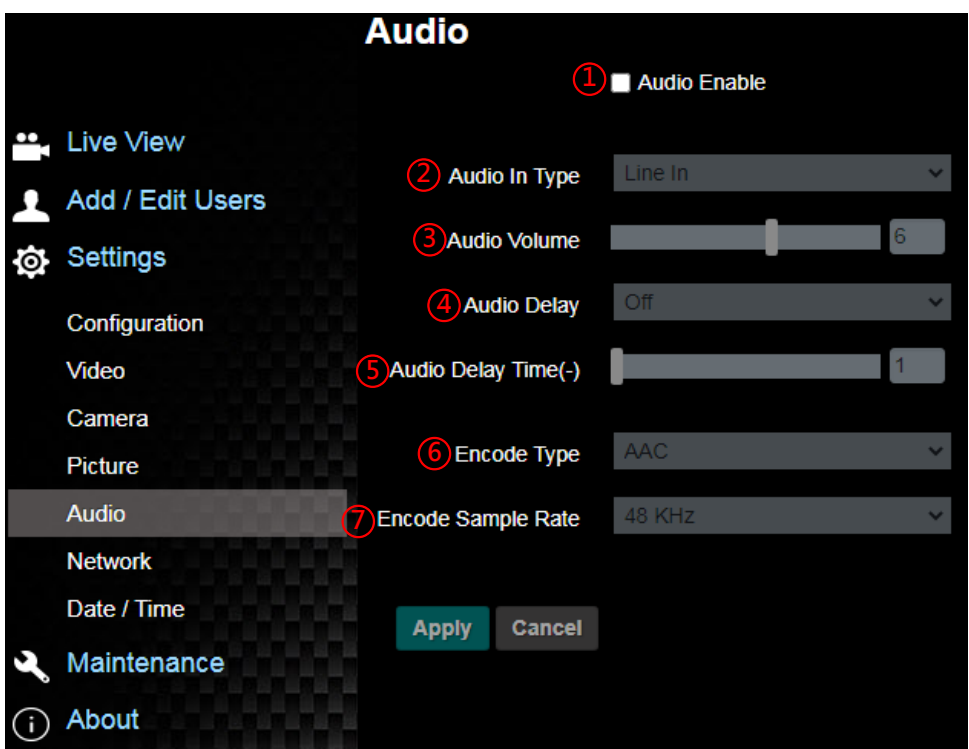		
No	Item	Function Descriptions
1	Audio Enable	Turn on/off sound
2	Soundtrack effect setting	Set MIC In/Line In
3	Audio Volume	Adjust Audio Volume
4	Audio Delay	Turn on/off audio delay
5	Audio Delay Time	Set the audio signal delay time (-1 ~ -500 ms)
6	Encode Type	AAC / G.711
7	Encode sample rate	Set Encode sample rate ✓ 48 KHz(AAC) ✓ 44.1 KHz(AAC) ✓ 16 KHz(AAC) ✓ 16 KHz(G.711) ✓ 8 KHz(G.711)

4.3.9 Setting - Network

The screenshot shows the 'Network' settings page of a camera. The interface is divided into several sections, each highlighted with a red circle and a number:

- 1 Network:** This section contains fields for DHCP (set to 'Off'), IPv4 Address (192.168.4.23), IPv4 Netmask (255.255.255.0), IPv6 Address (2001:db8:3001:3001::3001), IPv6 Netmask (2001:db8:3001:3001::3001), Gateway (192.168.4.254), DNS (192.168.1.211), and MAC Address (9C:E2:9C:D1:64:76). An 'Apply' button is at the bottom.
- 2 RTMP / RTMPS:** This section has a 'Publish to Server' checkbox (checked), video encoder type (H.264@3562Kbps), audio encoder type (AAC(48KHz)), resolution format (1080P(29.97)), chunk size (1412), RTMP Server Status (RTMP disable), and an RTMP URL field.
- 3 RTSP:** This section has checkboxes for 'Enable Multicast' and 'Require Password Authentication'.
- 4 MPEG-TS:** This section has a checkbox for 'Enable MPEG-TS' and an 'MPEG-TS IP' field with a 'Port 0' dropdown.
- 5 SRT:** This section has a checkbox for 'Enable SRT Streaming', a 'Destination IP' field with a 'Port 0' dropdown, a 'Latency' field (120 ms), an 'Encryption' dropdown (None), a 'Passphrase' field, and a 'Connect Status' (SRT Disable).
- 6 SNTP:** This section has an 'SNTP Server' field (pool.ntp.org).
- 7 Port Setting:** This section has 'HTTP Port' (80) and 'HTTPS Port' (81) fields.

No	Item	Function Descriptions
1	Network	Network setting of camera. Change of setting is available when DHCP function is closed.
2	RTMP Setting	Copy the RTMP web address provided by the RTMP service platform and paste it to the RTMP connection address to publish the camera images on the RTMP service platform <Remark> For live streaming on YouTube, please see 4.3.8 Settings - Audio to turn on the audio function first
3	RTSP Setting	- Enable/Disable Multicast It is suggested to enable Multicast function when the number of users online watching the live image simultaneously is more than 4 - Enable/Disable Username/Password Authentication ✓ The username/password is the same as the web login password of the camera, please refer to 4.3.3 Account Management to add/modify account information ✓ RTSP connection format can be found in 4.2.4 Using RTSP Player to View the Images
4	MPEG-TS Setting	Port must be set in the range above 1024 with a maximum value of 9999 The following port has been used by the camera. Setting of the port may not connect correctly 8554, 8556, 8557, 8080, 9090, 1935
5	SRT Setting	- Set the field of SRT and then check the item to open SRT streaming After the SRT streaming is opened, it will be connected automatically upon startup - The port number must be set in the range above 1024 with a maximum value of 9999 The following port has been used by the camera. Setting of the port may not connect correctly 8554, 8556, 8557, 8080, 9090, 1935 - Delay time is for 20 to 8000 microseconds. The default value is 120 microseconds
6	SNTP Setting	Set SNTP Server IP
7	Port Setting	Set HTTP and HTTPS ports. The default values are Port 80 and Port 81 respectively <Remark> Change of setting is available only when DHCP function of camera is closed


4.3.10 Setting - Time

No	Item	Function Descriptions
1	Camera Time	Display the date and time of the camera
2	Set the Time	- Manual Configuration: Set time manually - Synchronize with computer time: Set the camera time according to the computer time - Synchronize with SNTP server: Set the camera time synchronously with the SNTP server <Remark> SNTP server address: Please change in network setting

4.3.11 Setting - Maintenance - Upgrading Firmware

No	Item	Function Descriptions
1	Firmware Upgrade	The camera firmware may be upgraded via web page. For the upgrade method, please download the FW upgrade manual from Lumens official website


4.3.12 Setting - Maintenance - Event Log

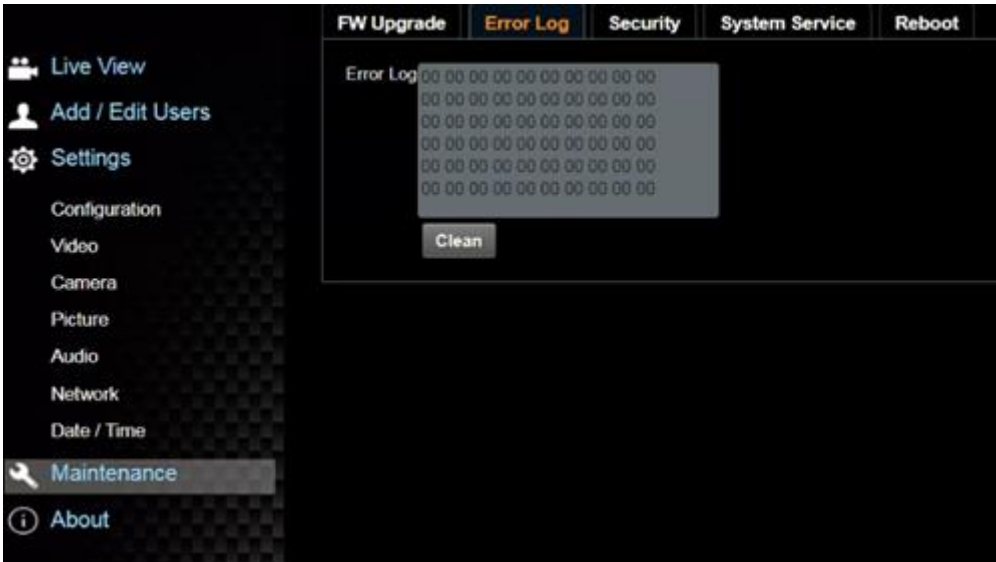		
No	Item	Function Descriptions
1	Event Logs	If the camera encounters errors, an error code log will be established <Remark> If an error code appears, the user may try to clear and confirm if the error will repeat itself

4.3.13 Setting - Maintenance - Security


		
No	Item	Function Descriptions
1	802.1x Setting	Enable/disable 802.1x protocol, and configure settings when enabled <Remark> The router must support 802.1x protocol to enable this feature

4.3.14 Setting - Maintenance - System Service

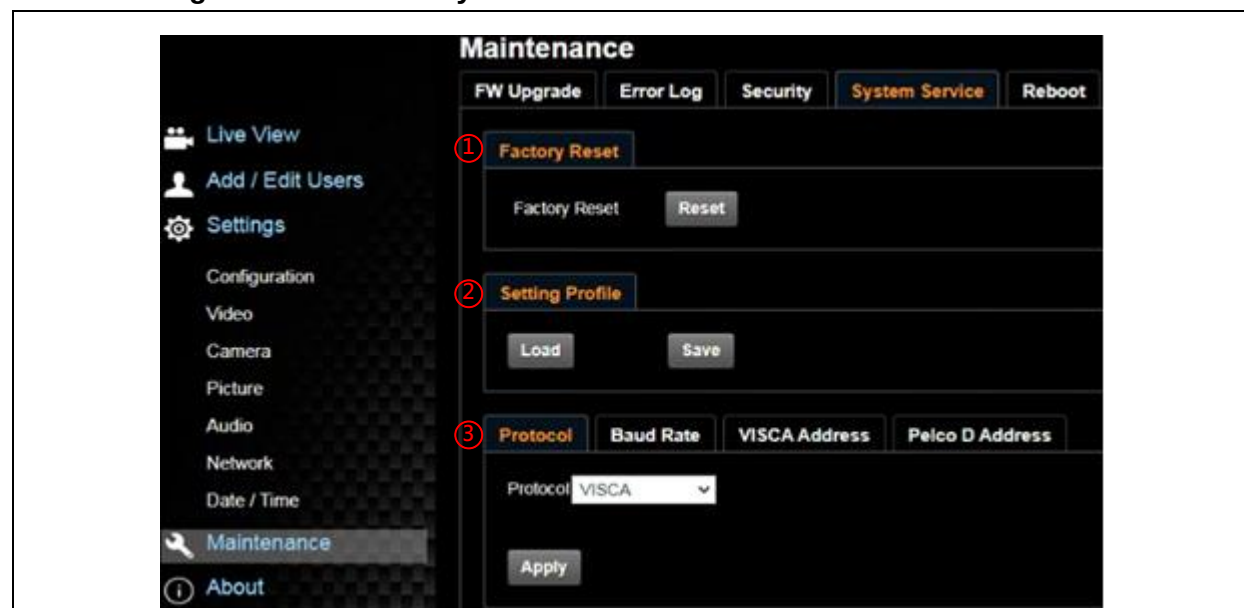


No	Item	Function Descriptions
1	Factory Reset	Select the reset button to resume the factory default setting as the web page setting
2	Setting Profile	The web page setting parameters can be exported from the computer and imported/applied to another camera
3	Communication protocol related settings	Communication protocol related settings for the use of connecting RS-232/ RS-422 communication

4.3.15 Setting - Maintenance - Reboot

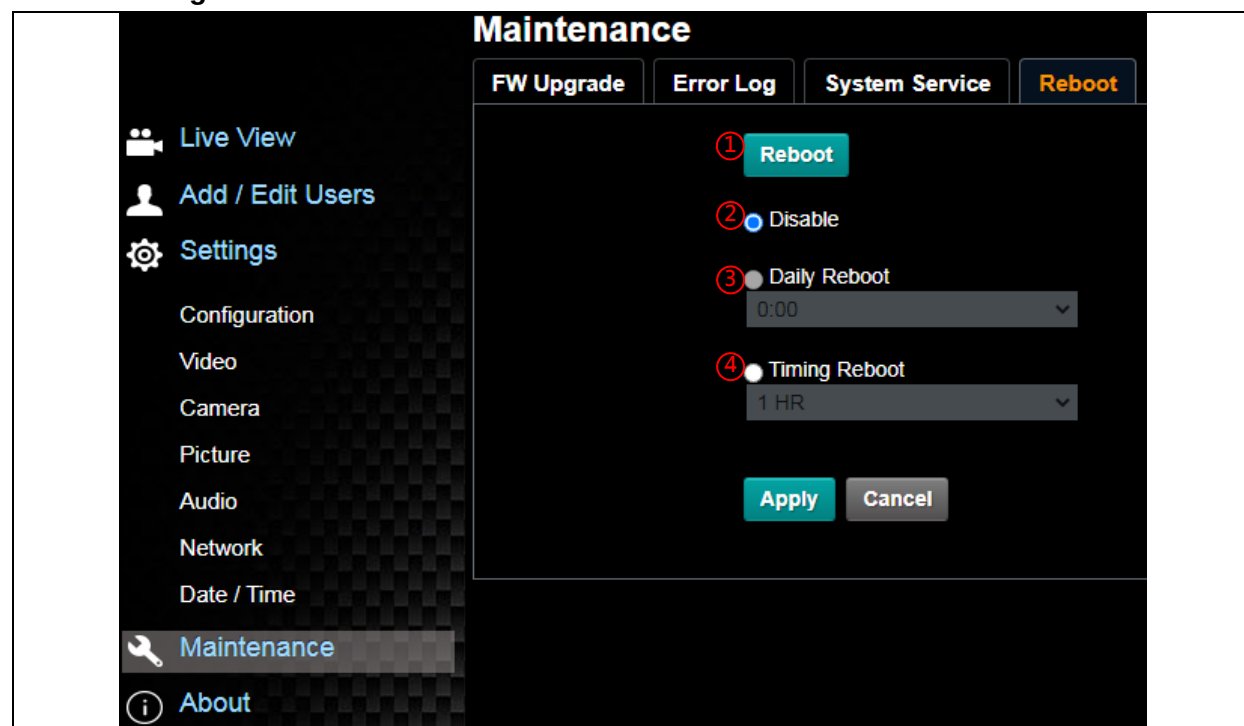

No	Item	Function Descriptions
1	Reboot	Reboot immediately
2	Disable	Disable the reboot settings
3	Daily reboot	Set the daily reboot time <Remark> Please go to Settings - Time to complete the SNTP server synchronization to set daily reboot
4	Timing Reboot	Set the timing reboot time

4.3.16 About

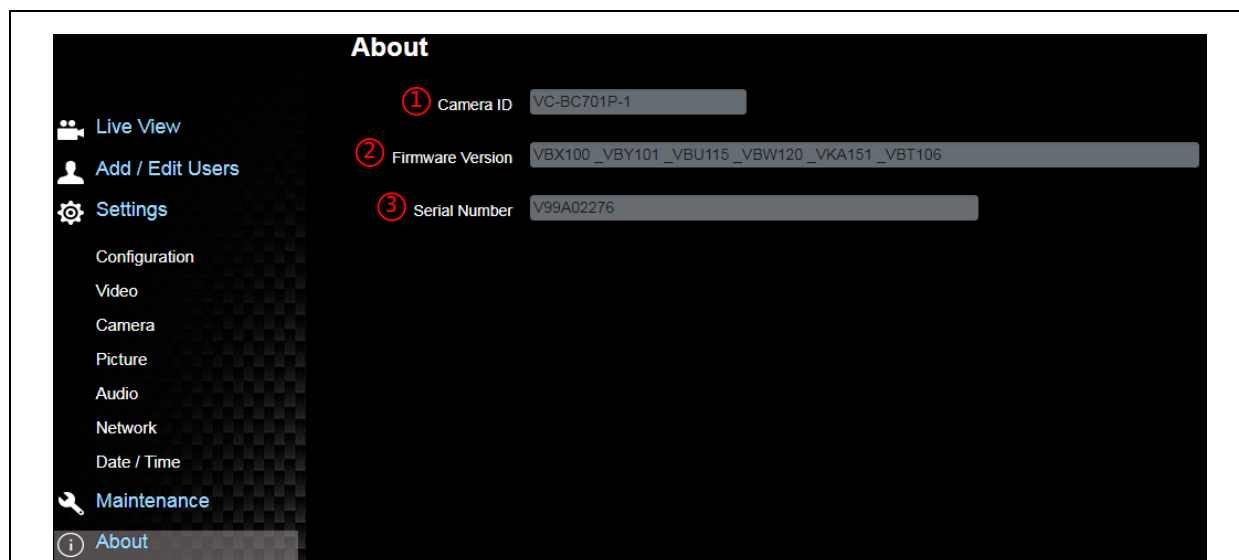

No	Item	Function Descriptions
1	Camera ID	Display the camera name
2	Firmware Version	Display the firmware version of the camera
3	Serial No.	Display the camera serial No.

Chapter 5 Troubleshooting

This chapter describes problems you may encounter while using VC-BC801P. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurred, please contact your distributors or the service center.

No.	Problems	Solutions
1	Boot without power signal	1. Make sure you have plugged in the power cord. 2. When using a PoE connection, ensure that the power supply supports IEEE 802.3af hubs.
2	There is no image output from VC-BC801P	1. Check the power supply or PoE supply functions. 2. Confirm the output signals are in streaming output. 3. If the camera is connected to a monitor, confirm the monitor equipment supports 4K output. 4. Replace the cables and make sure they are not faulty.
3	VC-BC801P image is severely delayed	Please use 4K, 1080p or 720p 60/50 Hz signals rather than 25/30 Hz signals.
4	RS-232 cannot be controlled	1. Confirm the connection is correct (RS-232 Input/Output). 2. Please make sure the Baud rate setting is the same as the control equipment.
5	Whether the Internet can be used for operation	Please refer to Chapter 4 Network Function Setting Description for the Internet usage
6	The ONVIF software cannot find the machine	Please go to Setting - Video - Camera Location in the webpage and make sure that the ID is only made up of English letters or numbers. The Onvif software cannot find the machine if you use special characters and space.
7	Tally lamp is not working when applying RS232 setting	Please go to Setting - Camera - Tally Lamp in the webpage to check if the function is on.

Chapter 6 Safety Instructions

Always follow these safety instructions when setting up and using the product:

1 Operation

- 1.1 Please use the product in the recommended operating environment, away from water or source of heat
- 1.2 Do not place the product on a tilted or unstable trolley, stand or table.
- 1.3 Please clean the dust on the power plug prior to usage. Do not insert the product's power plug into a multiplug to prevent sparks or a fire.
- 1.4 Do not block the slots and openings in the case of the product. They provide ventilation and prevent the product from overheating.
- 1.5 Do not open or remove covers, otherwise it may expose you to dangerous voltages and other hazards. Refer all servicing to licensed service personnel.
- 1.6 Unplug the product from the wall outlet and refer servicing to licensed service personnel when the following situations happen:
 - If the USB port becomes damaged or frayed.
 - If liquid is spilled into the product or the product has been exposed to rain or water.

2 Installation

- 2.1 For security considerations, please make sure the standard mount you use is in line with UL or CE safety approvals and installed by technician personnel approved by agents.

3 Storage

- 3.1 Do not place the product where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
- 3.2 Unplug this product during thunderstorms or if it is not going to be used for an extended period.
- 3.3 Do not place this product or accessories on top of vibrating equipment or heated objects.

4 Cleaning

- 4.1 Disconnect all the cables prior to cleaning and wipe the surface with a dry cloth. Do not use alcohol or volatile solvents for cleaning.

5 Batteries (for products or accessories with batteries)

- 5.1 When replacing batteries, please only use similar or the same type of batteries.
- 5.2 When disposing of batteries or products, please adhere to the relevant instructions in your country or region for disposing of batteries or products.

■ Precautions

	This symbol indicates that this equipment may contain dangerous voltage which could cause electric shock. Do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to licensed service personnel.		This symbol indicates that there are important operating and maintenance instructions in this User Manual with this unit.
---	---	--	---

■ FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

Notice :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment..

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

■ IC Warning

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada.

Cet appareil numerique respecte les limites de bruits radioelectriques applicables aux appareils numeriques de Classe A prescrites dans la norme sur le material brouilleur: "Appareils Numeriques," NMB-003 edictee par l'Industrie.

■ EN55032 CE Warning

Operation of this equipment in a residential environment could cause radio interference.

Warning: Operation of this equipment in a residential environment may cause radio interference

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Manufacturer : Lumens Digital Optics Inc.

Product Name : VC-BC801P

Model Number : Box Camera

Responsible Party – U.S. Contact Information

Supplier : Lumens Integration, Inc.

4116 Clipper Court, Fremont, CA 94538, United States

e-mail : support@mylumens.com

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Copyright Information

Copyrights © Lumens Digital Optics Inc. All rights reserved.

Lumens is a trademark that is currently being registered by Lumens Digital Optics Inc.

Copying, reproducing or transmitting this file is not allowed if a license is not provided by Lumens Digital Optics Inc. unless copying this file is for the purpose of backup after purchasing this product.

In order to keep improving the product, the information in this file is subject to change without prior notice.

To fully explain or describe how this product should be used, this manual may refer to names of other products or companies without any intention of infringement.

Disclaimer of warranties: Lumens Digital Optics Inc. is neither responsible for any possible technological, editorial errors or omissions, nor responsible for any incidental or related damages arising from providing this file, using, or operating this product.