


VC-A62_VC-A62N Quick Installation Guide

1. Connections

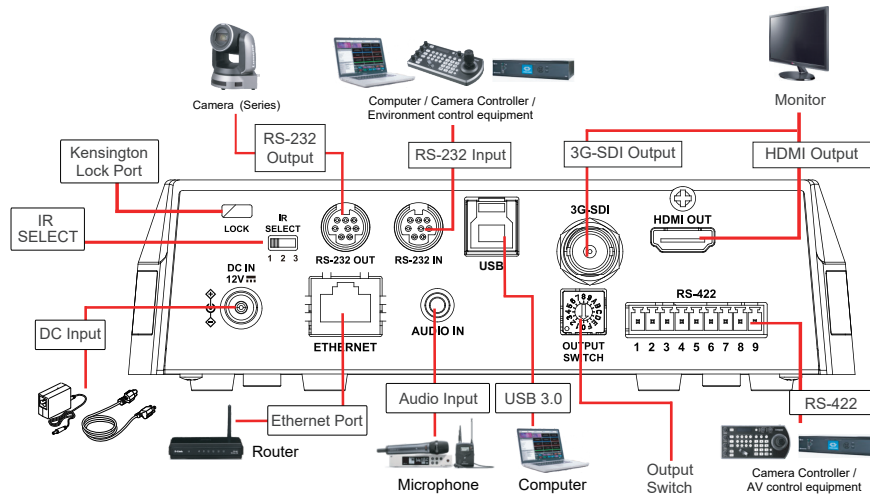

2. Setting DIP SWITCHES

2.1 OUTPUT SWITCH




The factory setting for the resolution is 1080 p/59.94

Setting	Resolution	Frame Rate
0	3840 x 2160p	59.94
1		50
2		29.97
3		25
4	1920 x 1080p	59.94
5		50
6		29.97
7		25
8	1280 x 720p	59.94
9		50
A		29.97
B		25
C	1920 x 1080i	59.94i
D		50i
E	Reserved	Reserved
F		

2.2 IR SELECT


After the IR SELECT is configured, the remote control can switch between this unit and other cameras.




ID	Setting
1	
2	
3	

3. Install the Camera on the Ceiling

1. Please set the camera resolution **DIP SWITCH** prior to installation.
(Please refer to [2. Setting DIP SWITCHES](#))
2. Fix the metal plate **A** on the camera base with 4 M3 silver screws.

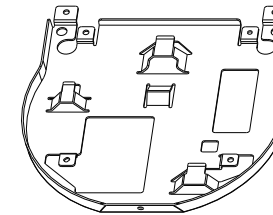

Metal plate A

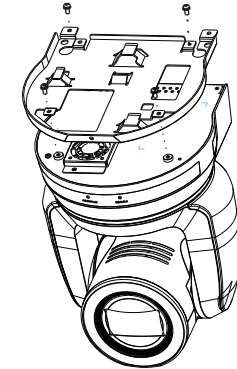

3. Lock the metal plate **B** on the ceiling


***Caution:**

- (1) Please use a hanger that has obtained UL security approval.
- (2) Please do not block the cable hole.


4. Attach metal plate **A** to metal plate **B**

- ▼ Raise the camera and metal plate **A** to the ceiling and then move it to the right to snap it on to metal plate **B**.
- ▼ Finally, secure with 2 M3 silver screws and 1 M3 black screw.

*As the camera is inverted, press the [Mirror] button on the remote control to flip the image [Flip]

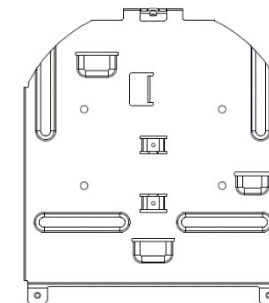


Metal plate B

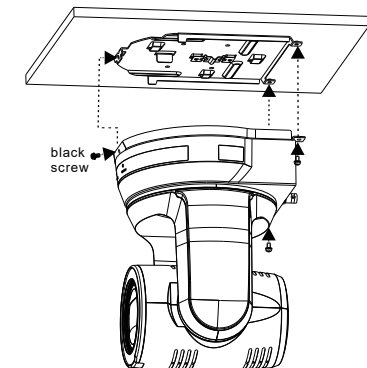


4. Camera Power Options

- Connect the DC12V power adapter for power supply
 - Connect to a router that supports PoE using a network cable
- ※ VC-A62/ VC-A62N supports PoE+(IEEE802.3at)

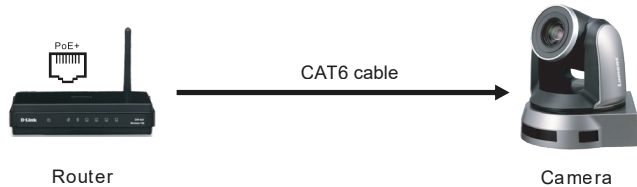

5. Network Control and Monitoring

Connect camera units, a camera controller and a computer to the router. The controller will control multiple cameras on the network, and the computer will monitor the live output of each unit.

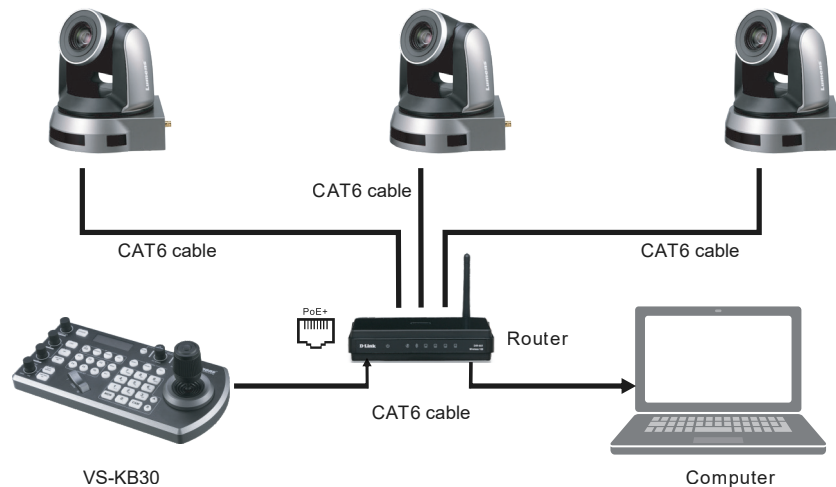

6. View the Camera IP Image

6.1 Check Camera IP Address

6.1.1 Accessing the Camera over its IP address

The default IP address of the camera is 192.168.100.100.
The computer IP address must be set with the same network segment, such as 192.168.100.xxx

6.1.2 Accessing the Camera over IP

Connecting via Switch or Router and enter the OSD Menu, select **[Setting]** > **[Ethernet]** to confirm the camera IP address

6.2 Open the browser, enter the camera IP address, enter the account and password to view the camera IP image and control the camera.

Address

- **Account: admin**
- **Password: 9999**

*For New Tek product operation or instructions, please go to <http://new.tk/NDIHX-Driver-Win>

* Please visit <https://www.youtube.com/mylumens> to watch related videos.

