


VC-R30 Quick Installation Guide

1. Product connection

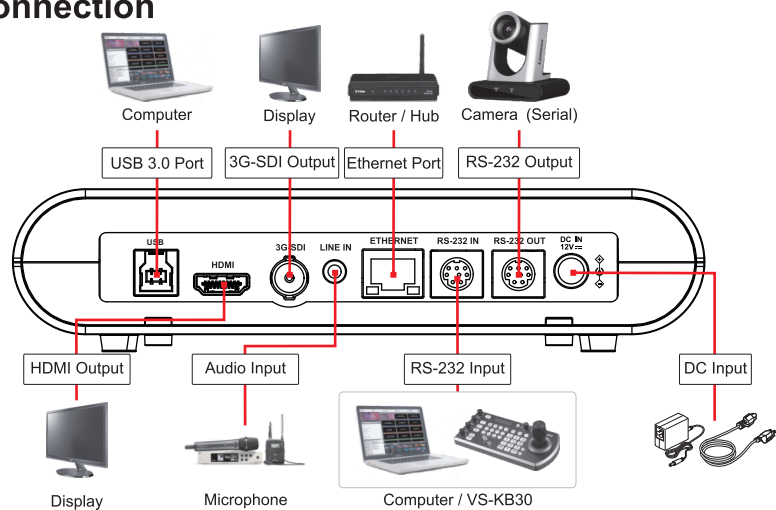

3. View VC-R30 Images

■ HDMI/ 3G-SDI Image Output

Connect an HDMI or SDI cable to output HD video.

*The default resolution of VC-R30 is 1920 x 1080 30 fps

■ USB Image Output

Connect to computer with a USB 3.0 cable, and use Lumens USB PTZ Camera Controller software* to view live images and control the VC-R30. Use VC-R30 as a webcam in Skype, Zoom, Microsoft Teams and other video conferencing apps.


*Please visit Lumens' website and go to Support > Download to download Lumens software(<https://www.MyLumens.com/Support>)

■ Network Image Output

Connect VC-R30 to network router using Cat5e or Cat6 to view live video and control the camera via a web browser.

To discover the IP address of the camera, use the remote control to open the OSD Menu > [Network], check the IP address.


*If connecting the camera directly to your computer, the default IP of VC-R30 is 192.168.100.100.

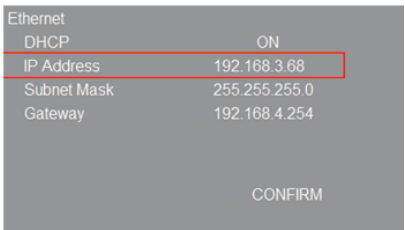


Open a web browser, and enter the IP address in the address bar.



Enter the username and password .

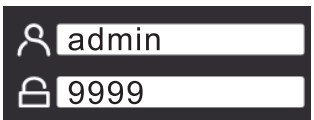


2. I/O Function Descriptions

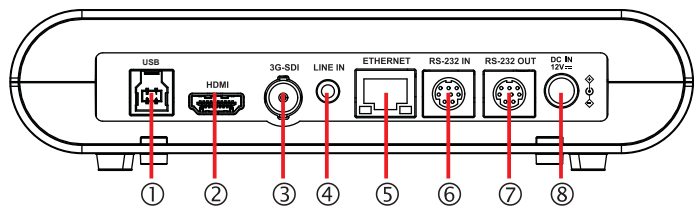


No.	Item	Description
1	USB 3.0 Port	Transmits live video to your computer via USB
2	HDMI Output	HDMI output (Audio output not supported)
3	3G-SDI Output	3G-SDI output (Audio output not supported)
4	Audio IN	3.5mm Line In
5	Ethernet Port	Supports routers or hubs with PoE (IEEE802.3af) power supply
6	RS-232 Input	RS-232 input port (connect max. 7 cameras)
7	RS-232 Output	RS-232 output port (connect max. 7 cameras)
8	DC 12V Power Port	DC in port

1. 产品连接

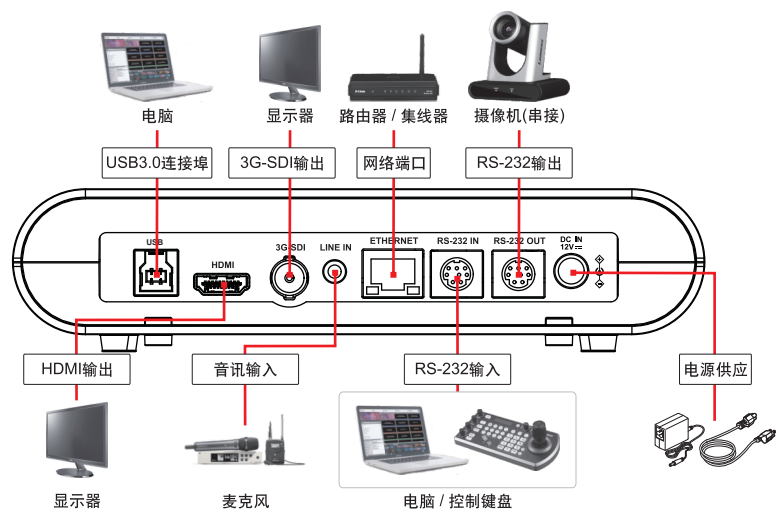

2. I/O功能说明

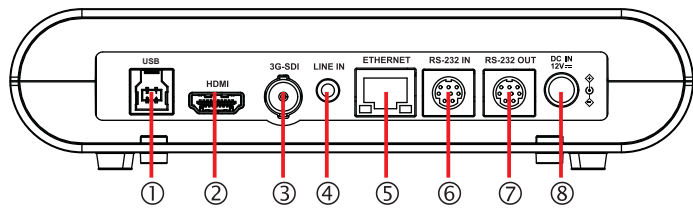

项目	名称	功能说明
1	USB 3.0 连接埠	连接电脑USB端口，提供USB讯号影像
2	HDMI输出	HDMI输出 (不支援Audio输出)
3	3G-SDI输出	3G-SDI输出 (不支援Audio输出)
4	音讯输入	3.5mm LINE IN
5	网路孔	网路线端口，支援路由器或集线器PoE(IEEE802.3af)供电
6	RS-232输入	RS-232输入端口，最多可串接7台摄像机
7	RS-232输出	RS-232输出端口，最多可串接7台摄像机
8	DC 12V电源端口	DC供电连接端口

3. 观看影像

■ HDMI/ 3G-SDI 影像输出

连接HDMI或SDI连接线至显示器，即可输出VC-R30画面
*VC-R30预设解析度为1920 x1080 60 fps

■ USB影像输出

使用USB 3.0 连接线与电脑连接，搭配Lumens USB PTZ Camera Controller软体观看影像及控制VC-R30；亦可搭配视讯软体观看影像，如：Microsoft Teams等软体
*USB PTZ Camera Controller软体请至Lumens官网，[服务支援>下载专区](#)取得

■ 网路影像输出

使用Cat5e网路线连接路由器，即可透过浏览器观看VC-R30影像及控制
1.确认机器IP位置
DHCP预设开启，可使用遥控器开启OSD菜单> [网路] 查看IP位置
*如以电脑直连，VC-R30预设IP为192.168.100.100，请将电脑设定为相同网段



开启浏览器，在网址列输入IP位址



2.输入登入帐号和密码，即可登入网页观看影像及控制VC-R30

