

ROKENBOK™
S Y S T E M

Pump Station
Start Set



WARNING:
CHOKING HAZARD

Toy contains small parts and balls.
Not for children under 3 years.

CAUTION-ELECTRIC TOY

Not recommended for children under 5 years of age. As with all electrical products, precautions should be observed during handling and use to prevent electrical shock.

Batteries Included
Las pilas están incluidas
Vendu Avec Piles
Inkl. Batterien
Batterie Inklusive
Inclusief Batterijen
Inkluderas Batterier
Batterier inkluderet
Batterier er inkludert



Welcome to the worldwide family of ROKENBOK System
toy owners! The only large scale building system featuring
interactive, radio control vehicles in an action-filled world.
Save these instructions.

Bienvenido a la familia mundial de propietarios de juguetes ROKENBOK System! El único sistema de construcción en gran escala que cuenta con vehículos interactivos de radiocontrol en un mundo repleto de acción. *Guarde estas instrucciones.*

Bienvenue à la famille mondiale des usagers du ROKENBOK System ! Le seul système de construction à grande échelle comportant des véhicules radiocommandés dans un milieu interactif. *Conservez ces instructions.*

Herzlich willkommen in der weltweiten Familie von ROKENBOK System Spielzeugbesitzern! Das einzige Konstruktionssystem mit interaktiven ferngesteuerten Fahrzeugen in einer actionsorientierten Spiellandschaft. *Bitte bewahren Sie diese Information auf.*

Benvenuti nella grande famiglia internazionale dei possessori del giocattolo ROKENBOK System! L'unico sistema di costruzione in grande scala dotato di veicoli interattivi e radiocomandati in un mondo ricco di azione. *Tenere queste istruzioni.*

Welkom tot de wereldwijde familie van ROKENBOK Systeem speelgoed eigenaren! Het enige grote bouwsysteem dat voorzien is van op elkaar reagerende radio grafisch bestuurbare voertuigen in een actieve wereld. *Bewaar deze instructies.*

Välkommen till den världsomfattande familjen av Rokenbok leksaksägare! Det enda stora byggnadssystemet som har ömsesidigt verkande fordon i en fartfyllt värld. *Spara instruktionerna.*

Velkommen til den verdensomspennende familien av ROKENBOK Systemets leketøyseiere! Det eneste byggesystemet i stor målestokk med interaktive, radiostyrte kjøretøyer i en action-fylt verden. *Ta vare på disse instruksjonene.*

Velkommen til den verdensomfattende familie af ejere af ROKENBOK System legetøj! Det eneste store byggesystem, som er udstyret med interaktive, radiostyrede køretøjer i en actionsfyldt omgivelser. *Gem disse instruktioner.*

Setting the standard for quality and fun.

www.rokenbok.com

e-mail: customerservice@rokenbok.com



Rokenbok Toy Company
Encinitas, CA (USA)
Tel. 760-632-3585
Düsseldorf (Germany)
Tel. 49-211-999 57 70



United States and Canada
1-888-4ROKBOK (1-888-476-5265)
M-F 7:00AM-5:00PM Pacific Time




Europe
+49-211-999 57 70
M-F 09:00-16:00






Rokenbok Toy Company
Attn: Customer Service
725 First St. Bldg. K, Encinitas, CA (USA) 92024


BUILD

Construye Bau Bouw Byg
Construis Costruite Bygg

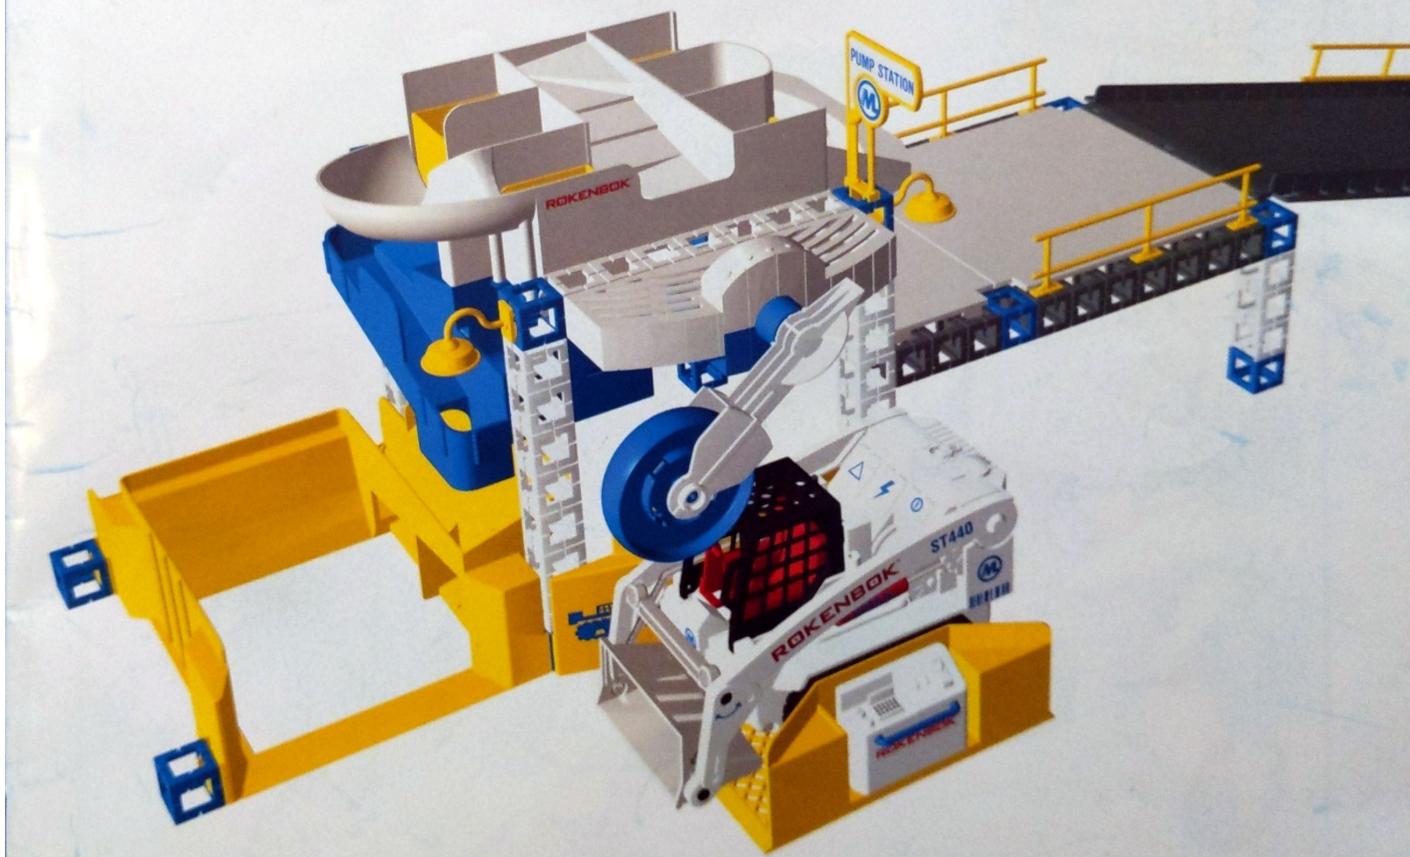

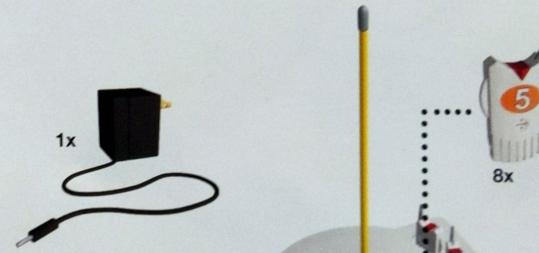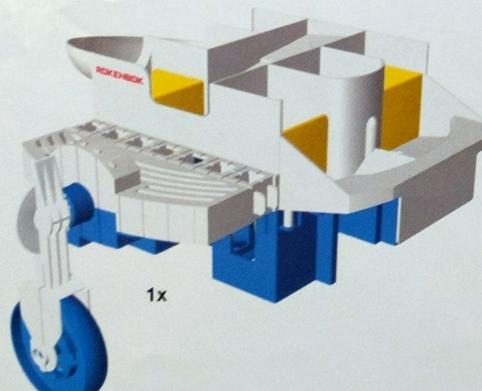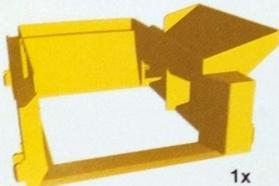

88 pieces
88 piezas
88 pièces
88 Stücke
88 pezzi
88 stukken
88 stora
88 store

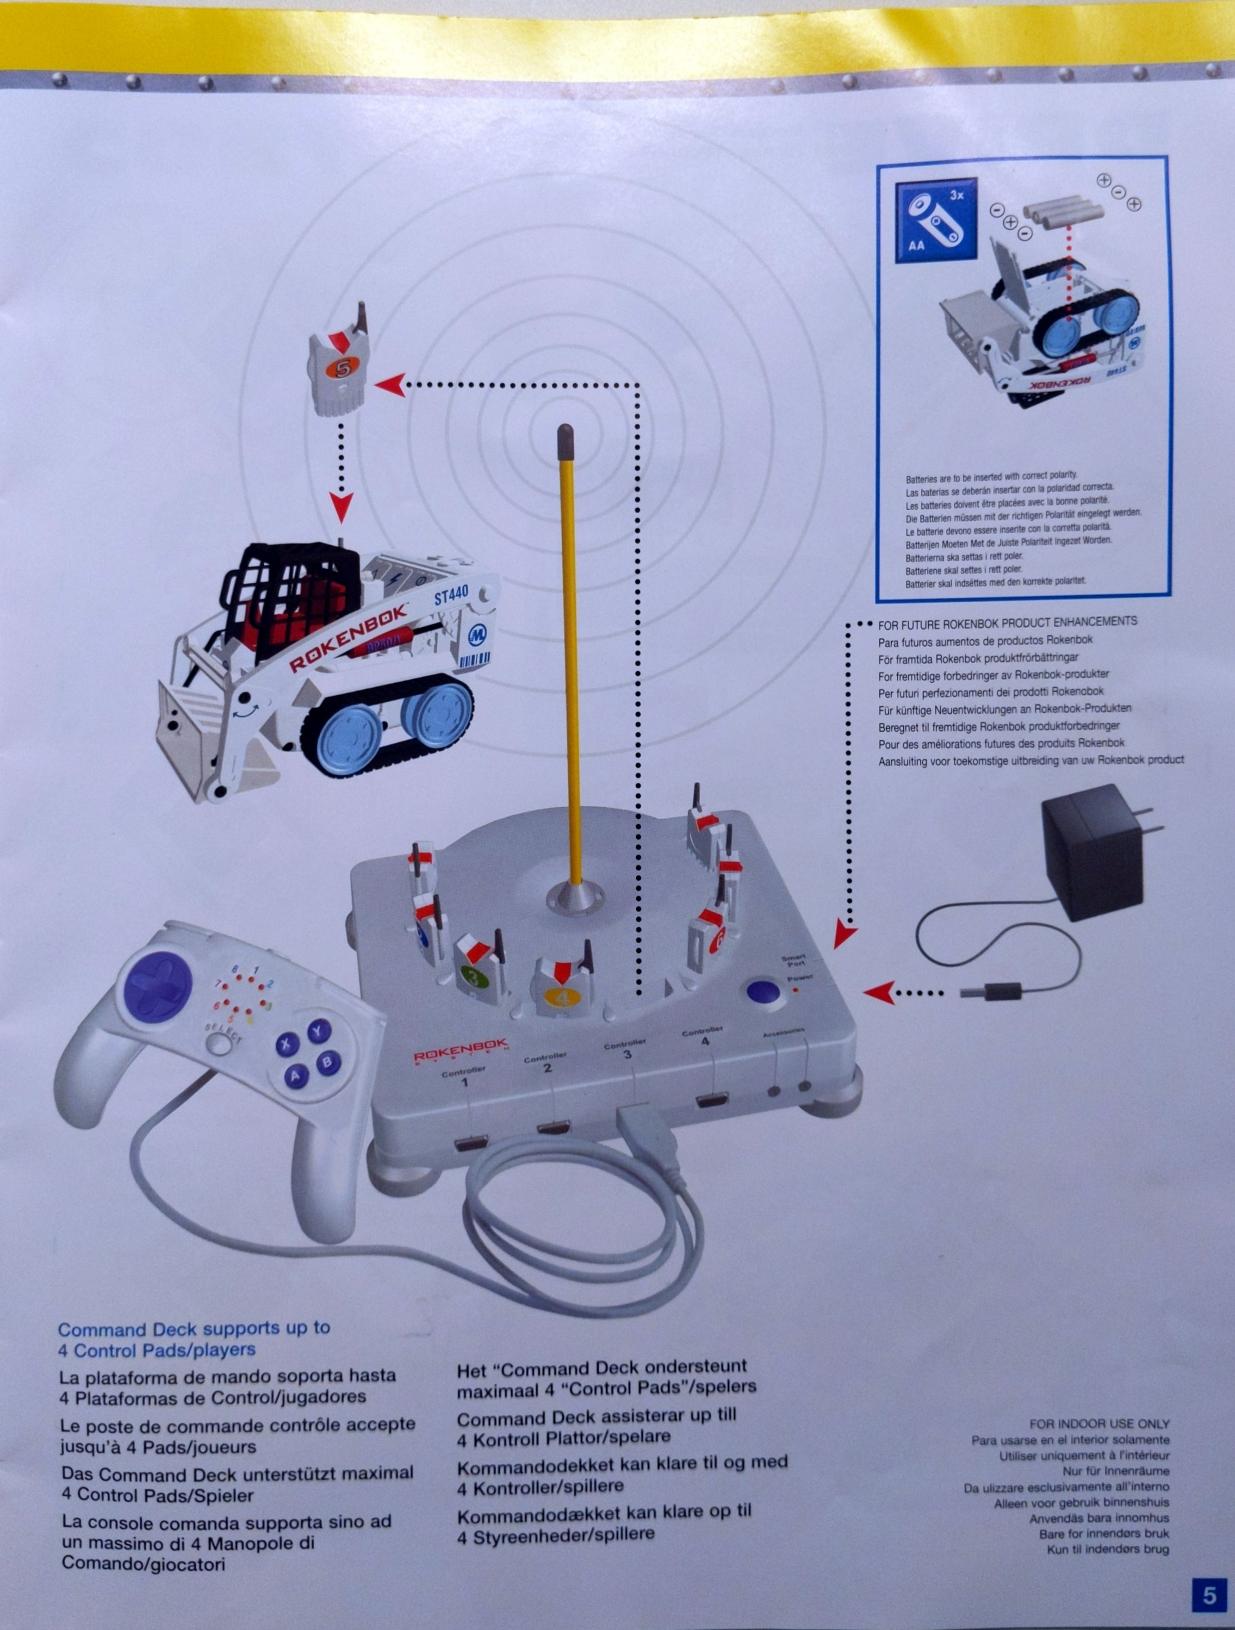


DRIVE

Maneja
Pilotage

Fahren
Guida

Besturen
Kjöra

Kjøre
Køre

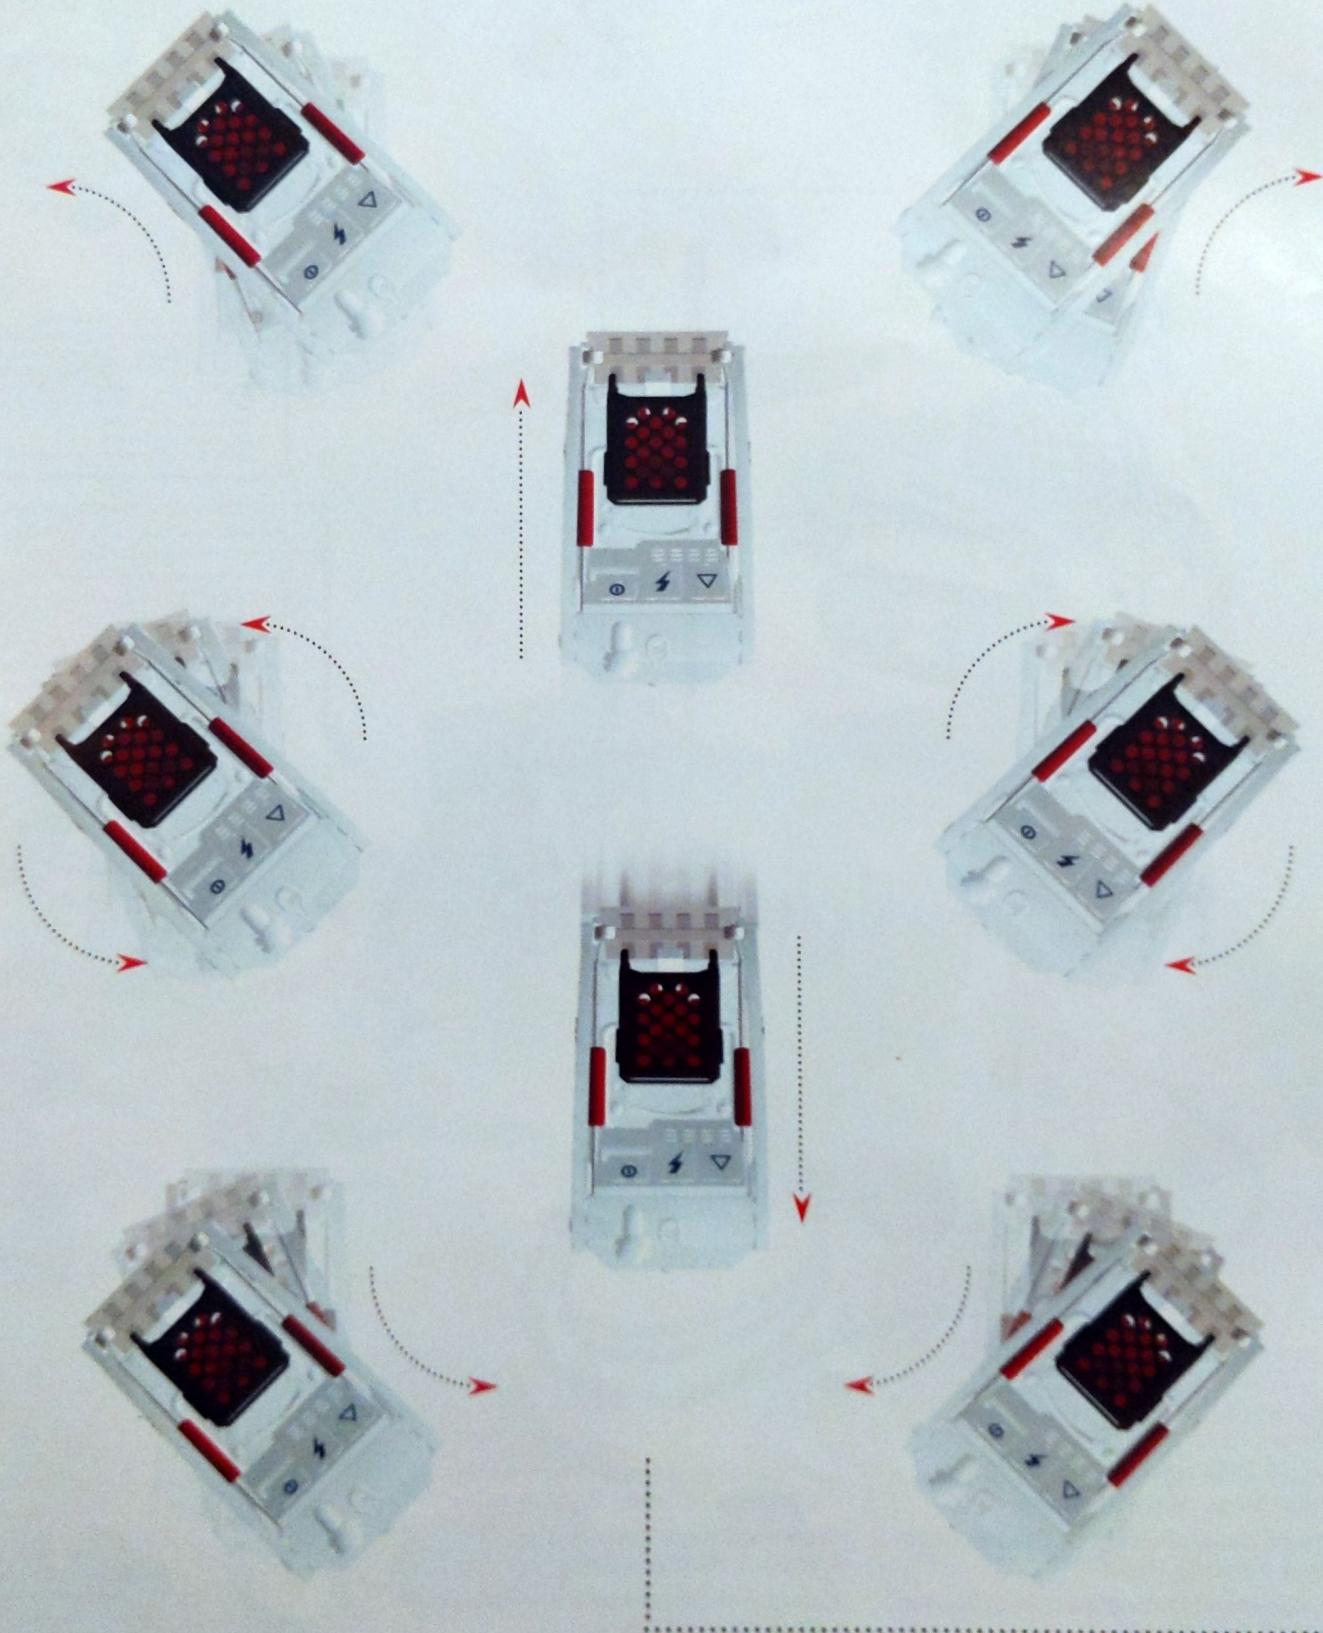


CONTROL

Controla
Contrôle

Steuerung
Comanda



Regelen
Kontroll




Styre

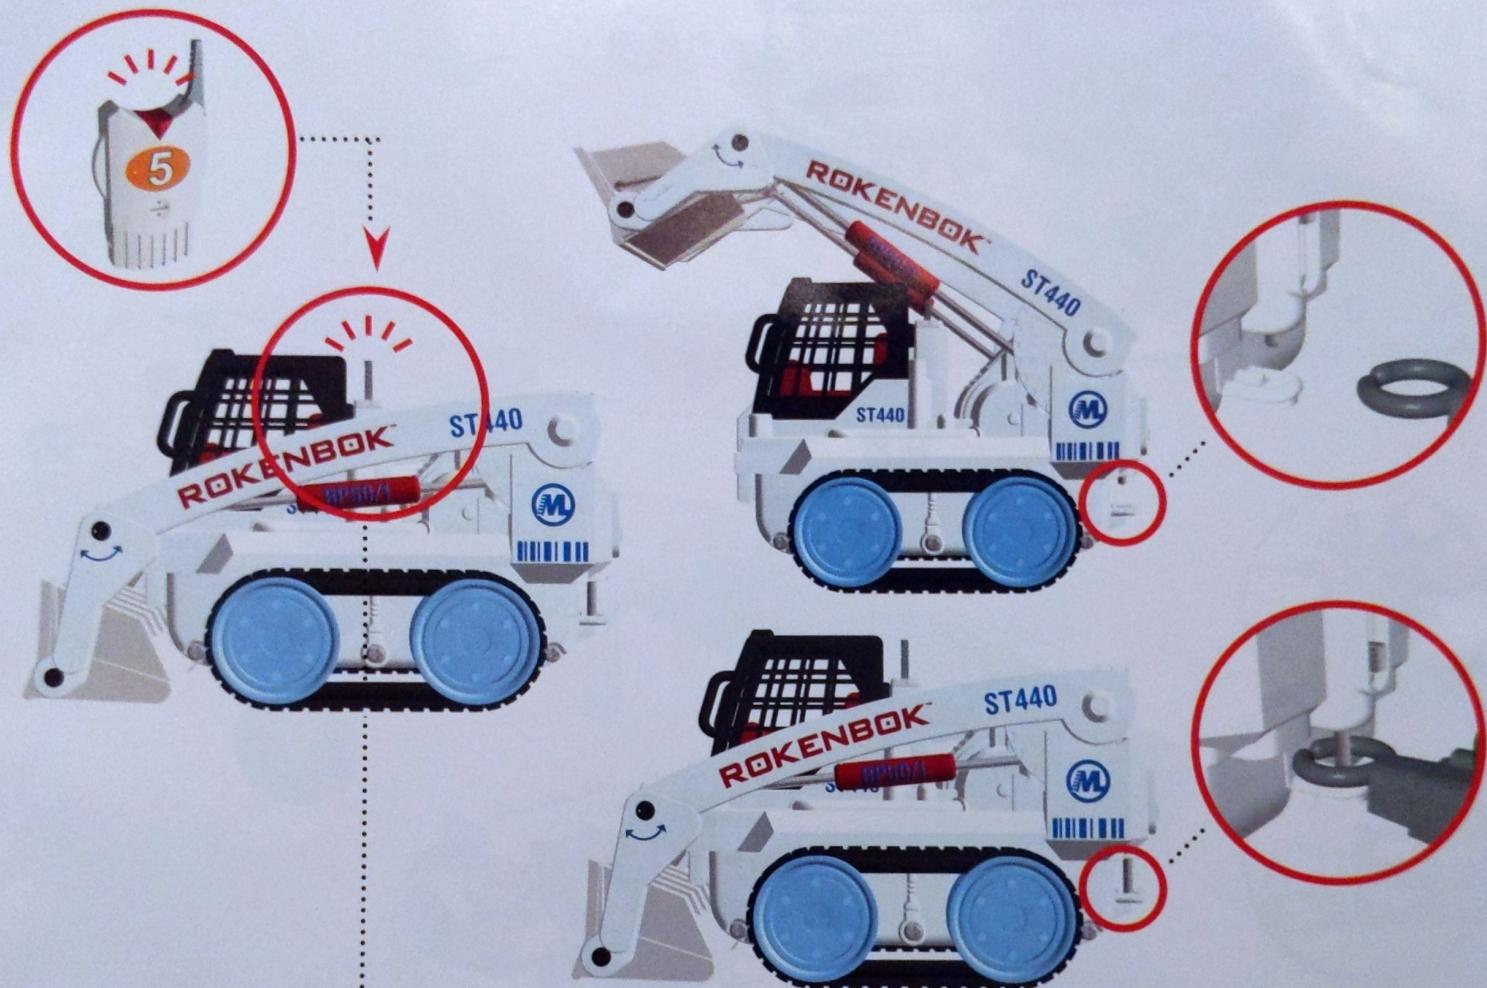


PUSH TO SLOW

Oprima para Desacelerar
Seleccion Anterior
Appuyer pour Ralentir
Choix Précédent
Premere per rallentare
Selezione Precedente
Drücken zur Verlangsamung
Vorherige Wahl
Tryck för att senka farten
Tidigare val
Trykk for å senke farten
Tryk for at sætte farten ned

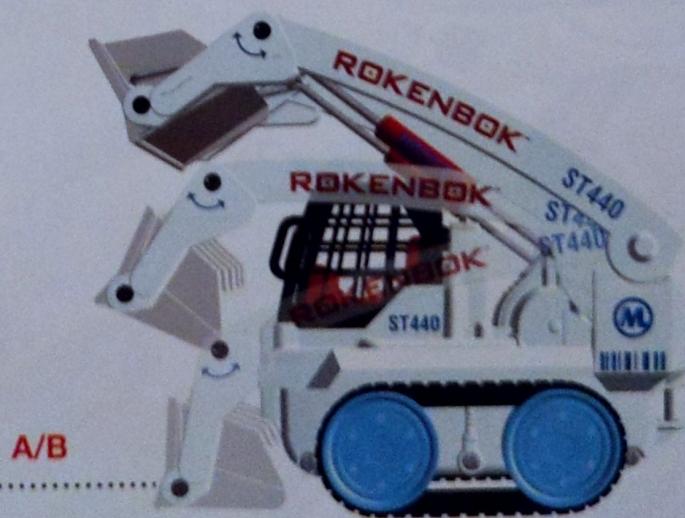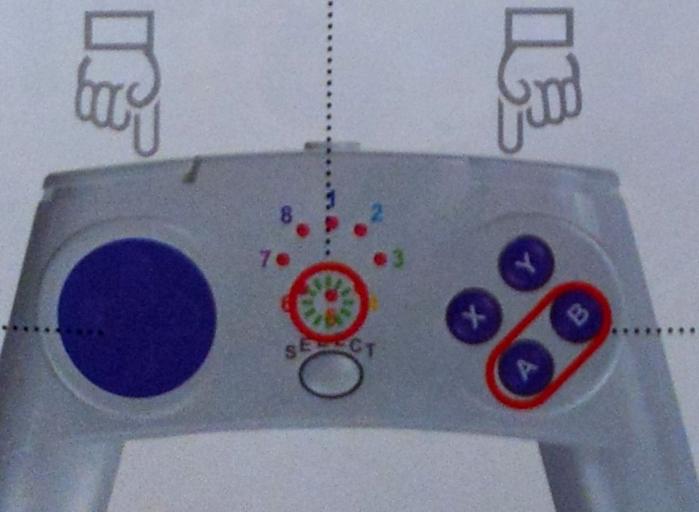

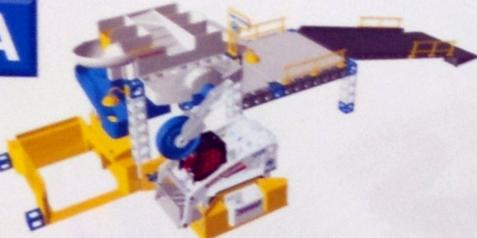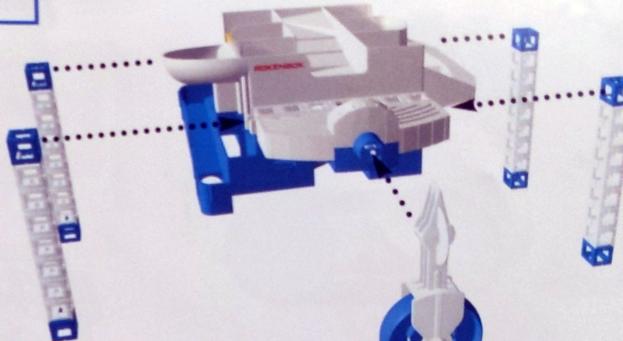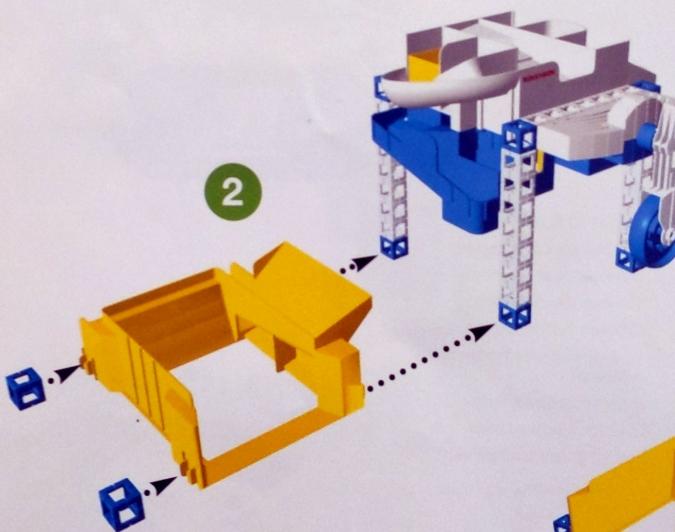A**1****2****3**

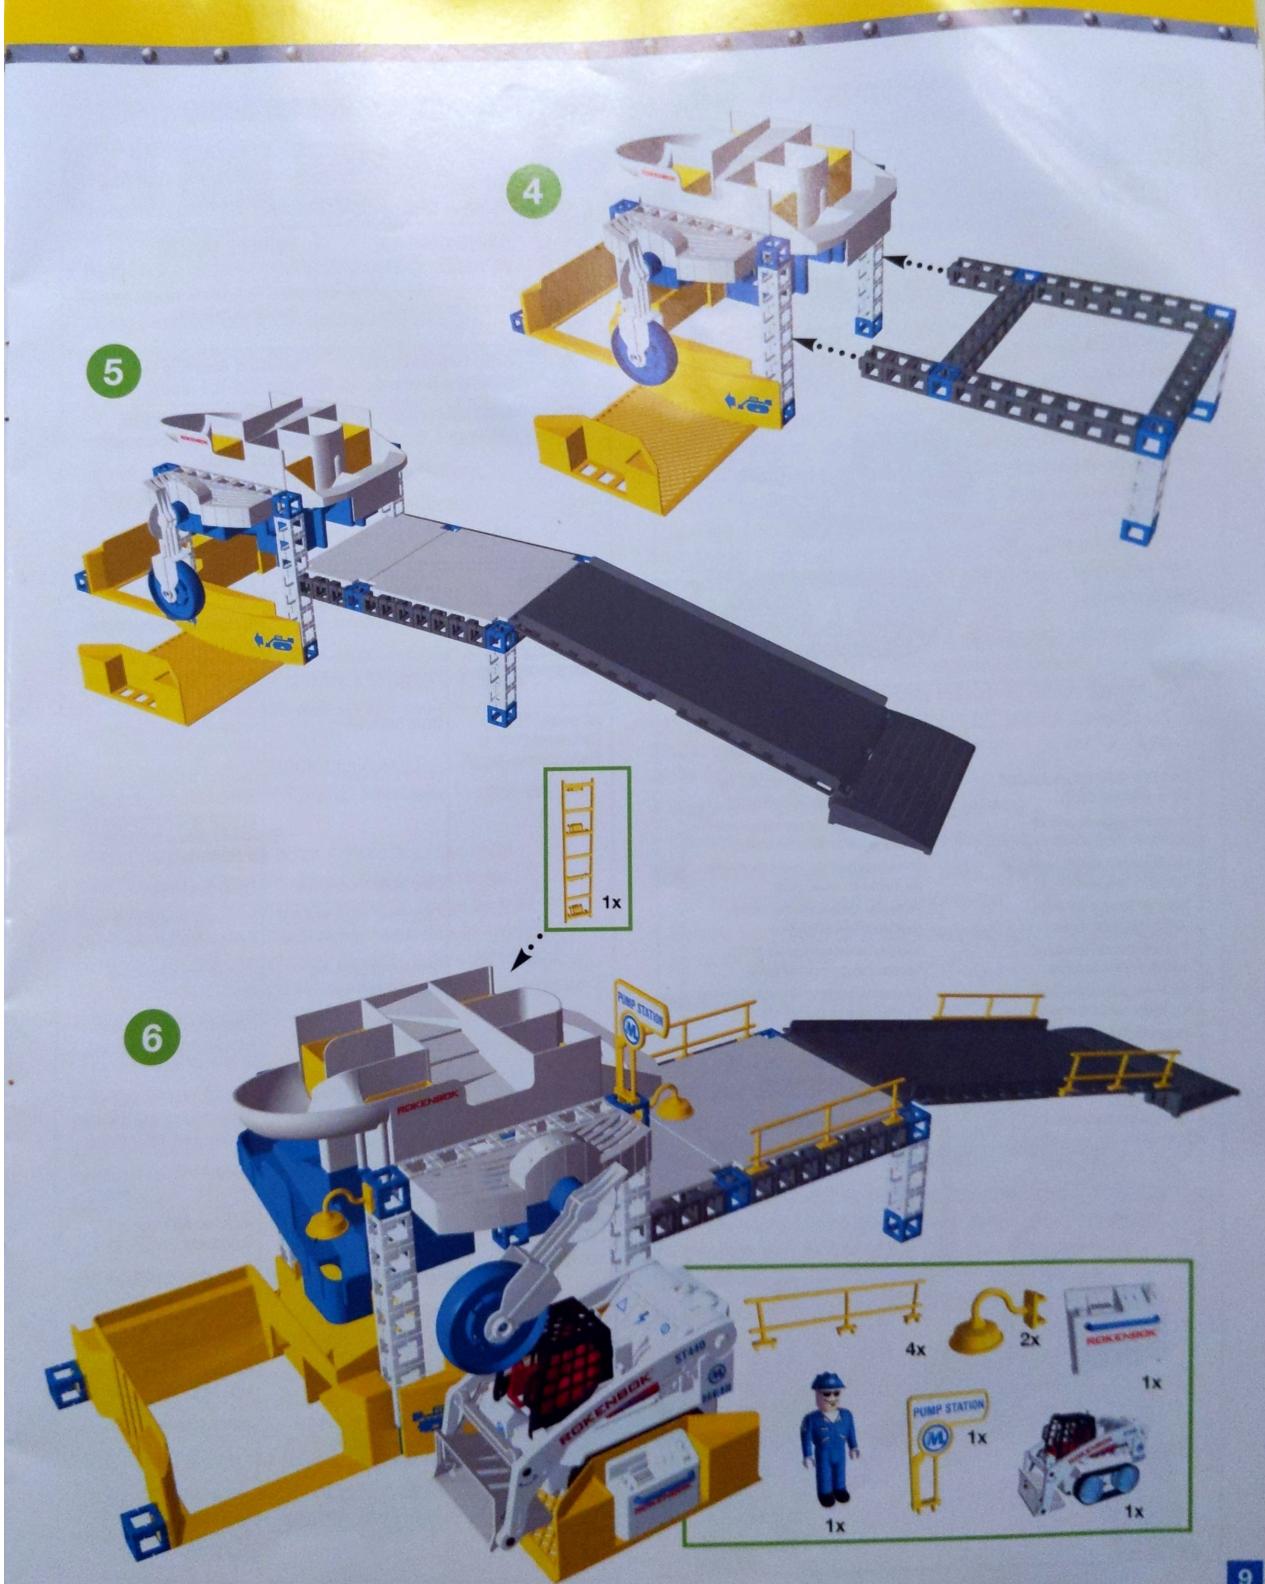

VEHICLE TROUBLESHOOTING GUIDE



PUSH TO RESET

Oprima para Repositionar

Appuyer pour réinitialiser

Premere per ripristinare

Drücken zur Neueinstellung

Knop indrukken om
opnieuw te berinnen

Tryck för att nollställa

Trykk for å nullstille

Tryk for at nulstille



A

Vehicle can be operated
by 1 player only.

El vehículo puede ser operado
solamente por 1 jugador.

Le véhicule ne peut être manipulé
que par un seul joueur.

Fahrzeug kann nur von einem
Spieler betrieben werden.

Il veicolo può essere operato
solamente da 1 giocatore.

Het voertuig kan alleen door
één speler bestuurd worden.

Endast en person kan sätta
i gång fordonet.

Kjøretøyet kan kun benyttes
av én spiller.

Køretøjet kan kun betjenes
af én spiller.

B

Vehicle can be operated by
all players simultaneously.

El vehículo puede ser operado por todos
los jugadores de forma simultánea.

Le véhicule peut être manipulé par tous
les joueurs en même temps.

Fahrzeuge können von allen Spielern
simultan betrieben werden.

Il veicolo può essere operato da tutti
i giocatori contemporaneamente.

Het voertuig kan door alle spelers
tegelijkertijd bestuurd worden.

Alla som leker kan samtidigt sätta
i gång fordonet.

Kjøretøyet kan benyttes av alle
spillere samtidig.

Køretøjet kan betjenes af alle
spillere samtidig.



RADIO CONTROL KEY LED

VEHICLE STATUS

RADIO CONTROL KEY LED	VEHICLE STATUS
	Vehicle is selected
	Vehicle is waiting to be selected
	Vehicle is off, press Radio Control Key down and release to start vehicle Command Deck is unplugged or off Vehicle batteries are dead

PROBLEM	CAUSE	SOLUTION
Vehicle moves slowly	Vehicle batteries weak	Replace vehicle batteries with new "AA" batteries
Poor steering control	Vehicle batteries weak	Replace vehicle batteries with new "AA" batteries
No power. LED on Command Deck or Radio Control Key off.	Dead batteries Incorrect battery placement Dirty battery contacts	Replace vehicle batteries with new "AA" batteries Remove the vehicle batteries and replace in correct orientation, as shown inside the battery compartment Clean terminals
	Command Deck POWER ON button not turned on	Press the POWER ON button on the Command Deck
	Command Deck not plugged in	Plug in the Command Deck
	Vehicle has powered down	Press the Radio Control Key down and release it to re-start vehicle
Vehicle runs erratically	Interference Weak batteries	Change your location or turn off any other remote control toys, etc. nearby Replace vehicle batteries with new "AA" batteries
Radio Control key LED is flashing quickly	Vehicle out of range Command Deck is off Weak batteries	Move vehicle closer to Command Deck Press the POWER ON button on the Command Deck and plug Command Deck into wall socket Replace vehicle batteries with new "AA" batteries
	Vehicle not in use for extended period of time, preparing to power down	Select vehicle
Vehicle responds to multiple control pads/players	Mode Switch is set to "B" position	Set the Mode Switch on the bottom of the Control Pad to "A"

HARDWARE PRECAUTIONS/MAINTENANCE

- For indoor use only.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or nickel cadmium batteries.
- Remove the batteries during long periods of non-use. Never leave worn-out batteries in the vehicles. Battery leakage and corrosion can damage the vehicles.
- Do not attempt to re-charge non-rechargeable batteries.
- Rechargeable batteries should be removed from the toy before being recharged. Charging of rechargeable batteries should only be done under adult supervision.
- Do not short-circuit the terminals of the battery.
- Remove exhausted batteries from the vehicles.
- Do not disassemble the Command Deck, Control Pad, or any of their parts.
- When AC Adaptor is not in use, unplug it from the electrical outlet.
- Use only the ROKENBOK AC Adaptor supplied with the system. The AC adapter is not a toy. Using a different AC adaptor may damage your system and will void the warranty.
- Do not place the ROKENBOK Command Deck, Control Pad, AC Adaptor, or any ROKENBOK Vehicles in sand, dirt, water, or damp areas.
- Radio interference can occur if more than one radio control car or other radio device is operating on the same frequency. For best performance, please be sure to maintain a distance from: radio devices such as nursery monitors, cordless telephones, or other radio control cars on the same frequency, high voltage electrical wires, reinforced concrete buildings or CB radios.

ATTENTION PARENTS

- It is recommended that you periodically examine the product for any potential hazards and that any potentially hazardous components be repaired or replaced. If service or repair is needed, discontinue use and contact Rokenbok Customer Service (see Warranty).

CLEANING

- Only a clean, dry, soft cloth should be used to clean electrical components.
- Electrical parts are not washable.
- Building pieces and non-electrical elements can be washed by hand using warm water (104 degrees Fahrenheit/40 degrees Celsius) and a mild liquid dish detergent. Air dry. Make sure all parts are completely dry before using your ROKENBOK System.
- Never use steel wool or similar abrasives on Command Deck, Control Pad, AC Adapter, or Vehicles and never use solvents of any kind on any parts.

CAUTION - HAIR ENTANGLEMENT

Hair entanglement may result if child's head is too close to motorized unit of this toy.

DANGER - DO NOT USE IN WATER

To prevent electric shock, do not immerse electrical components in water.

FCC RULES FOR A CLASS B DIGITAL DEVICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply within the limits of Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the retailer or an experienced radio / TV technician for help.

CANADIAN CATEGORY II STATEMENT

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

CANADIAN CLASS B STATEMENT

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

TRANSFORMER INFORMATION

Transformers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that in the event of such damage, the toy must not be used with this transformer until the damage has been repaired.

INPUT: 120VAC 60Hz 12W

OUTPUT: 9V DC 500mA

Pump Station
Start Set

©1999 Rokenbok Toy Company. All rights reserved.

ROKENBOK™ is a trademark of the Rokenbok Toy Company.
U.S. and foreign patents pending.

The ROKENBOK™ System is engineered for quality and precision by the Rokenbok Design & Engineering Team in Encinitas, California, U.S.A.

MADE IN CHINA.

Conforms to ASTM F963 & EN71.

Product may vary from photography shown.

Rokenbok Toy Company is not affiliated with LEGO Group™ or Ritzvik Holdings, Inc.

©1999 Rokenbok Toy Company. Todos los derechos reservados.

ROKENBOK™ es marca registrada de Rokenbok Toy Company.

Patentes en EE.UU. y extranjeras en trámite.

El ROKENBOK™ System es realizado con precisión y calidad por el equipo de ingeniería de Encinitas, California, USA.

HECHO EN CHINA.

Cumple con el ASTM F963 y EN71.

El producto puede variar de la fotografía mostrada.

Rokenbok Toy Company no está afiliada a LEGO Group™ o Ritzvik Holdings, Inc.

©1999 Rokenbok Toy Company. Tous droits réservés.

ROKENBOK™ est une marque déposée de Rokenbok Toy Company.

Brevets US et étrangers en instance.

ROKENBOK™ System, construit avec qualité et précision par l'équipe technique Rokenbok à Encinitas, Californie, USA.

FABRIQUÉ EN CHINE.

Conforme à la norme ASTM F963 et EN71.

Le produit peut ne pas être exactement identique à la photographie.

Rokenbok Toy Company n'est pas affilié à LEGO Group™ ou Ritzvik Holdings, Inc.

©1999 Rokenbok Toy Company. Alle Rechte vorbehalten.

ROKENBOK™ ist ein Markenzeichen der Rokenbok Toy Company. U.S. und ausländische Patente angemeldet.

The ROKENBOK™ System ist ein mit Qualität und Präzision hergestelltes Produkt des Rokenbok Engineering Team in Encinitas, Kalifornien, USA.

HERGESTELLT IN CHINA.

Richtet sich nach ASTM F963 (USA) und EN71.

Erzeugnis kann von Abbildung auf Foto abweichen.

Rokenbok Toy Company ist kein Partner der LEGO Group™ oder Ritzvik Holdings, Inc.

©1999 Rokenbok Toy Company. Tutti i diritti riservati.

ROKENBOK™ è un marchio della Rokenbok Toy Company. Brevetti per gli Stati Uniti ed esteri in corso di concessione.

Il ROKENBOK™ System è stato ideato per qualità e precisione dallo Studio di Progettazione e Tecnico di Encinitas, California, U.S.A.

MADE IN CHINA.

A norma della ASTM F963 ed EN71.

Il prodotto può non essere identico alla fotografia.

La Rokenbok Toy Company non è un'affiliata della LEGO Group™ o della Ritzvik Holdings, Inc.

©1999 Rokenbok Toy Company. Alle rechten voorbehouden.

ROKENBOK™ is een gedeponeerde handelsmerk van de Rokenbok Toy Company. U.S. en buitenlandse patenten zijn aangevraagd.

Het ROKENBOK™ Systeem is met kwaliteit en zorgvuldigheid ontwikkeld door het Rokenbok Ontwerp & Ingenieurs Team in Encinitas, California, U.S.A.

GEPRODUCEERD IN CHINA.

Overeenkomstig ASTM F963 en EN71.

Het produkt kan enigszins van de afbeelding afwijken.

Rokenbok Toy Company is niet aangesloten bij de LEGO Groep™ of Ritzvik Holdings, Inc.

©1999 Rokenbok Toy Company. Alla rättigheter berätligade.

ROKENBOK™ är ett Rokenbok Toy Company USA och utländska patent sökt.

ROKENBOK™ Systemet är designat med kvalitet och precision av Rokenbok's ingenjörer i Encinitas, California, USA.

TILLVERKAD I KINA.

Anpassningsbar till ASTM F963 och EN71.

Produkten kan skilja sig från den på fotografiet.

Rokenbok Toy Company är inte ansluten till LEGO Group™ eller Ritzvik Holdings, Inc.

©1999 Rokenbok Toy Company. All rights reserved.

ROKENBOK™ er et varemerke som tilhører Rokenbok Toy Company. Amerikanske og internasjonale patenter under behandling.

ROKENBOK™ System er utviklet med tanke på kvalitet og nøyaktighet av Rokenboks tekniske team i Encinitas, California, USA.

LAGET I KINA.

Tilpasset ASTM F963 og EN71.

Produktet kan variere i forhold til bildet.

Rokenbok Toy Company er ikke tilknyttet LEGO Group™ eller Ritzvik Holdings, Inc.

©1999 Rokenbok Toy Company. Alle rettigheder forbeholdes.

ROKENBOK™ er et varemerke tilhørende Rokenbok Toy Company. Patent under behandling i USA og i udlandet.

The ROKENBOK™ System er konstrueret med henblik på kvalitet og præcision af Rokenboks design- og tekniske team i Encinitas, Californien, USA.

FREMSTILLET I KINA.

Overholder ASTM F963 og EN71.

Produktet kan afvige fra det viste billede.

Rokenbok Toy Company er ikke tilknyttet LEGO Group™ eller Ritzvik Holdings, Inc.



COMPANY HEADQUARTERS

Rokenbok Toy Company

725 First St., Bldg. K, Encinitas, CA 92024 USA
PH 760-632-3585 FAX 760-632-3577

EUROPEAN HEADQUARTERS

Rokenbok Toy Company

Kappeler Str. 126 D-40599 Düsseldorf Germany
PH 49-211-999 57 70 FAX 49-211-999 577 13



33105, 43105, 63105
74105, 84105