@Emerson

In the box

Handset 1

Line Cord

Answer calls

End calls

without your caller hearing.

caller cannot hear you.

LOCKED is displayed.

seconds.

Speaker

answer a call

• in the menu, escape to

the standby screen

Press the key to

mute or disable mute

2. Press again to resume your call.

Lock / Unlock the Keypad

1. Press and hold 02 for 2 seconds. **KEYS**

2. To unlock the keypad, press 0² again for 2

to use the speakerphone,

press the (buttor

this can be done before

during a call or while using

the speakerphone, use the

level 1 through level 5.

multiple handsets (see "Adding additional handsets").

▲ and ▼ buttons to increase

The intercom feature is only available for cordless phone systems with

1. To use the intercom, press and **HOLD** the (**) button.

Dial the number of the handset you would like to call.

or during a call

start a call

(4) AAA Rechargeable

Ni-MH Batteries

The handset / Using the phone

Standby Screen **⊠**Emerson SCROLL UP/ **INCREASE VOLUME** CLEAR/BACK Delete characters/thue END CALL/ ON/OFF CALL LIST/ SCROLL DOWN/ DECREASE to make internal -- # / CHANGE CASE change letters from uppe Activate for hands-free use during a Mute/unmute microphone during a call Lock and unlock

Indicates signal strength. Flashes when handset is not registered to the base or if you go out of range.

Indicates a missed call. Steady when making an outgoing call. Flashes to indicate an incoming or internal call. Indicates an incoming call when viewing the calls list.

Indicates an outgoing call when viewing the calls list Hands-free is on.


Handset ringer is off. Answering machine is on.

Indicates new voicemail messages received. Off when there are ▲▼ Indicates you can scroll through a list or adjust the volume

in talk mode. Indicates more text after the displayed information. Battery is fully charged.

H Battery is partially charged.

Use the menu to customize various settings such as ringer volume, ring tones, language, display settings and more. menu 1. Press the (menu) button to enter the menu.

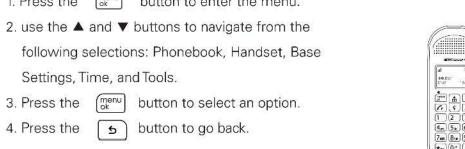

Answ. Machine

Delete all

Announcement

Remote access

Voice Language

Voice answer

Ring delay

Phone setup Services Call list type Ring volume Flash time Ring tones Key tone Dial mode Docking tone Auto clock Register Battery tone Phone name Unregister Date & time

Only available when an phonebook entry is already stored.

Getting started

+ m • m •

Guide

lock / unlock screen

speaker phone screen

volume screen

intercom screen

Handset number

KEYS LOCKED

.ıl C ■

dial a number from the phonebook or Caller ID history

activate / deactivate speakerphone

You can mute your handset so that you can talk to someone nearby


1. During a call, press 💌 . The display shows **MUTE ON** and your

м5тезоп

Installing the batteries 1. Open the battery cover on the back of the handset.

2. Insert two (2) of the AAA rechargeable batteries with the (+) and (-) poles correctly aligned into the battery compartment. 3. Close the battery cover.

4. Place the handset on the base to charge. 5. Insert the other two (2) batteries in the second handset as

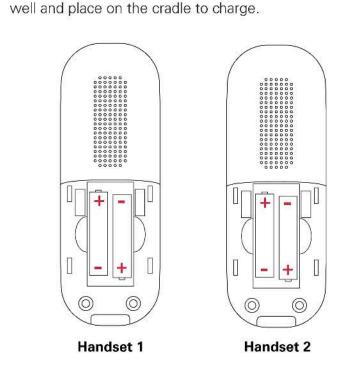

Before using for the first time, charge the handsets for 12-16 hours

The Flash feature is used to activate calling services available through your local phone

company, such as Call Waiting, and Three Way Calling. To use the features below you

After you hear the Call Waiting tone, press and release the / key on the

Press and release the 🔼 key on the handset again to return to the first call,

handset. The first call is placed on hold and the second call is answered.

IMPORTANT: In order to use this unit's Caller ID features, you must subscribe to

This telephone automatically displays an incoming caller's name and telephone

number, as well as the date and time of the call. It can record and store the

information of up to 30 calls into the phone's Caller ID memory.

Reviewing Caller ID information:

review the Caller ID history

either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service

In the standby mode, use the ▲ and ▼ buttons to

• you can select a number and press (f) to dial it

• to save a number to the phonebook, press the (menu)

button and then select "Save Number" and press the

button to confirm and save

Caller ID screen

You can delete a number, or all numbers from the Caller ID history in the Caller ID

1. Press ▼ to open the Calls list. If there are no calls in the list, the display

shows LIST EMPTY. The most recent number or name (if stored in the

A. If the call was answered, the INCOMING CALL icon [[] is displayed.

B. If the call was unanswered, MISSED CALL icon [5] is displayed as

C. If the telephone number is longer than 16 digits, ▶ icon is displayed.

D. Press (menu) to access the option to store the entry in your phone

The caller's details are stored in the Calls list whether or not you have

When the list is full, and a new call is received, the oldest entry will be

answered the call. The list is shared by all handsets registered to the base.

TOM SMITH

1234567890

must subscribe to these services from your local telephone company.

To answer an incoming call while having a conversation:

To return to the first call and put the second call on hold:

Call Waiting / Flash

the second call will be put on hold.

from your local telephone company

options screen

Accessing the Calls List

phone book) is displayed.

you scroll to the entry.

deleted automatically.

Dialing Numbers From the Calls List

3. Press 🖍 to dial the displayed entry.

Scroll using ▲ or ▼ to the entry you want.

Dialing a number from the Recent Calls List

1. Press the ▼ key to open the Recent Calls List

2. Scroll ▲ or ▼ to locate the desired entry.

3. Press **r** to dial the displayed entry.

Dial a number in the Calls list

1. Press ▼ to open the Calls list.

2. Use ▲ or ▼ to scroll through the list

Press to see the remaining digits.

E. Press menu twice to see the time and date of the call.

possible ensures the best signal.

LOCATION:

HANDSET RANGE The unit has a range of up to 200 yards outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 100 feet. Thick concrete and stone walls can severely affect the range.

You need to place your EM7000 base within 3.5 feet of a socket

outlet and telephone wall socket so that the cables will reach.

The socket-outlet should be installed near the equipment and

should be easily accessible. Make sure that it is at least 3 feet

away from other electrical appliances to avoid distortion or

interference. Your EM7000 works by sending radio signals

between the handset and base. The strength of the signal

depends on where you place the base. Placing it as high as

SIGNAL STRENGTH

reconnect to the base.

Phonebook

Handset's keypad.

Entering a Name

1. Press 🗥

6. Press (menu) to confirm.

Storing a Name and Number

5. Type the contact's name using the

ENTER NUMBER is now displayed.

8. Press (menu) once again to save your entry.

You can use your Handset's keypad letters to enter names.

Delete a letter or number by pressing the 😉 button.

Use the ▲ or ▼ keys to move the cursor between characters.

TOM SMITH

AV

7. Type the Contact's phone number.

For example, to store the name TOM

1. Press (8 w) once to enter the letter T

Press the 0^{2} key to insert a space.

Viewing or Dialing a Stored Contact

3. Enter the first letter of the name to search

alphabetically. Then scroll using ▲ or ▼

2. Scroll using the ▲ or ▼ keys to

4. Press 🖍 to dial or 😩 to return

1. Press to enter **PHONEBOOK**.

3. Scroll down using the ▼ key to EDIT.

2. Press again. The display shows **VIEW**.

4. Press and use the ▲ and ▼ keys to scroll to the

6. Press (menu again to edit the contact phone number.

1. Press The display to enter **PHONEBOOK**

2. Press (menu) again. The display shows VIEW.

4. Press (menu ok ok) The display shows **CONFIRM?**

3. Scroll down using the [DOWN] key to DELETE ALL

Use the ▲ or ▼ keys to select **TONE** or **PULSE**.

1. Press (menu ok and scroll ▼ to Services and press (menu ok ok)

2. Scroll ▼ to Area code is displayed. Press (menu)

1. Press (menu ok then scroll ▼ to PHONE SETUP

5. Press to edit the contact name. Use the button to delete

The EM7000 is preset for TONE dialing. To switch from TONE to PULSE.

You can set your local area code into the phone. When a number from

that area code calls only the local number will be displayed and stored.

3. Using the keypad enter the area code and press (menu) to confirm.

2. Press (menu of And use the ▼ key and scroll to DATE & TIME.

4. Enter the date using the keypad and press (menu ok ok) to set the time.

1. Press (menu) then use the ▲ or ▼ keys to scroll to **SERVICES**.

locate the desired entry. OR

Editing a Name and Number

contact that you want to edit.

7. Press (menu ok to confirm.

Deleting All Phonebook Entries

5. Press (menu) again to delete.

2.Press (menu on and scroll to **DIAL MODE**

The area code can be up to 5 digits long.

DIAL MODE

3. Press menu

5. Press menu to confirm.

SETTING THE AREA CODE

SETTING THE DATE AND TIME

to locate a contact.

to the home screen.

3. Press 6_{mm} once for the letter M

. Press (menu ok to enter **PHONEBOOK**.

2. Press genul again. The display shows VIEW.

4. Press (Menu) . The display shows **ENTER NAME**.

3. Scroll down using the ▼ key to ADD NEW.

The i icon on your handset indicates that you are within range 1. Connect the AC adaptor as shown below, and plug into a standard AC of the base. When out of range of the base, the icon disappears. If you are on a call, you will hear a warning beep The line will hang up if the handset moves out of range of the

The phone can store up to 50 names and numbers in its phonebook.

Names can be up to 14 characters long and numbers up to 24 digits.

base. Move closer to the base. The handset will automatically AC adapter

2. The handset will display "Searching", wait until "Handset 2" is displayed. 3. Press **r** on the handset and confirm you hear the dial tone.

1. Plug one end of the line cord into the jack at the back of the phone's base,

2. Plug the pin of the AC adaptor into the DC6V jack on the bottom of the

3. The handset will display "Searching", wait until "Handset 1" is displayed.

base as shown above, and plug into a standard AC outlet.

4. Press on the handset and confirm you hear the dial tone.

and the other end into a modular phone jack.

Phone setup

Connecting

Selecting Ring Tones 1. Press (menu ok to enter **PHONE SETUP**. Ring Tones screen 2. Press (menu again to display **SOUNDS**. 3. Press menu to select **RING VOLUME**. 4. Scroll down using ▼ button to display RING TONES. 5. Press menu Scroll ▲ or ▼ to select your AV 6. Press (menu) to confirm your selection.

NOTE: Use the (5) button to return to the previous menu or press (2) to return to the home screen.

Ringer Volume 1. Press (menu) to enter **PHONE SETUP**. 2. Press (menu ok to display **SOUNDS**. 3. Press (menu ok again for **RING VOLUME** 4. Press menu to enter access the **RING** VOLUME menu. Use ▲ or ▼ to select desired ringer volume.

Ringer Volume screen Ring Volume \blacktriangle

Use the (5) to return to the previous menu or press (2) to return to the

NOTE: To adjust the volume during a call, press the ▲ or ▼ keys on your

1. Press to enter PHONE SETUP 2. Press again to display **SOUNDS**.

3. Press (merc) to select RING VOLUME 4. Scroll down using ▼ to display **KEYTONE**. 5. Press (menu) to enter the **KEYTONE** menu. Use the ▲ or ▼ keys to select

6. Press again to confirm your selection.

Use the button to return to the previous menu or press (a) to return to

Adding Additional Handsets

NOTE: It is possible to register up to 4 additional handsets to the base unit for a total of 5 handsets. If you would like to purchase additional handsets, please contact our Customer Service department at:

1-877-768-8481 (Toll Free) Monday - Friday: 8AM-10PM (EST

Registering Your Handset

1. Locate the Paging [a button located on the base of the EM7120 base. Press and hold the Paging [3] button. 2. While holding the Paging [on] button on the base, press the menu button

on your Handset. 3. When the display shows PIN, enter the base PIN and press [menu]. When the handset registers with the base, it is assigned a handset number. 4. Press (menu) to confirm.

Release the Paging [of] button on the base.

NOTE: The Master PIN is required before you can register or unregister handsets. The PIN is 0000.

De-Register a Handset 1. Press menu , scroll using the ▼ key to Services and press menu ,

2. Scroll down to **UNREGISTER** and press menu 3. Enter the 4 digit master PIN and press menu Display shows the first registered handset number. 4. Scroll ▲ or ▼ to select the handset you want to delete and press menu

UNREGISTERED is displayed on the handset screen.

NOTE: You must use one handset to delete another. You cannot delete the handset that is currently in use.

The base

SKIP BACK Skip backward hrough record nessages

VOLUME UP

Volume

playback volume

VOLUME DOWN

The EM7120 can digitally record up to 12 minutes of messages as well as recording incoming messages. You can operate your answering machine from: A. the base B. the handset C. or remotely, from another telephone. You will need to set the correct day and time (if you have not already done so) so that you will know when each message was received.

Answering system

Turning the Answering Machine ON/OFF 1. Press the (b) button on the base to turn the Answering machine ON or

1. Press the (Menu | button then scroll down using the ▼ key to **ANSW**

MACHINE and press (menu ok 2. Scroll ▼ to **VOICE ANSWER** and press (menu 3. Use ▲ or ▼ to select either ANSWER ONLY, RECORD ALSO or OFF

Adjust the "rings to answer" option (how many rings until Listening to Your Messages (From the Base) Press ► to listen to new messages. Adjust the "security code" option (the security code is

then press (menu to confirm.

TROUBLESHOOTING

A. Use only the telephone line cord supplied.

C. Check that the adapter is connected.

ill icon flashes

No Caller ID

B. Check that the telephone line cord is connected properly.

Use only the approved rechargeable batteries supplied.

A. Handset is out of range. Move closer to the base.

C.Check that the adapter is connected properly.

Keypad is frozen / Doesn't respond

icon is not scrolling during charge

djust the handset slightly on the base.

B. The caller may have withheld their number.

B. Make sure that the handset is registered to the base

B. Check that the handset is switched on. Press and hold

C. Reset the base by removing the batteries and disconnecting the

adapter. Wait approximately 15 seconds before connecting

B.Clean the charging contacts with a cloth moistened with alcohol.

C. The record cannot be found in your phonebook. Check that you

have the correct name / number stored in your phonebook, with

D. The phone may need to be placed on its base to recharge.

A. Check that the batteries are inserted correctly and fully charged

it again. Allow up to one minute for the handset and base to synchronize

During Playback

NOTE: All other messages will be played from oldest to newest.

Press | • J to stop message playback. Press m to play the next message.

Press [He] to play the previous message. • Press • and the handset will emit an alarm making it easy Press 😠 to delete the current message

1. If only 2 handsets are registered to the base, press the (**) button and D. Make sure that the batteries are properly inserted.

NOTE: Your external call resumes automatically after 1 minute if there is no

A.Check your subscription with your network operator.

Press any key on the handset to stop the paging alarm

If more than one handset is registered to the base, internal calls can be

made between two handsets. The [icon flashes and the display shows

2. If more than 2 handset are registered to the base press the the button

and scroll ▼ to the handset that is to be called and press 🌈

When you receive an internal call, the [icon flashes and the handset

You can transfer an external call to another handset registered to the base

If only 2 handsets are registered to the base, press and hold ★m and

2. If more than 2 handsets are registered to the base press and hold ***

and scroll ▼ to the handset that is to be called and press (ok).

echnical Requirements for Telephone Terminal Equipment published by ACTA.

On the bottom of this equipment is a label indicating, among other information, the US

umber and Ringer Equivalence Number (REN) for the equipment. You must, upon

etermining the number of devices you may connect to your telephone line and still

have all of these devices ring when your telephone number is called. In most (but not

to be connected to a compatible modular jack that is also compliant. See installation

This equipment may not be used on coin service provided by the telephone company.

Party lines are subject to state tariffs, and therefore, you may not be able to use your

own telephone equipment if you are on a party line. Check with your local telephone

Notice must by given to the telephone company upon permanent disconnection of

all) areas, the sum of the RENs of all devices connected to one line should not exceed

equest, provide this information to your telephone company. The REN is useful in

3. When the other handset answers, press (a) to complete the

MEmerson

Adjust the volume of the base

factory set to 000)

Make an internal call

Receive an internal call

Transfer a call

transfer.

answer.

During an external call:

the handset number you are calling.

the other handset rings automatically

number that is calling you is displayed.

the other handset rings automatically.

1. Press (to answer the call.

the answering system picks up the call)

From the handset's menu you can adjust the base's ringer volume or select

ringtones - select menu > "Base Settings" > "Ring Tone" or "Ringer Volume

Listening to Your Messages (From the Handset)

A. RECORD ALSO

B. ANSWER ONLY

press (menu ok

and press (menu ok

I have forgotten my PIN#

1. When you have new messages, the display shows X new message(s) and the will flash. Press (menu) to play new messages. 2. If you have no new messages, press (menu ok ok ok ok or ▼ to

The preset RECORD ALSO outgoing message, that allows your caller to

leave a message, is 'Hello, your call cannot be taken at the moment, so

The caller can listen to your announcement but cannot leave a message.

3. Scroll ▲ or ▼ to select either ANSWER ONLY or RECORD ALSO and

4. Scroll ▲ or ▼ to select either **PLAY, RECORD** or use the default greeting

The prerecorded message is "Hello, your call cannot be taken at the

moment, and you cannot leave a message, so please call later."

1. Press ok , scroll ▼ to **ANSW MACHINE** and press ok .

Record, play or delete your own outgoing message

2. Scroll ▼ to **ANNOUNCEMENT** and press (menu ok).

5. If you select, "PLAY" the current OGM will play back

the date and time when the messages were left.

Setting Outgoing Messages (OGMs)

please leave your message after the tone'.

ANSW MACHINE and press (menu ok ok) 3.Select "PLAY" by pressing (menu

4. The display will show the number of messages being played along with Select the OGM

to confirm.

1. Press (Menu), scroll ▼ to **ANSW MACHINE** and press (Menu) 2. Scroll (menu) to **VOICE ANSWER** and press (menu)

3. Press ▲ or ▼ to select either ANSWER ONLY or RECORD ALSO and This is the message your callers hear on the answer machine. Choose fron press menu to confirm. two prerecorded outgoing messages, or you can record your own.

Record Your Greeting

NOTE: If the answering machine is turned off and then turned on via the

base unit the settings will be the same as when it was last switched on

Once you hear the beep, speak your message into the handset.

To end recording, press (menu) .The message will automatically play back.

If you selected **USE DEFAULT** the display shows "Confirm?". Press (menu)

Select the duration of rings before your answering machine picks up the call. Choose from 3-8 Rings or Toll Saver.

 If you have new messages your phone answers after 3 Rings. • If there are no new messages it will answer after 5 Rings. So you have

the option to hang up, saving the time and cost of a call.

• If the memory is full, it will automatically revert to Answer Only mode.

1. Press (menu ok ok ok) . Then scroll ▼ to ANSW MACHINE and press (menu ok)

2. Scroll to **RING DELAY** and press on The handset will display the

Rechargeable battery warning

Restore your device to its default settings, see, "Restoring your phone to default Do not short-circuit the battery. The rechargeable batteries contained in this equipment may explode if disposed of in a fire. • Do not charge the battery used in this equipment in any charger other A. You can register up to a maximum of 4 handsets to an EM7000 / EM7120

than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause it to explode

B. Check that you have entered the correct PIN code (The default PIN = 0000).

how to get one installed.

Telephone jack requirements

Handset does not ring A. The handset ringer volume may be set to Off. Noise interference on my phone or on other electrical equipment nearby B. Place the phone's base at least 3.5 feet away from other electrical appliances or any metal obstructions to avoid any risk of interference.

base. You must de-register a handset in order to register a new one.

C. Check that you are at least 3 feet away from other electrical

equipment to avoid interference when registering.

Answering machine is not answering messages

I Cannot register a handset to the base

A. Switch the answer machine on. B. The memory may be full. If so, you will need to delete some messages. C. Answer mode may be set to Answer only. Change the mode to "Record also"

Unable to retrieve messages remotely A. Remote access may be switched off.

B. verify that the correct PIN is entered. C. Check that the adapter is connected properly and secured in its outlet.

Limited Warranty

90 Days Limited Warranty

Modular Telephone

Important installation information

Never install telephone wiring during a lightning storm. • Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.

 Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

• Use caution when installing or modifying telephone lines. • Temporarily disconnect any equipment connected to the phone, such as

faxes, other phones, or modems.



CAUTION: Disconnect the phone cord from the wall outlet before installing or replacing the batteries. (Only for telephones which require

Warranty service not provided

Limitation of Warranty:

This warranty does not cover damage resulting from accident, misuse,

abuse, improper installation or operation, lack of reasonable care, and unau-

thorized modification. This warranty is voided in the event any unauthorized

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE

TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED

(INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR

FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS

DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING

PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANT

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIE

Some states do not allow the exclusion nor limitation of incidental or conse

quential damages, or limitations on how long an implied warranty lasts so the

above limitations or exclusions may not apply to you. This warranty gives you

specific legal rights, and you also may have other rights that vary from state

WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR

PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WAR-

DUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON TH

THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM

INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL

ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK.

person opens, alters or repairs this product. All products being returned to

the authorized service center for repair must be suitably packaged.

portant safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

Naming Handset

If you are using more than one handset with your EM7000 base, you can

The Handset name can be up to 14 characters long. To name your Handset:

5. Type the desired Handset name using the keypad and press ENTER.

handset screen

RESTORE YOUR PHONE TO DEFAULT SETTINGS

NOTE: Resetting your phone to its default settings will delete all entries

in the Phonebook and Calls list. All handset and base settings will also

You can operate your answering machine from most phones by calling your

1. Dial your telephone number. When you hear your outgoing message,

2. Enter your 4-digit PIN (default setting 0000). You will hear a confirmation

beep. Use the keypad to operate your EM7120 answering machine.

3. Scroll ▲ or ▼ to select Activated, Deactivated or Change PIN.

Answering Machine and entering a 4 digit security PIN code.

You can restore your EM7000 to its default (original) settings.

2. Scroll ▼ to Reset and press (menu ok ok).

Remote Access Keypad Controls

Press (2): Play messages.

menu to confirm.

Changing the Pin

Re-enter the new PIN.

Press (menu to confirm.

4. Press (menu ok to confirm.

Enter the new PIN and press m.

Press (1): Play previous messages

Press (3_{def}): Play the next message.

Press 8 : Stop message playback .

Press 6 : Delete the current message

Press (7_{pos}): Turn the answering machine ON.

Press 9_{wyz} : Turn Off the answering machine.

Activating Remote Access From the Handset

2. Scroll ▼ to **REMOTE ACCESS** and press (menu ok)

If you choose Change PIN enter the old PIN and press m.

Remote Access

3. Once "Confirm?" is displayed, Press (menu)

All the handsets that are registered to the base will be retained.

1. Press (menu or war and to PHONE SETUP)

3. Press (menu again to display the Handset's name.

4. To delete the current name, press the **5** button.

HANDSET


2. Press (menu of and scroll to **PHONE NAME**

set a personalized name for each handset to easily distinguish between

1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming


2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning. 3. Do not use the telephone to report a gas leak in the vicinity of the leak. 4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

Warning! The cords on this product and / or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. Wash hands after handling.

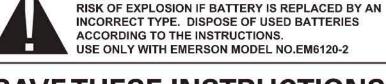

SAVETHESE INSTRUCTIONS

TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

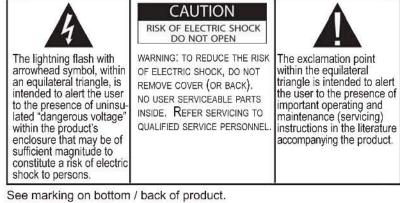

Compliance information

1. Notification to the Local Telephone Company

by the REN, you should contact your local telephone company.

INCORRECT TYPE. DISPOSE OF USED BATTERIES

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

your telephone from your line.

instructions for details.

FCC Part 68 information

US Number is located on the cabinet bottom REN Number is located on the cabinet bottom. 2. Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary liscontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2 afford you the opportunity to correct the situation; and (3) inform you of your right to ring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

he telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted Hearing Aid Compatibility

Your telephone equipment is approved for connection to the Public Switched Telephone FCC Part 15 information Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) This device may not cause harmful interference; and (2) This device must accept ly interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Privacy of Communications may not be ensured when using this product. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communica-. To be certain of the number of devices you may connect to your line as determined ns. However, there is no guarantee that interference will not occur in a particular installation this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the A plug and jack used to connect this equipment to the premises wiring by the ACTA. A interference by one or more of the following measures:

compliant telephone cord and modular plug is provided with this product. It is designed • Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference). Reorient or relocate and increase the separation between the

ommunications equipment and receiving antenna. Connect the telecommunications equipment into an outlet on a circuit fferent from that to which the receiving antenna is connected.

compliance could void the user's authority to operate the equipment.

required for compliance with the guidelines.) Third party accessories

not comply with FCC RF exposure guidelines.

(unless approved by the manufacturer) should be avoided as these might

This telephone meets FCC standards for Hearing Aid Compatibility

these measures do not eliminate the interference, please consult your dealer or an experi enced radio/television technician for additional suggestions. Also, the Federal Communications ssion has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interferenc This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. lease specify stock number 004-000-00345-4 when ordering copies. Notice: The changes or modifications not expressly approved by the party responsible for

FCC RF exposure information This product complies with FCC radiation exposure limits under the following conditions

• The base must be placed to allow a minimum of 20cm (8 inches) between the antenna and all persons during normal operation. The base must not be collocated or operated in conjunction with any other

 The handset is designed for body-worn operation and meets FCC RF exposure guidelines when used with any belt clip, carrying case, or other accessory supplied with this product. (All necessary accessories are included in the package; any additional or optional accessories are not

Click on "Product Support"

properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange. TO OBTAIN WARRANTY SERVICE:

Provide proof of the date of purchase within the package (Dated bill of sale). • Prepay all shipping costs to the authorized service center, and remember to

insure your return. Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.

In the unlikely event that this product is defective, or does not perform

 Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Harmonian The shipping address of the authorized service center is:

Southern Telecom Inc. Attention: Returns Department 14-C 53rd Street Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please

(1-877-768-8481 (Toll Free) Monday - Friday: 8AM - 10PM (EST) www.southerntelecom.com

ØEmerson™ contact our customer service department at: Distributed by: AIT, Inc. Brooklyn NY 11232

Emerson and the G-Clef logo are registered trademarks Information for DECT products

is telephone is compliant with the DECT 6.0 standard which operates in he 1.92GHz to 1.93GHz frequency range.

stallation of this equipment is subject to notification and coordination Any relocation of this equipment must be coordinated through and

UTAM may be contacted at 1-800-429-8826.

RANTY PERIOD SET FORTH ABOVE.

This equipment contains a rechargeable battery • Rechargeable batteries are known to the State of California to cause cancer

To use this phone, you must have an RJ11C modular

please call your local telephone company to find out

telephone jack. If you do not have a modular jack,