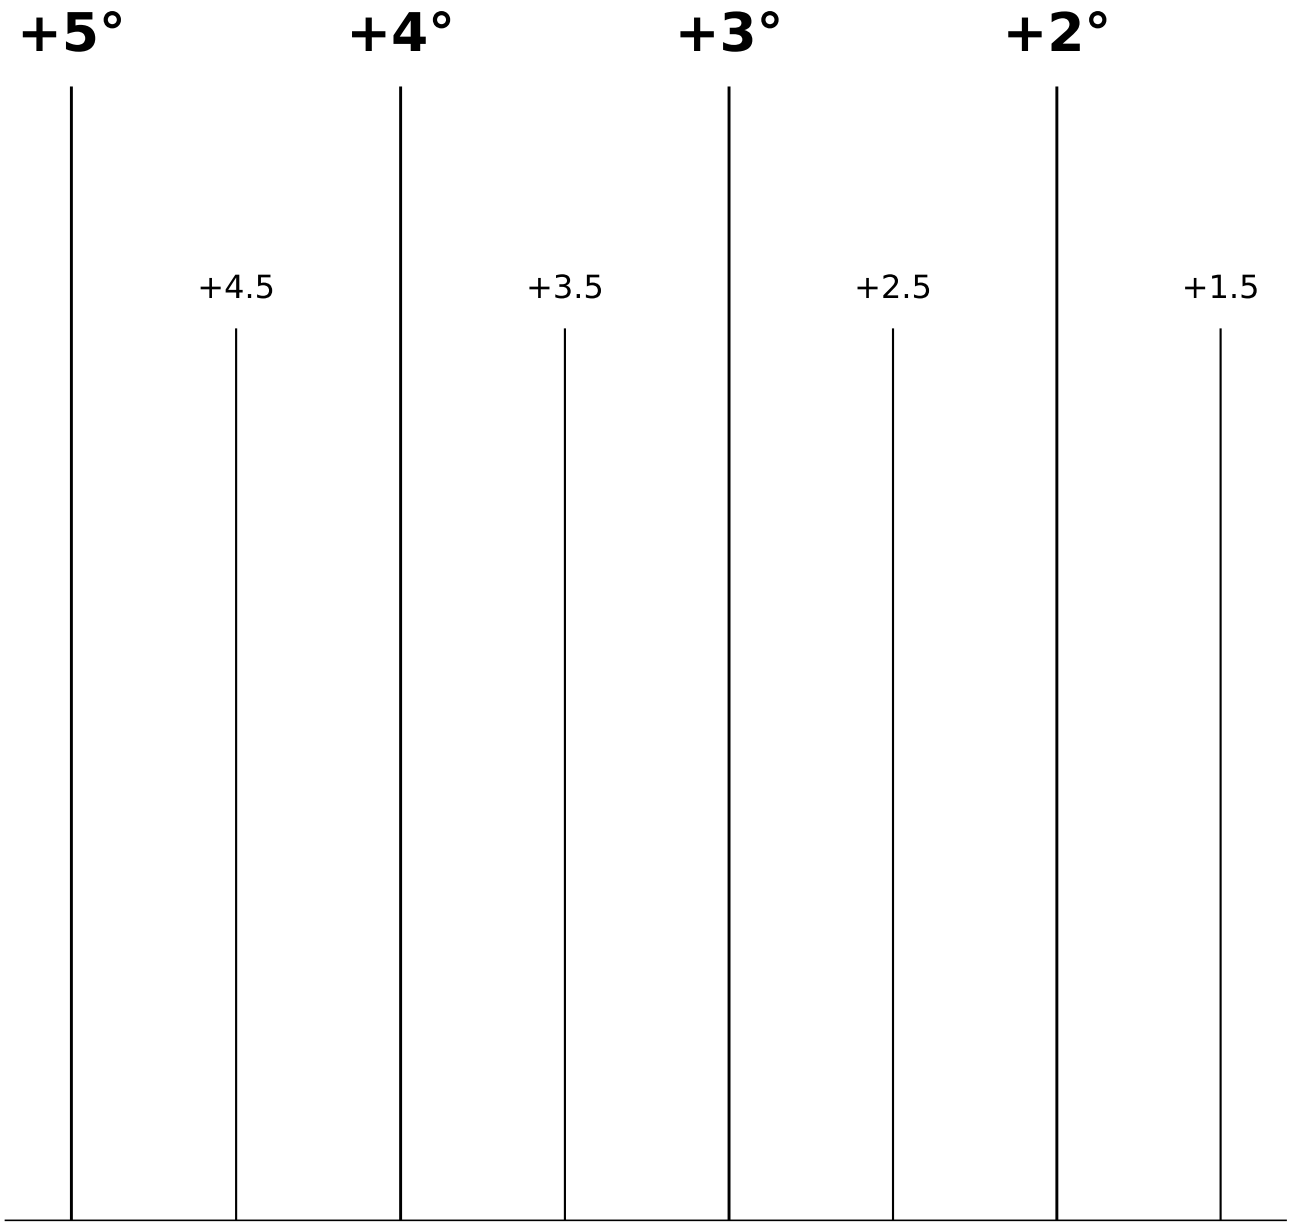

this bar must measure 100 mm (print at 100 % / Actual size)

Laser heading scale, wall 2480 mm from the rotation axis: x = 2480 mm × tan θ
Ticks: 0.5° to ±5°, 0.1° within ±1°. Positive = table turns counter-clockwise from above (firmware yaw +): dot moves LEFT.
LEFT page (+ side), page 1 of 3. Tape the pages so the shared ticks overlap exactly.

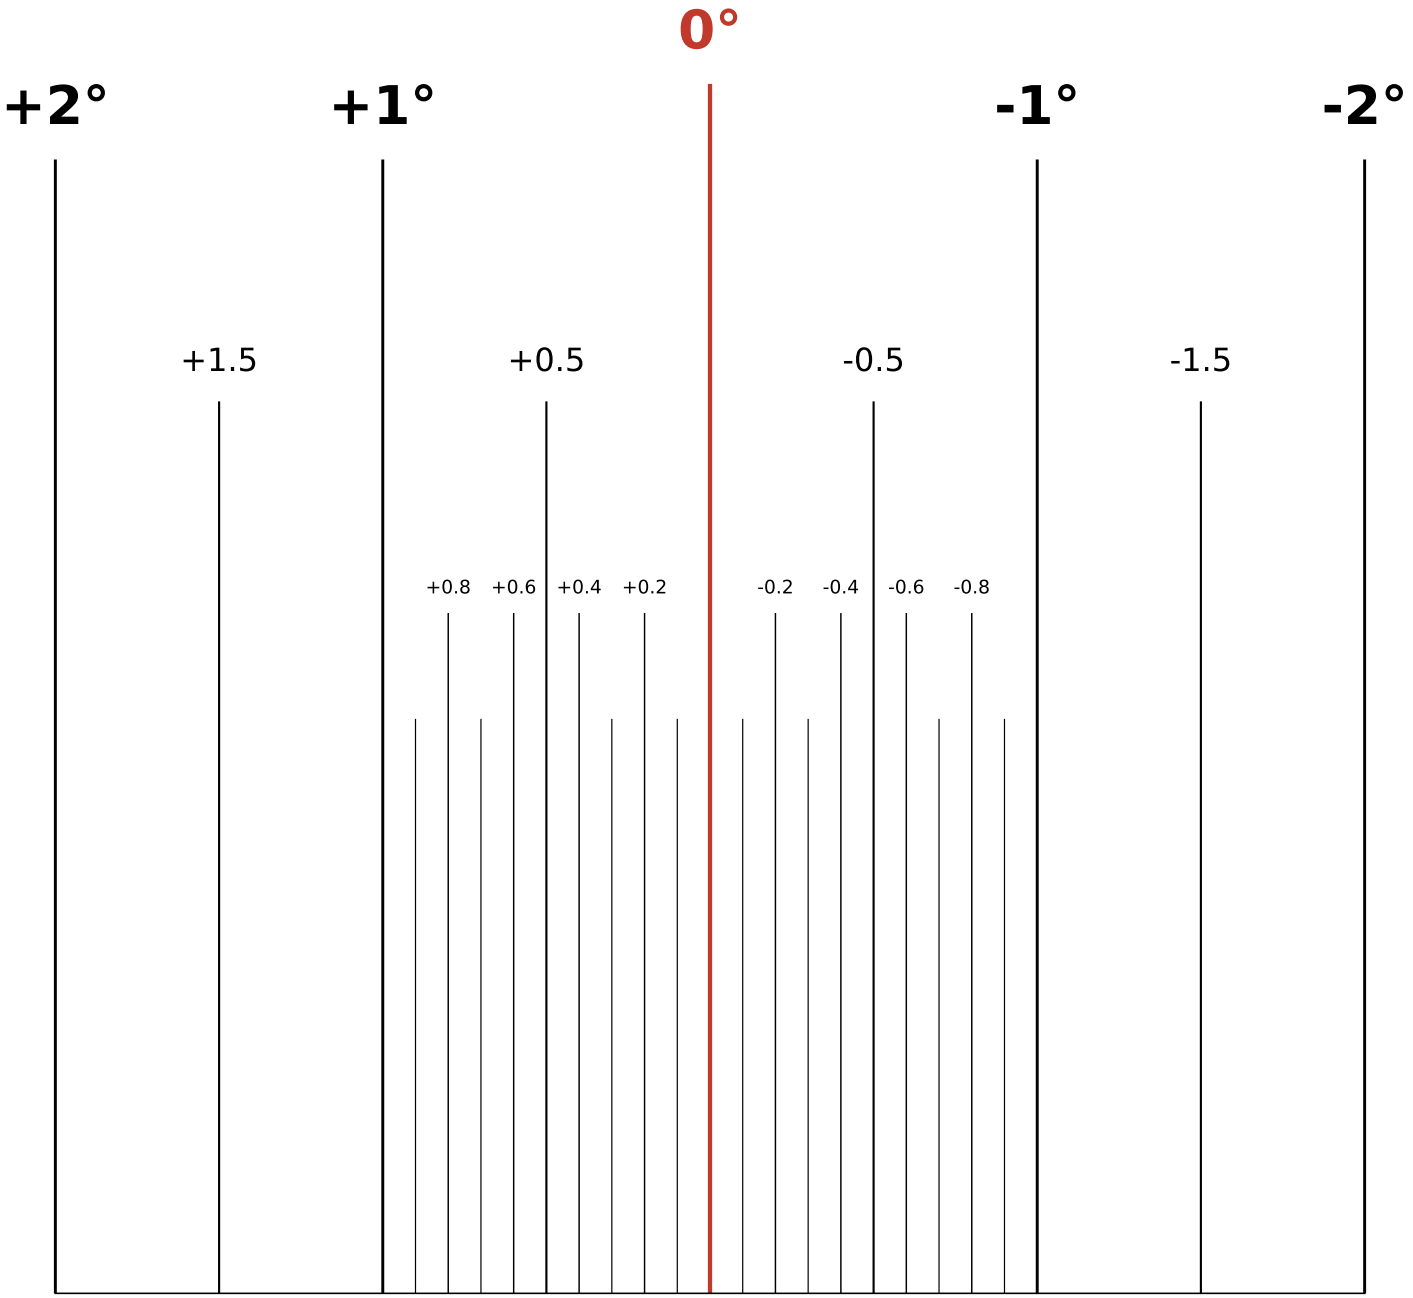

this bar must measure 100 mm (print at 100 % / Actual size)

Laser heading scale, wall 2480 mm from the rotation axis: x = 2480 mm × tan θ
Ticks: 0.5° to ±5°, 0.1° within ±1°. Positive = table turns counter-clockwise from above (firmware yaw +): dot moves LEFT.
CENTRE page, page 2 of 3. Tape the pages so the shared ticks overlap exactly.

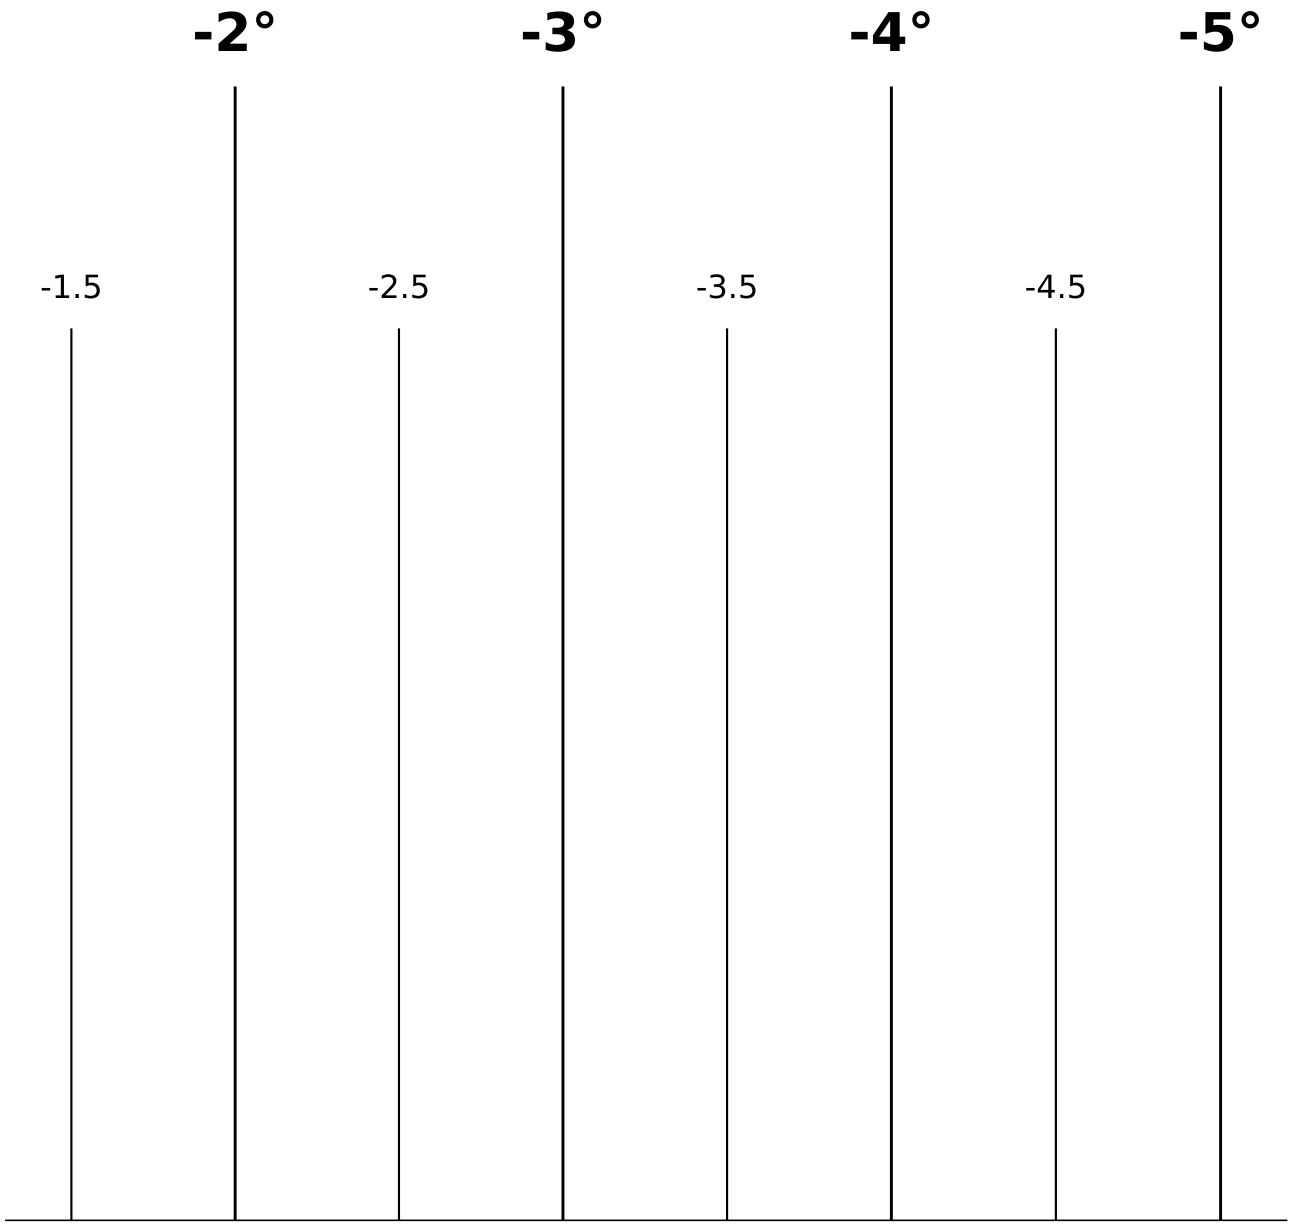

this bar must measure 100 mm (print at 100 % / Actual size)

Laser heading scale, wall 2480 mm from the rotation axis: x = 2480 mm × tan θ
Ticks: 0.5° to ±5°, 0.1° within ±1°. Positive = table turns counter-clockwise from above (firmware yaw +): dot moves LEFT.
RIGHT page (− side), page 3 of 3. Tape the pages so the shared ticks overlap exactly.