



KOOR STACKABLE S314 — QUICK START

51.2V • 314Ah • 16 kWh LiFePO₄ Battery

Keep this card
with the battery



Turn on: breaker ON, hold
RST 3s



Green RUN = good



Red ALM flashing = check pg 2



Never wire to AC or PV

TURN IT ON — 4 STEPS

1



Unpack & check

Inspect for damage. Wiring: **red +**,
black -, **yellow = comms**.

2



Breaker ON

Flip the **DC breaker to ON** (overload /
short-circuit protection).

3



Hold RST 3 sec

Wakes the BMS. LEDs light in
sequence from **RUN**.

4



Confirm green

RUN solid green = battery is live and
healthy.



RST cheat-sheet: hold **3s** = sleep/wake toggle • hold **6s** = reset protection (all LEDs flash 1.5s). Your settings are kept after a reset.

DO & DON'T



DO

- ✓ Recharge **within 12 h** after a full discharge
- ✓ Keep charge **above 70%** during long storage
- ✓ Match voltage **within 2V** when adding a parallel pack
- ✓ Use a **dry-powder** extinguisher only
- ✓ Inspect terminals & wires **every 3 months**



DON'T

- ✗ Connect **directly to AC** or **PV/solar wires**
- ✗ **Series-connect** packs — this is a 48V DC design
- ✗ Mix **different battery types** on one bus
- ✗ Use a **liquid** extinguisher
- ✗ **Open the pack** or use solvents (voids warranty)

PORTS AT A GLANCE

BATTERY +/-
Main DC

DC BREAKER
ON / OFF

RS485 / CAN (RJ45)
To inverter

RS485-A1/B2
PC / parallel

RS232 (RJ11)
BMS software

RST / ADD DIAL
Reset / address

SPECS YOU'LL ACTUALLY NEED

NOMINAL
51.2 V / 314 Ah

ENERGY
16 kWh

CHARGE VOLTAGE
56.0–58.4 V

DISCHARGE CUTOFF
43.2 V

MAX CHARGE / DISCHARGE
200 A

WEIGHT
130 kg ±5

CHARGE TEMP
0 to 45°C

DISCHARGE TEMP
–20 to 60°C

SIZE W×D×H (MM)
720×526×240

LED STATUS — READ IT FAST

-  **RUN solid green** — normal, all good
-  **RUN flashing** — charging / discharging
-  **ALM red flashing** — alarm / protection (see below)
-  **All off** — asleep or no output (hold RST)

Charge level — 6 LEDs, ~16.6% each



Only the last light flashing = nearly empty, output about to shut off.

SOMETHING WRONG? SYMPTOM → FIX

Undervoltage alarm — ALM flashes, RUN off

Load too big or board fault. **Fix:** connect a charger to the input to activate it and release the lock.

Discharge overcurrent — ALM flashes, RUN off

Load exceeds the discharge limit. **Fix:** press **RST** to restart, or wait ~2 min to recover.


Temperature protection — ALM flashes, RUN off

Too hot or too cold. **Fix:** clears automatically once temperature returns to normal.

No output — LEDs off, 0V at terminals

Not activated / BMS abnormal. **Fix:** press **RST** to activate. Still 0V → contact the manufacturer.


WIRING 2+ PACKS IN PARALLEL



Only the **MASTER** connects to the inverter. Set each pack's switches per the chart below.

- 1 Set each pack's **4-position dial switch** to the address shown below *before* linking (green = ON).
- 2 The pack set to **Address 1** (switch 1 ON) is the **master** — it reports all packs and is the only one the inverter/software talks to.
- 3 Daisy-chain packs via the **RS485** ports (X2-A ↔ X2-B).
- 4 Replacing a pack? Keep it **within 2V** of the others or it hits charge-overcurrent protection and won't charge.

ALL DIAL-SWITCH ADDRESSES (UP TO 15 PACKS)

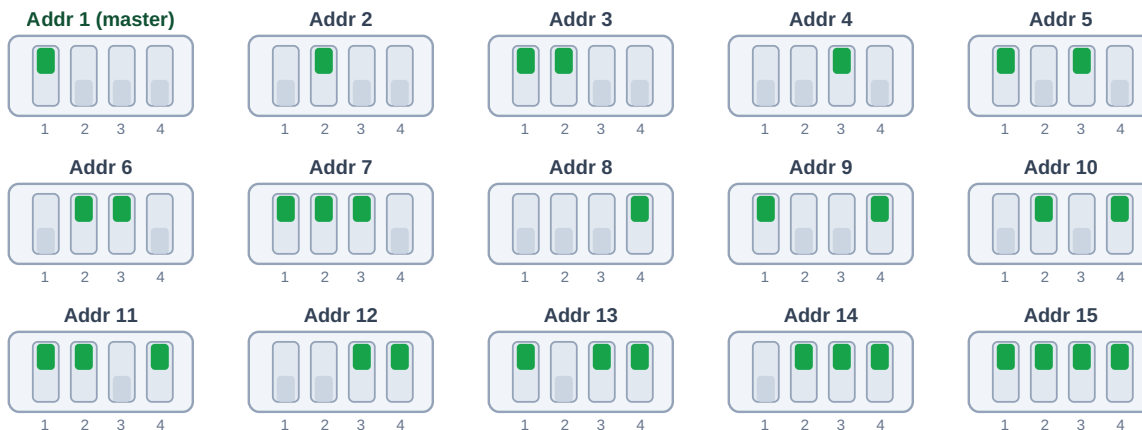

Green = switch ON. Give every pack a different address; start the master at Address 1.

 **Warranty needs both the invoice + warranty card.** Not covered: improper use/storage, unauthorized repair, no invoice, or force majeure. Support: your authorized dealer / service center.