
All-in-One Hybrid Inverter — Visual Quick Start

KR-L8K · KR-L10K · KR-L12K · KR-L15K-SPUS | 120/240 V split phase, 60 Hz

8 · 10 · 12 · 15 kW | 120/240 V split phase, 60 Hz | 3 MPPT solar inputs | 51.2 V battery | Up to 6 in parallel = 90 kW | NEMA 4X | ⚠ Qualified electrical personnel only

Keep this guide with the inverter. It covers the steps you use on the job. Full detail, settings and fault codes are in the User Manual.

1 WHAT IS ON THE UNIT — FRONT PANEL

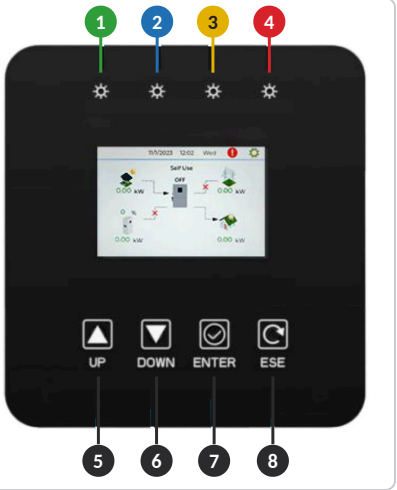


INDICATOR LIGHTS

1. **Green** — ON: the inverter is running. Flashing: standby.
2. **Blue** — ON: communication with the battery BMS is normal.
3. **Yellow** — ON: the inverter is in EPS (backup) mode.
4. **Red** — the inverter is in fault mode.

BUTTONS

5. **UP** — go to the previous selection
6. **DOWN** — go to the next selection
7. **ENTER** — confirm the selection
8. **ESC** — exit setting mode (printed "ESE" on the panel)

2 WHAT IS ON THE UNIT — OUTSIDE AND INSIDE THE WIRING COMPARTMENT

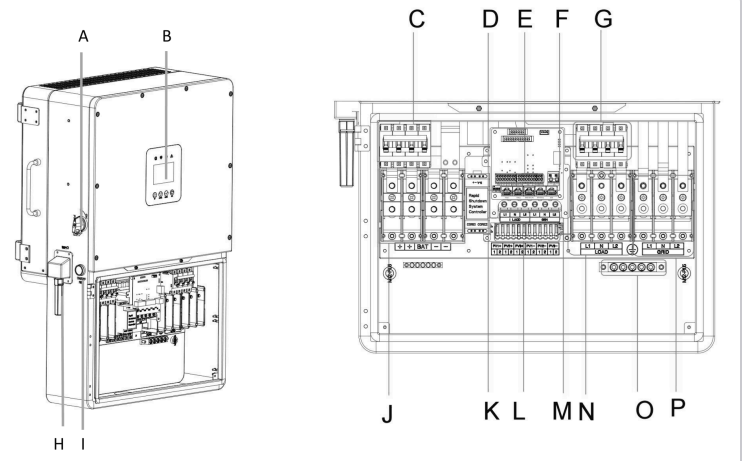

OUTSIDE OF THE UNIT

- **A** PV DC disconnect
- **B** LCD screen
- **C** BAT breaker
- **D** Parallel RJ45 ports
- **E** Input pinouts for sensors and accessories
- **F** **BMS RJ45 ports (RS485 / CAN)** — the battery comm cable goes here
- **G** LOAD breaker
- **H** Wi-Fi port (for the Wi-Fi logger stick)
- **I** ON/OFF button


INSIDE THE WIRING COMPARTMENT

- **J** Battery terminals (BAT)
- **K** I-LOAD terminals (the drawing prints "I LAOD")
- **L** 3 PV inputs (MPPT trackers), 2 strings each
- **M** GEN (generator) terminals
- **N** LOAD terminals
- **O** Ground busbar
- **P** GRID terminals

Where It Can Hang — and How to Mount It

KR-L8K · KR-L10K · KR-L12K · KR-L15K-SPUS | 120/240 V split phase, 60 Hz

3 WHERE IT CAN HANG

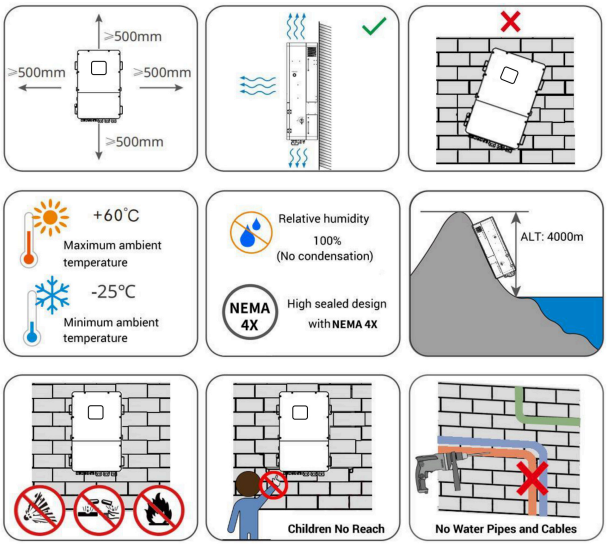

MAX. AMBIENT TEMP
+60 °C
output derates above +45 °C


MIN. AMBIENT TEMP
-25 °C

RELATIVE HUMIDITY
Up to 100%
no condensation

ALTITUDE
Up to 4000 m
derates above 2000 m

ENCLOSURE
NEMA 4X
high sealed design

CLEARANCE
500 mm
at least, free on every side

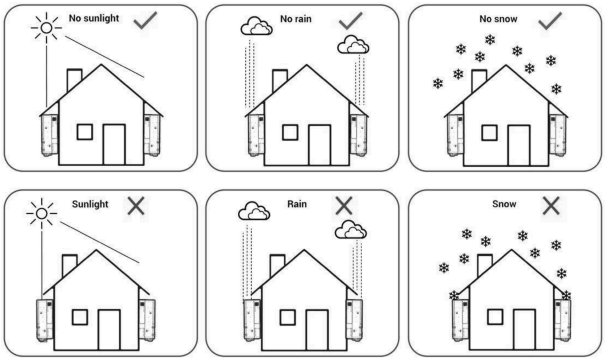

Sheltered from sun, rain and snow (top row, ✓) — never exposed to them (bottom row, ✗).

YES


- ✓ Solid vertical wall, unit straight up and down
- ✓ Out of direct sunlight, rain and snow
- ✓ Out of reach of children
- ✓ Dry, ventilated, 500 mm clear all around

NO

- ✗ No tilting forward or backward, and never lay it down
- ✗ No water pipes or cables buried in the wall behind it
- ✗ No flammable material, no corrosive or explosive area
- ✗ No direct sun, rain or snow on the unit

4 MOUNTING — 5 STEPS

1

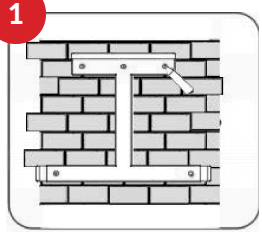


Mark the bracket holes on the wall.

2




Drill **10 mm** holes.

3

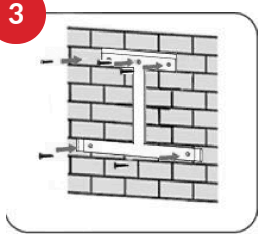


Fasten the bracket to the wall with the **M8 anti-collision bolts**.

4

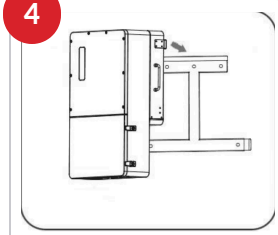

Lift the inverter onto the bracket.

5

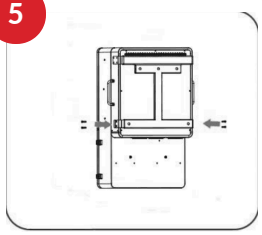

Lock it down with the **mounting screws, two at each side**.

Check the box and the unit for damage before you sign for it. Box contents list: User Manual 4.2.

Wire It — AC Side and the Generator

KR-L8K · KR-L10K · KR-L12K · KR-L15K-SPUS | 120/240 V split phase, 60 Hz

5 WIRE COLORS — EVERY JOB, EVERY DRAWING

L1 — Black

L2 — Red

L3 — Blue (120/208 V only)

Neutral — White (drawn grey in the manual)


Ground — Green or bare copper

DC + — Red: battery and PV positive

DC − — Black: battery and PV negative

Comm — CAT5e

6 WHERE THE AC WIRES LAND

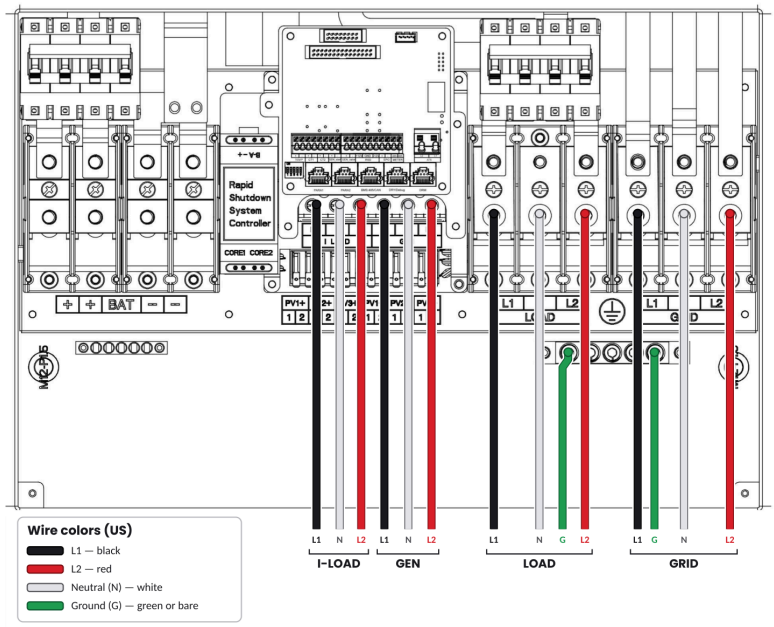

I-LOAD, GEN, LOAD and GRID terminals and the ground bar. Each cable is L1 (black), N (white) and L2 (red); the ground (green) goes to the ground bar.

P **GRID** — utility in.

N **LOAD** — your backed-up loads. **Never land the grid here.**

M **GEN** — generator, 63 A.

K **I-LOAD** terminals.

O **Ground busbar** — every green ground wire.

AC output cable: two or three different-color multi-core copper, **2/0–4/0 AWG**. GRID and LOAD conductors: strip **8–10 mm (5/16–3/8 in)**, finish with **crimped ring lugs (2/0–4/0 AWG)**.

7 GENERATOR — FANTASTECH RULES

120/240 V split phase under 15 kW	→	**GEN port** 63 A
120/240 V 15 kW or bigger	→	**GRID port**
120/208 V two legs of a three-phase generator	→	**GRID port** never the GEN port
Three-phase power	✗	**NEVER to the GEN port**

Generator charge time

Start 00:01 — End 00:00

charges any time the generator runs

00:01 — 12:00 — 24:00

Set the **Start 1 minute after the End** — for example End 00:00, Start 00:01. The charge window then covers the whole day, so the battery always charges whenever the generator runs. Other generator settings: User Manual 6.8 and 9.9.

Generator auto-start: the GEN (NO) dry contact on the comm board (port C, page 5) closes when the GEN signal is active — no voltage output.

Wire It — Cables, Battery, Ground and PV

KR-L8K · KR-L10K · KR-L12K · KR-L15K-SPUS | 120/240 V split phase, 60 Hz

8 CABLES

1 Grounding
Single-core green (or green/yellow) copper, outdoor rated
6 mm² (10 AWG)



2 AC output
Two or three different-color multi-core copper
2/0–4/0 AWG



3 PV input
PV cable (such as PV1-F)
12–10 AWG




4 Battery
Red and black multi-core copper
2/0–4/0 AWG




5 Communication
Network cable
CAT5e


9 WIRE ENDS — STRIP IT, THEN FINISH IT



PV conductors (12–10 AWG)
Strip **16–18 mm (5/8–11/16 in)**
Wire ferrules if stranded



Battery conductors (2/0–4/0 AWG)
Strip **6–8 mm (1/4–5/16 in)**
Crimped OT ring lugs




GRID and LOAD conductors
Strip **8–10 mm (5/16–3/8 in)**
Crimped ring lugs (2/0–4/0 AWG)

Terminal sizes (User Manual 6.2.2): ring lug for up to 4/0 AWG — 1 in [25.4 mm] wide, 3/8 in [10 mm] hole; ferrule for up to 4 AWG (GEN and I-LOAD wire, 6–4 AWG) — 5/8 in [16 mm]; ferrule for up to 10 AWG — 5/8 in [16 mm]; ferrule for up to 20 AWG — 1/4 in [6.35 mm]. Strip lengths are from User Manual 6.5, 6.6.1 and 6.7.3.


10 BATTERY, GROUND AND PV

J Battery cables to BAT

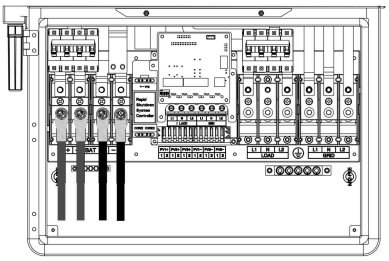

- ✓ Red to **BAT +**, black to **BAT −**. Crimped OT ring lugs.
- ✓ The lithium battery has its own power line and comm line — use the ones that came with it.
- ✗ **Do not reverse battery polarity.** It damages the system and voids the warranty.

O Ground (PE) cable

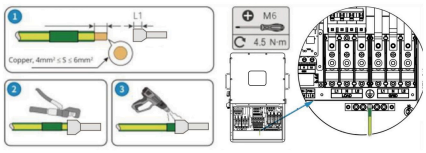

(1) strip the cable, (2) crimp the terminal, (3) shrink the heat-shrink tubing; then fasten it to the ground terminal (M6 screw, 4.5 N·m).

Single-core **green (or green/yellow)** copper, outdoor rated, **6 mm² (10 AWG)**.

L PV — check before you land it



Meter every string open-circuit before you connect it.



550 Vdc is the absolute maximum; size every string so its cold-corrected Voc is at or below **525 Vdc**.

+ PV+ = RED **− PV− = BLACK**

Crimp the pin, push the cable in firmly and press the catch until it clicks. 3 PV inputs, 2 strings each.

11 BATTERY COMM PORT — BMS RJ45 PINOUT (F ON THE UNIT, PORT H ON THE COMM BOARD)



Looking into the BMS RJ45 port
teal = CAN (pins 4 and 5)

Pin	Signal	Pin	Signal
1	BAT RS485 A	5	**BAT CAN L**
2	BAT RS485 B	6	NC
3	NC	7	BAT RS485 B
4	**BAT CAN H**	8	BAT RS485 A


Only the master battery gets a comm cable to the inverter. Set **Bat Type**, **Comm Type** and **Bat Protocol** on the screen (User Manual 9.7). Comms come up in 1–2 minutes. Damage from the wrong protocol is not covered by the warranty. KOOR batteries: see the battery pages at the back.

Before you touch a terminal: every switch OFF — PV, battery, grid, load, generator. Never work on it with power on. The inverter ships with the basic comm line — use it directly. Do not reverse battery polarity. Never land the grid on the LOAD output terminals.

Communication Ports and Parallel Switches

KR-L8K · KR-L10K · KR-L12K · KR-L15K-SPUS | 120/240 V split phase, 60 Hz

12 COMMUNICATION PORTS — THE COMM BOARD INSIDE THE UNIT

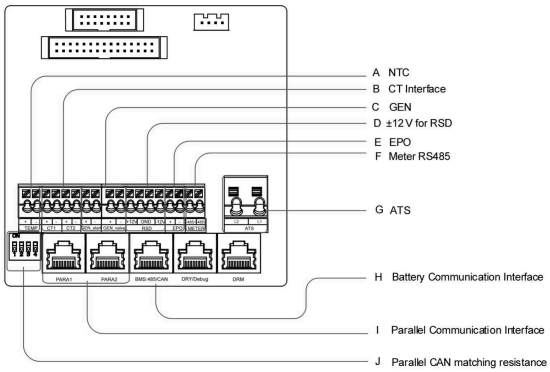


- **A** **NTC** — temperature sensor for a lead-acid battery
- **B** **CT interface** — current sensor clamps
- **C** **GEN (NO)** — generator auto-start dry contact. When the GEN signal is active, the contact closes — no voltage output.
- **D** **±12 V RSD** — power for the RSD PLC transmitter (500 mA max.)
- **E** **EPO** — reserved for an external emergency stop
- **F** **Meter RS485** — energy meter communication
- **G** **ATS** — 240 Vac output port, live when the inverter is on
- **H** **Battery comm** — CAN and RS485 to the battery BMS
- **I** **Parallel comm** — CAN and RS485 between inverters
- **J** **DIP switches** — BMS CAN / parallel CAN resistors, see section 13

13 DIP SWITCHES (PORT J) — SET EVERY INVERTER LIKE ITS PICTURE


Parallel systems: up to **6 units** in parallel — up to **90 kW**. All units must be the **same model with the same firmware** (check the **ARM, INV and DCDC** lines on Device Info). A parallel system uses **one shared battery bank**. All inputs and outputs must be shared across every inverter, except the DC solar (PV) inputs.

First and last inverter in the chain

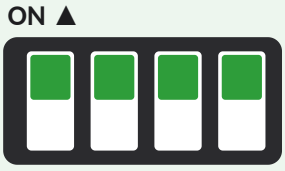


1 · 2 · 3 · 4 all ON

Every inverter in between

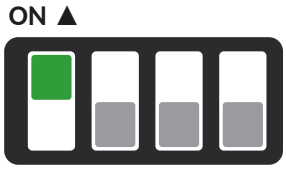


1 ON · 2-3-4 OFF

One inverter alone

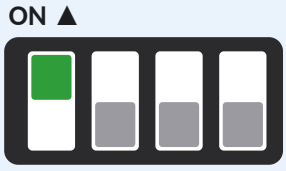

1 ON · 2-3-4 OFF

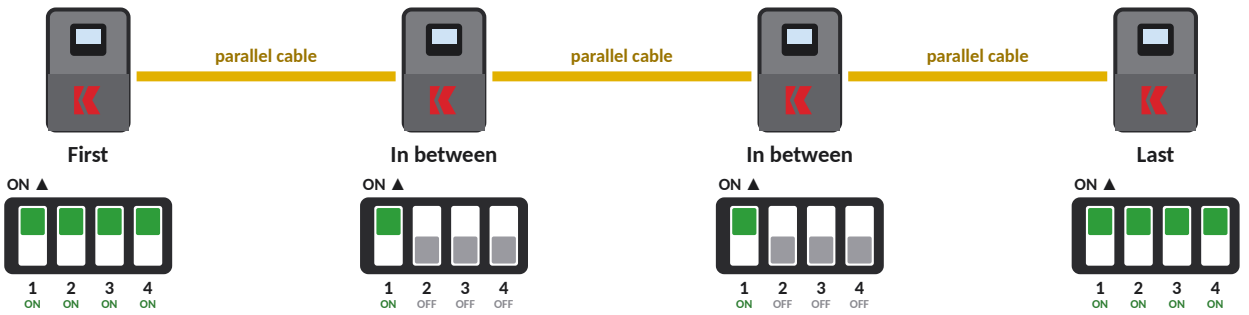

Green slider pushed up = ON. Grey slider pushed down = OFF. Example: 4 inverters. Same idea for 2, 3, 5 or 6 — the two inverters at the ends of the chain get 2-3-4 ON, every one in between gets 2-3-4 OFF. Switch 1 is ON on all of them. Full chart for 1 to 6 inverters: User Manual 6.9.1.

Switch 1 is always ON on every inverter. Switches **2-3-4 ON** on the first and last inverter in the chain, **OFF** on every inverter in between and on a single inverter (switch 1 ON, 2-3-4 OFF).

Parallel cables go in the **Parallel RJ45 ports** (**D** on the unit, port **I** on the comm board) — inverter to inverter only, in a line. User Manual 6.9.1.

Turn It On, Shut It Down, Check It

KR-L8K · KR-L10K · KR-L12K · KR-L15K-SPUS | 120/240 V split phase, 60 Hz

14 TURN IT ON — IN THIS ORDER

1



Turn on the **battery breaker(s)**. Wake the battery up if it has a power button.

2



Press the **power button** in to ON. Wait for the LED (a few minutes).

3



Turn on the **PV switch**, then the **GRID disconnect**.

4



Turn on the **LOAD breaker** and the **GEN breaker**. Set **Power On/Off to ON** on the screen (Work Mode 2/4, section 9.6), then set up the rest (chapter 9).

Off-grid jobs — Fantastech setup

- ✓ **ACID Fallback = Yes** (9.7): keeps power on 30 min if the battery stops talking.
- ✓ **GRID Warn = No** (9.13): no false grid alarms.
- ✓ Gen on the GRID port: **Gen Connect To Grid = Yes** (9.9).
- ✓ OFF from the app: set **Auto Power On = No** first (9.6), or it restarts in 10 s.


15 SHUT IT DOWN — START-UP BACKWARDS

1



All AC breakers off: **GRID, GEN, LOAD**.

2



PV switch off, then the **power button off** (wait for "OFF").

3



Battery breaker(s) off last. Wait **at least 5 minutes** before you touch anything.

Before you power on, make sure every voltage and current is inside the inverter spec — outside it, the inverter gets damaged. Questions before you energize it? Call Fantastech at **574-218-1973**.

16 POST-INSTALL CHECK — TICK EVERY BOX

- ☐ Inverter mounted correctly and firmly
- ☐ All switches off
- ☐ Wi-Fi logger stick installed correctly and firmly
- ☐ Ground wire connection confirmed and reliable
- ☐ Cable runs reasonable, no broken insulation
- ☐ All wires correct and securely connected
- ☐ Cable ties trimmed, no sharp corners
- ☐ Exposed terminals protected, no open ports
- ☐ All packing and scrap material cleaned up and hauled out

17 APP AND MONITORING — SOLARMAN SMART

1



Get the app: SOLARMAN Smart — App Store (iPhone) or Google Play (Android).

2



Add the logger: scan the barcode on the stick label, or type its serial number (SN).

3



PWD: type the stick's PWD in **lowercase** (label FEE32734 → fee32734).

4



Site Wi-Fi: join the stick's own Wi-Fi, open **10.10.100.254** in the phone's browser, pick the site Wi-Fi and save.

5




Then wait: the stick uploads every 5 minutes. A new logger shows Offline until its first upload — wait at least 10 minutes. Full steps: User Manual chapter 8.

KOOR Batteries — Where Every Comm Cable Plugs In

KOOR Active Stack S314 and KOOR 16K Pro on a KOOR All-in-One | KR-L8K · KR-L10K · KR-L12K · KR-L15K-SPUS

Four of these jacks look the same, and three of them say RS485. Only two jacks get a cable on a normal job. Go by the words stamped on the panel. This page shows the KOOR battery comm panel on the KOOR 16K Pro tower and the KOOR Active Stack S314.

B1 THE COMM PANEL — AS YOU FACE THE BATTERY

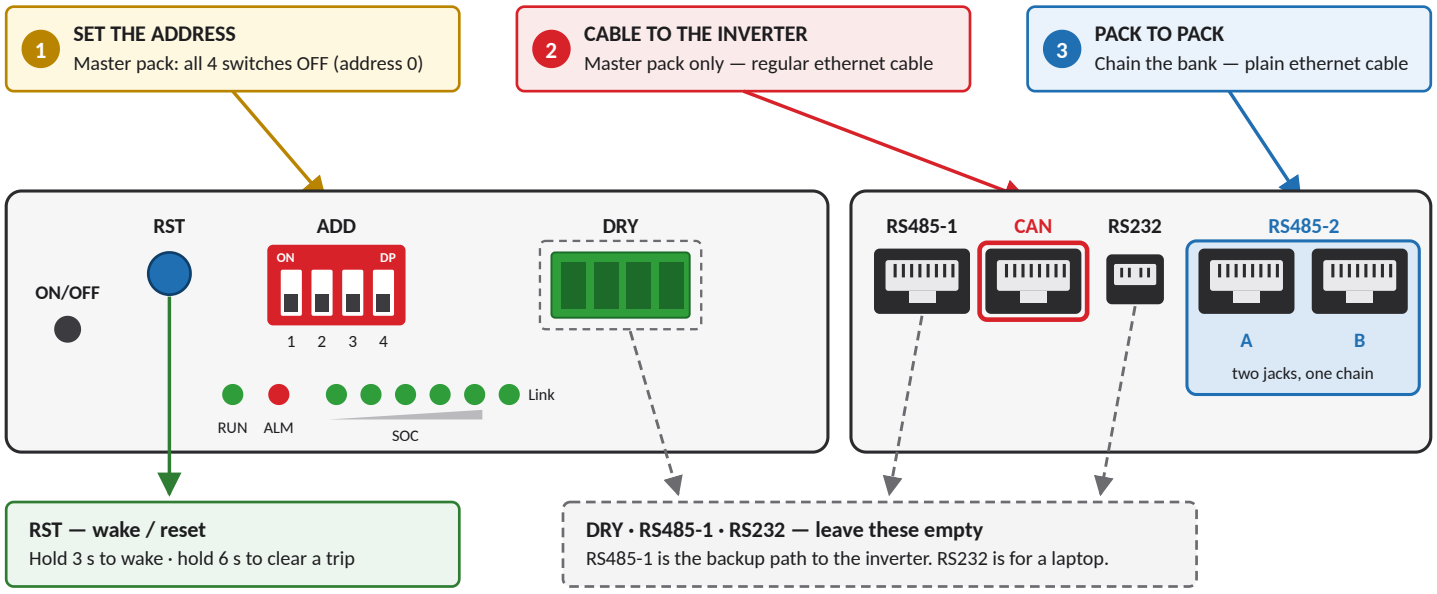

Drawn from a photo of a real KOOR 16K Pro panel and the KOOR Active Stack S314 User Manual, section 5.2

B2 WHAT GOES IN EACH ONE

1
ADD (red DIP switch)

What plugs in: nothing — it is a switch.

Which packs: every pack, a different number each.

Master = address 0: all 4 switches OFF. Next packs 1, 2, 3… no repeats. Set them before power-on.

2
CAN — right-hand jack of the RS485-1/CAN pair

Goes to: the inverter BMS RJ45 port.

Which packs: master pack only.

A regular straight ethernet cable. Both ends wired the same. Nothing crossed, nothing special built — this is how Fantastech has done it many times.

3
RS485-2 — the pair on the far right

Goes to: pack to pack, down the line.

Which packs: every pack in the bank.

Plain straight ethernet, all 8 pins fine. Out of **B** on one pack, into **A** on the next. Keep it the same all the way down.

-
DRY, RS485-1, RS232

Nothing on a normal job.

RS485-1 is the backup path to the inverter if CAN will not come up. RS232 is the laptop / BMS-software port. DRY is a dry contact.

Two jacks stay empty on purpose. On the master pack, the **A** jack of RS485-2 has nothing coming into it. On the last pack in the line, the **B** jack has nothing leaving it. That is how you know the chain is a line and not a ring.


16K Pro and Active Stack wire the same. Regular ethernet on both, no crossing, no custom cable. This panel is drawn from a **16K Pro.** The Active Stack has the same layout, but its manual shows the last pair stamped **RS485A / RS485B** instead of RS485-2 — go by what is on the panel in front of you.

KOOR Batteries — The Whole Hookup in One Picture

Which jack, how the packs chain, DIP addresses | KOOR Active Stack S314 and KOOR 16K Pro

Read this first. Batteries covered: KOOR Active Stack S314 (51.2 V, 314 Ah, 16 kWh) and the KOOR 16K Pro tower. Two cables, a DIP switch and Pylon on the battery are the whole job. One **regular ethernet cable** runs from the master battery jack marked **CAN** to the inverter, and one runs from each pack to the next on **RS485-2**. Nothing crossed, nothing custom. Set every address before a single pack is powered up, then set every pack's own CAN protocol to **Pylon** (step B7-5).

B3 CABLE IT LIKE THIS

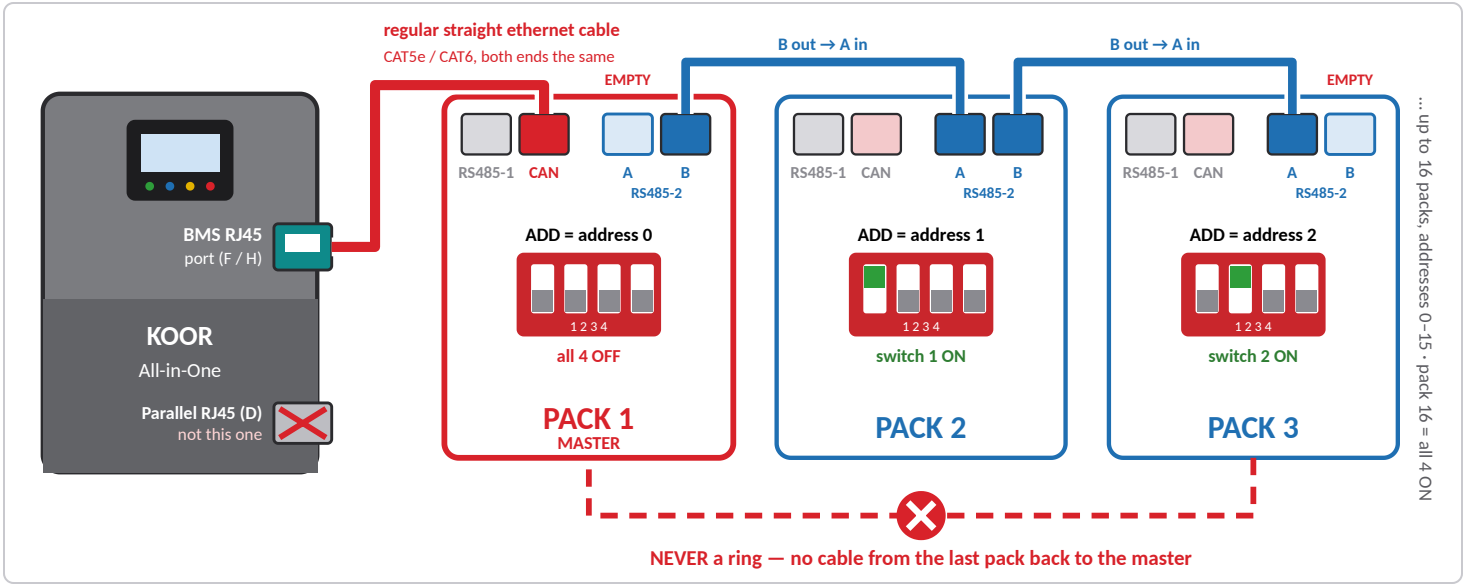

- ✓ **Only the master** gets a cable to the inverter. Nothing else does.
- ✓ The rest chain **in a line** on the **RS485-2** pair: out of **B** on one pack, into **A** on the next, all the way down.
- ✗ **Never** run a cable from the last pack back to the master. It is a line, not a ring.
- ✓ The master RS485-2 **A** jack stays empty. The last pack RS485-2 **B** jack stays empty.
- ✗ **No two packs share an address.**
- ✓ Adding a pack later? Keep it **within 2 V** of the others, or it trips charge overcurrent and will not take a charge.

On the inverter	
Port	**BMS RJ45 port** — **F** on the unit, port **H** on the comm board (User Manual 6.3)
Not this one	The **Parallel** RJ45 ports (**D** on the unit, port I) are inverter-to-inverter only
Signal	Pin 4 = CAN-H · pin 5 = CAN-L · pins 1, 2, 7, 8 = RS485
The cable — a regular ethernet cable	
Type	**Straight CAT5e or CAT6, both ends wired the same**
Battery end	The jack stamped **CAN** — the right one of the RS485-1/CAN pair. Same on the Active Stack and the 16K Pro.
Signals	CAN-H on pin 4, CAN-L on pin 5, straight through

Set every DIP switch before anything is powered up. The BMS reads its address at power-on. Changed a switch after that? Hold **RST 3 s** (sleep), then **3 s again** (wake) on that pack so the new address takes.

Master address — ADDRESS 0: all 4 switches OFF. The master is the pack with the cable to the inverter. Every other pack gets its own address — 1, 2, 3 … up to 15 (16 packs in all) — no repeats.

Both KOOR batteries wire the same. Active Stack or 16K Pro, it is a regular ethernet cable off the CAN jack. No crossed cable, no cable to build. Fantastech has put this combination in many times.

KOOR Batteries — Setting the Address Switches

One small red switch on every battery pack, marked ADD | KOOR Active Stack S314 and KOOR 16K Pro

Every battery pack gets its own number. Pack 1 is the master — the one with the cable to the inverter — and it gets **all 4 switches OFF (address 0)**. Count up from there: pack 2 = address 1, pack 3 = address 2 … Set the switches with the batteries **turned off** and make them look exactly like the picture.

B4 HOW TO READ THE SWITCH

MASTER = address 0

ON ▲



1 OFF 2 OFF 3 OFF 4 OFF

all 4 switches OFF

the pack with the cable to the inverter

Next pack = address 1

ON ▲



1 ON 2 OFF 3 OFF 4 OFF

switch 1 ON

then 2, 3, 4 … no repeats

Green slider pushed UP, toward ON = that switch is ON.

Grey slider pushed DOWN = that switch is OFF.

Switches are numbered 1, 2, 3, 4 from the left. Switch 1 = 1, switch 2 = 2, switch 3 = 4, switch 4 = 8 — add them up for the address. Use a small screwdriver or a pen tip.

B5 SET EACH PACK LIKE ITS PICTURE — GREEN SLIDER = PUSHED UP TO ON

PACK 1
MASTER · address 0

ON ▲



1 OFF 2 OFF 3 OFF 4 OFF

all 4 OFF

PACK 2
address 1

ON ▲



1 ON 2 OFF 3 OFF 4 OFF

ON: 1

PACK 3
address 2

ON ▲



1 OFF 2 ON 3 OFF 4 OFF

ON: 2

PACK 4
address 3

ON ▲




1 ON 2 ON 3 OFF 4 OFF

ON: 1, 2

PACK 5
address 4

ON ▲



1 OFF 2 OFF 3 ON 4 OFF

ON: 3

PACK 6
address 5

ON ▲




1 ON 2 OFF 3 ON 4 OFF

ON: 1, 3

PACK 7
address 6

ON ▲




1 OFF 2 ON 3 ON 4 OFF

ON: 2, 3

PACK 8
address 7

ON ▲



1 ON 2 ON 3 ON 4 OFF

ON: 1, 2, 3

PACK 9
address 8

ON ▲



1 OFF 2 OFF 3 OFF 4 ON

ON: 4

PACK 10
address 9

ON ▲



1 ON 2 OFF 3 OFF 4 ON

ON: 1, 4

PACK 11
address 10

ON ▲



1 OFF 2 ON 3 OFF 4 ON

ON: 2, 4

PACK 12
address 11

ON ▲



1 ON 2 ON 3 OFF 4 ON

ON: 1, 2, 4

PACK 13
address 12

ON ▲



1 OFF 2 OFF 3 ON 4 ON

ON: 3, 4

PACK 14
address 13

ON ▲



1 ON 2 OFF 3 ON 4 ON

ON: 1, 3, 4

PACK 15
address 14

ON ▲



1 OFF 2 ON 3 ON 4 ON

ON: 2, 3, 4

PACK 16
address 15

ON ▲



1 ON 2 ON 3 ON 4 ON


all 4 ON

Only 1 battery? It is the master — all 4 switches OFF. **No two packs may have the same picture.** Changed a switch after the battery is on? Hold **RST 3 s** (sleep), then **3 s again** (wake) so the new address takes.

KOOR Batteries — Settings and Troubleshooting

KOOR Active Stack S314 and KOOR 16K Pro on a KOOR All-in-One | KR-L8K · KR-L10K · KR-L12K · KR-L15K-SPUS

B6 INVERTER SETTINGS — BATTERY MENU

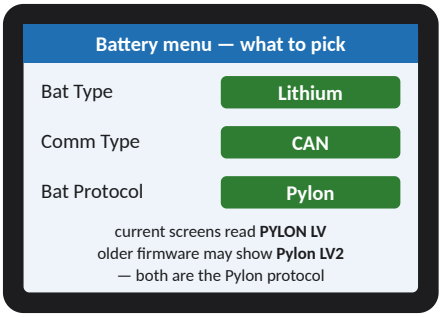

A drawing of the three picks, not a screen photo. User Manual 9.7.

Setting	Set it to	Why
Bat Type	**Lithium**	Other choices are Lead-acid, DC Source and No Battery.
Comm Type	**CAN**	Both KOOR batteries talk on CAN. RS485 is the fallback, not the first pick.
Bat Protocol	**Pylon**	Pick the Pylon entry on the list: **PYLON LV** on current screens, **Pylon LV2** on older firmware. The inverter then matches the protocol on its own.
Activate Bat	Use it once	Wakes a sleeping pack if the inverter sees nothing.
Grid Charge	Per job	On for grid or generator charging, off for PV only.
Shared Bat	**No**	Single inverter: No. Yes only when inverters in a parallel group share one bank; then the comm cable goes to the master inverter (User Manual 9.7).
Max A Charge / Max A Disch	Lower of the two	Whichever is smaller, the bank limit or the inverter limit. With CAN comms up, the BMS reports its own limits.

Set Pylon on the battery too — not just the inverter. KOOR batteries speak the Pylon protocol over CAN, and both ends must be on it. Some packs come set to a different protocol. On every pack set **CAN protocol = Pylon** (Active Stack: battery Bluetooth app, Settings, password **1234**), then restart the pack.

B7 POWER-UP ORDER

1. **Everything off.** Set every DIP address before a single pack is powered.
2. **Cable it.** Chain the packs on RS485-2. Regular ethernet cable from the master CAN jack to the inverter BMS port.
3. **Recheck the DIPs.** Master on address 0 (all 4 OFF), no two packs alike.
4. **Batteries on.** DC breaker on every pack, then each power switch. Wake the master if it sits dark.
5. **Pylon on the battery.** Every pack: CAN protocol = Pylon (battery app, password 1234), then RST 3 s, 3 s.
6. **Inverter on.** Inverter BAT breaker on, then press the power button in to ON (User Manual 7.1.4).
7. **Set the inverter menu.** Lithium → CAN → Pylon. Then PV, GRID, LOAD/GEN on and **Power On/Off = ON** (9.6).

B8 HOW YOU KNOW IT WORKED — ALL THREE, 1 TO 2 MINUTES AFTER YOU PICK THE BRAND

- The **blue LED** on the inverter is **ON** (BMS communication normal)
- A **live SOC %** shows on the screen
- **Charge and discharge limits** show, and they change

B9 IT WILL NOT TALK — WORK DOWN THIS LIST

Blue LED off, no SOC

Cable in the wrong jack, or a bad cable. It goes in the jack stamped **CAN**, not RS485-1. Swap in a known-good ethernet cable.

Blue LED off, cable is right

Ask this first: is the battery on Pylon? Set CAN protocol = Pylon on every pack in the battery app, restart each pack. Then check the inverter: Comm Type CAN, Bat Protocol Pylon. Wait 2 minutes.

Only some packs show

A pack is asleep (breaker ON, BMS switch ON, green RUN on every pack), two packs share an address (master 0, the rest 1, 2, 3 ...), or the chain cable is in the wrong jack. Count them on the PACKS tab of the battery screen.

Master dark

Pack asleep. Wake it at the battery, then use **Activate Bat** on the inverter.

Nothing at all

Check the master DC breaker and power switch before anything else.

Do not leave it on Lead-acid and walk away. The manual lets you pick Lead-acid when lithium will not communicate. That runs the bank **open loop** — no SOC, no BMS limits, no protection handoff. Use it to finish a day, never to finish a job. Stuck on comms? Call Fantastech at 574-218-1973 and we will get the comms right.

Damage from the wrong communication protocol is not covered by the warranty. Neither is reversed battery polarity. Meter before you land anything.

Where this came from. The KOOR All-in-One User Manual (6.6, and the Battery Settings menu, 9.7); the KOOR Active Stack S314 User Manual (4.3); the KOOR off-grid 12K manuals (Appendix A); and KOOR jobs in the field. Fantastech has installed this combination many times — if it will not talk, it is almost always the battery protocol, the wrong jack, a bad cable, or a duplicate address.