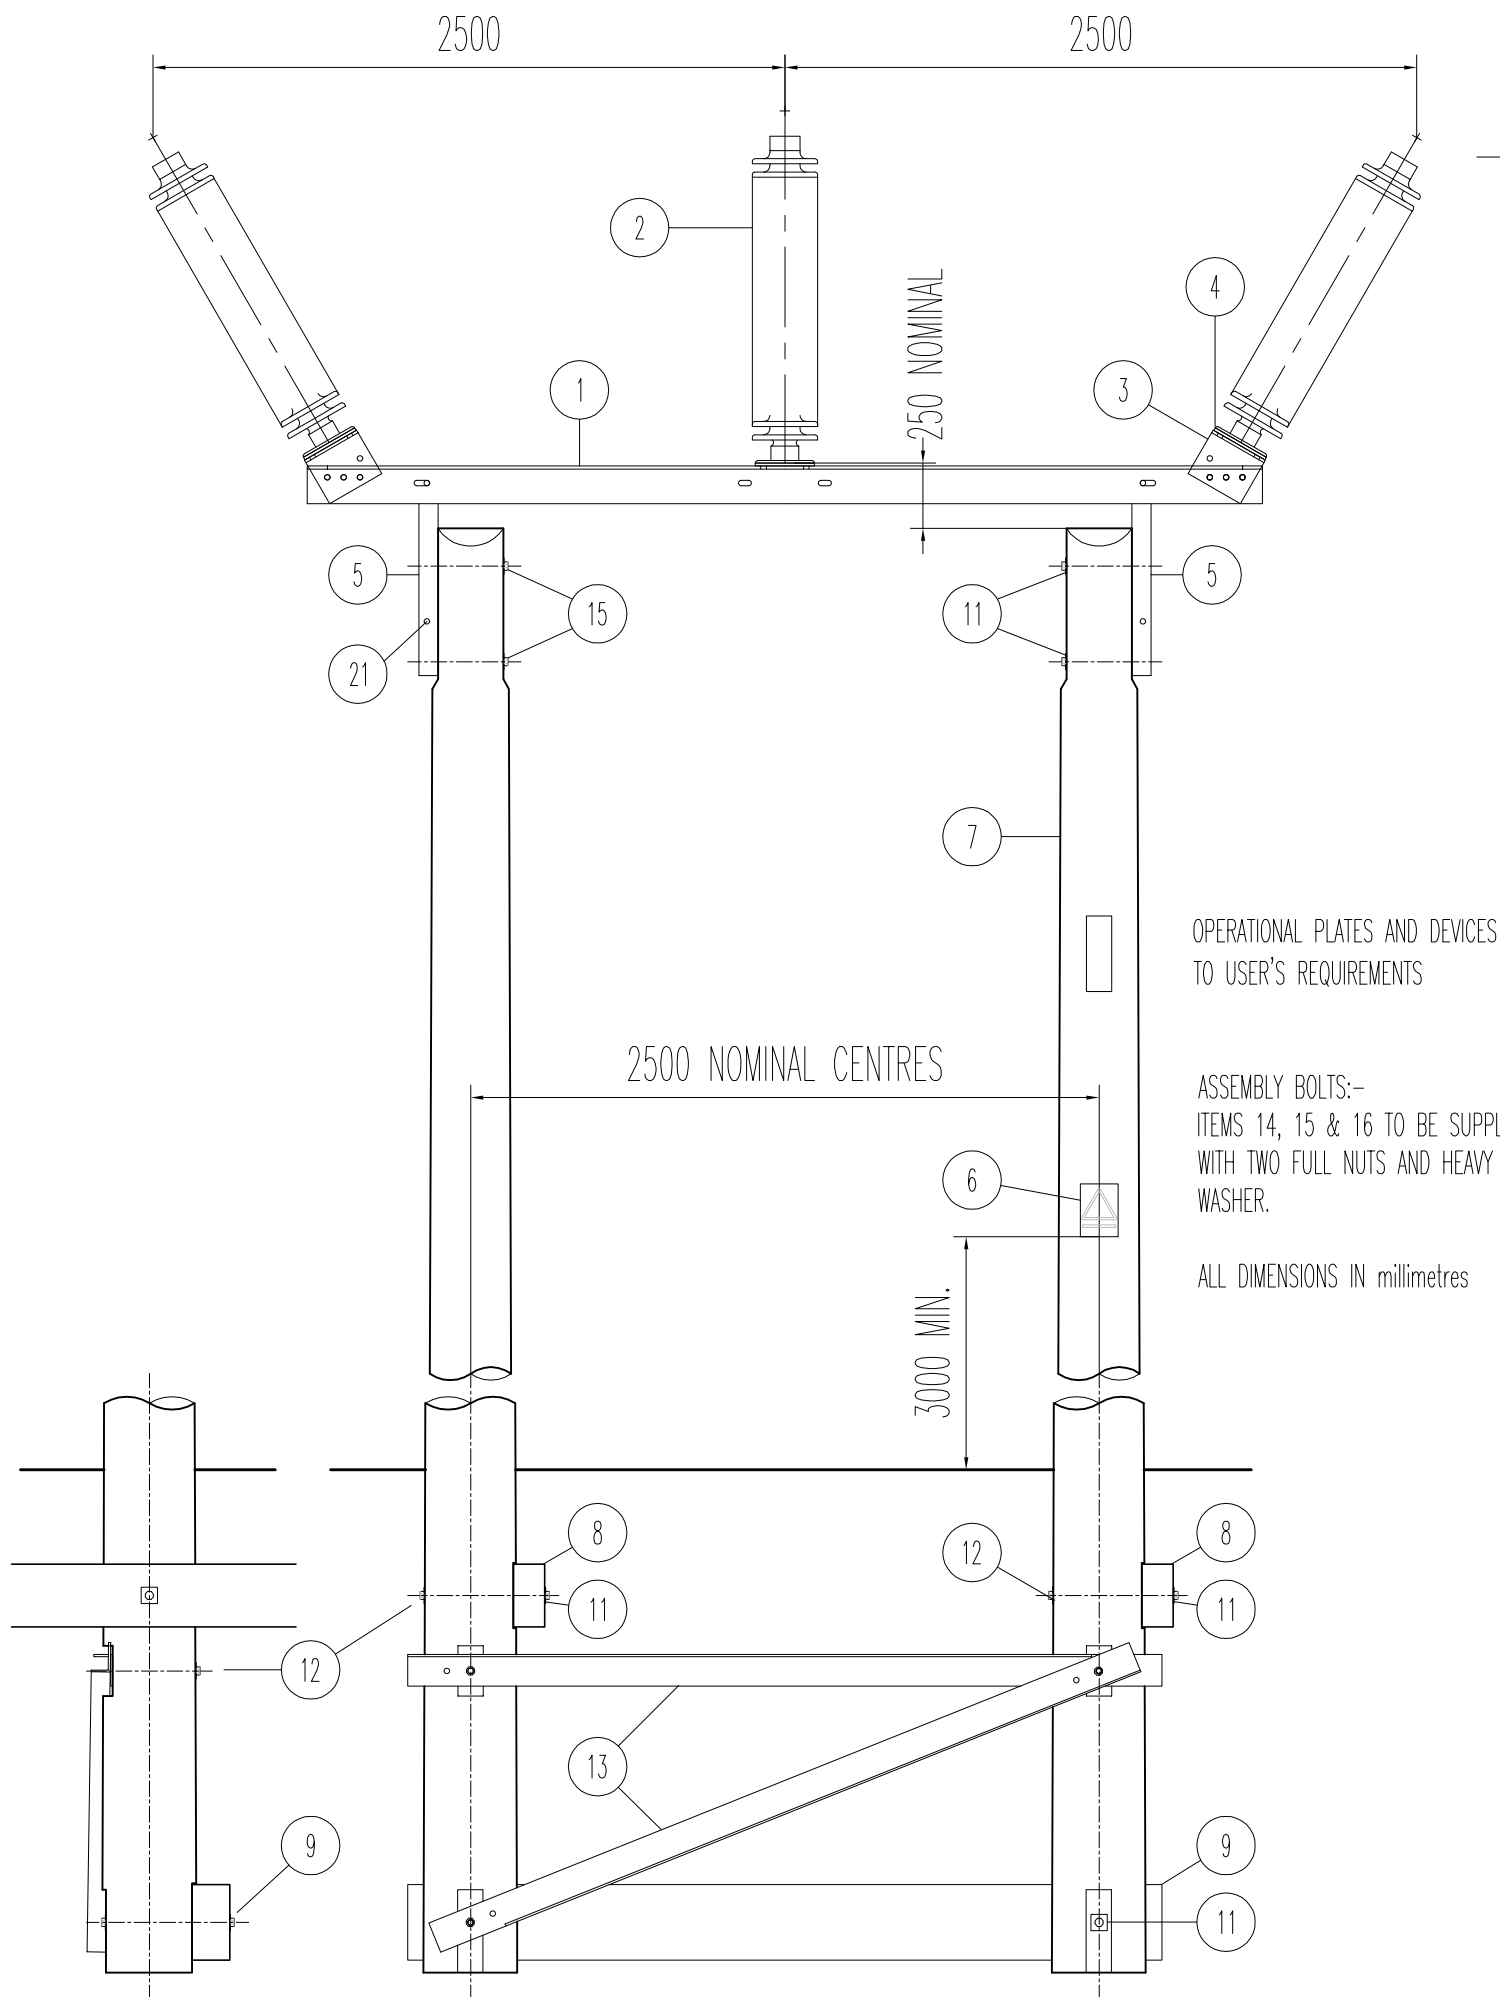


No.	ITEM	ENATS STANDARD DRG No. OR BS REF	No. OF	REMARKS
1	INTERMEDIATE CROSSARM	439532	2	2.5m SPACING
2	POST INSULATOR & CONDUCTOR CLAMP	ENATS 43-93	3	
3	INSULTOR ANGLE BRACKET SUPPORT	439539	4	
4	INSULATOR MOUNTING PLATE	439540	3	
5	CROSSARM SUPPORT CHANNEL	439534	2	
6	DANGER PLATE	439701	1	
7	WOOD POLE	435003	2	
8	TOP BAULKS	439103	2	
9	BRACE BAULK	439112	1	TYPE 2
10	'H' POLE FOUNDATION BRACE	439545	2	
11	SQUARE FLAT WASHER	439604	9	
12	SQUARE CURVED WASHER	439605	4	
13	M20 x 60 BOLT	ENATS 43-96	29	
14	M20 x 80 BOLT	ENATS 43-96	18	
15	M20 x 260 BOLT	ENATS 43-96	4	
16	M20 x 375 BOLT	ENATS 43-96		AS REQUIRED
17	M20 x 450 BOLT	ENATS 43-96		AS REQUIRED
18	M20 x 530 BOLT	ENATS 43-96		AS REQUIRED
19	M20 x 750 BOLT	ENATS 43-96		AS REQUIRED
20	WASHER TAPER - D M20	ENATS 43-96	5	
21	EARTHING ATTACHMENT NUT	439554	1	

FOUNDATION BOLTS		
POLE DIA.	ITEMS 8 & 9	ITEM 10
UP TO 270mm	450mm	375mm
270 - 320mm	530mm	450mm
320mm UPWARDS	750mm	530mm