



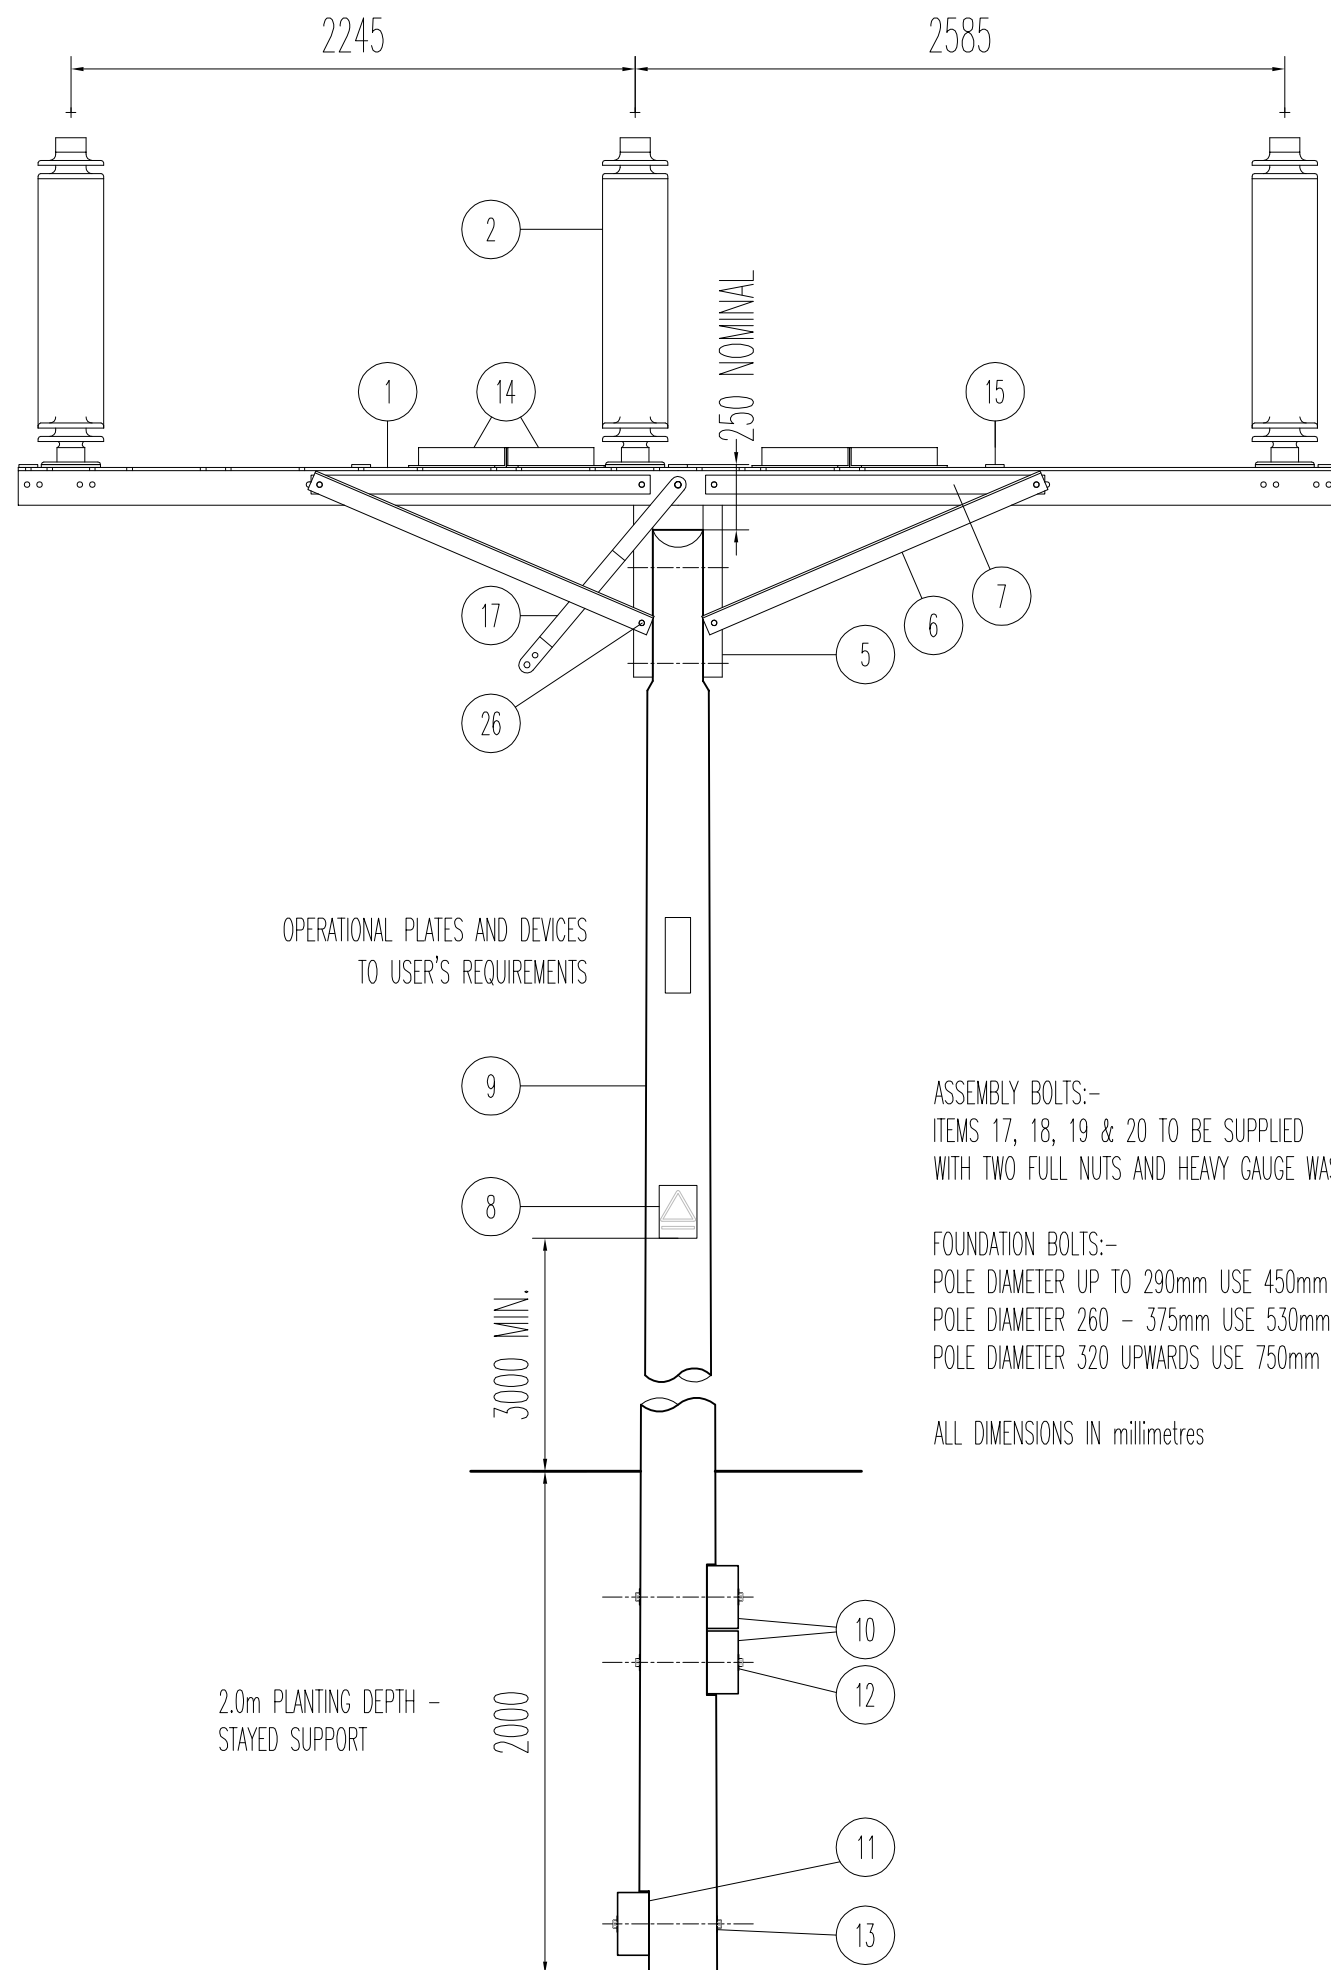

ASSEMBLY BOLTS:-
ITEMS 17, 18, 19 & 20 TO BE SUPPLIED
WITH TWO FULL NUTS AND HEAVY GAUGE WASHER.

FOUNDATION BOLTS:-
POLE DIAMETER UP TO 290mm USE 450mm BOLTS.
POLE DIAMETER 260 - 375mm USE 530mm BOLTS.
POLE DIAMETER 320 UPWARDS USE 750mm BOLTS.

ALL DIMENSIONS IN millimetres

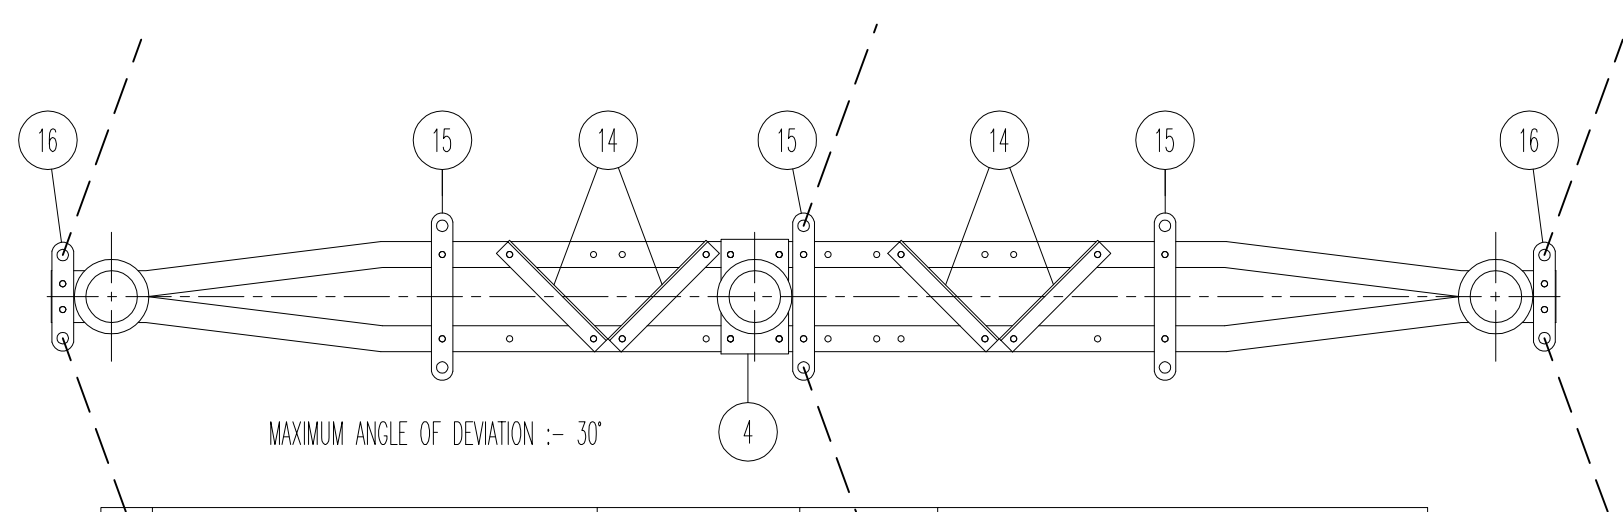

No.	ITEM	ENAT STANDARD DRG. No.OR BS REF.	No. OFF	REMARKS
1	ANGLE CROSSARM	439533	2	
2	POST INSULATOR & CONDUCTOR CLAMP	ENATS 43-93	3	
3	TENSION INSULATORS AND	ENATS 43-93	6 SETS	
	INSULATOR FITTINGS	BS 3288	6 SETS	
4	INSULATOR MOUNTING PLATE	439540	1	
5	CROSSARM SUPPORT CHANNEL	439534	2	
6	STRUT 2.5m CROSSARM	439536	4	
7	TIE STRAP 2.5m CROSSARM	439538	4	
8	DANGER PLATE	439701	1	
9	WOOD POLE	435002	1	TYPE 2
10	TOP BAULKS	439103		AS REQUIRED
11	BOTTOM BAULK	439103		AS REQUIRED
12	SQUARE FLAT WASHER	439604	1	PER BAULK
13	SQUARE CURVED WASHER	439605	1	PER BAULK
14	CROSS BRACING	439543	4	
15	LONG TYPE STRAPS	439542	3	
16	SHORT TYPE STRAPS	459541	2	
17	STAY ASSEMBLY	ENATS 43-91		
18	M20 x 60 BOLT	ENATS 43-96	34	
19	M20 x 80 BOLT	ENATS 43-96	8	
20	M24 x 60 BOLT	ENATS 43-96	2	
21	M20 x 375 BOLT	ENATS 43-96	2	
22	M20 x 450 BOLT	ENATS 43-96		AS REQUIRED
23	M20 x 530 BOLT	ENATS 43-96		AS REQUIRED
24	M20 x 750 BOLT	ENATS 43-96		AS REQUIRED
25	WASHER TAPER 'D'	ENATS 43-96	8	
26	EARTHING ATTACHMENT NUT	439554	1	

ITEM 15
OUTER LONG TYPE STRAPS ARE FITTED TO BRACE THE CROSSARM AND MUST
REMAIN IN POSITION. MAY BE USED FOR STAY ATTACHMENT DURING CONSTRUCTION.