


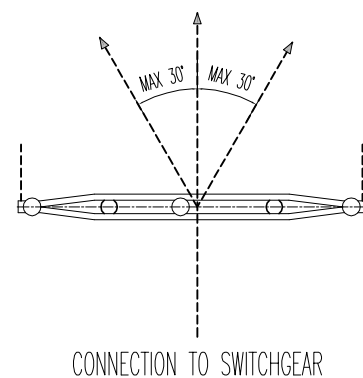


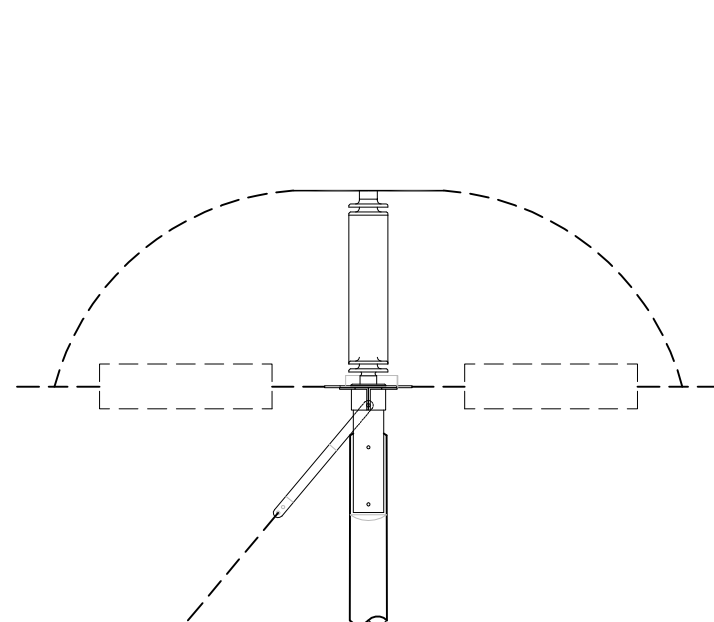

MAXIMUM TENSION ON CONNECTIONS TO SWITCHGEAR
OR OVERHEAD LINE 4 . 4kN (450kgf.) PER PHASE.

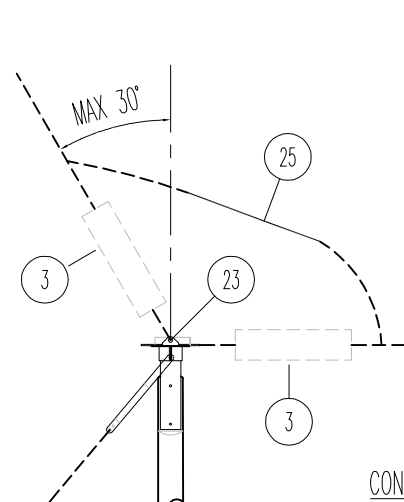


CONNECTION TO OVERHEAD LINE

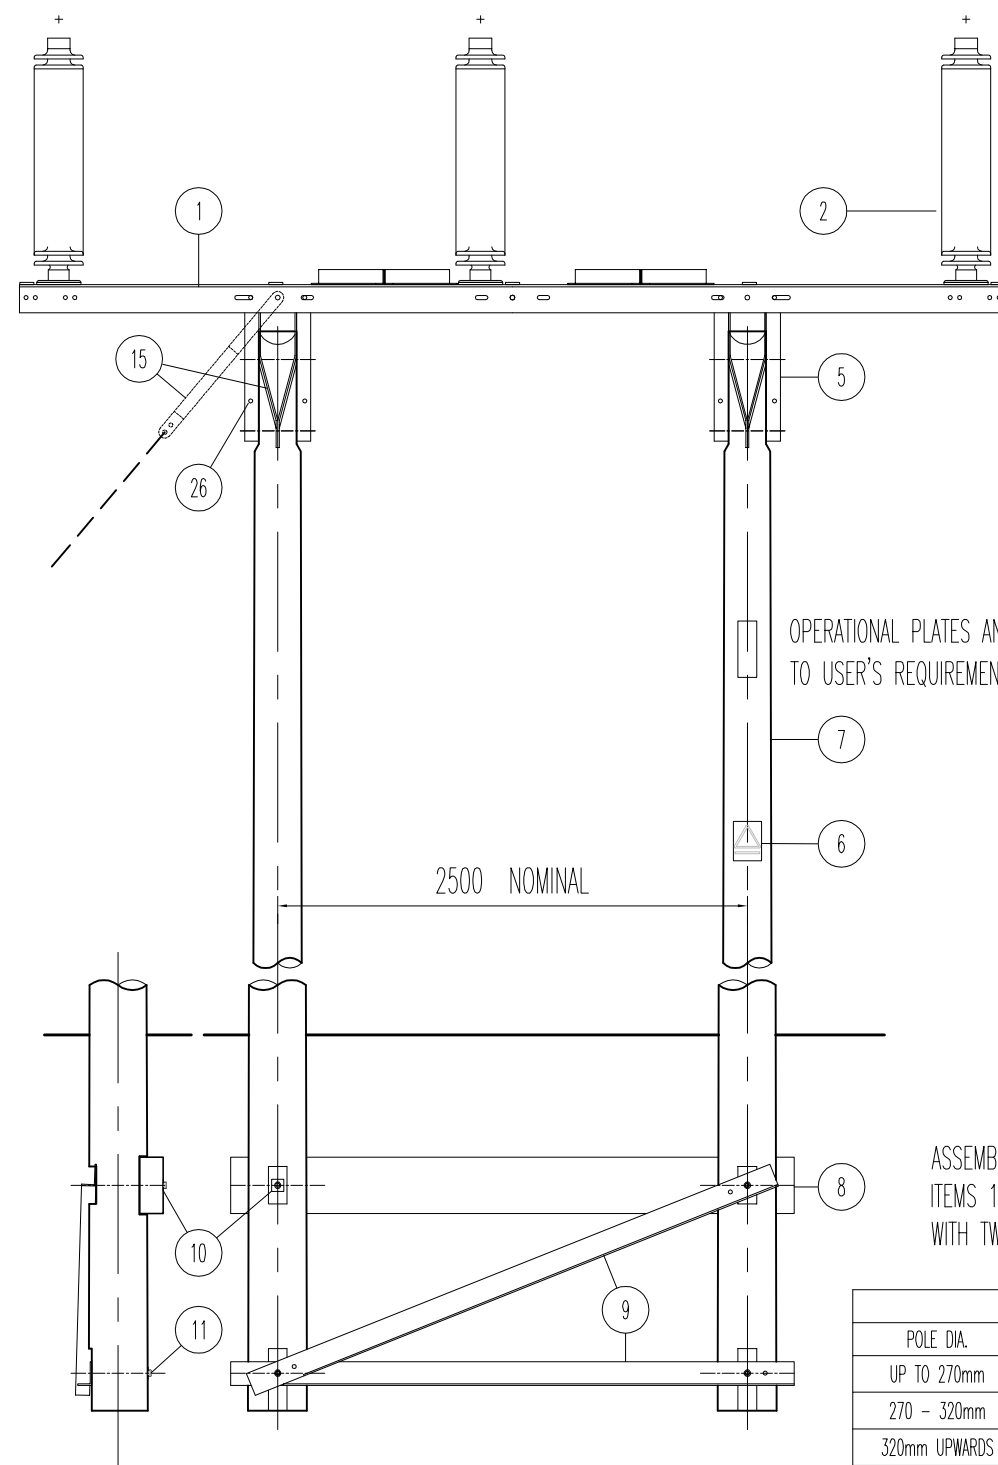

OPERATIONAL PLATES AND DEVICES
TO USER'S REQUIREMENTS


ASSEMBLY BOLTS:-
ITEMS 16, 17 & 18 TO BE SUPPLIED
WITH TWO FULL NUTS AND HEAVY GAUGE WASHER.

FOUNDATION BOLTS		
POLE DIA.	ITEM 8	ITEM 9
UP TO 270mm	450mm	375mm
270 - 320mm	530mm	450mm
320mm UPWARDS	750mm	530mm

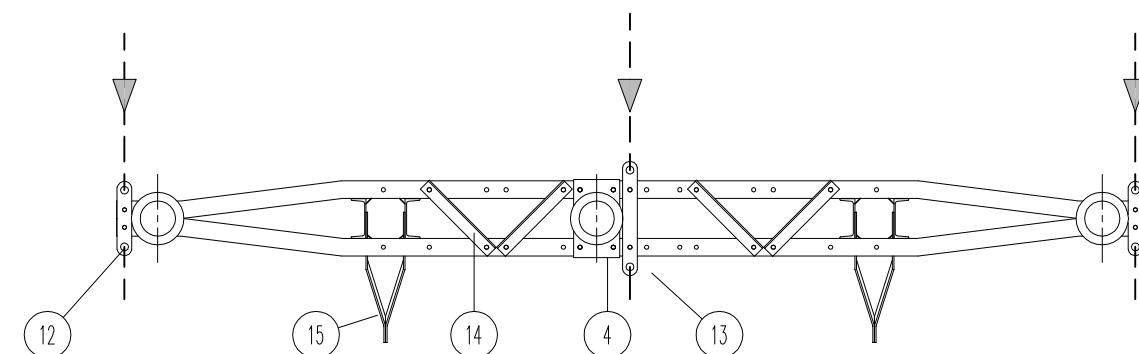

No.	ITEM	ENATS STANDARD DRG No. OR BS REF	No. OF	REMARKS
1	ANGLE CROSSARM	439533	2	
2	POST INSULATOR & CONDUCTOR CLAMP	ENATS 43-93	3	SEE NOTE
3	TENSION INSULATORS AND INSULATOR FITTINGS	ENATS 43-93 BS 3288	6 SETS 6 SETS	
4	INSULATOR MOUNTING PLATE	439540	1	
5	CROSSARM SUPPORT CHANNEL	439534	4	
6	DANGER PLATE	439701	1	
7	WOOD POLE	435004	2	
8	BRACE BLOCK	439112	1	TYPE 2
9	'H' POLE FOUNDATION BRACE	439545	2	
10	SQUARE FLAT WASHER	439604	3	
11	SQUARE CURVED WASHER	439605	2	
12	SHORT TYPE STRAPS	439541	2	
13	LONG TYPE STRAPS	435542	1	
14	CROSS BRACING	439543	4	
15	STAY ASSEMBLY	ENATS 43-91		SEE NOTE
16	M20 x 60 BOLT	ENATS 43-96	35	
17	M24 x 60 BOLT	ENATS 43-96	4	
18	M20 x 375 BOLT	ENATS 43-96	4	
19	M20 x 450 BOLT	ENATS 43-96		AS REQUIRED
20	M20 x 530 BOLT	ENATS 43-96		AS REQUIRED
21	M20 x 750 BOLT	ENATS 43-96		AS REQUIRED
22	WASHER TAPER 'D'	ENATS 43-96	9	
23	CROSSARM DOWNLOAD PLATE	439544	3	SEE NOTE
24	BOLTS M20 x 60	ENATS 43-96	6	
25	JUMPER STIFFNER		3	
26	EARTHING ATTACHMENT NUT	439554	1	

ITEM 2 - NOT REQUIRED FOR DOWNLEAD TERMINAL
ITEMS 23, 24 & 25 - NOT REQUIRED FOR SWITCHGEAR TERMINAL
ITEM 15 - IN ADDITION TO TERMINAL BACK STAYS, SIDE STAYS MAY
BE FITTED TO COUNTERBALANCE DOWNLEADS.

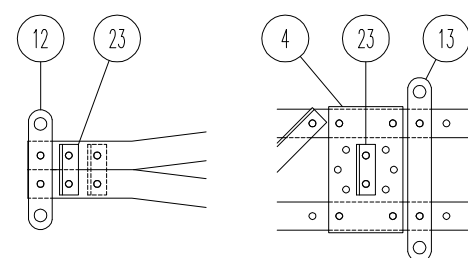

DOWNLEAD ATTACHMENT PLATE CROSSARM POSITION