


LumaFader

User Guide

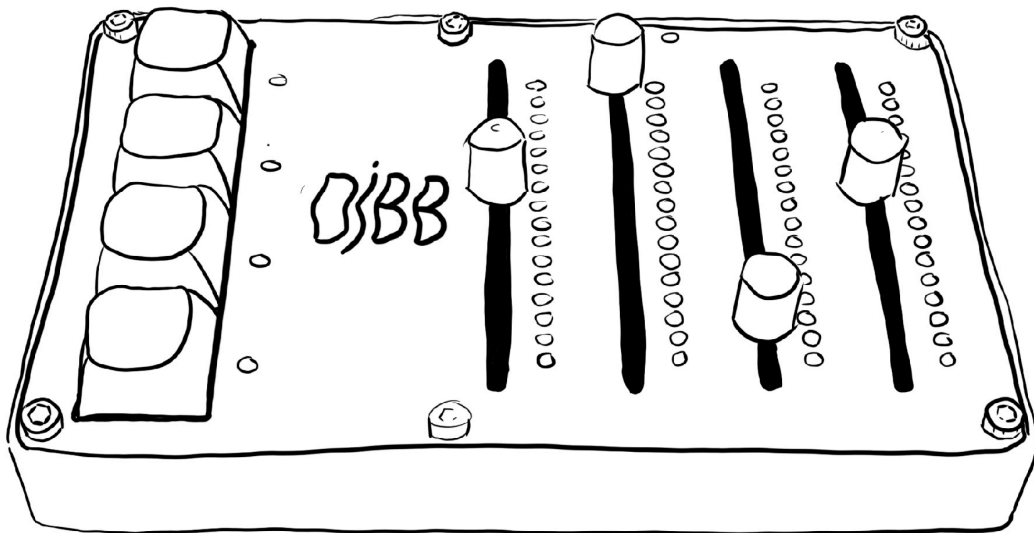

Quick Start

SENDING MIDI CCS

- **Pickup Mode (default)** — slider sends data only after passing the last value sent for that CC
- **Jump Mode** — sends data immediately. Toggle: hold two middle buttons, then press & release Top or Bottom button

RECORD MODE

- **Enter** — hold all 4 buttons for 3 seconds
- **Record to button** — double-click a button
- **Start / stop loop** — single-click button
- **Delete recording** — triple-click button

BANKS & PAGES

- **Global Bank** — active when no buttons are pressed
- **Switch bank** — hold its button, or double-press to lock
- **Multiple banks** — hold multiple buttons simultaneously
- **Next Page** — hold Bottom, press & release Top
- **Prev Page** — hold Top, press & release Bottom

MIDI LEARN

- **Global Bank** — hold all 4 buttons, move any slider full range 2–3 times
- **Other banks** — lock the bank first (double-click), hold its button, move slider full range 2–3 times
- **Exit** — click any button

Hardware

USB-C — connect to your computer using a standard USB cable for power and MIDI communication.

TRS MIDI Out — connect to external MIDI hardware using a 3.5mm TRS Type A MIDI cable. MIDI messages are sent via both USB and TRS simultaneously.

Slider LEDs — the column of 16 LEDs next to each slider indicates its current effective value (0–127). The color of the lit LEDs corresponds to the currently active bank or page. In Pickup Mode, if the physical slider position is far from the last sent value, the LEDs may represent the last sent value until the slider crosses it.

Top Indicator LED (above sliders):

Green Regular (Pickup) Mode is active.

Orange Jump Mode is active.

Basic Operation: Sliders & Pickup Mode

Sending CCs — move any of the four sliders to send CCs.

Pickup Mode (default) — when you first move a slider after switching banks or starting up, it won't send a MIDI CC message immediately. You must move the slider past the last value it sent for that specific CC assignment. Once you "pick up" the old value, the slider will start sending new CC messages smoothly. The slider LEDs show the current effective value.

Jump Mode — hold the 2 middle buttons and click either the top or bottom button to enter Jump Mode. In this mode, CC messages are sent whenever a slider is moved, regardless of the last CC message sent for that slider.

Bank Control

Each button represents a bank. There are 4 banks per page.

Global Bank — active when no buttons are pressed or locked.

Banks 1–4 — accessed by pressing and holding one of the four buttons (Bottom, Middle-Bottom, Middle-Top, Top). Each button corresponds to a specific bank within the current page. Slider LEDs change to the color assigned to that bank.

Multiple held buttons — if you hold multiple buttons, the sliders will send CCs assigned in all held buttons' banks simultaneously when moved.

PAGES 1–4

The LumaFader organizes 16 assignable banks into 4 pages. The active page is indicated by one of the button LEDs lighting up white when no buttons are pressed (Bottom LED = page 1, etc.).

- **Next Page** — hold Bottom button, then briefly press and release Top button.
- **Previous Page** — hold Top button, then briefly press and release Bottom button.

LOCKING A BANK

You can lock the sliders to one of the 4 banks within a page.

- **To lock** — quickly double-press the button for the bank you want. Its LED stays lit (in its bank color); other button LEDs turn off. The sliders will now continuously use that bank's CC assignments.
- **To unlock** — click any button.



Record Mode

Each loop has a limit of 4000 CC events, or 60 seconds, whichever comes first. If a recording is stopped and no slider movement was detected, it will auto-delete.



- **Enter Record Mode** — hold all 4 buttons for 3 seconds.
- **Start recording** — double-click an empty button.
- **Stop recording** — single-click the recording button.
- **Delete a recording** — triple-click the button.
- **Switch fader/loop banks** — hold Bottom and click Top to go up; hold Top and click Bottom to go down. Unlike normal mode, this goes to the next individual bank, not the next page.

LOOP TYPES

Set via the web interface:

- **Loop** — the recorded loop toggles on and off with a button click.
- **Hold** — the button must be held to continue playing; stops on release. If held past the end of the loop, it holds at the final values until released.

CC RESET

By default, when a loop stops or a held pad is released, the first recorded CC value for each CC is sent immediately to "reset" to the initial state. You can disable this in the web configuration tool via the **CC Reset** checkbox in global settings, or directly in `settings.json`.

LIMITS

Each loop records up to 4000 CC events. There is no hard limit on number of loops — in typical use expect somewhere in the 12–30 range, depending on how much fader movement is recorded.

- If you attempt to record a new loop while past the event limit, the button will blink red 3 times and not record, indicating memory is full. Delete other loops to make room.
- There is currently no way to save loops to the device and recall them. They are available only until the device is turned off.

Updating CC Mappings & Settings

MIDI MAPPING MODE

Either hold all buttons at once (global), or lock a bank and then hold its button while locked. Then move any slider back and forth (fully) 2–3 times. The moved slider should turn blue.

Send CC data to the LumaFader via USB-C to map to that fader — it will flash green on a successful map. Move other faders to change the mapping target. Click any button to exit.

NOTE — to avoid accidental mappings/jitter, the LumaFader listens for 3 consecutive values for the same CC before mapping. If mapping fails or times out, the fader will flash red.

CONFIGURATION INTERFACE

If you have firmware 1.2+ installed, you can use the **LumaFader Configuration Interface** (in Chrome or Edge) to update settings while your device is plugged in. You can also save and load settings for backup and as a simple preset system. [Open the web interface →](#)

LUMAFADER - SETTINGS

DISCONNECTCONNECTED

GLOBAL ?

GLOBAL CHANNEL1GLOBAL TYPECCLOOP TYPELoopCC RESOLUTION0TRIM SILENCECC RESET

PAGE 1PAGE 2PAGE 3PAGE 4

INHERITCH(S)TYPE

BANK 4

☒

-

-

BANK 3

☒

-

-

BANK 2

☒

-

-

BANK 1

☒

-

-

4

3

2

1

A

B

C

D

Pg 1Global

cc10210223

ch11- -

☐ Learn ChLEARNLEARNLEARNLEARN

Last MIDI In: CC 123, Ch 1

SAVE SETTINGS

DOWNLOAD BACKUP

RESTORE BACKUP

LumaFader Settings interface. Requires a Web Serial compatible browser (like Chrome or Edge)

Updating Manually

You can also adjust settings by directly editing the `settings.json` file on the device. See the `_help` section in that file for details.

IMPORTANT — to edit the file, you need to put the device into USB Mode. Hold all buttons, then plug in the device. You will see lights blink red before startup, indicating USB Mode is active.

1. **Connect in USB Mode** — connect the LumaFader to your computer via USB while holding down all buttons during power-up.
2. **Access the drive** — the LumaFader should appear as a USB drive named `LUMAFADER` on your computer (Finder on Mac, Explorer on Windows).
3. **Open settings.json** — open the `LUMAFADER` drive and find `settings.json`.
4. **Edit the file** — open it with a plain text editor (TextEdit on Mac in plain text mode, Notepad on Windows, or a code editor like VS Code).
5. **Save and eject** — save changes to `settings.json` directly onto the `LUMAFADER` drive. Safely eject the drive from your computer.
6. **Restart LumaFader** — unplug and replug the device. New CC mappings will be active.

Updating Firmware

See the updating firmware section on the GitHub page:

github.com/derrickthomin/Midi-Slider-Cherry#updating-firmware

Custom Code

See the GitHub link below — it includes an MIT license, so go nuts. Let me know if you make anything cool :)

I approve



Links

- Web Interface — derrickthomin.github.io/Midi-Slider-Cherry/web_config.html
- Latest Firmware — github.com/derrickthomin/Midi-Slider-Cherry/releases/latest
- GitHub — github.com/derrickthomin/Midi-Slider-Cherry
- Manual (PDF) — [github.com/derrickthomin/Midi-Slider-Cherry/blob/main/LumaFader User Guide.pdf](https://github.com/derrickthomin/Midi-Slider-Cherry/blob/main/LumaFader%20User%20Guide.pdf)
- Etsy — etsy.com/hk-en/listing/1872693350
- YouTube — youtu.be/-r_8dHA1_Gs



V 1.4 — 6/21/26

djbajablast.com