


# LumaFader User Guide

*Last Update: 6/21/26 - v 1.4*

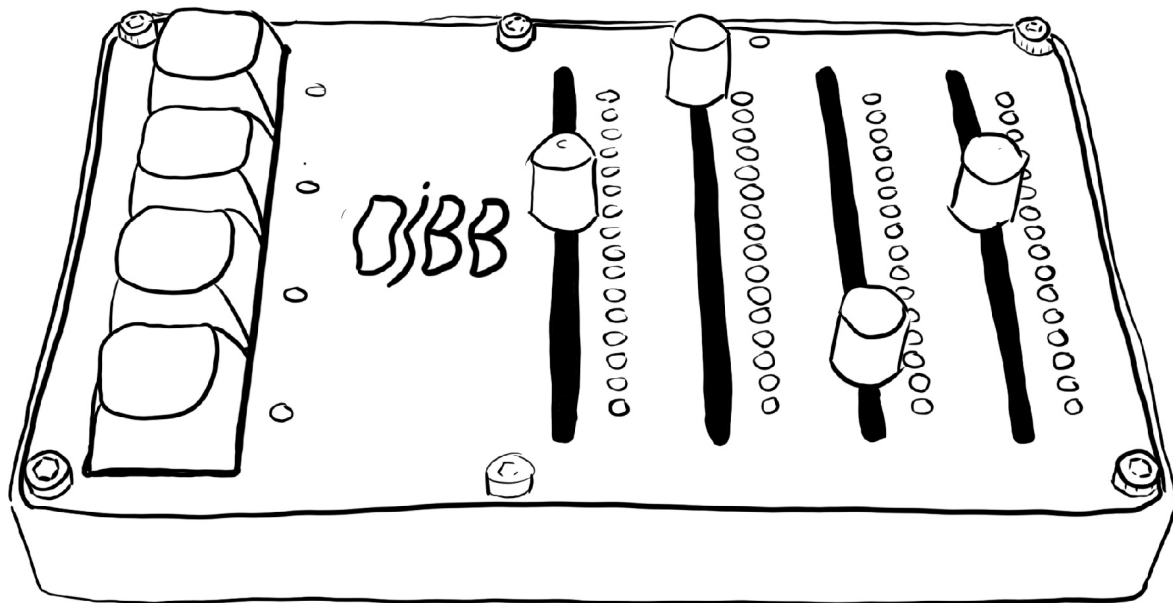

# Quick Start

## SENDING MIDI CCS

### Pickup Mode (default)

Slider sends data only after passing the last value sent for that CC assignment

### Jump Mode

Slider sends data immediately regardless of the last CC sent. Toggle on/off by holding the two middle buttons, then pressing & releasing the Top or Bottom button.

## BANKS & PAGES

### Global Bank

Active when no buttons are pressed.

### Switching Bank within a Page

Hold the corresponding bank button, or double press to lock

### Using Multiple Banks Simultaneously

Hold multiple buttons. CCs from all held banks are sent

### Switch Pages

Next Page - Hold Bottom button, then press & release the top button

Prev Page - Hold Top button, then press & release the bottom button

## RECORD MODE & MIDI LEARN

### Record Mode

Enter Record Mode - Hold all 4 buttons for 3 seconds.

Record to Button - Double-click a button to start recording,

Start / Stop Loop - Single click button

Delete Recording - Triple click button

To access other slider banks while recording: hold Bottom + click Top (or reverse to go down).

### MIDI Learn — Global Banks

Global Bank - Hold all 4 buttons, then move any slider up and down (full range) 2–3 times

Other Banks - Lock the bank first (double-click its button). Then hold that button and move a slider up and down (full range) 2–3 times. Move a slider while in mapping mode to change its target. Click any button to exit.

## Hardware

- **USB-C:** Connect to your computer using a standard USB cable for power and MIDI communication.
- **TRS MIDI OUT:** Connect to external MIDI hardware using a 3.5mm TRS Type A MIDI cable. MIDI messages are sent via both USB and TRS simultaneously.
- **Slider LEDs:** The column of 16 LEDs next to each slider indicates its current *effective* value (0-127). The color of the lit LEDs corresponds to the currently active bank or page (see below). In Pickup Mode, if the physical slider position is far from the last sent value, the LEDs may represent the last sent value until the slider crosses it.
- **Top Indicator LED (Above Sliders):**
  - **Green:** Regular (Pickup) Mode is active.
  - **Orange:** Jump Mode is active.

## Basic Operation: Sliders and Pickup Mode

**Sending CCs** - Move any of the four sliders to send CCs

**Pickup Mode (Default)** - When you first move a slider after switching banks or starting up, it won't send a MIDI CC message immediately. You must move the slider past the *last value it sent* for that specific CC assignment. Once you "pick up" the old value, the slider will start sending new CC messages smoothly. The slider LEDs show the current effective value.

**Jump Mode** - Hold the 2 middle buttons and click either the top or bottom button to enter jump mode. In this mode, CC messages are sent whenever a slider is moved, regardless of the last CC message sent for that slider.

# Bank Control

Each button represents a bank. There are 4 banks per Page.

**Global Bank** - Active when no buttons are pressed or locked

**Banks 1-4** - Accessed by pressing and holding one of the four buttons (Bottom, Middle-Bottom, Middle-Top, Top). Each button corresponds to a specific bank within the current Page. Slider LEDs change to the color assigned to that bank.

## Multiple Held Buttons

If you hold multiple buttons the sliders will send CCs assigned in *all* held buttons' banks simultaneously when moved.

## Pages 1-4

The LumaFader organizes the 16 Assignable Banks into 4 pages.

**Switch to Next Page:** Hold the **Bottom** button, then briefly press and release the **Top** button.

**Switch to Previous Page:** Hold the **Top** button, then briefly press and release the **Bottom** button.

The active page is indicated by one of the Button LEDs lighting up white when no buttons are pressed (Bottom LED = page 1, etc.).

## Locking a Bank

You can lock the sliders to one of the 4 banks within a page.

**To Lock:** Quickly **double-press** the button corresponding to the bank you want to lock. The LED for that button will stay lit (in its bank color), and the other button LEDs will turn off. The sliders will now continuously use the CC assignments for this locked bank.

**To Unlock:** Click any button.

## Record Mode

Each loop has a limit of 4000 CC events, or 60 seconds, whichever comes first. If a recording is stopped and no slider movement was detected, it will auto delete when stopped.

**To enter record mode:** hold all 4 buttons for 3 seconds.

**To start recording:** Double click an empty button

**To stop recording:** Single click the recording button

**To delete a recording:** Triple click the button

**To switch fader / Loop banks:** Hold the bottom button and click the top to go up. Hold the top and click the bottom to go down. Unlike in normal mode, this action goes to the next individual bank, instead of the next page of banks.

## Loop Types

Use the web interface to choose between Loop and Hold.

Loop - the recorded loop toggles on and off with a button click.

Hold - the button must be held to continue playing the loop, stopping on release. If held past the end of the recorded loop, it will hold at those final values until the button is released.

## CC Reset

By default, when a loop stops playing or a held pad is released, the first recorded CC value for each recorded CC is immediately sent to “reset” to the initial state. You can disable this behavior in the web configuration tool via the CC RESET checkbox in global settings, or in settings.json directly.

## Number of Loops / Limits

Each loop can record up to 4000 CC events. There is no defined limit on number of loops recorded, but in typical use you can expect something in the 12-30 range, depending on the size of the loops (how much fader movement is recorded).

If you attempt to record a new loop while past the event limit, the button will blink red 3 times, and does not record, indicating that memory is full and that other loops need to be deleted.

Currently, there is no way to save loops to the device and recall them - they are available only until the device is turned off.

## Updating CC Mappings & Settings

### MIDI Mapping Mode

Either hold all buttons at once (global), or lock a bank, and then hold the button while locked. Then, move any slider back and forth (FULLY) 2-3 times. The moved slider should now be blue.

Send CC data to the LumaFader via USB C to map to that fader. It will flash green if it maps successfully.


Move other faders to change the mapping target to them while in midi mapping mode.

To exit, click any button.

**Note:** to avoid accidental mappings / jitter, the LumaFader listens for 3 consecutive values for the same CC before mapping. If mapping fails or times out, the fader will flash red.

### Configuration Interface

If you have firmware 1.2+ installed, you can use the [LumaFader Configuration Interface](#) (in Chrome or Edge) to update settings while your device is plugged in. You can also save and load settings for backup / a simple preset system.

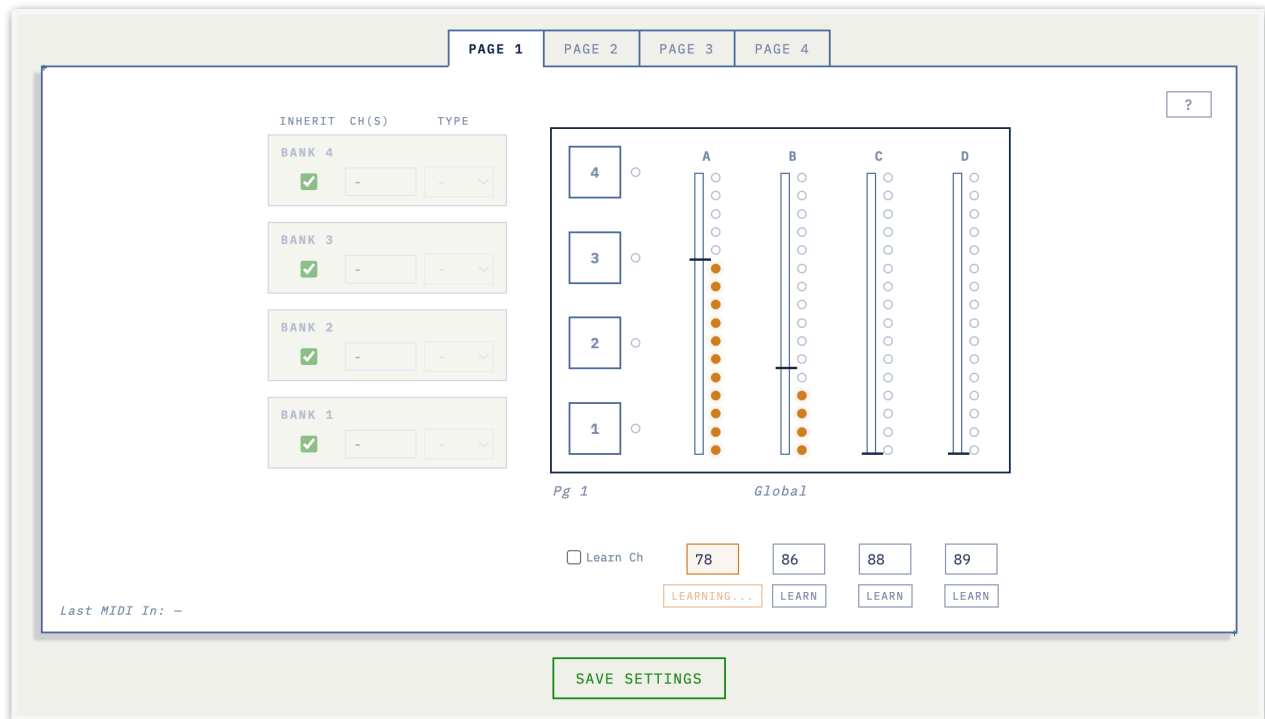

LumaFader Configuration Web Interface

## Updating Manually

You also adjust settings by directly editing the **settings.json** file on the device. See the “\_help” section in that file for details.

**IMPORTANT:** To edit the file, you need to put the device into **USB Mode**. Hold all buttons, then plug in the device. You will see lights blink red before startup, indicating that you are in **USB mode**.

1. **Connect in USB Mode:** Connect the LumaFader to your computer via USB **while holding down all buttons** during power-up.
2. **Access the Drive:** The LumaFader should appear as a USB drive (like a flash drive) named "LUMAFADER" on your computer (in Finder on Mac, Explorer on Windows).
3. **Open settings.json:** Open the "LUMAFADER" drive and find the file named **settings.json**.
4. **Edit the File:** Open **settings.json** with a plain text editor (like TextEdit on Mac in plain text mode, Notepad on Windows, or a code editor like VS Code).

5. **Save and Eject:** Save the changes to **settings.json** directly onto the "LUMAFADER" drive. Safely eject the drive from your computer.
6. **Restart LumaFader:** Unplug and replug the LumaFader. The new CC mappings will be active.

## Updating Firmware

See the updating firmware section on this GitHub page:

<https://github.com/derrickthomin/Midi-Slider-Cherry#updating-firmware>

## Custom Code

See the GitHub link above - it includes an MIT license, so go nuts but let me know if you make anything cool :)