

sdkDemo User Guide

I. File Contents

(1) sdkExecutable——Executable File Example

LhSonarSDKGuiDemo is the executable file and can be run directly on Windows 10 or later systems.

(2) sdkSource——Source Code



The LhForwardSDK folder is the SDK directory, containing interface files and static link libraries. The rest are project source code files. Static Link Libraries:

- .lib is the SDK library compiled for the Windows environment.
- .a is the SDK library compiled for Linux environments with x86_64 system architecture.



The SDK contains three classes, corresponding to the interface header files in the SDK's include directory:


- LhForwardCMD is used for command transmission.
- LhForwardFrame is used for data assembly.
- LhForwardImage is used for image generation.

II. Operation Procedure

(1) First, connect the sonar device. After powering on, wait for approximately one minute, then open the executable file.


(2) Click the "Connect" button on the interface; it will prompt "Connecting...".

The interface after successfully connecting to the sonar is as follows:

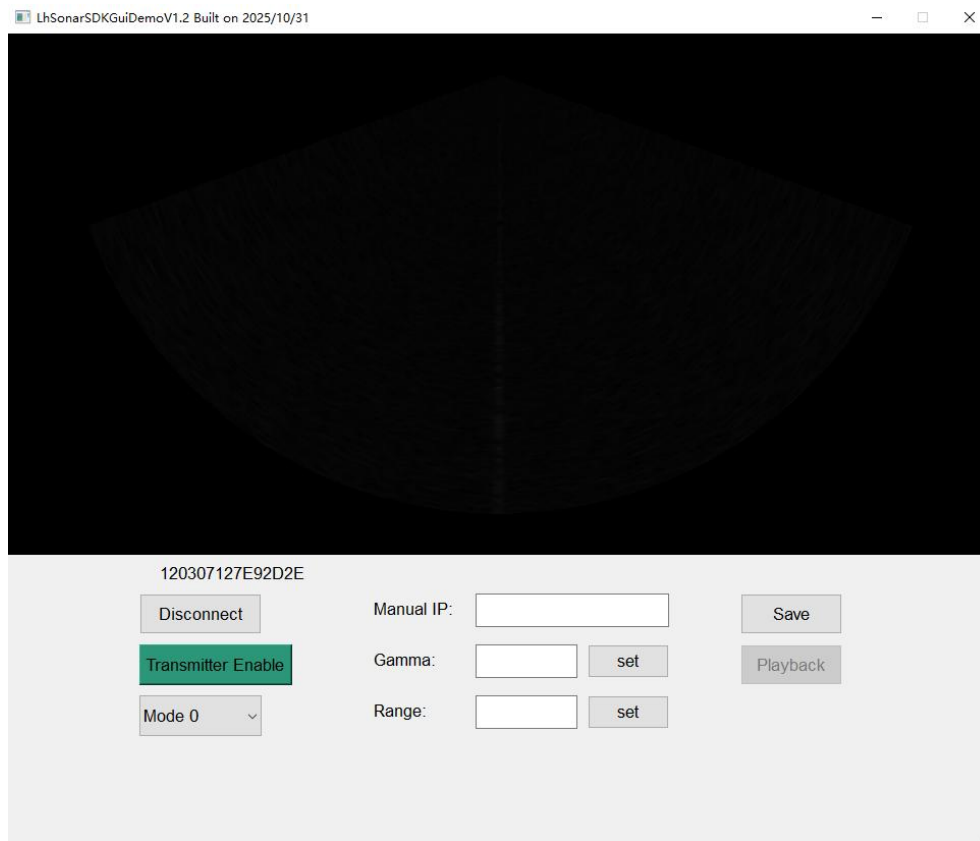

(3) After connection, you can switch working modes and adjust parameters (Gamma and Range).

(4) Click the "Transmitter Enable" button to activate the transmitter. The interface after activation is as follows:

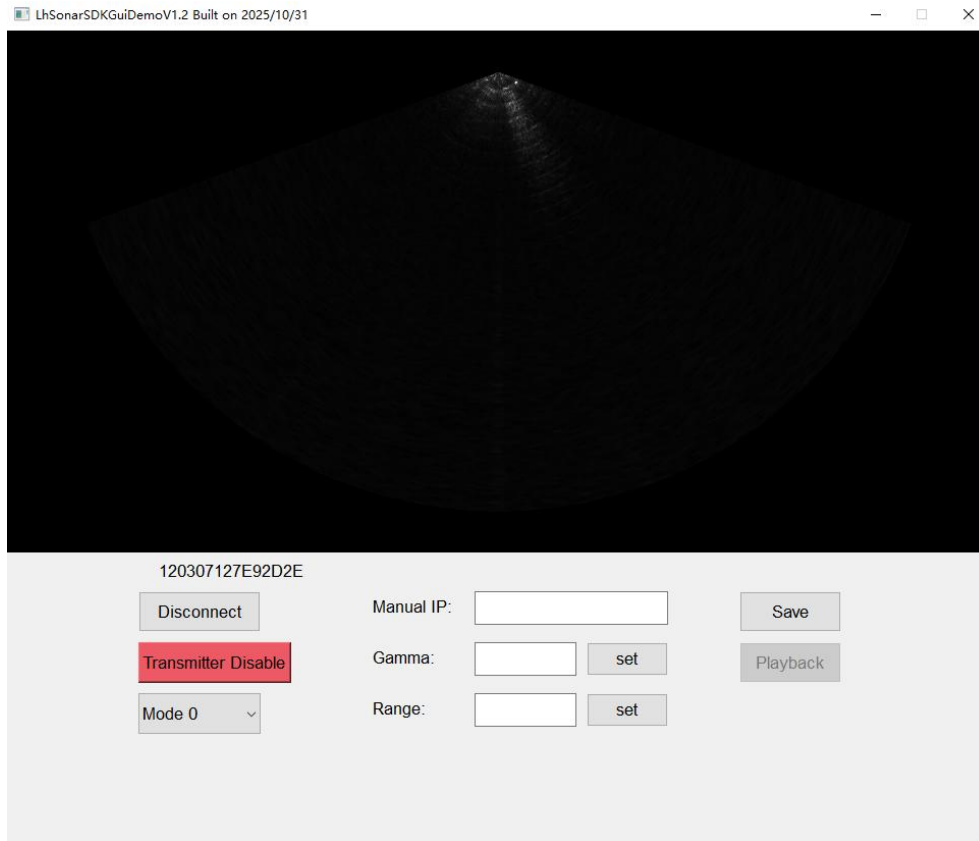

(5)After completing operations, click the "Disconnect" button to stop the sonar device.

III. Additional Features

- Manual IP: If clicking connect fails to link to the sonar, you can manually enter the sonar's IP address (you can use the Pro version control software to search for and view the sonar's IP), then click the "Connect" button again.
- Save: Saves data in ".DB" format in the software's running directory.
- Playback: Allows for playback of data in ".DB" format.