Parts checklist

- 1 base
- 1 line cord
- 1 handset
- 1 handset cord
- 1 user manual

Installation

Installing the phone

Your phone should be placed on a level surface, such as a desk or table, or you can mount it on a wall

- 1. Connecting the handset.
- 2. Connecting the telephone line.



Wall mounting

1. Rotate the wall mounting knob as shown in the following illustration:







The knob is designed to keep the unit in place when the telephone is mounted on the wall.

- Install the base unit on the wall and then plug one end of the line cord into the telephone connection socket and the other end into the modular telephone line jack marked 8.
- 3. Attach the telephone at the wall as shown in the following figure.






- (

Flash time setting


You can use the Flash feature to access services provided by your telephone operator. The Flash time is dependent on the local telephone exchange. You can change the setting using the switch indicated in the following illustration under C.




- A Ringer Volume Switch
- B Tone/Pulse Switch
- C Flash Time Switch

Phone operation

Receiving a phone call

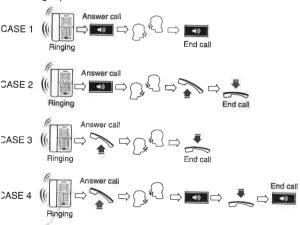

Telephone keys

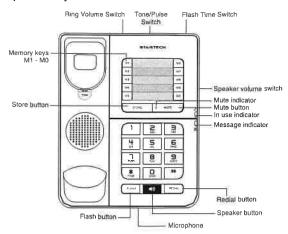

Telephone configuration

Note: Immediately change the following factory settings.

Speaker volume level adjustment

You can adjust the speaker volume level to high, middle, low using the switch on the right side of your telephone.

Ringer volume level


The phone will ring when there is an incoming call. You can set the ringer volume to high, middle or low level. The ringer volume switch is indicated in the following illustration under A_{\ast}

Pulse tone setting

You can select P (PULSE) or T(TONE) dialing mode according to the requirements from the local telephone operator. The T/P switch is indicated in the following illustration under B.

2

Making a phone call



Redial




Mute

In off-hook state, the user can press the MUTE button to activate the mute function. When MUTE is on, the MUTE symbol will appear on the screen. Press the MUTE button to deactivate the mute function and resume normal conversation.

Access telephone operator services

During conversation, press FLASH button to interrupt momentarily the telephone conversation and to access your telephone operator's services.

Storing / editing a telephone number



Dialing a memory location

